



Data Setter OPX-2A

CRK Series

Built-in Controller Type

OPERATING MANUAL

Thank you for purchasing an Oriental Motor product.

This Operating Manual describes product handling procedures and safety precautions.



- Please read it thoroughly to ensure safe operation.
- Always keep the manual where it is readily available.

Table of contents

1	Safety precautions	3	8	Parameter mode	26
2	Introduction	4	8.1	Types of parameters.....	26
3	Preparation	5	8.2	Operation in the parameter mode	27
3.1	Checking the product	5	8.3	Setting example.....	28
3.2	Names and functions of parts.....	5	8.4	Description of application parameters ...	29
3.3	How to read the display	6	■ I/O parameters.....	29	
3.4	How to read the LED indicators	6	■ Motor parameters	29	
3.5	Types of operation modes.....	6	■ Speed parameters	30	
3.6	Basic operations of the OPX-2A	7	■ Return-to-home parameters.....	30	
3.7	Edit lock function	8	■ Alarm/warning parameters.....	30	
3.8	Rewriting the driver's non-volatile memory	8	■ Common parameters	31	
4	Installation and connection of the OPX-2A	9	8.5	Description of system parameters.....	31
4.1	Location for installation.....	9	■ Operation setting parameters.....	31	
4.2	Installation method	9	■ Communication parameters	32	
4.3	Connecting to the driver	9	8.6	Initializing parameters.....	32
5	Screen transitions	10	9	Test mode	33
6	Monitor mode.....	17	9.1	Overview of the test mode.....	33
6.1	Overview of the monitor mode	17	9.2	Operation in the test mode	33
6.2	Operation in the monitor mode.....	17	9.3	I/O test	34
6.3	Monitor items.....	18	9.4	JOG operation	35
7	Data mode	22	9.5	Positioning operation.....	35
7.1	Operation in the data mode.....	22	9.6	Return-to-home operation	35
7.2	How to select the operation data number	23	9.7	Presetting the position.....	36
7.3	Setting items.....	23	9.8	Presetting the encoder counter	36
7.4	Setting example.....	24	9.9	Teaching	36
7.5	Initialization of the selected operation data.....	25	10	Copy mode	37
7.6	Initialization of all operation data	25	10.1	Overview of the copy mode.....	37
			10.2	Operation in the copy mode	37
			10.3	Downloading to the driver.....	38
			10.4	Uploading to the OPX-2A	38
			10.5	Verifying data.....	39
			10.6	Initializing driver data.....	39

1 Safety precautions

The precautions described below are intended to prevent danger or injury to the user and other personnel through safe, correct use of the product. Use the product only after carefully reading and fully understanding these instructions. Also read the “Safety precautions” sections in the operating manuals that came with the product you are combining with the **OPX-2A**.

 Warning	Handling the product without observing the instructions that accompany a “Warning” symbol may result in serious injury or death.
 Caution	Handling the product without observing the instructions that accompany a “Caution” symbol may result in injury or property damage.
Note	The items under this heading contain important handling instructions that the user should observe to ensure safe use of the product.

Warning

General

- Do not use the product in explosive or corrosive environments, in the presence of flammable gases, locations subjected to splashing water, or near combustibles. Doing so may result in fire, electric shock or injury.
- Assign qualified personnel the task of installing, wiring, operating/controlling, inspecting and troubleshooting the product. Failure to do so may result in fire, electric shock or injury.
- When the driver’s protection function is triggered, first remove the cause and then clear the protection function. Continuing the operation without removing the cause of the problem may cause malfunction of the motor and driver, leading to injury or damage to equipment.

Repair, disassembly and modification

- Do not disassemble or modify the data setter. This may cause electric shock or injury. Refer all such internal inspections and repairs to the branch or sales office from which you purchased the product.

Caution

General

- Do not use the motor and driver beyond their specifications, or electric shock, injury or damage to equipment may result.

Operation

- Provide an emergency stop device or emergency stop circuit external to the equipment so that the entire equipment will operate safely in the event of a system failure or malfunction. Failure to do so may result in injury.

Disposal

- To dispose of the data setter, disassemble it into parts and components as much as possible and dispose of individual parts/components as industrial waste.

2 Introduction

Only qualified personnel should work with the product. Use the product correctly after thoroughly reading the section "1 Safety precautions" on p.3.

The product described in this manual has been designed and manufactured for use in general industrial machinery, and must not be used for any other purpose. Oriental Motor Co., Ltd. is not responsible for any damage caused through failure to observe this warning.

■ Overview of the product


The **OPX-2A** is a data setter that lets you set operating data and parameters, perform monitoring, etc.

So that the **OPX-2A** is used correctly and safely, thoroughly read the "**CRK** Series FLEX Built-in Controller type USER MANUAL" and understand the basic operating procedures and other details of the driver.

■ Features of OPX-2A

The **OPX-2A** can be used to save data in addition to setting of operation data and parameters.

There are four destinations (data banks) to save data.

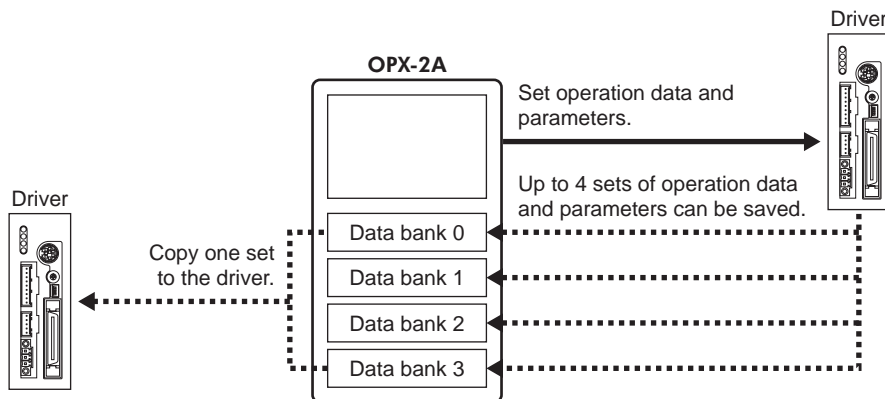

The **OPX-2A** can be used for the following purposes:

- Set driver operation data and parameters
- Monitor the operating status of the motor
- The data and parameters set in the driver can be saved to the **OPX-2A**.
- The data and parameters saved in the **OPX-2A** can be copied to another driver connected to the **OPX-2A**.

■ Specifications

Connection	Mini DIN, 8 pins
External dimensions	96 (W) × 72 (H) × 21.5 (D) mm [3.78 (W) × 2.83 (H) × 0.85 (D) in.]
Cable length	5 m (16.4 ft.)
Mass	0.25 kg (8.8 oz)

■ Hazardous substances

RoHS (Directive 2002/95/EC 27Jan.2003) compliant

3 Preparation


This chapter explains the items you should know before using the **OPX-2A**.

3.1 Checking the product

Verify that the items listed below are included. Report any missing or damaged items to the branch or sales office from which you purchased the product.

- Data setter **OPX-2A** 1 unit
- OPERATING MANUAL (CD-ROM)..... 1 pc.
- Information 1 copy

3.2 Names and functions of parts

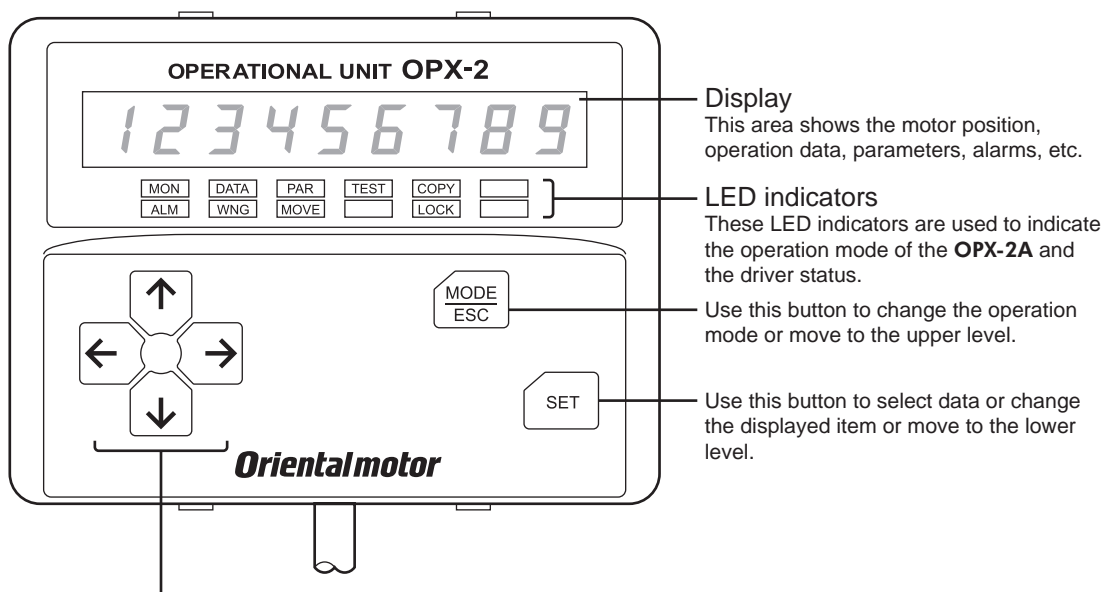



Display
This area shows the motor position, operation data, parameters, alarms, etc.



LED indicators
These LED indicators are used to indicate the operation mode of the **OPX-2A** and the driver status.

Use this button to change the operation mode or move to the upper level.

Use this button to select data or change the displayed item or move to the lower level.

Use these buttons to change the selected item or set data and parameters.

  Use these buttons to increase or decrease the value or change the selected item.

  Use these buttons to navigate through each data or parameter to a desired digit.

■ Notation

In this manual, keys are denoted by symbols, such as $\left[\begin{smallmatrix} \text{MODE} \\ \text{ESC} \end{smallmatrix} \right]$ $[\text{SET}]$ $[\uparrow]$ $[\downarrow]$ $[\leftarrow]$ $[\rightarrow]$.
In figures, a simplified illustration of the display and LED indicators is used, as shown below.



3.3 How to read the display

The display consists of 7-segment LEDs. (The number “5” and alphabet “S” are the same.)

• Numbers

1	1	2	2	3	3	4	4	5	5	6	6	7	7	8	8	9	9	0	0
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

• Alphabets


A	A	B	b	C	c	D	d	E	E	F	F	G	G	H	H	I	,	J	J	K	K	L	L
M	ñ	N	n	O	o	P	P	Q	q	R	r	S	5	T	t	U	U	V	v	W	y	Y	Y

• Signs

+	+	-	-
---	---	---	---


3.4 How to read the LED indicators

When the operation mode is changed or an alarm or warning generates, a corresponding LED will be lit. While the motor is operating or the edit lock function is enabled, the condition is also indicated by the illumination of a corresponding LED.

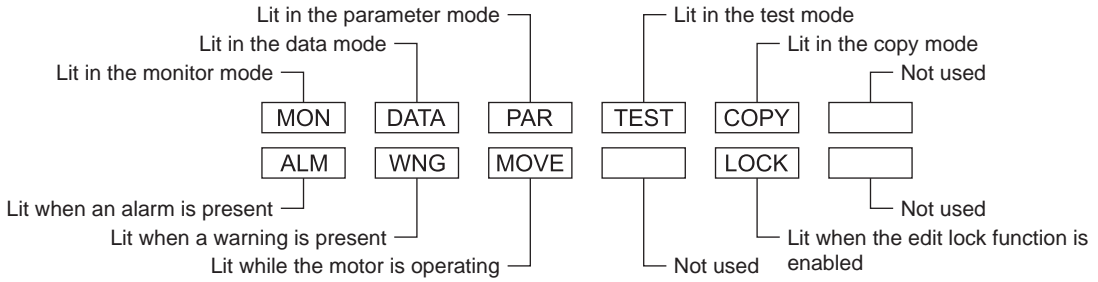

3.5 Types of operation modes

The **OPX-2A** has multiple operation modes. The operation mode will change every time the **[MODE/ESC]** key is pressed. The display starts in the monitor mode when the power is turned on. When the operation mode is changed, the LED indicator corresponding to the previous mode will turn off and the one corresponding to the new mode will be lit. Identify the current operation mode based on the LED indicator currently lit.

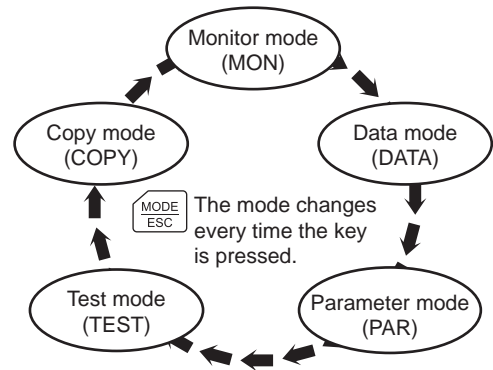


3.6 Basic operations of the OPX-2A

Use the six keys $\left[\begin{smallmatrix} \text{MODE} \\ \text{ESC} \end{smallmatrix} \right]$ $[\text{SET}]$ $[\uparrow]$ $[\downarrow]$ $[\leftarrow]$ $[\rightarrow]$ to set data and operate the motor.

■ Operation flow

The **OPX-2A** is operated according to the flow shown below.

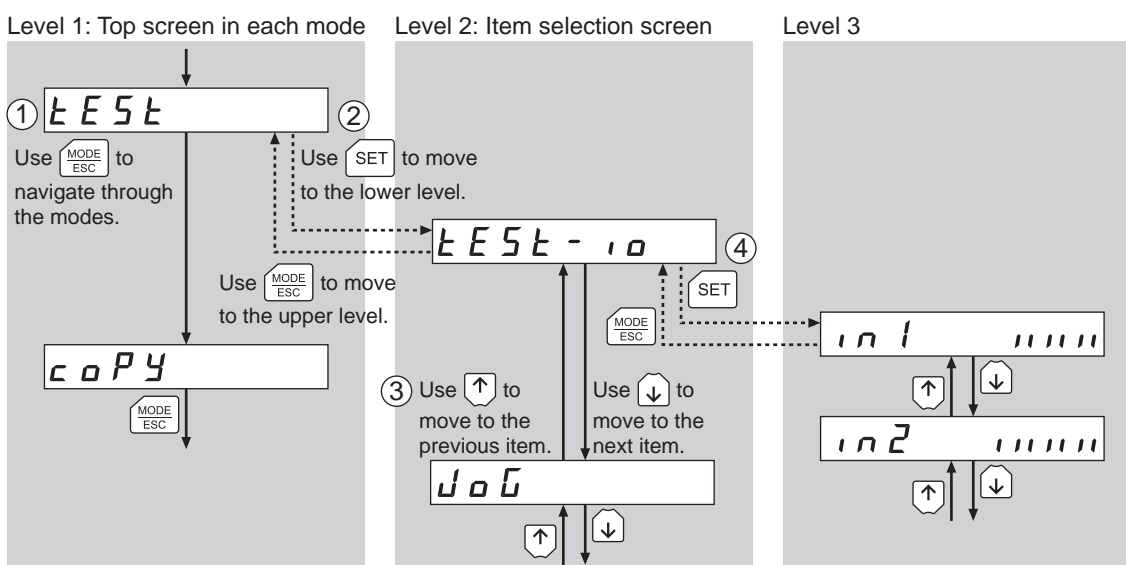

1. Use the $\left[\begin{smallmatrix} \text{MODE} \\ \text{ESC} \end{smallmatrix} \right]$ key to select a desired operation mode appropriate for your intended operation.
Example: If you want to use a function in the test mode, press the $\left[\begin{smallmatrix} \text{MODE} \\ \text{ESC} \end{smallmatrix} \right]$ key to select the test mode (indicated by a lit "TEST" LED). The top screen of the test mode is displayed.
2. Press the $[\text{SET}]$ key to move to the lower level.
3. Use the $[\uparrow]$ $[\downarrow]$ keys to select a desired item.
4. To move to the lower level, press the $[\text{SET}]$ key. To return to the previous level, press the $\left[\begin{smallmatrix} \text{MODE} \\ \text{ESC} \end{smallmatrix} \right]$ key.

As explained above, use the $[\text{SET}]$ key to navigate through the levels and use the $[\uparrow]$ $[\downarrow]$ keys to select a desired item. This is the basic operation flow.

Note If the $[\text{SET}]$ key on the **OPX-2A** is pressed while internal processing is being performed, the top screen will not change to any of its sub-screens and "mEm-bUSY" will be shown on the display. Be sure to wait until all internal processing is completed, before pressing the $[\text{SET}]$ key.


■ How to input values

As an example, how to change “+30” to “-100” is explained.

Basic operations

- Use the [↑] [↓] keys to increase/decrease the value or change the sign.
Use the [←] [→] keys to move to the digit you want to edit.
- If positive and negative values are differentiated, each value is preceded by a sign.
- You can edit the digit currently blinking.

1. First, change the 10's place from “3” to “0”.
Press the [←] key once to move to the 10's digit you want to edit.
2. Press the [↓] key three times to change the value to “0”.
3. Next, change the 100's place from “0” to “1”.
Press the [←] key once to move to the 100's digit you want to edit.
4. Press the [↑] key to change the value to “1”.
5. Next, change the sign.
Press the [←] key once to move to the sign digit you want to edit.
6. Press the [↑] or [↓] key once to change the sign to “-”.
7. After all digits have been changed, press the [SET] key to confirm the value.
All digits comprising the value blink for approx. 2 seconds.

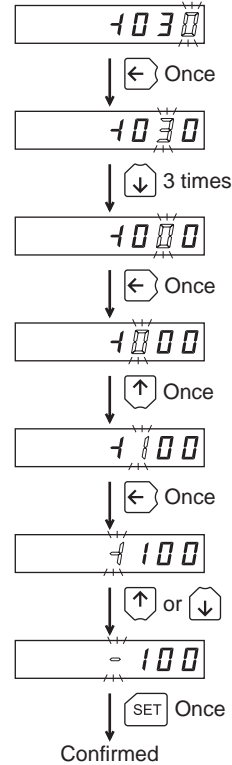

Note If the value you have input is outside the setting range, “Error” will be displayed for 1 second. If this error display appears, input a different value that falls within the setting range.

3.7 Edit lock function


Enable the edit lock function if you want to prevent operation data and parameters from being edited or cleared. Operation data and parameters cannot be changed or deleted while the edit lock function is enabled.

• Setting the edit lock function

In the top screen of each operation mode, press the [MODE/ESC] key for at least 5 seconds.

The display will show “Lock” and the edit lock function will be enabled.

The “LOCK” LED in the LED indicator area will also be lit.

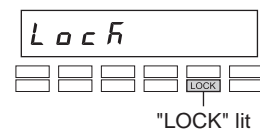

• Canceling the edit lock function

Again in the top screen of each operation mode, press the [MODE/ESC] key for at least 5 seconds.

The display will show “UnLock” and the edit lock function will be cancelled.

The “LOCK” LED in the LED indicator area will turn off.



3.8 Rewriting the driver's non-volatile memory

Operation data and parameters are saved to the driver's non-volatile memory. The non-volatile memory can be rewritten approx. 100,000 times. The non-volatile memory will be rewritten after one of the following operations is performed:

- Edit any operation data or parameter
- Download data from the OPX-2A to the driver
- Initialize driver operation data and parameters

4 Installation and connection of the OPX-2A

4.1 Location for installation


The **OPX-2A** is designed and manufactured for installation in equipment. Install it in a well-ventilated location that provides easy access for inspection. The location must also satisfy the following conditions:

- Inside an enclosure that is installed indoors (provide vent holes)
- Operating ambient temperature 0 to +40 °C (+32 to +104 °F) (non-freezing)
- Operating ambient humidity 85% or less (no condensation)
- Area that is free of explosive atmosphere or toxic gas (such as sulfuric gas) or liquid
- Area not exposed to direct sun
- Area free of excessive amount of dust, iron particles or the like
- Area not subject to splashing water (rain, water droplets), oil (oil droplets) or other liquids
- Area free of excessive salt
- Area not subject to continuous vibration or excessive shocks
- Area free of excessive electromagnetic noise (from welders, power machinery, etc.)
- Area free of radioactive materials, magnetic fields or vacuum
- 1000 m (3300 ft.) or less above sea level

4.2 Installation method


Using a metal plate of 1 to 3 mm (0.04 to 0.12 in.) in thickness, insert the **OPX-2A** into the mounting hole from the front side and securely affix the **OPX-2A**.

- Dimension of mounting hole [mm (in.)]

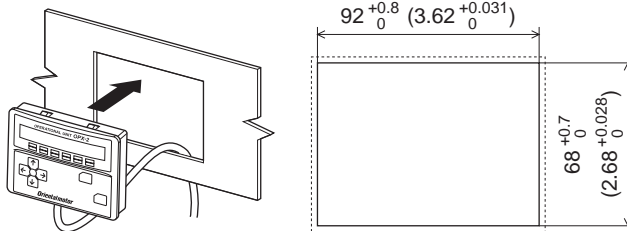


Removing method

Press all of the four hooks provided on top and bottom of the **OPX-2A**. In this condition, press the **OPX-2A** forward to release.

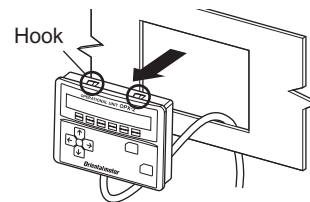

4.3 Connecting to the driver


Plug the connector attached to the end of the **OPX-2A** cable into the data edit connector (CN3) on the driver, and then turn on the power to the driver.

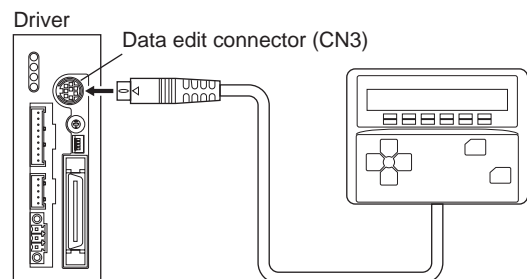

Note

- When operation data and parameters are set on the **OPX-2A**, they will be stored in the driver. Once stored in the driver, the data will not be cleared even after the **OPX-2A** is disconnected from the driver.
- Turning on the power to the driver will also turn on the power to the **OPX-2A**. Turning off the driver power will turn off the **OPX-2A** power.
- Turn off the driver power before connecting or disconnecting the **OPX-2A** cable.


5 Screen transitions

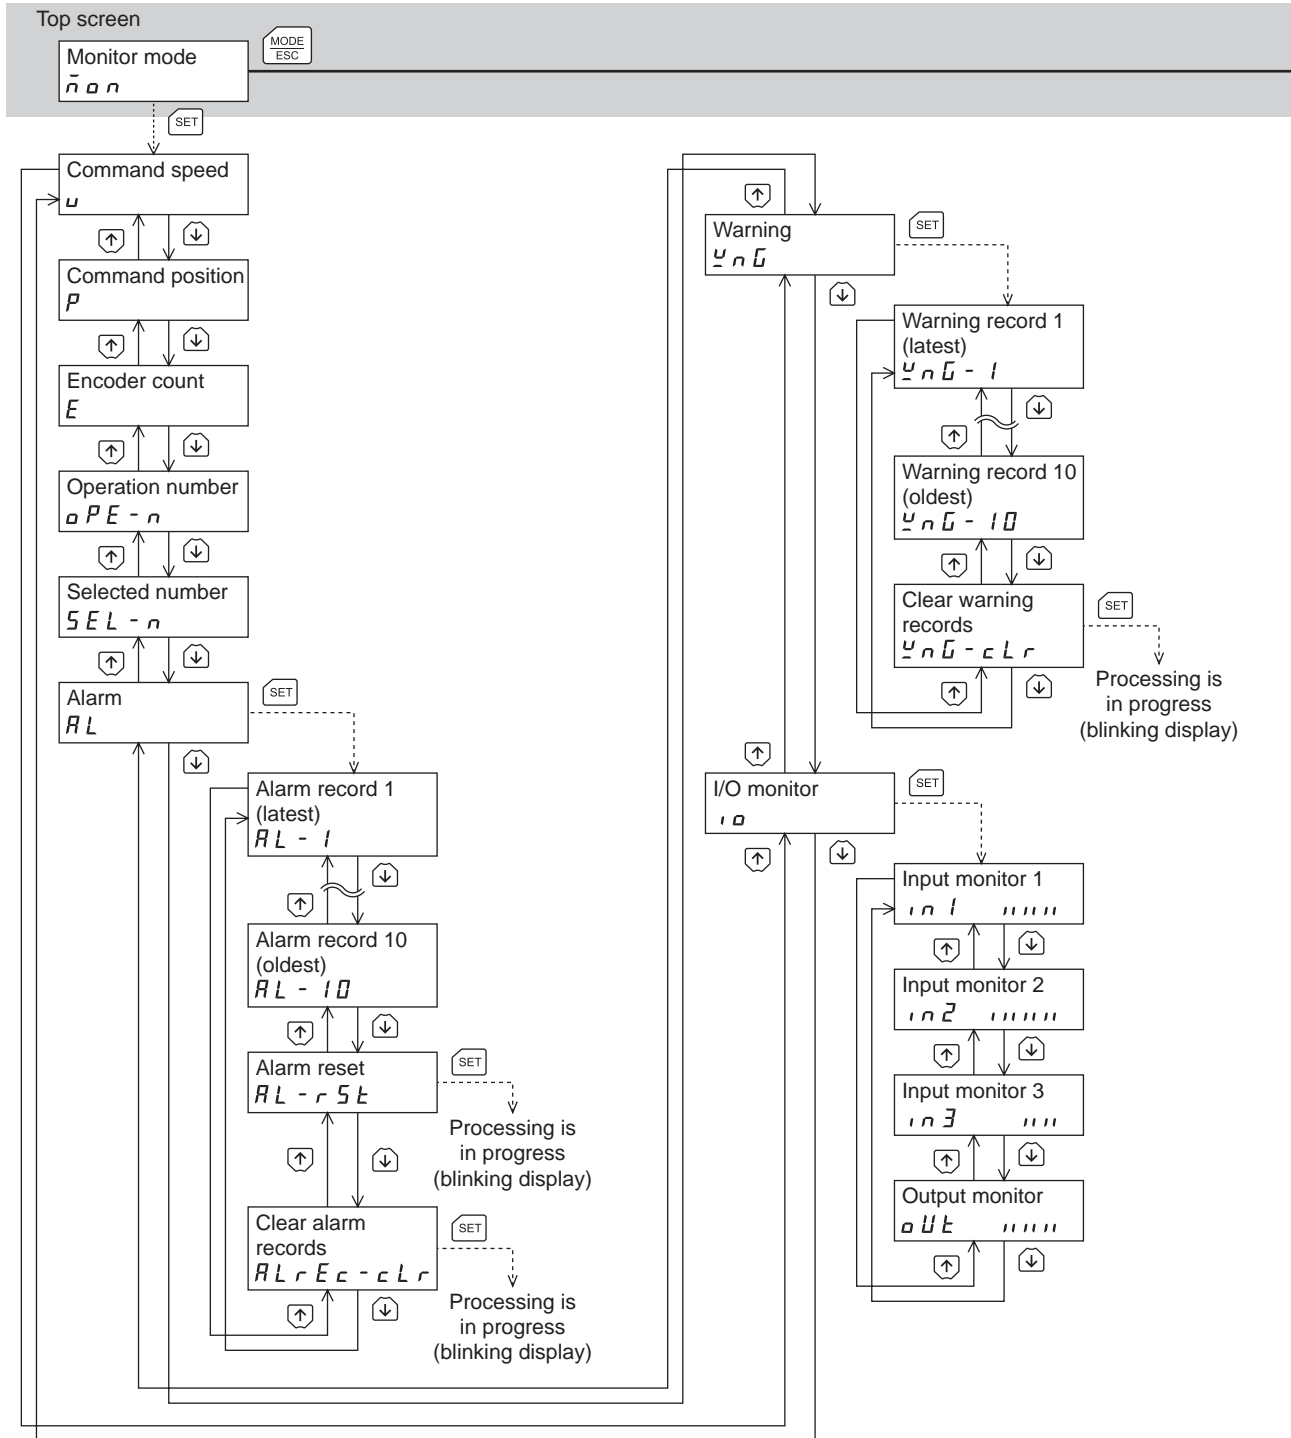



Note


There are the following restrictions while the edit lock function is effective.


- Data mode, parameter mode, copy mode: Although they are displayed on the screen, they are unable to operate.
- Clearing the alarm and warning records, clear data, position preset, encoder counter preset, teaching: They are not displayed on the screen.

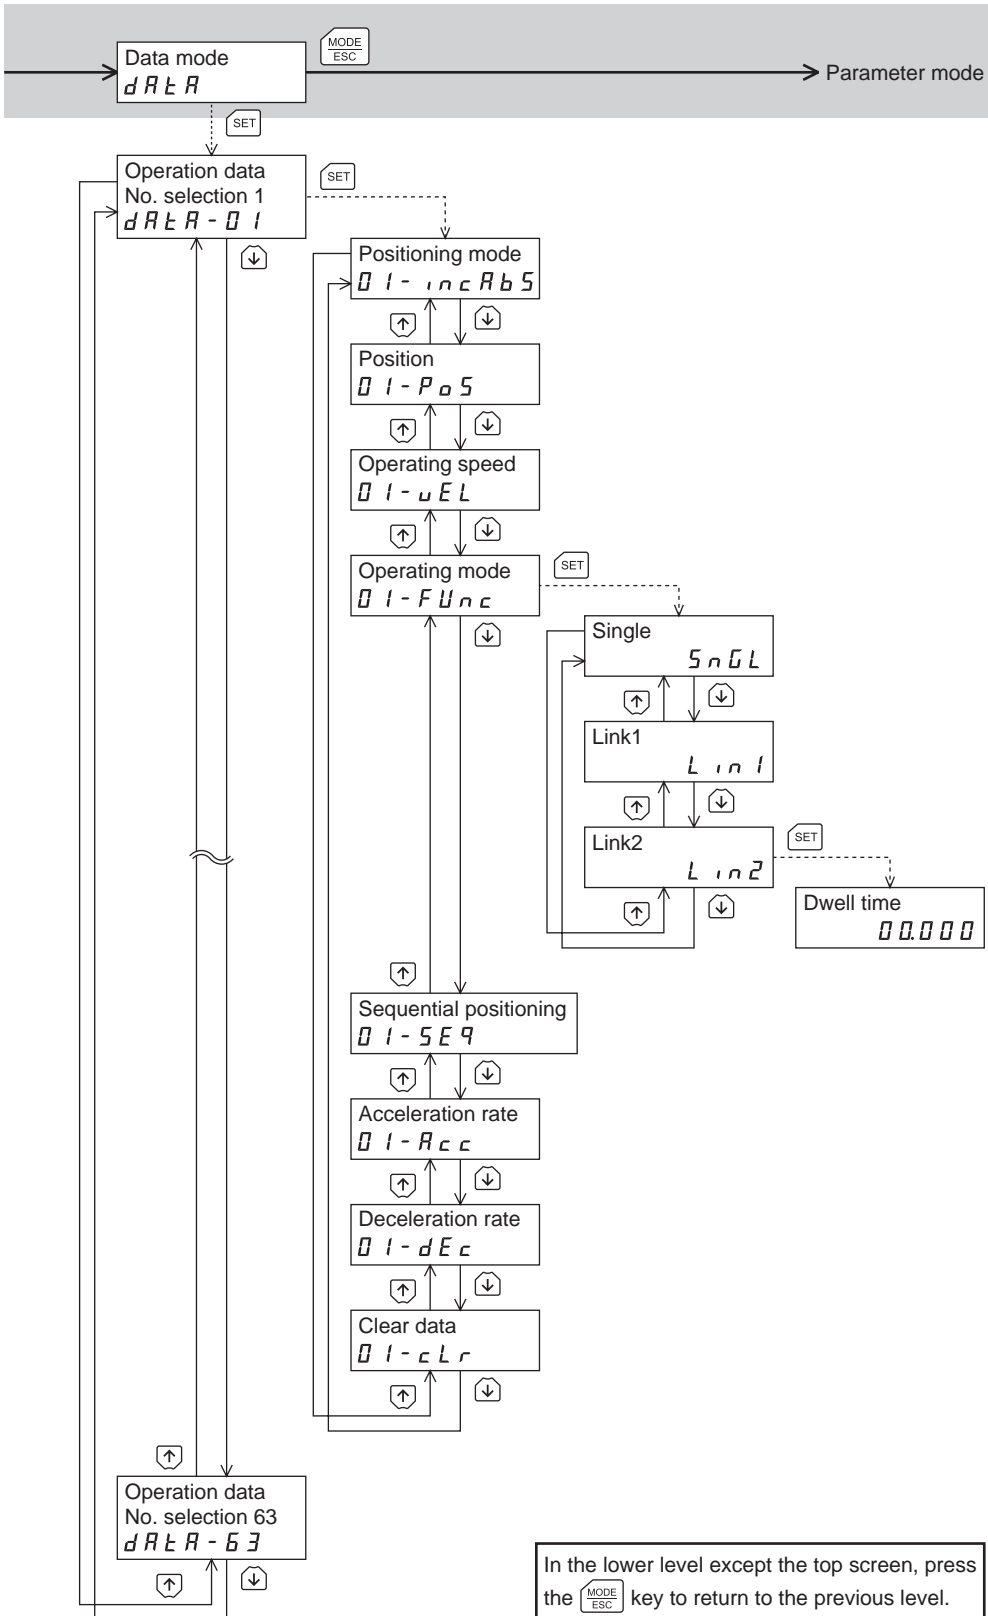

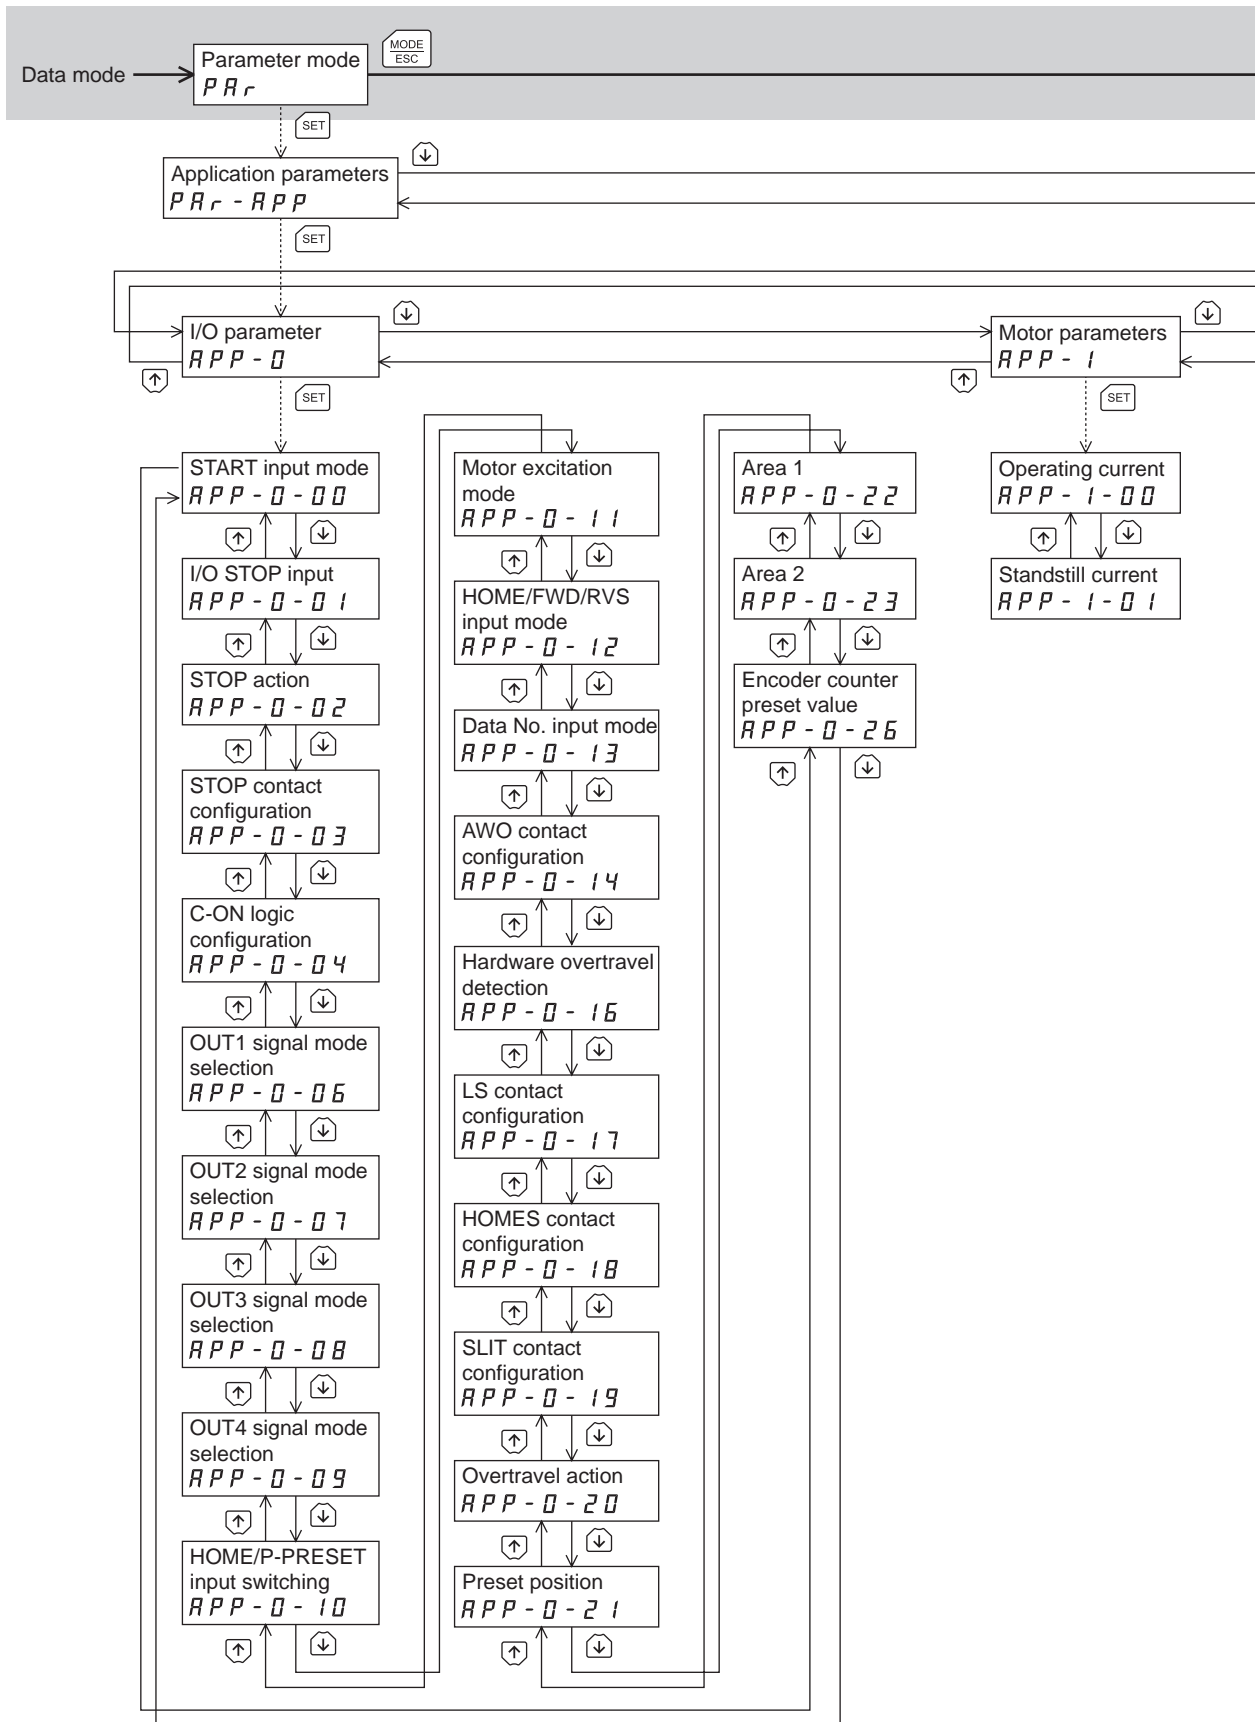


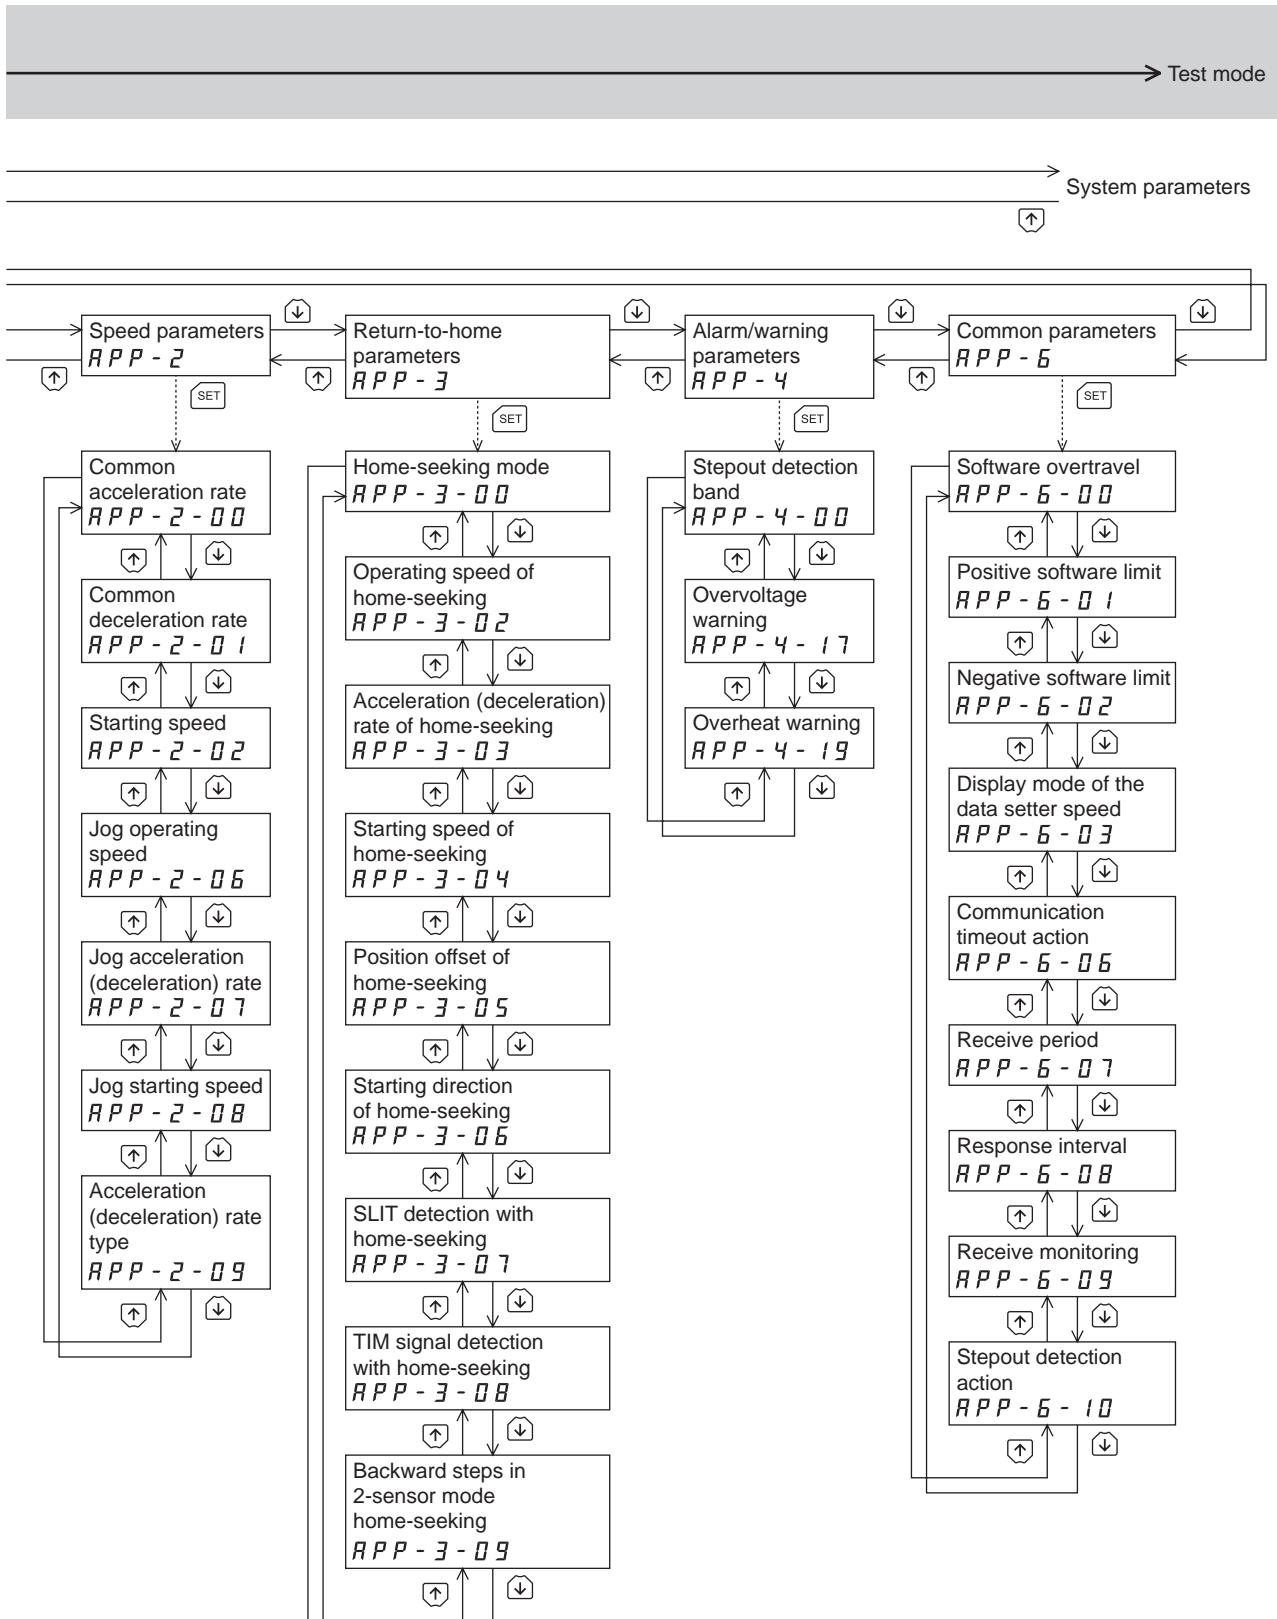


In the lower level except the top screen, press the  key to return to the previous level.

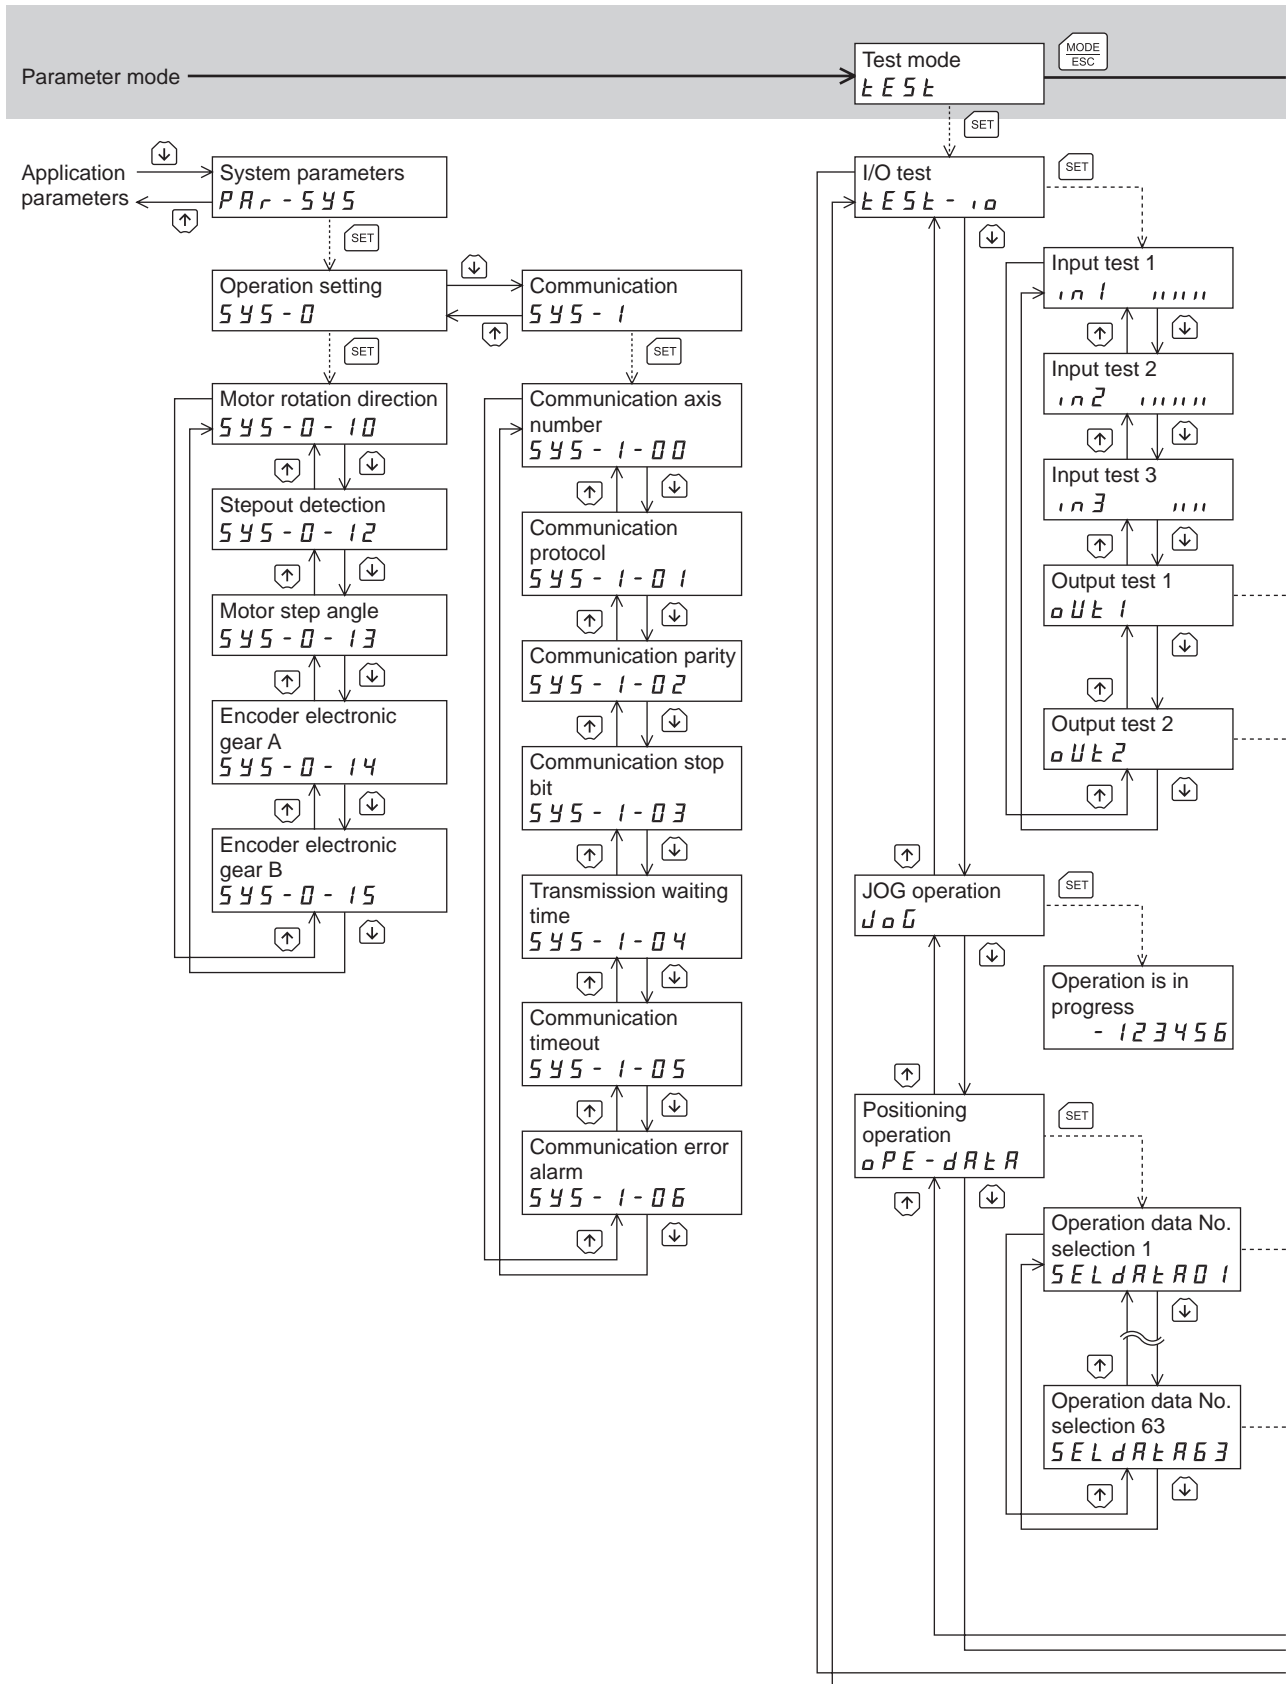

→ Copy mode

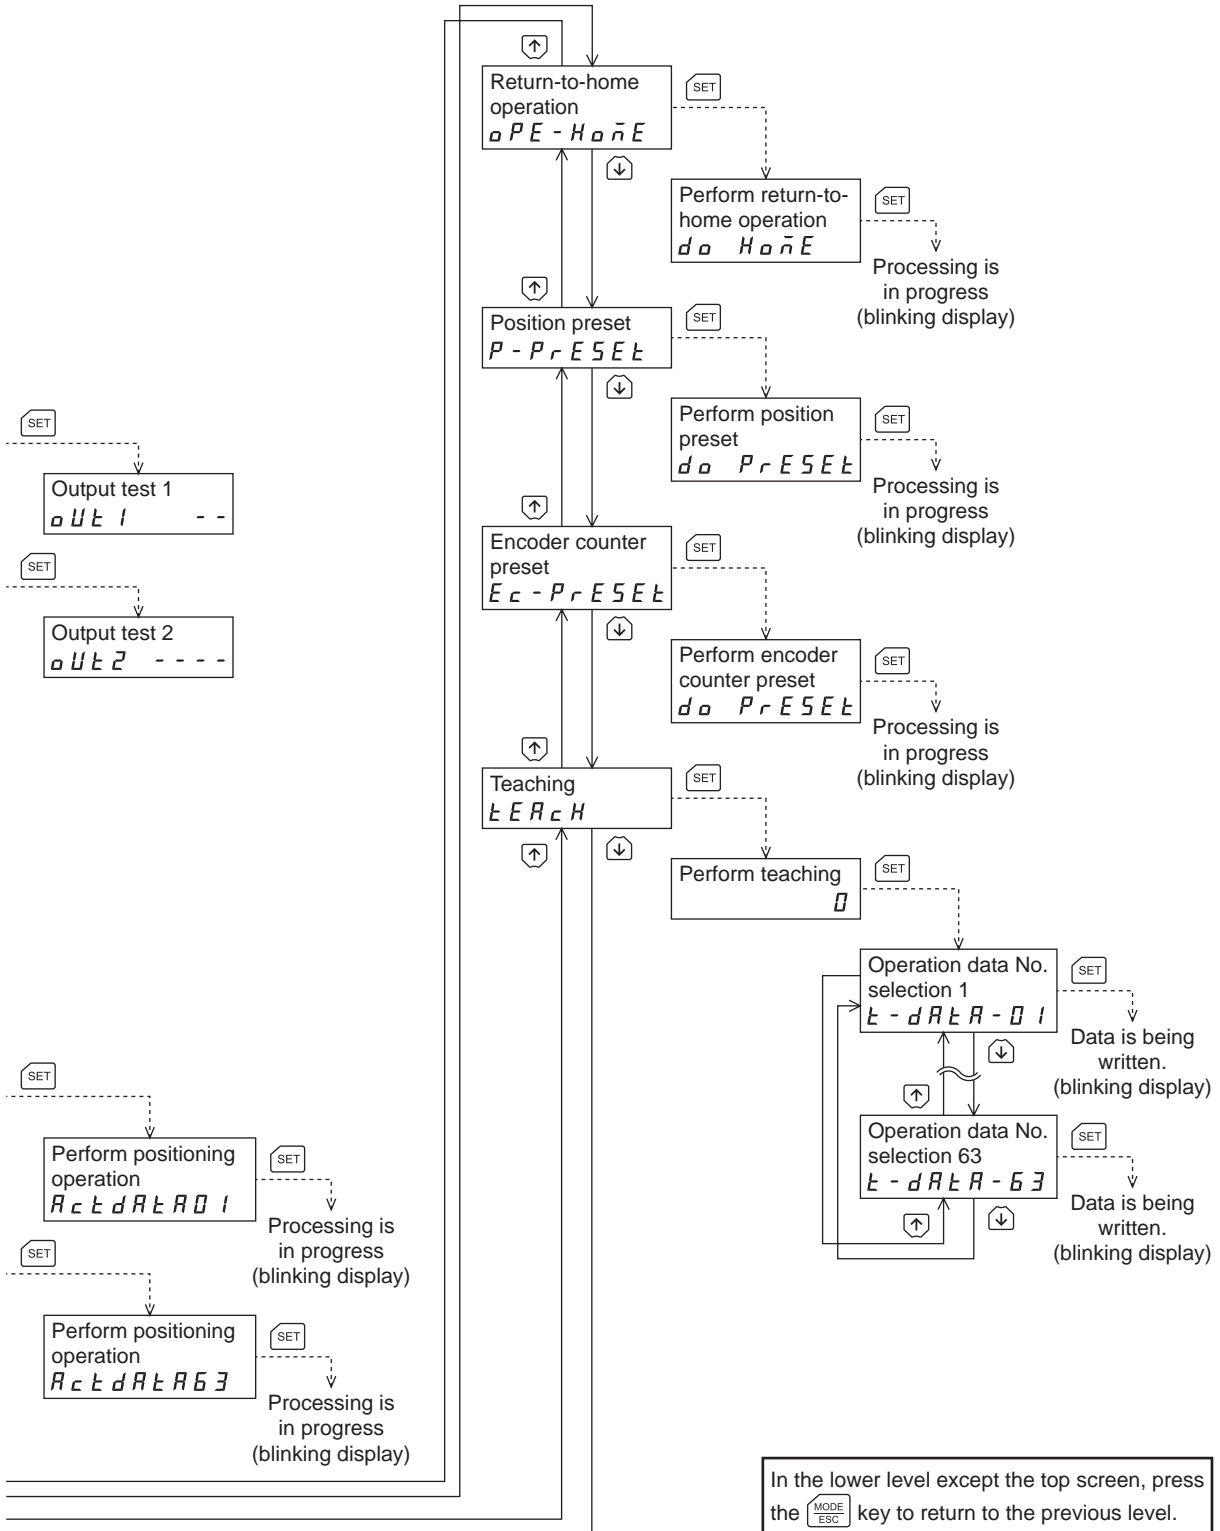

In the lower level except the top screen, press the **MODE/ESC** key to return to the previous level.

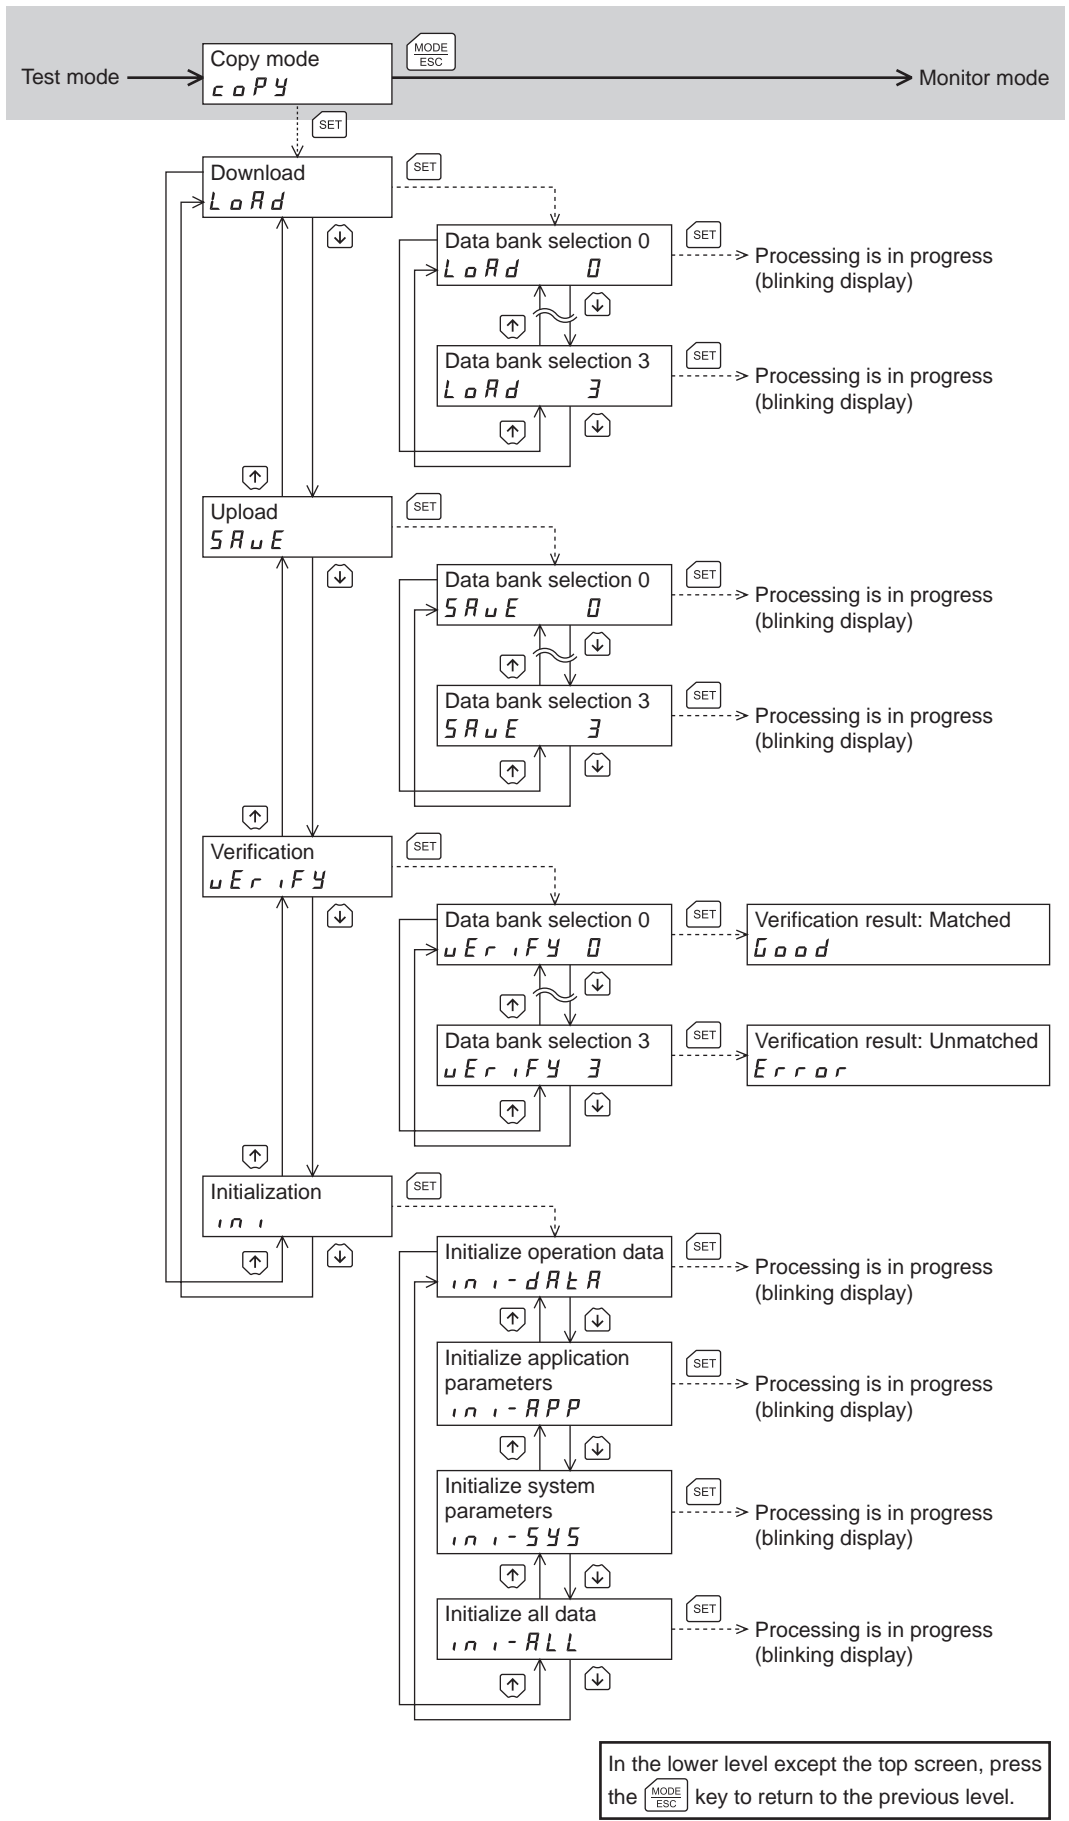

In the lower level except the top screen, press the **MODE/ESC** key to return to the previous level.

6 Monitor mode

6.1 Overview of the monitor mode

- Monitoring the operating status

You can monitor the command motor speed, command position, encoder counter, operation data number corresponding to the current operation, and operation data number currently selected in real time.

- Checking alarms/warnings, clearing alarm/warning records, and resetting alarms

- If an alarm or warning generates, a corresponding alarm code or warning code will be displayed. You can check the code to identify the details of the alarm/warning.

- Up to ten most recent alarms/warnings can be displayed, starting from the latest one. You can also clear alarm/warning records.


- You can reset the alarms currently present.

- Checking I/O signals

You can check the ON/OFF status of each I/O signal of the driver.

6.2 Operation in the monitor mode

1. Use the **MODE** key to select the monitor mode.
2. Press the **SET** key in the top screen of the monitor mode.
3. Use the **↑** **↓** keys to select the item you want to monitor.

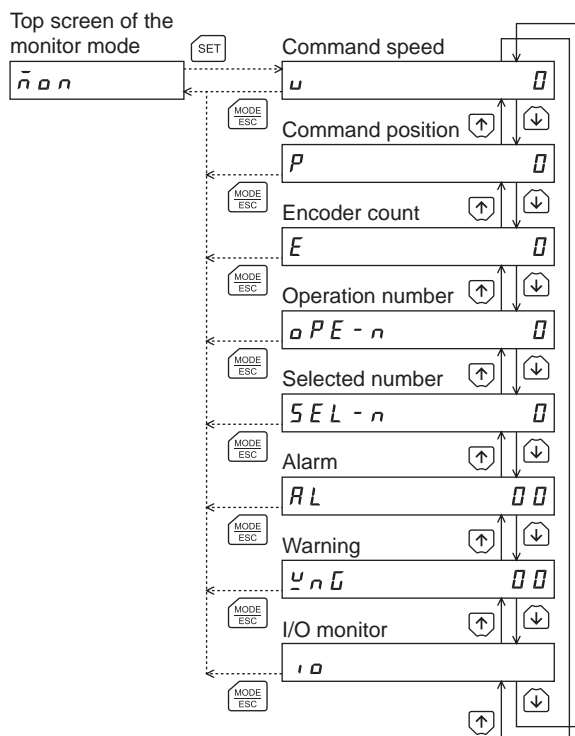

6.3 Monitor items

■ Command speed

You can check the command speed of the motor (unit: Hz).

While the motor is rotating in the – direction, “–” is shown in front of the displayed value. If the speed is indicated by an absolute value, no sign is shown to indicate the rotating direction. You can select the value display format using the “display mode of the data setter speed” parameter [APP-6-03] (p.31).

■ Command position

You can check the command position of the motor with reference to the home position.

If a resolution is set, an appropriate value based on the resolution is shown as steps.

■ Encoder count

You can check the encoder counter value.

■ Operation number

You can check the operation data number corresponding to the data used in the current positioning operation.


■ Selected number

You can check the operation data number currently selected.

■ Alarm

When an alarm generates, a corresponding alarm code will be displayed.

You can also reset alarms or check and clear alarm records.

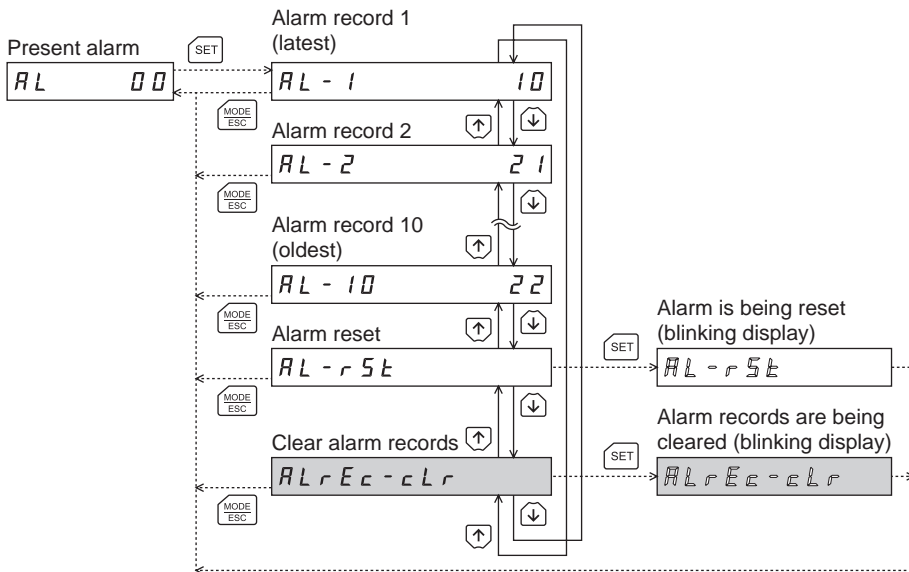

* If operations are limited by the edit lock function, the screen text in gray is not shown.

Note

- Do not turn off the driver power while an alarm is being reset or alarm records are being cleared (=while the display is blinking). Doing so may damage the data.
- Some alarms cannot be reset on the **OPX-2A**. Check by the following table. To reset these alarms, you must cycle the driver power.

- Alarm code list

Code	Alarm name	Resetting on the OPX-2A	Number of times the driver's ALARM LED blinks
10	Overflow	Possible	4
21	Overheat		2
22	Overvoltage	Not possible	3
41	EEPROM error		9
60	±LS both sides active	Possible	7
61	Reverse limit sensor connection		
62	Home seeking error		
63	No HOMES		
64	TIM, Z, SLIT input error		
66	Overtravel		
67	Software overtravel		
6A	Home seeking offset error		
70	Invalid operation data	Not possible	
84	RS-485 communication error		
85	RS-485 communication timeout	Possible	
81	Network bus error		
8E	Network converter error		

- How to reset an alarm

- While an alarm is displayed, press the **【SET】** key to move to the lower level.
- Press the **【↑】** key twice to select the alarm reset screen.
- Press the **【SET】** key.
The alarm is reset.

- How to check an alarm record

You can check up to ten most recent alarms, starting from the latest one.

- While an alarm is displayed, press the **【SET】** key to move to the lower level.
The latest alarm is displayed.
- Press the **【↓】** key.
The second latest alarm is displayed.
- Every time the **【↓】** key is pressed, the next older alarm will be displayed. Use the **【↑】** **【↓】** keys to select the alarm record you want to check.


- How to clear all alarm records

You can clear all alarm records at once.

- While an alarm is displayed, press the **【SET】** key to move to the lower level.
- Press the **【↑】** key and select the alarm record clear screen.
- Press the **【SET】** key.
All alarm records are cleared.

Warning

When a warning generates, a corresponding warning code will be displayed. You can also check or clear warning records.

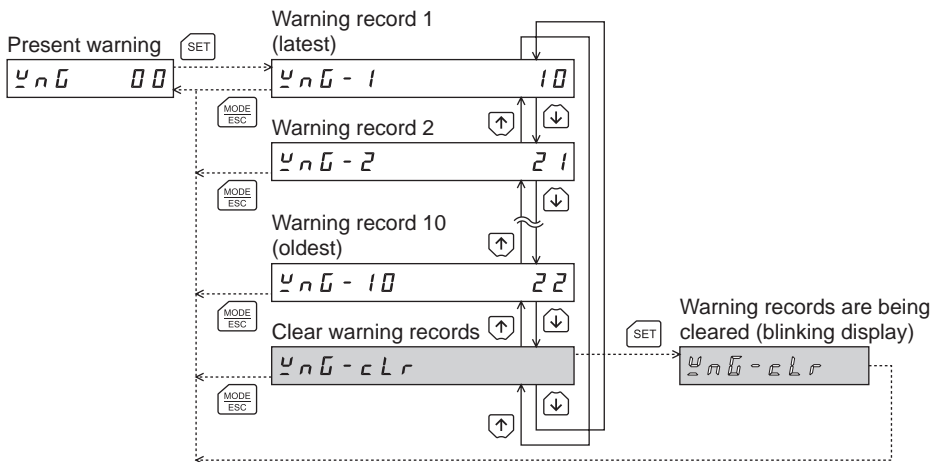

* If operations are limited by the edit lock function, the screen text in gray is not shown.

Note

- Do not turn off the driver power while warning records are being cleared (=while the display is blinking). Doing so may damage the data.
- You can also clear the warning records by turning off the driver power.

Warning code list

Code	Warning name
10	Overflow
21	Overheat
22	Overvoltage
84	RS-485 communication error

How to check a warning record

You can check up to ten most recent warnings, starting from the latest one.

1. While a warning is displayed, press the **[SET]** key to move to the lower level. The latest warning is displayed.
2. Press the **[↓]** key. The second latest warning is displayed.
3. Every time the **[↓]** key is pressed, the next older warning will be displayed. Use the **[↑]** **[↓]** keys to select the warning record you want to check.


How to clear all warning records

You can clear all warning records at once.

1. While a warning is displayed, press the **[SET]** key to move to the lower level.
2. Press the **[↑]** key and select the warning record clear screen.
3. Press the **[SET]** key. All warning records are cleared.


I/O monitor

You can check the ON/OFF status of each I/O signal of the driver.

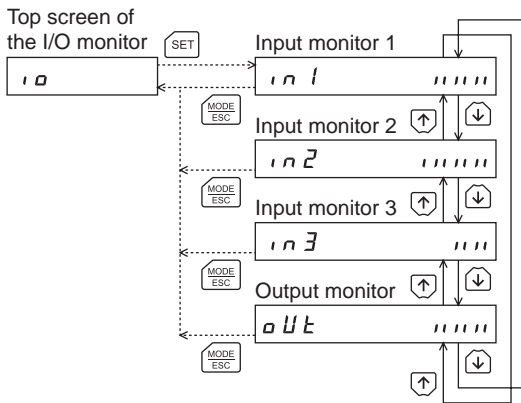


Each digit on the 7-segment LED display corresponds to a signal. The LED is lit when the signal is ON, and it is unlit when the signal is OFF.

• Input signals

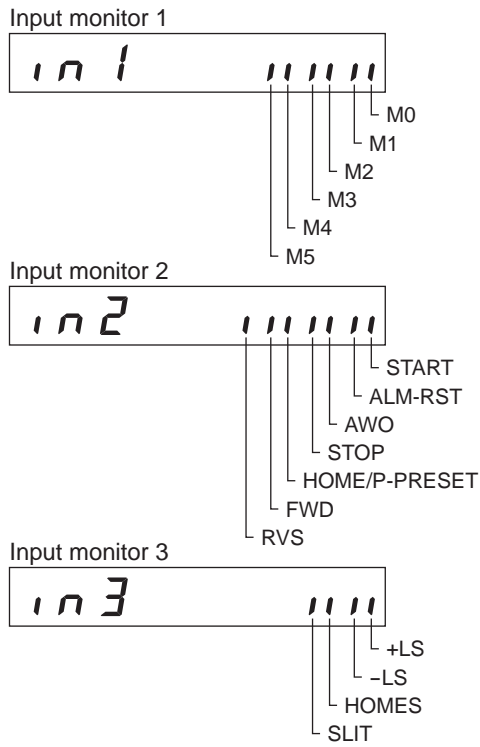

• Output signals

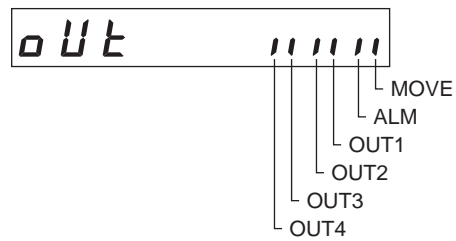

7 Data mode

Up to 63 sets of motor operation data can be set. Once set, the operation data is stored in the driver. The data will not be lost even after the **OPX-2A** is disconnected from the driver.


Before setting operation data, read the "**CRK Series FLEX Built-in Controller type USER MANUAL**" carefully to understand the basic operations, functions and other details of the driver.

Note

- Operation data has significant bearing on motor operation. Before setting any operation data, make sure you fully understand the content of the operation data.
- If operations are limited by the edit lock function, operation data cannot be edited.

7.1 Operation in the data mode

1. Use the $\left[\begin{smallmatrix} \text{MODE} \\ \text{ESC} \end{smallmatrix} \right]$ key to select the data mode.
2. Press the $\left[\text{SET} \right]$ key on the top screen of the data mode.
3. Use the $\left[\uparrow \right]$ $\left[\downarrow \right]$ keys to select a desired operation data number.
4. Press the $\left[\text{SET} \right]$ key.
The display changes to the operation data screen.
5. Use the $\left[\text{SET} \right]$ key to select the operation data item you want to set.
6. When pressing the $\left[\text{SET} \right]$ key on the last operation data item, the display returns to the operation data No. screen.

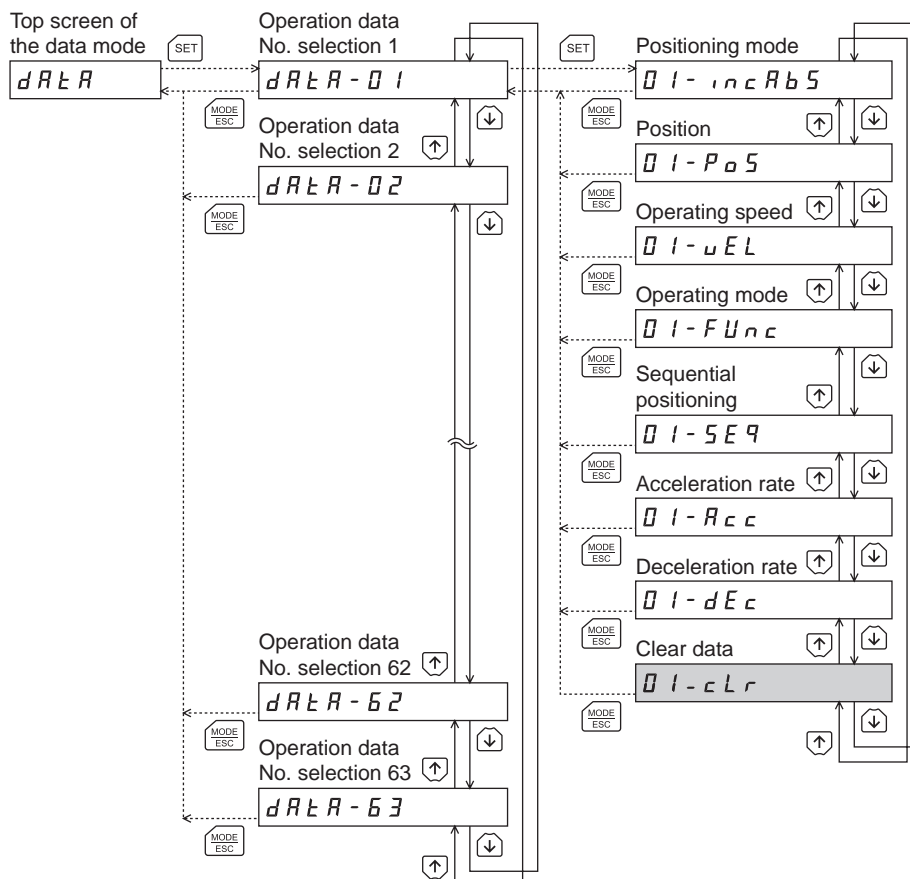

* If operations are limited by the edit lock function, the screen text in gray is not shown.

Note

- If the value you have input is outside the setting range, "Error" will be displayed for 1 second. If this error display appears, input a different value that falls within the setting range.
- If the $\left[\text{SET} \right]$ key on the **OPX-2A** is pressed while internal processing is being performed, the top screen will not change to any of its sub-screens and "mEm-bUSY" will be shown on the display. Be sure to wait until all internal processing is completed, before pressing the $\left[\text{SET} \right]$ key.

7.2 How to select the operation data number

You can select a desired operation data set based on a combination of ON/OFF statuses of M0 through M5 inputs of the driver.

Operation data number	M5	M4	M3	M2	M1	M0
Sequential positioning	OFF	OFF	OFF	OFF	OFF	OFF
1	OFF	OFF	OFF	OFF	OFF	ON
2	OFF	OFF	OFF	OFF	ON	OFF
⋮	⋮	⋮	⋮	⋮	⋮	⋮
⋮	⋮	⋮	⋮	⋮	⋮	⋮
61	ON	ON	ON	ON	OFF	ON
62	ON	ON	ON	ON	ON	OFF
63	ON	ON	ON	ON	ON	ON

7.3 Setting items


Setting item	Setting range	Initial value	Description
Positioning mode	inc: Incremental mode AbS: Absolute mode	inc	Selects how to specify the position (travel amount) in positioning operation (absolute mode or incremental mode).
Position	-8,388,608 to +8,388,607 steps	0	Sets the position (distance) for positioning operation.
Operating speed	1 to 500,000 Hz	1000	Sets the operating speed in positioning operation and continuous operation.
Operating mode	SnGL: Single Lin1: Link1 Lin2: Link2	SnGL	Sets perform positioning operation as single-motion or linked-motion operation.
Sequential positioning	0: Disable 1: Enable	0	Sets enable or disable sequential positioning operation.
Acceleration rate	0.001 to 1000.000 ms/kHz	30.000	Sets the acceleration rate in positioning operation and continuous operation.*
Deceleration rate			Sets the deceleration rate in positioning operation and continuous operation.*
Dwell time	0 to 50.000 s	0	Set the dwell time to be used in linked-motion operation 2.

* This item is effective when the "acceleration (deceleration) rate type" parameter [APP-2-09] is set to "separate".
If this parameter is set to "common", the values of the "common acceleration rate" [APP-2-00] and "common deceleration rate" [APP-2-01] parameters will be used (initial value: common).

How to set the dwell time

When displaying the "LINK2" on the "operating mode" and pressing the **[SET]** key, the screen to set the dwell time is displayed.

Input the dwell time using the **[↑]** **[↓]** **[←]** **[→]** keys and press the **[SET]** key.

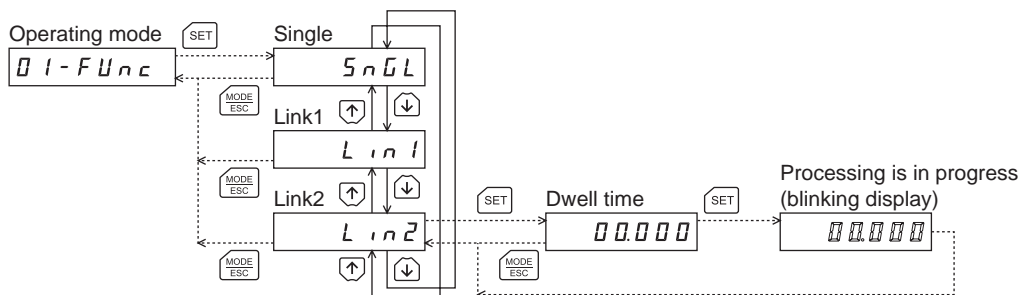

7.4 Setting example

This section explains the positioning mode of the operation data No.1 and how to change the position.

- Positioning mode: Changes from incremental mode to absolute mode.
- Position: Changes from 0 step to 10000 steps.

1. Use the $\left[\begin{smallmatrix} \text{MODE} \\ \text{ESC} \end{smallmatrix} \right]$ key to select the data mode.
The "DATA" LED is lit.
2. Press the $\left[\text{SET} \right]$ key on the top screen of the data mode.
The display changes to the operation data No.1 screen.
3. Press the $\left[\text{SET} \right]$ key.
The display changes to the positioning mode screen.
4. Press the $\left[\text{SET} \right]$ key again.
The present set value of the positioning mode is displayed with blinking.
5. Press the $\left[\downarrow \right]$ key once to select "AbS."
The display changes to the absolute mode screen.
6. Press the $\left[\text{SET} \right]$ key.
The blinking speed of the input value becomes quickly and the value is set.
The display returns to the positioning mode screen.
7. Press the $\left[\downarrow \right]$ key.
The display changes to the position screen.
8. Press the $\left[\text{SET} \right]$ key.
The present set value of the position is displayed with blinking.
9. Use the $\left[\uparrow \right]$ $\left[\downarrow \right]$ $\left[\leftarrow \right]$ $\left[\rightarrow \right]$ keys to select "10000".
The selected digit is displayed with blinking.
10. Press the $\left[\text{SET} \right]$ key.
The blinking speed of the input value becomes quickly and the value is set.
The display returns to the position screen.
11. Press the $\left[\begin{smallmatrix} \text{MODE} \\ \text{ESC} \end{smallmatrix} \right]$ key.
The display returns to the operation data No.1 screen.

Top screen of the data mode

d R t R

SET

Operation data No.1

d R t R - 0 1

SET

Positioning mode

0 1 - i n c A b S

SET

Present value of the positioning mode
(blinking display)

i n c

↓

Change to absolute mode
(blinking display)

A b S

SET

Confirm the changed value (quick blinking)

A b S

Return to the positioning mode

0 1 - i n c A b S

↓

Position

0 1 - P o S

SET

Present value of the position
(blinking display)

0 0 0 0 0 0

Use $\left[\leftarrow \right]$ $\left[\rightarrow \right]$ to navigate through the digits.
Use $\left[\uparrow \right]$ $\left[\downarrow \right]$ to increase/decrease the value.

Input 10000 (blinking display)

0 0 1 0 0 0 0

SET

Confirm the changed value (quick blinking)

0 0 1 0 0 0 0

Return to the position

0 1 - P o S

MODE
ESC


Return to the operation data No.1

d R t R - 0 1

7.5 Initialization of the selected operation data

All of the set value for the selected operation data number can be reverted to the initial values.

1. Use the $\left[\begin{smallmatrix} \text{MODE} \\ \text{ESC} \end{smallmatrix} \right]$ key to select the data mode.
The "DATA" LED is lit.
2. Press the $\left[\text{SET} \right]$ key on the top screen of the data mode.
The display changes to the operation data No.1 screen.
3. Press the $\left[\text{SET} \right]$ key.
The display changes to the positioning mode screen.
4. Press the $\left[\uparrow \right]$ key once.
The display changes to the clear data screen.
5. Press the $\left[\text{SET} \right]$ key.
The display changes to the screen to execute clearing.
6. Press the $\left[\text{SET} \right]$ key.
The display blinks and the operation data No.1 is cleared.

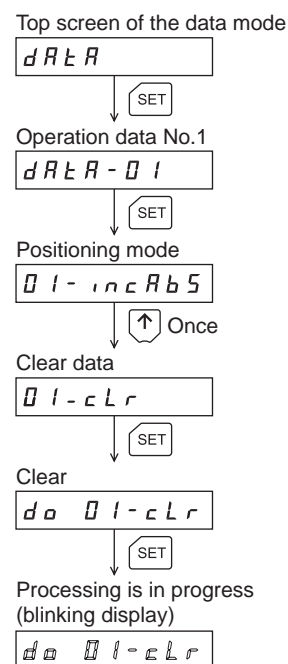

7.6 Initialization of all operation data

All of the operation data saved in the driver can be reverted to the initial values.

Perform "Initialize operation data" of the copy mode.

For the operation, check the screen transitions of the copy mode on p.16, or "10.6 Initializing driver data" on p.39.

8 Parameter mode

You can set parameters relating to motor operation and control. These parameters are saved in the driver. Before setting parameters, read the "CRK Series FLEX Built-in Controller type USER MANUAL" carefully to understand the basic operations, functions and other details of the driver.

Note

- Parameters have significant bearing on motor operation. Before setting any parameter, make sure you fully understand the content of the parameter.
- If operations are limited by the edit lock function, parameters cannot be edited.

8.1 Types of parameters

Application parameters and system parameters are handled in the parameter mode.

■ Application parameters

When an application parameter is changed, the new parameter becomes effective immediately.

Six types of parameters are available on the levels below the application parameter screen. These parameters are classified as follows.

Parameter classification	Description
I/O parameters	Set the parameters relating to I/O signals.
Motor parameters	Set the parameters relating to motor.
Speed parameters	Set the parameters relating to speed.
Return-to-home parameters	Set the parameters relating to return-to-home operation.
Alarm/warning parameters	Set the condition under which each alarm or warning generates.
Common parameters	Set the software overtravel, data setter display mode, RS-485 communication period, and whether to enable or disable misstep detection.

■ System parameters


When a system parameter is changed, the new parameter will become effective only after the power is cycled.

Two types of parameters are available on the levels below the system parameter screen. These parameters are classified as follows.

Parameter classification	Description
Operation setting parameters	Set the parameters relating to motor operation.
Communication parameters	Set the parameters relating to RS-485 communication.

8.2 Operation in the parameter mode

1. Use the $\left[\frac{\text{MODE}}{\text{ESC}} \right]$ key to select the parameter mode.
2. Press the $[\text{SET}]$ key on the top screen of the parameter mode.
3. Use the $[\uparrow]$ $[\downarrow]$ keys to select the application parameters or system parameters.
4. Press the $[\text{SET}]$ key.
The display changes to the parameter type selection screen.
5. Press the $[\text{SET}]$ key.
The display changes to the parameter item screen.
6. Use the $[\uparrow]$ $[\downarrow]$ keys to select the parameter you want to change.

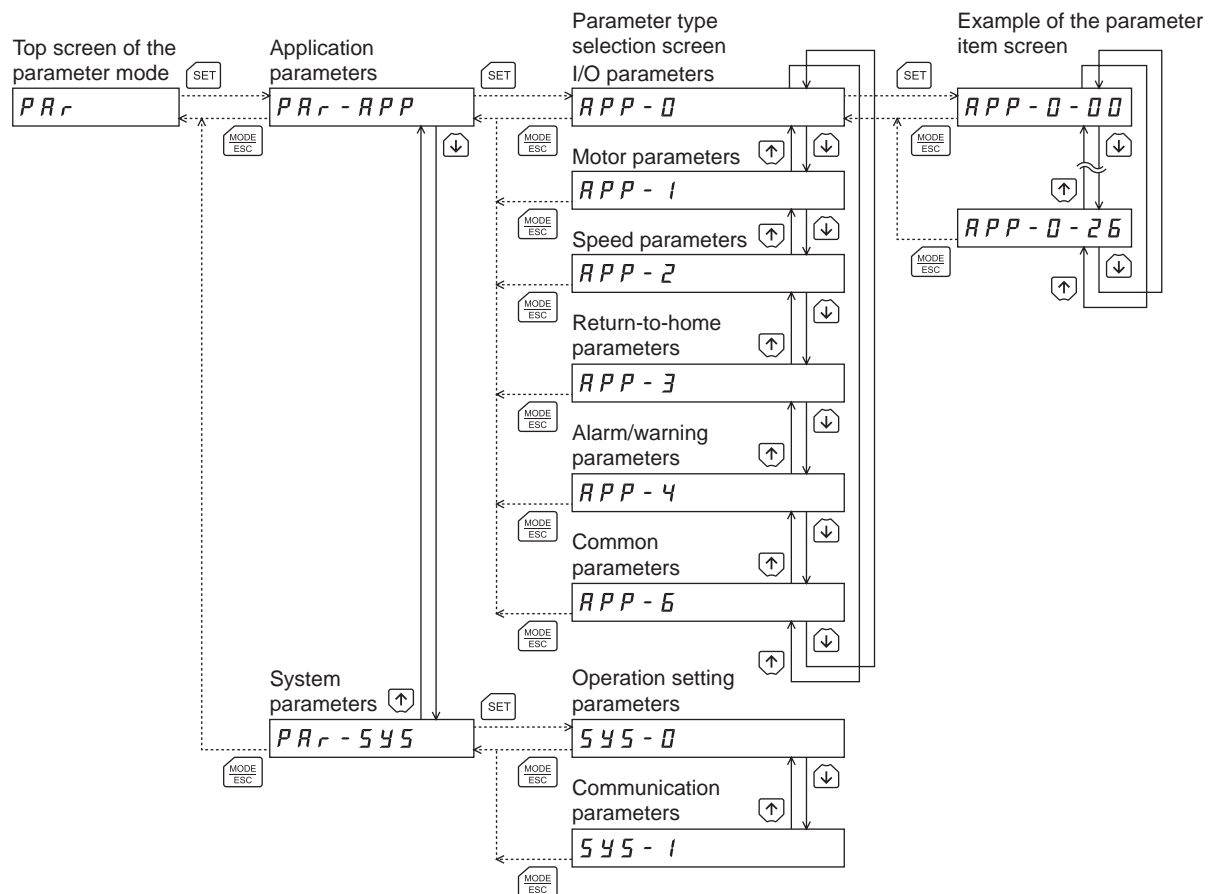


Note

- If the value you have input is outside the setting range, "Error" will be displayed for 1 second. If this error display appears, input a different value that falls within the setting range.
- If the $[\text{SET}]$ key on the **OPX-2A** is pressed while internal processing is being performed, the top screen will not change to any of its sub-screens and "mEm-bUSY" will be shown on the display. Be sure to wait until all internal processing is completed, before pressing the $[\text{SET}]$ key.

8.3 Setting example

Pressing the **[SET]** key on the parameter item screen enables parameter setting.
This section explains how to assign the ZSG output to the OUT1 output.

1. Use the **[$\frac{MODE}{ESC}$]** key to select the parameter mode.
The "PAR" LED is lit.
2. Press the **[SET]** key on the top screen of the parameter mode.
The display changes to the application parameter screen.
3. Press the **[SET]** key.
The display changes to the I/O parameter screen.
4. Press the **[SET]** key again.
The display changes to the START input mode parameter screen.
5. Press the **[↓]** key five times to change the value to "6".
The display changes to the OUT1 signal mode selection parameter screen.
6. Press the **[SET]** key.
The present set value of the OUT1 output is displayed with blinking.
7. Use the **[↑]** **[↓]** **[←]** **[→]** keys to select "10".
"10" indicates the ZSG output.
8. Press the **[SET]** key.
The blinking speed of the input value becomes quickly and the value is set.
The display returns to the OUT1 signal mode selection parameter screen.

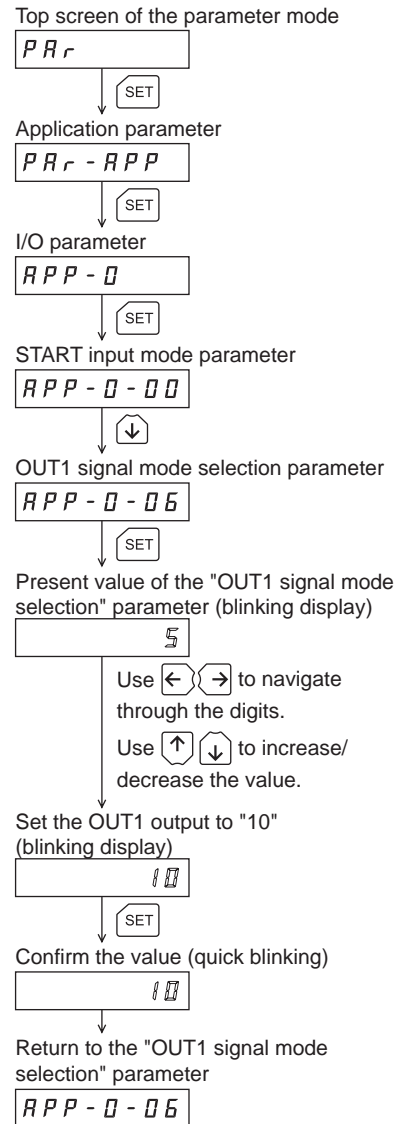

8.4 Description of application parameters

■ I/O parameters

Parameter item screen	Parameter name	Description	Setting range	Initial value
APP-0-00	START input mode	Sets whether to input the START input signal via I/O or RS-485 communication.	0: RS-485 communication 1: I/O	1
APP-0-01	I/O STOP input	Changes the setting to enable/disable STOP input of I/O.	0: Disable 1: Enable	1
APP-0-02	STOP action	Sets how the motor should stop when a STOP input is turned ON.	0: Immediate stop 1: Decelerate stop 2: Immediate stop&Current OFF 3: Decelerate stop&Current OFF	1
APP-0-03	STOP contact configuration	Sets the STOP input logic.	0: Make (N.O.) 1: Brake (N.C.)	1
APP-0-04	C-ON logic configuration	Sets the C-ON logic for RS-485 communication.	0: 0=Not excited, 1=Excited 1: 0=Excited, 1=Not excited	0
APP-0-06	OUT1 signal mode selection	Sets the function assigned to the OUT1 to OUT4 output.	5: AREA 11: R-OUT1 6: TIM 12: R-OUT2 7: READY 13: STEPOUT 8: WNG 14: O.H. 9: HOME-P 15: R-OUT3 10: ZSG 16: R-OUT4	5
APP-0-07	OUT2 signal mode selection			7
APP-0-08	OUT3 signal mode selection			8
APP-0-09	OUT4 signal mode selection			9
APP-0-10	HOME/P-PRESET input switching	Sets whether to use HOME or P-PRESET input.	0: HOME 1: P-PRESET	0
APP-0-11	Motor excitation mode	Sets whether to control the motor excitation via I/O or RS-485 communication.	0: RS-485 communication 1: I/O	1
APP-0-12	HOME/FWD/RVS input mode	Sets whether to input the HOME, FWD and RVS input signals via I/O or RS-485 communication.		
APP-0-13	Data No. input mode	Sets whether to input the M0 to M5 input signals via I/O or RS-485 communication.		
APP-0-14	AWO contact configuration	Sets the AWO input logic.	0: Make (N.O.) 1: Brake (N.C.)	0
APP-0-16	Hardware overtravel detection	Sets whether to enable or disable hardware overtravel detection using LS inputs.	0: Disable 1: Enable	1
APP-0-17	LS contact configuration	Sets the \pm LS input logics.	0: Make (N.O.) 1: Brake (N.C.)	0
APP-0-18	HOMES contact configuration	Sets the HOMES input logic.		
APP-0-19	SLIT contact configuration	Sets the SLIT input logic.		
APP-0-20	Overtravel action	Sets the motor action to take place upon the occurrence of overtravel.	0: Immediate stop 1: Decelerate stop	0
APP-0-21	Preset position	Sets the preset position.	-8,388,608 to +8,388,607 step	0
APP-0-22	Area 1	Sets the range for AREA output. The AREA output will be ON when the motor is inside the area set by the area 1 and area 2.		
APP-0-23	Area 2			
APP-0-26	Encoder counter preset value	Sets the encoder counter preset value.		

■ Motor parameters

Parameter item screen	Parameter name	Description	Setting range	Initial value
APP-1-00	Operating current	Sets the motor operating current based on the rated current being 100%.	5 to 100%	100
APP-1-01	Standstill current	Sets the motor standstill current as a percentage of the rated current, based on the rated current being 100%.	5 to 50%	50

■ Speed parameters

Parameter item screen	Parameter name	Description	Setting range	Initial value
APP-2-00	Common acceleration rate	Sets the common acceleration rate in positioning operation and continuous operation.	0.001 to 1000.000 ms/kHz	30.000
APP-2-01	Common deceleration rate	Sets the common deceleration rate in positioning operation and continuous operation.		
APP-2-02	Starting speed	Sets the starting speed in positioning operation and continuous operation. The motor will operate at the starting speed if the operating speed is below the starting speed.	1 to 500,000 Hz	100
APP-2-06	Jog operating speed	Sets the operating speed for JOG operation.		1000
APP-2-07	Jog acceleration (deceleration) rate	Sets the acceleration/deceleration rate for JOG operation.	0.001 to 1000.000 ms/kHz	30.000
APP-2-08	Jog starting speed	Sets the starting speed for JOG operation.	1 to 500,000 Hz	100
APP-2-09	Acceleration (deceleration) rate type	Sets whether to use the common acceleration/deceleration rate or the acceleration/deceleration rate specified for the operation data.	0: Common 1: Separate	0

■ Return-to-home parameters

Parameter item screen	Parameter name	Description	Setting range	Initial value
APP-3-00	Home-seeking mode	Set the mode for return-to-home operation.	0: 2 sensors 1: 3 sensors	1
APP-3-02	Operating speed of home-seeking	Sets the operating speed for return-to-home operation.	1 to 500,000 Hz	1000
APP-3-03	Acceleration (deceleration) rate of home-seeking	Sets the acceleration/deceleration rate for return-to-home operation.	0.001 to 1000.000 ms/kHz	30.000
APP-3-04	Starting speed of home-seeking	Sets the starting speed for return-to-home operation.	1 to 500,000 Hz	100
APP-3-05	Position offset of home-seeking	Sets the amount of offset from mechanical home.	-8,388,608 to +8,388,607 step	0
APP-3-06	Starting direction of home-seeking	Sets the starting direction for home detection.	0: Negative direction 1: Positive direction	1
APP-3-07	SLIT detection with home-seeking	Sets whether or not to concurrently use the SLIT input for return-to-home operation.	0: Disable 1: Enable	0
APP-3-08	TIM signal detection with home-seeking	Sets whether or not to concurrently use the TIM (ZSG) output for return-to-home operation.	0: Disable 1: Enable (TIM) 2: Enable (ZSG)	0
APP-3-09	Backward steps in 2-sensor mode home-seeking	Sets the travel amount after the motor pulls out from the LS sensor in 2-sensor return-to-home operation.	0 to 32767 step	200

■ Alarm/warning parameters

Parameter item screen	Parameter name	Description	Setting range	Initial value
APP-4-00	Stepout detection band	Sets the judgment condition for misstep detection using the deviation (angle) between the command position and encoder counter value.	0.1 to 360.0 deg	7.2
APP-4-17	Overvoltage warning	Sets the voltage at which an overvoltage warning generates.	25.0 to 35.0 V	31.0
APP-4-19	Overheat warning	Sets the temperature at which an overheat warning generates.	40 to 85 °C (104 to 185 °F)	85

Common parameters

Parameter item screen	Parameter name	Description	Setting range	Initial value
APP-6-00	Software overtravel	Sets whether to enable or disable software overtravel detection using soft limits.	0: Disable 1: Enable	1
APP-6-01	Positive software limit	Sets the value of soft limit in + direction.	-8,388,608 to +8,388,607 steps	8,388,607
APP-6-02	Negative software limit	Sets the value of soft limit in - direction.		-8,388,608
APP-6-03	Display mode of the data setter speed	Sets the display method of monitored speed in the OPX-2A .	0: Signed 1: Absolute	0
APP-6-06	Communication timeout action	Sets how to stop the motor when a communication timeout occurs.	0: Immediate stop 1: Decelerate stop	1
APP-6-07	Receive period	Sets the receive period for RS-485 communication.	0: Function disabled 0.01 to 9.99 sec.	0
APP-6-08	Response interval	Sets the response period for RS-485 communication.	0 to 1000 ms	50
APP-6-09	Receive monitoring	Sets the receive monitor period for RS-485 communication.	0.01 to 9.99 sec.	0.10
APP-6-10	Stepout detection action	Sets the operation to be performed when the deviation between the command position and encoder counter value reaches the stepout detection band.	0: No operation (alarm/warning not present) 1: Warning 2: Alarm	0

8.5 Description of system parameters

Operation setting parameters

Parameter item screen	Parameter name	Description	Setting range	Initial value
SYS-0-10	Motor rotation direction	Sets the rotation direction of motor output shaft.	0: Positive direction=CCW 1: Positive direction=CW	1
SYS-0-12	Stepout detection	Sets whether to enable or disable the misstep detection function.	0: Disable 1: Enable	0
SYS-0-13	Motor step angle	Sets the motor step angle.	See table below.	0
SYS-0-14	Encoder electronic gear A	Sets the encoder electronic gear A.	1 to 250,000	500
SYS-0-15	Encoder electronic gear B	Sets the encoder electronic gear B.		

“Motor step angle” parameter [SYS-0-13] setting range

Setting	Step angle	Number of divisions	Setting	Step angle	Number of divisions
0	0.72°	1	8	0.0288°	25
1	0.36°	2	9	0.018°	40
2	0.288°	2.5	10	0.0144°	50
3	0.18°	4	11	0.009°	80
4	0.144°	5	12	0.0072°	100
5	0.09°	8	13	0.00576°	125
6	0.072°	10	14	0.0036°	200
7	0.036°	20	15	0.00288°	250

Note

- Step angles are theoretical values.
- With the geared type, the value of “step angle/gear ratio” becomes the actual step angle.

■ Communication parameters

Parameter item screen	Parameter name	Description	Setting range	Initial value
SYS-1-00	Communication axis number	Sets the axis number for RS-485 communication.	0 to 31	15
SYS-1-01	Communication protocol	Sets the protocol for RS-485 communication.	0: Modbus RTU 1: GW Ver.1	0
SYS-1-02	Communication parity	Sets the parity for RS-485 communication.	0: None 1: Even number 2: Odd number	1
SYS-1-03	Communication stop bit	Sets the stop bit for RS-485 communication.	0: 1 bit 1: 2 bits	0
SYS-1-04	Transmission waiting time	Sets the transmission waiting time for RS-485 communication.	0 to 1000.0 (1=0.1 ms)	10.0
SYS-1-05	Communication timeout	Sets the condition in which a communication timeout occurs in RS-485 communication.	0: Not monitored 1 to 10000 ms	0
SYS-1-06	Communication error alarm	Sets the condition in which a RS-485 communication error alarm generates. A communication error alarm generates after a RS-485 communication error has occurred by the number of times set here.	1 to 10 times	3

8.6 Initializing parameters

You can revert parameters saved in the driver to their initial values. Perform "Initialize operation data" of the copy mode. For the operation, check the screen transitions of the copy mode on p.16, or "10.6 Initializing driver data" on p.39.

9 Test mode

9.1 Overview of the test mode

- I/O test

You can check the ON/OFF status of each input signal of the driver. You can also switch the ON/OFF status of each output signal on the **OPX-2A**. There is also an I/O test function with which you can check the connection status of the driver.

- JOG operation

You can operate the motor using the keys on the **OPX-2A**.

- Positioning operation

You can perform the positioning operation.

- Return-to-home operation

You can perform the return-to-home operation.

- Position preset

You can set the preset value as the command position.

- Encoder counter preset


You can set the preset value as the encoder counter value.

- Teaching

You can operate the motor using the keys on the **OPX-2A** and reflect the attained position in the operation data.

9.2 Operation in the test mode

1. Use the $\left[\begin{smallmatrix} \text{MODE} \\ \text{ESC} \end{smallmatrix} \right]$ key to select the test mode.
2. Press the $\left[\text{SET} \right]$ key in the top screen of the test mode.
The display changes to the test mode item screen.
3. Use the $\left[\uparrow \right]$ $\left[\downarrow \right]$ keys to select the item you want to perform.

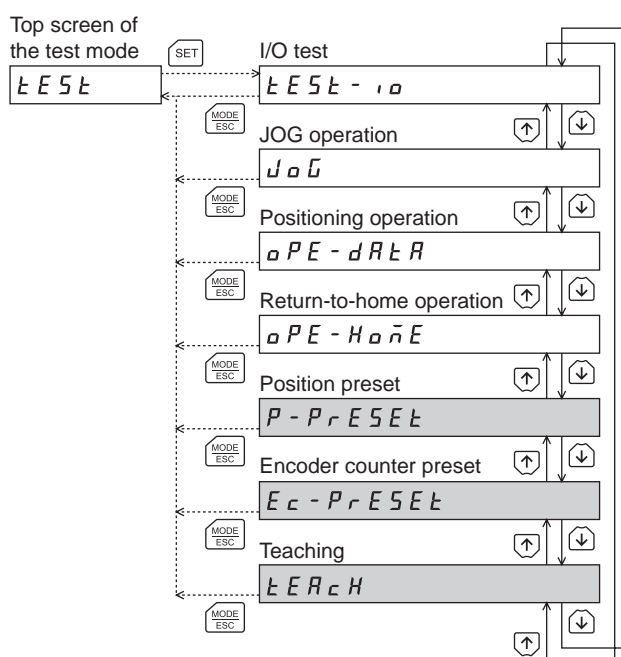

* If operations are limited by the edit lock function, the screen text in gray is not shown.

Note

- Stop the motor operation before changing to the test mode.
- When you move from the top screen of the test mode to a lower level, following inputs will be disabled.
START input, FWD input, RVS input, HOME/P-PRESET input and M0 to M5 inputs.
- If the [SET] key on the **OPX-2A** is pressed while internal processing is being performed, the top screen will not change to any of its sub-screens and “mEm-bUSY” will be shown on the display. Be sure to wait until all internal processing is completed, before pressing the [SET] key.


- What happens when the [SET] key is pressed while the motor is operating

While the motor is operating, you cannot move to any lower level from the top screen of the test mode. Pressing the [SET] key will generate an error, and “oPE-Err” will be shown. Be sure to stop the motor operation before pressing the [SET] key.

oPE-Err

9.3 I/O test


When checking the connection condition of the driver, perform the I/O test.

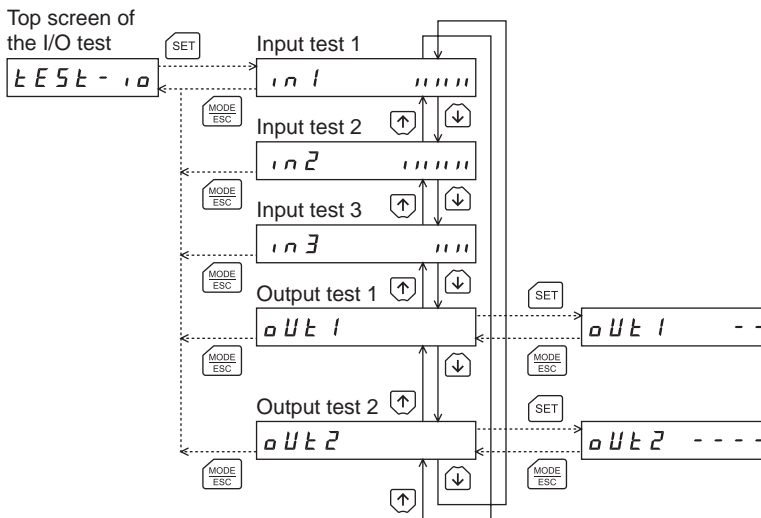


Each digit on the 7-segment LED display corresponds to a signal. The LED is lit when the input signal is ON, and it is unlit when the input signal is OFF.

Use the [↑][↓] keys to switch the ON-OFF state of the output signal. "o" is displayed when the signal is ON, while "-" is displayed when the signal is OFF.

• Input signals

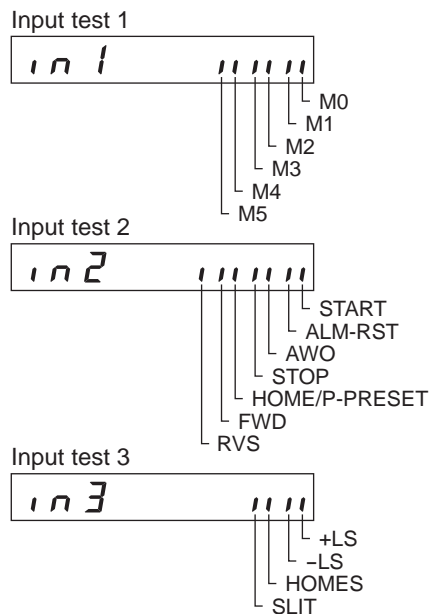

• Output signals

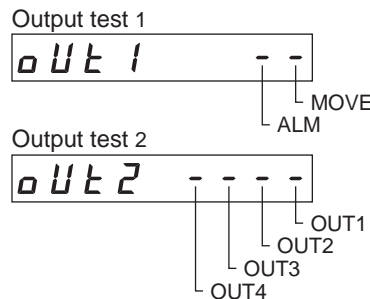

Use [←][→] to navigate through the digits.


Use [↑][↓] to switch the ON/OFF status.

o indicates the ON status.

- indicates the OFF status.

9.4 JOG operation

You can operate the motor using the keys on the **OPX-2A**.

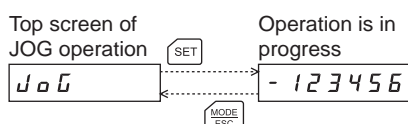


Pressing the **【↑】** key once causes the motor to rotate one step in the positive direction. Pressing and holding the key causes the motor to rotate continuously in the positive direction.

Pressing the **【↓】** key once causes the motor to rotate one step in the negative direction. Pressing and holding the key causes the motor to rotate continuously in the negative direction.

The operating speed corresponds to the value set in the “Jog operating speed” parameter [APP-2-06].


Take note that when the value set in the “Jog starting speed” parameter [APP-2-08] is greater than the value set in the “Jog operating speed” parameter [APP-2-06], the Jog starting speed will become effective.

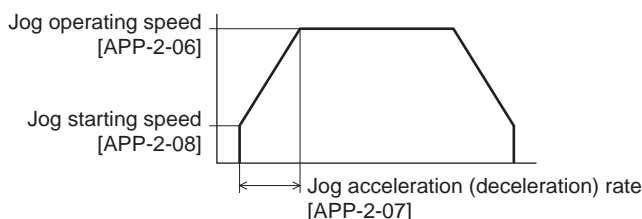

Note During operation, the motor rotates at the specified operating speed while each applicable key is pressed. Before commencing the operation, consider the status of the equipment and condition of its surroundings to confirm thoroughly that motor rotation will not cause any dangerous situations.

9.5 Positioning operation

Select a desired operation data number and then press the **【SET】** key, and positioning operation will be performed.

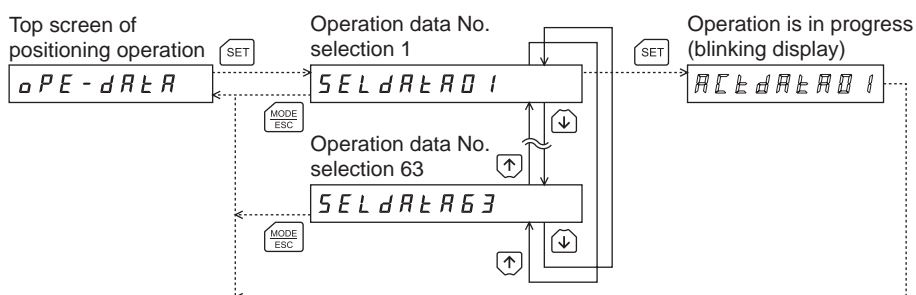


Note During operation, the motor rotates at the specified operating speed while each applicable key is pressed. Before commencing the operation, consider the status of the equipment and condition of its surroundings to confirm thoroughly that motor rotation will not cause any dangerous situations.

9.6 Return-to-home operation

You can perform a return-to-home operation.


The operating speed corresponds to the value set in the “operating speed of home-seeking” parameter [APP-3-02].

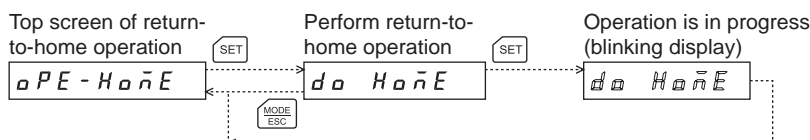

Note During operation, the motor rotates at the specified operating speed while each applicable key is pressed. Before commencing the operation, consider the status of the equipment and condition of its surroundings to confirm thoroughly that motor rotation will not cause any dangerous situations.

9.7 Presetting the position


In this operation, the command position is preset by rewriting the value in the “preset position” parameter [APP-0-21].

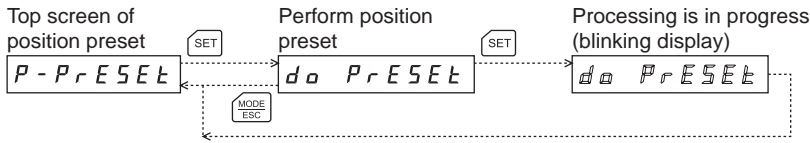

Note | If operations are limited by the edit lock function, the preset function cannot be performed.

9.8 Presetting the encoder counter


In this operation, the encoder counter is preset by rewriting the value in the “encoder counter preset value” parameter [APP-0-26].

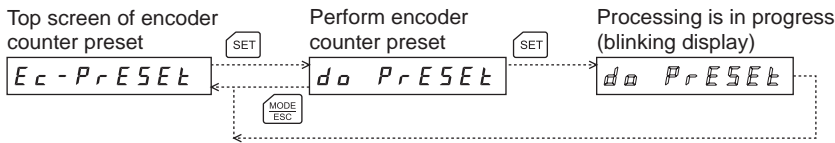

Note | If operations are limited by the edit lock function, the preset function cannot be performed.

9.9 Teaching

You can operate the motor using the keys on the **OPX-2A** and reflect the attained position in the operation data. The absolute mode will be automatically selected as the operation mode of any position data set by teaching. The operating speed, acceleration/deceleration rate and starting speed of teaching are the same as the corresponding settings applicable to JOG operation.

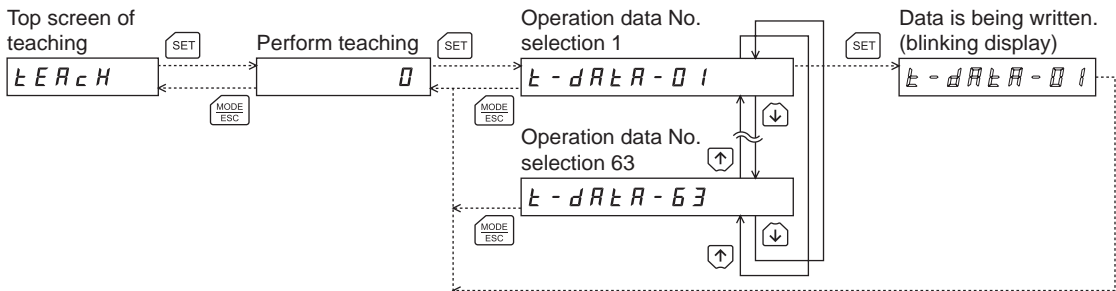

- Note**
- During operation, the motor rotates at the specified operating speed while each applicable key is pressed. Before commencing the operation, consider the status of the equipment and condition of its surroundings to confirm thoroughly that motor rotation will not cause any dangerous situations.
 - If operations are limited by the edit lock function, the teaching cannot be performed.

10 Copy mode


The **OPX-2A** has four data banks, and operation data and parameters can be saved in each of these data banks. Since a non-volatile memory is used as the data memory element, stored data will be retained even after the power is turned off.

10.1 Overview of the copy mode

- **Download**
Copy data saved in the **OPX-2A** to the driver.
- **Upload**
Copy data saved in the driver to the **OPX-2A**.
- **Verification**
Verify data in the **OPX-2A** against the corresponding data in the driver.
- **Initializing driver data**
Revert data saved in the driver to their initial values.

10.2 Operation in the copy mode

1. Use the **[MODE/ESC]** key to select the copy mode.
2. Press the **[SET]** key in the top screen of the copy mode.
3. Use the **[↑]** **[↓]** keys to select the item you want to perform.

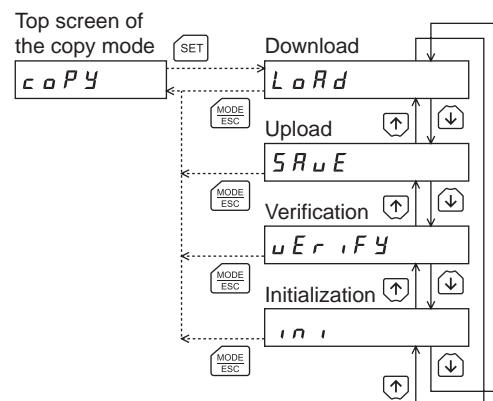

- **What happens when the **[SET]** key is pressed while the motor is operating**

While the motor is operating, you cannot move to any lower level from the top screen of the copy mode. Pressing the **[SET]** key will generate an error, and “oPE-Err” will be shown.

Be sure to stop the motor operation before pressing the **[SET]** key.

- **What happens when the **[SET]** key is pressed while the edit lock is enabled**

While the edit lock is enabled, you cannot move to any lower level from the top screen of the copy mode. Pressing the **[SET]** key will generate an error, and “LocK-Err” will be shown.



Be sure to cancel the edit lock before pressing the **[SET]** key. Refer to p.8 for the procedure to cancel the edit lock.

Note

- Stop the motor operation before changing to the copy mode.
- When you move from the top screen of the copy mode to a lower level, following inputs will be disabled.
START input, FWD input, RVS input, HOME-P/PRESET input and M0 to M5 inputs.
- If the **[SET]** key on the **OPX-2A** is pressed while internal processing is being performed, the top screen will not change to any of its sub-screens and “mEm-bUSY” will be shown on the display. Be sure to wait until all internal processing is completed, before pressing the **[SET]** key.

10.3 Downloading to the driver

In this operation, data in the specified data bank number are downloaded to the driver.

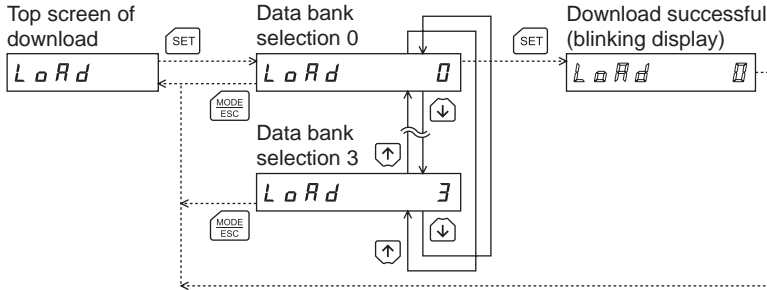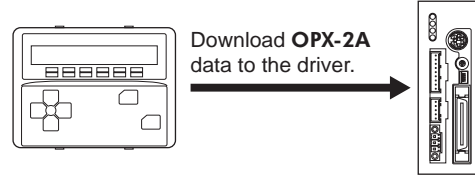

Note



- System parameters that have been changed will become effective after the power is cycled. If the system parameters have been changed as a result of the download, cycle the driver power.
- Do not turn off the driver power while the download is still in progress (=while the display is blinking). Doing so may damage the data.

If a download error occurs, a code indicating the nature of the error will blink on the display. Download will not be performed and the display will return to the top screen of download.

Blinking display	Description	Action
<i>P r o d - E r r</i>	The product series of the driver to which data is downloaded is wrong.	<ul style="list-style-type: none"> • Check the product series of the driver. • Check the data bank number on the OPX-2A.
<i>H E R d - E r r</i>	An error occurred while data was being downloaded.	Perform download again. If the same error occurs, the data saved in the OPX-2A may be damaged. Upload the applicable data to set the OPX-2A data again.
<i>b c c - E r r</i>		
<i>n o - d A t A</i>	The specified data bank number does not contain data.	Check the data bank number.

10.4 Uploading to the OPX-2A

In this operation, data saved in the driver is uploaded to the specified data bank number.

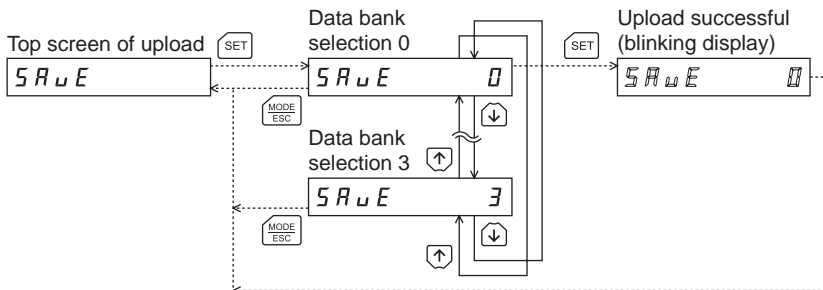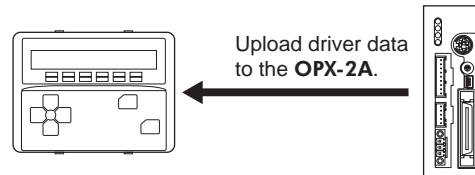


Note

- Do not turn off the driver power while the upload is still in progress (=while the display is blinking). Doing so may damage the data.

10.5 Verifying data

In this operation, data in the specified data bank number are verified against the corresponding data saved in the driver. If the verification finds that the two sets of data match, “Good” will be shown. If the two do not match, “Error” will be shown.

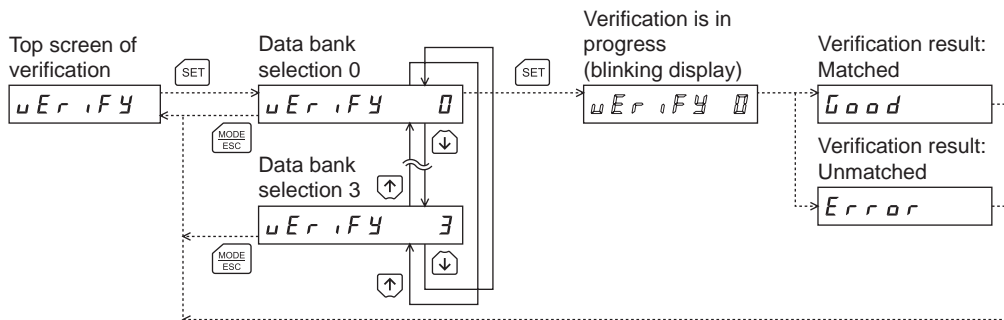


If a verification error occurs, a code indicating the nature of the error will blink on the display. Verification will not be performed and the display will return to the top screen of verification.

Blinking display	Description	Action
<i>Prod-Err</i>	The product series of the driver against which data is verified is wrong.	<ul style="list-style-type: none"> Check the product series of the driver. Check the data bank number on the OPX-2A.
<i>HEAD-Err</i> <i>bcc-Err</i>	An error occurred while data was being verified.	Perform verification again. If the same error occurs, the data saved in the OPX-2A may be damaged. Upload the applicable data to set the OPX-2A data again.
<i>no-dAtA</i>	The specified data bank number does not contain data.	Check the data bank number.

10.6 Initializing driver data

In this operation, data saved in the driver are reverted to their initial values.

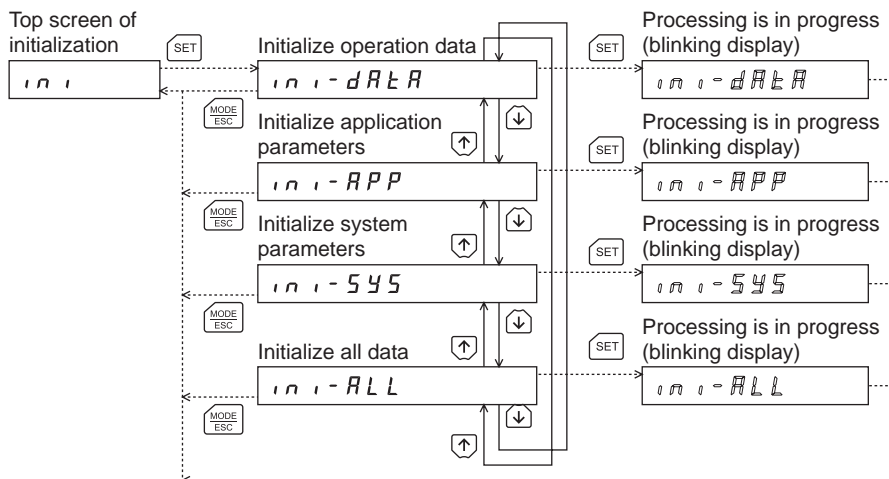

Note

- System parameters that have been changed will become effective after the power is cycled. If the system parameters have been changed as a result of the initialization, cycle the driver power.
- Do not turn off the driver power while the initialization is still in progress (=while the display is blinking). Doing so may damage the data.

- Unauthorized reproduction or copying of all or part of this manual is prohibited.
If a new copy is required to replace an original manual that has been damaged or lost, please contact your nearest Oriental Motor branch or sales office.
- Oriental Motor shall not be liable whatsoever for any problems relating to industrial property rights arising from use of any information, circuit, equipment or device provided or referenced in this manual.
- Characteristics, specifications and dimensions are subject to change without notice.
- While we make every effort to offer accurate information in the manual, we welcome your input. Should you find unclear descriptions, errors or omissions, please contact the nearest office.
- **Orientalmotor** is a registered trademark or trademark of Oriental Motor Co., Ltd., in Japan and other countries.
Other product names and company names mentioned in this manual may be registered trademarks or trademarks of their respective companies and are hereby acknowledged. The third-party products mentioned in this manual are recommended products, and references to their names shall not be construed as any form of performance guarantee. Oriental Motor is not liable whatsoever for the performance of these third-party products.

© Copyright ORIENTAL MOTOR CO., LTD. 2008

- Please contact your nearest Oriental Motor office for further information.

ORIENTAL MOTOR U.S.A. CORP.
Technical Support Tel:(800)468-3982
8:30 A.M. to 5:00 P.M., P.S.T. (M-F)
7:30 A.M. to 5:00 P.M., C.S.T. (M-F)
E-mail: techsupport@orientalmotor.com
www.orientalmotor.com

ORIENTAL MOTOR (EUROPA) GmbH
Headquarters and Düsseldorf Office
Tel:0211-52067-00 Fax:0211-52067-099
Munich Office
Tel:089-3181225-00 Fax:089-3181225-25
Hamburg Office
Tel:040-76910443 Fax:040-76910445

ORIENTAL MOTOR (UK) LTD.
Tel:01256-347090 Fax:01256-347099

ORIENTAL MOTOR (FRANCE) SARL
Tel:01 47 86 97 50 Fax:01 47 82 45 16

ORIENTAL MOTOR ITALIA s.r.l.
Tel:02-93906346 Fax:02-93906348

SHANGHAI ORIENTAL MOTOR CO.,LTD.
Tel:400-820-6516 Fax:021-6278-0269

TAIWAN ORIENTAL MOTOR CO.,LTD.
Tel:(02)8228-0707 Fax:(02)8228-0708

SINGAPORE ORIENTAL MOTOR PTE LTD
Tel:+65-6745-7344 Fax:+65-6745-9405

ORIENTAL MOTOR (MALAYSIA) SDN. BHD.
Tel:(03)22875778 Fax:(03)22875528

ORIENTAL MOTOR (THAILAND) CO.,LTD.
Tel:+66-2-251-1871 Fax:+66-2-251-1872

INA ORIENTAL MOTOR CO.,LTD.
KOREA
Tel:080-777-2042 Fax:02-2026-5495

ORIENTAL MOTOR CO.,LTD.
Headquarters Tokyo, Japan
Tel:03-6744-0361 Fax:03-5826-2576