

OPERATING MANUAL

DC Blowers MBD Series

Introduction

■ Before using the product

Only qualified personnel of electrical and mechanical engineering should work with the product. Use the product correctly after thoroughly reading the section "Safety precautions." In addition, be sure to observe the contents described in warning, caution, and note in this manual.




The product described in this manual is designed and manufactured to be incorporated into general industrial equipment. Do not use it for any other purpose. Oriental Motor Co., Ltd. is not responsible for any compensation for damage caused through failure to observe this warning.

■ RoHS Directive

This product does not contain the substances exceeding the restriction values.

Safety precautions

The precautions described below are intended to ensure the safe and proper use of the product and to prevent the user and other personnel from exposure to the risk of injury. Use the product only after carefully reading and fully understanding these instructions.

	Handling the product without observing the instructions that accompany a "WARNING" symbol may result in serious injury or death.
	Handling the product without observing the instructions that accompany a "CAUTION" symbol may result in injury or property damage.
	The items under this heading contain important handling instructions that the user should observe to ensure safe use of the product.

! WARNING

- Do not use the product in explosive or corrosive environments, in the presence of flammable gases, locations subjected to splashing water, or near combustibles. Doing so may result in fire or injury.
- Assign qualified personnel the task of installing, wiring, operating/controlling, inspecting and troubleshooting the product. Failure to do so may result in fire or injury.
- Shut off the power to the fan in the event the lock-protection circuit is activated. Otherwise, the fan will start unexpectedly when released from the locked condition, causing bodily injury or equipment damage.
- Install the fan in an enclosure in order to prevent injury.
- Keep the input-power voltage within the specified range to avoid fire.
- Connect the cables securely according to the wiring diagram in order to prevent fire.
- Do not forcibly bend, pull or pinch the cable. Doing so may fire.
- Keep the area around the fan free of combustible materials in order to prevent fire or a skin burn(s).
- For the power supply use a DC power supply with reinforced insulation on its primary and secondary sides. Failure to do so may result in electric shock.
- Immediately when trouble has occurred, stop running and turn off the fan power. Failure to do so may result in fire, electric shock or injury.
- Do not disassemble or modify the fan. This may cause injury. Refer all such internal inspections and repairs to the branch or sales office from which you purchased the product.

Thank you for purchasing an Oriental Motor product. This operating manual describes product handling procedures and safety precautions.

- Please read the manual thoroughly to ensure safe operation.
- Always keep the manual where it is readily available.

! CAUTION

- Do not use the fan beyond its specifications, or injury or damage to equipment may result.
- Keep your fingers and objects out of the openings in the fan. This may cause injury.
- Do not touch the motor during operation or immediately after stopping. The surface is hot and may cause a skin burn(s).
- Do not hold the rotating parts (runner) of the fan or lead wire. This may cause injury.
- To prevent the risk of damage to equipment, leave nothing around the fan that would obstruct ventilation.
- Provide anti-static measures before installing the fan. Failure to do so may result in equipment damage.
- Do not touch the rotating parts (runner) when the fan is in operation. This may cause injury. The use of the optional fingerguard is recommended to ensure protection.
- Turn off the power in the event of a power failure, or the fan will suddenly start when the power is restored and may cause injury or damage to equipment.

Preparation

■ Package contents

Verify that the items listed below are included.

Report any missing or damaged items to the branch or sales office from which you purchased the product.

- ☐ Fan 1 unit
- ☐ Instructions and Precautions for Safe Use 1 copy

■ How to identify the product model

Verify the model name of the purchased product against the model shown on the name plate of the product.

● Fan

MBD 12 - 24 A
1 2 3 4

1	Series name	MBD: MBD Series
2	Runner diameter	8: Ø80 mm (Ø3.15 in.) 10: Ø100 mm (Ø3.94 in.) 12: Ø120 mm (Ø4.72 in.)
3	Power Supply Voltage	24: 24 VDC
4	Additional Function	Blank: No additional functions A: Low speed alarm


● Fan kit

T - MBD12-24A - GA
1 2 3

1	Fan kit
2	Fan model
3	GA: Finger guard, Mounting bracket, Mounting screws FA: Filter, Mounting bracket, Mounting screws

Information about nameplate

The figure shows an example.

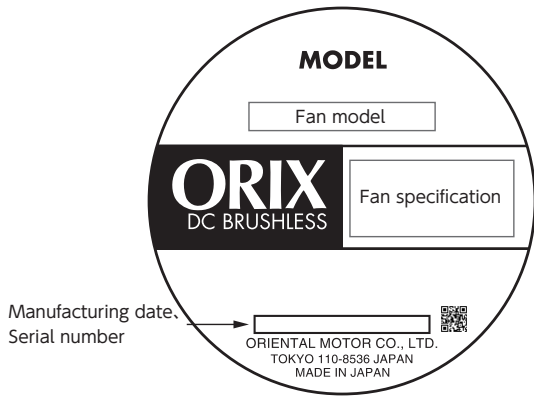

Installation


Installation location

The fan is designed and manufactured to be incorporated in equipment. Install it in a well-ventilated location that provides easy access for inspection. The location must also satisfy the following conditions:


- Inside an enclosure that is installed indoors
- Operating ambient temperature
–10 to +60 °C (+14 to +140 °F) (non-freezing)
- Operating ambient humidity 85% or less (non-condensing)
- Area that is free of explosive atmosphere or toxic gas (such as sulfuric gas) or liquid
- Area not exposed to direct sun
- Area free of excessive amount of dust, iron particles or the like
- Area not subject to splashing water (rains, water droplets), oil (oil droplets) or other liquids
- Area free of excessive salt
- Area not subject to continuous vibration or excessive shocks
- Area free of radioactive materials, magnetic fields or vacuum
- Area free of excessive electromagnetic noise (from welders, power machinery, etc.)
- When using near a switching circuit or high-frequency power supply, the induced current may flow inside the fan due to electromagnetic noise (conductive noise, radiative noise). If the induced current flows, the electric corrosion is caused in the bearings of the fan. As a result, it may generate the noise or shorten the service life of the products.
Use the fan in the environment that the electromagnetic noise does not cause.

Installation method

Install the fan onto an appropriate flat metal plate having excellent vibration resistance and heat conductivity.
Use the mounting bracket **PAS4B** (sold separately).
Affix the fan to the equipment using mounting bracket. Be sure to use a spacer so that the casing does not touch the surface to which the mounting bracket is secured.

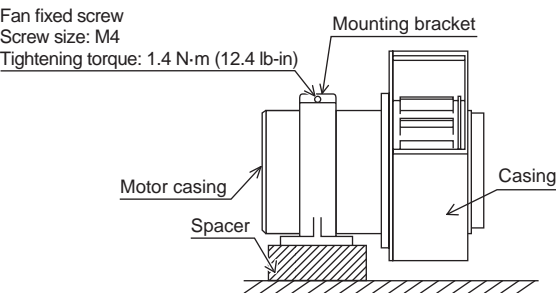


Air flow, rotation

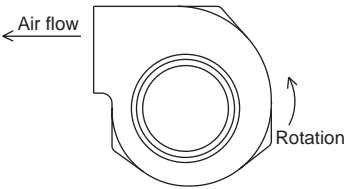

Connection

Connecting the power supply

Connect the red wire to the positive (+) power supply and the black wire to the ground connection.
Check the voltage specification on the product identification plate and input the correct voltage.

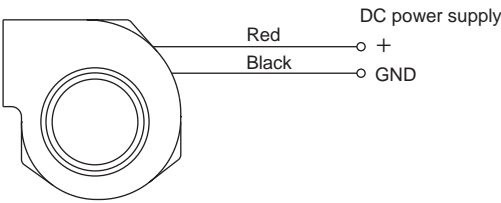


Low speed alarm

An alarm signal is output when the fan's rotation speed falls below 1300±400 r/min (**MBD12** type) or 1500±400 r/min (**MBD10** type, **MBD8** type).

Alarm specifications

	Speed		PhotoMOS relay output
	MBD10 type MBD8 type	MBD12 type	
Normal rotation	1900 r/min or more	1700 r/min or more	output ON (close)
Alarm output	1100 r/min or less	900 r/min or less	output OFF (open)

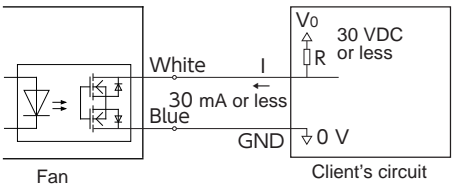

The low speed alarm type of fan is equipped with an internal delayed-start alarm circuit. The alarm function becomes effective within 10 seconds of the fan start.

Operation

The fan starts rotating when the power supply is turned on.
For protection against electric shock, do not turn on the power supply until the wiring is completed.

Overheat protection

The fan is equipped with an internal protective circuit against overheating. In the event a lock-up condition is detected, this function automatically controls the current flow to the fan motor's windings, thus preventing the fan blades from locking and burning out.
The fan resumes operation automatically as soon as it is released from the locked condition. Be sure to shut off the power to the fan before performing an inspection.

Maintenance and inspection

■ Inspection

It is recommended that periodic inspections for the items listed below are conducted after each operation.

If any abnormality occurs, stop using the product and contact your nearest Oriental Motor sales office.

● Inspection items

- Check to see if any of the mounting screws of the fan are loose.
- Check to see if the fan is making unusual noises.

■ Warranty

Check on the Oriental Motor Website for the product warranty.

■ Disposal

Dispose the product correctly in accordance with laws and regulations, or instructions of local governments.

Specifications

Check on the Oriental Motor Website for the product specifications.

General specifications

Check on the Oriental Motor Website for the product specifications.

-
- Unauthorized reproduction or copying of all or part of this manual is prohibited.
 - Oriental Motor shall not be liable whatsoever for any problems relating to industrial property rights arising from use of any information, circuit, equipment or device provided or referenced in this manual.
 - Characteristics, specifications and dimensions are subject to change without notice.
 - While we make every effort to offer accurate information in the manual, we welcome your input. Should you find unclear descriptions, errors or omissions, please contact the nearest office.
 - ***Orientalmotor*** and ***ORIX*** are registered trademarks or trademarks of Oriental Motor Co., Ltd., in Japan and other countries.

© Copyright ORIENTAL MOTOR CO., LTD. 2024

Published in July 2025

- Please contact your nearest Oriental Motor office for further information.

ORIENTAL MOTOR U.S.A. CORP.
Technical Support Tel:800-468-3982
8:30am EST to 5:00pm PST (M-F)

ORIENTAL MOTOR (EUROPA) GmbH
Schiesstraße 44, 40549 Düsseldorf, Germany
Technical Support Tel:00 800/22 55 66 22

ORIENTAL MOTOR (UK) LTD.
Blythe Valley Business Park,
Central Blvd Blythe Valley Park,
Solihull B90 8AG, United Kingdom
Tel:+44-1926-671 220

ORIENTAL MOTOR (FRANCE) SARL
Tel:+33-1 47 86 97 50

ORIENTAL MOTOR ITALIA s.r.l.
Tel:+39-02-93906347

ORIENTAL MOTOR CO., LTD.
4-8-1 Higashiueno, Taito-ku, Tokyo 110-8536
Japan
Tel:+81-3-6744-0361
www.orientalmotor.co.jp/ja

ORIENTAL MOTOR ASIA PACIFIC PTE. LTD.
Singapore
Tel:1800-842-0280

ORIENTAL MOTOR (MALAYSIA) SDN. BHD.
Tel:1800-806-161

ORIENTAL MOTOR (THAILAND) CO., LTD.
Tel:1800-888-881

ORIENTAL MOTOR (INDIA) PVT. LTD.
Tel:1800-120-1995 (For English)
1800-121-4149 (For Hindi)

TAIWAN ORIENTAL MOTOR CO., LTD.
Tel:0800-060708

SHANGHAI ORIENTAL MOTOR CO., LTD.
Tel:400-820-6516

INA ORIENTAL MOTOR CO., LTD.
Korea
Tel:080-777-2042