


# Many other useful features are also available

For example.....

**The rotation speed will not change even if the setting dial is turned.**

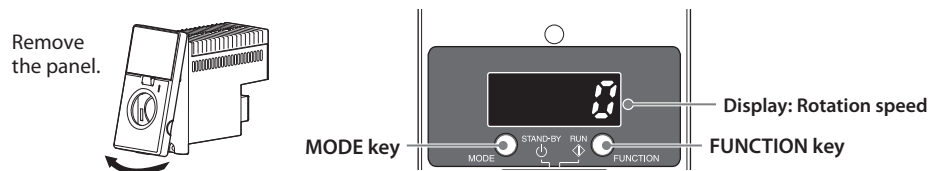

**To lock the setting data**

- 1 Press the MODE key  
Top screen of monitor mode
  - 2 Press and hold the MODE key for 5 seconds  
The display blinks several times
- When the FUNCTION key is pressed, the rotation speed is displayed.

**To release the lock**

- 1 Press the MODE key
- 2 Press and hold the MODE key for 5 seconds  
The display blinks several times

And others.....


- ▶ To display the rotation speed of the gearhead output shaft
- ▶ To display the size of a load
- ▶ To hold a load by the slight position-keeping function
- ▶ To increase the rotation speed slowly

As mentioned in the right, various operating functions are available.



**OPERATING MANUAL** Refer to "8 Convenient functions."

**The motor can be operated using a programmable controller.**

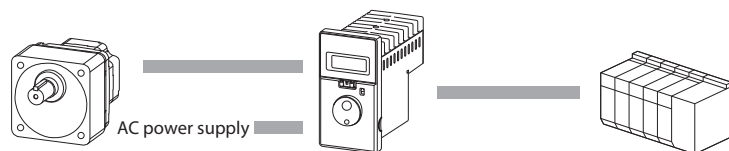

**OPERATING MANUAL** Refer to "7 Operating by programmable controller."

# Orientalmotor



HM-5192

**!** Be sure to ground the Protective Earth Terminal (ground terminal) to ensure the safe use of the product.

Refer to "1 Connecting" for details, and ground securely.

Brushless Motor

## BMU Series

200 W / 300 W / 400 W Connector type

## QUICK START GUIDE

This document describes for when the motor is of the connector type. The descriptions other than "connection for motor and cable" are common to the BMU Series.

Thank you for purchasing an Oriental Motor product.

Use the product correctly after thoroughly reading the section "Safety precautions" of the operating manual.


This document describes methods till rotating the motor after connecting it to the driver.

For details about how to use the product, refer to the **OPERATING MANUAL** supplied with the driver.

### Package contents

The package includes the items shown below.

☐ Driver

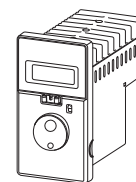

☐ Connector

CN1 : 3 pin



CN4 : 12 pin




☐ QUICK START GUIDE (this document)

☐ OPERATING MANUAL


### Motor (sold separately)

☐ Motor

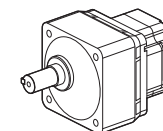

The figure shows an example of the combination type.

 ☐ Mounting screw set




Supplied with the combination type.

☐ OPERATING MANUAL

\* Be sure to match the motor output power with the driver output power.


### Connection cable (sold separately)

 

There are two types of connection cables which cable leading directions are different. (→ Refer to the right figure)


To connect the motor and driver, the dedicated connection cable is always needed.

[Leading in direction of output shaft]

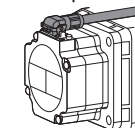

Model: CC\_HBLF

[Leading in opposite direction of output shaft]

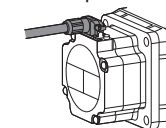

Model: CC\_HBLB

For the round shaft type, only the cable for leading in opposite direction of output shaft can be used.

