



OPERATING MANUAL

2-Phase Stepping Motor

PKP Series Electromagnetic brake

Introduction

This manual explains descriptions about the electromagnetic brake for the "2-phase stepping motor PKP Series with electromagnetic brake." Refer to the operating manual of the PKP Series for the motor itself.

Safety precautions

The precautions described below are intended to prevent danger or injury to the user and other personnel through safe, correct use of the product. Use the product only after carefully reading and fully understanding these instructions.

⚠ WARNING

Handling the product without observing the instructions that accompany a "WARNING" symbol may result in serious injury or death.


- Do not use the electromagnetic brake to reduce speed or as a safety brake. Do not use the electromagnetic brake as means to decelerate and stop the motor. The brake hub of the electromagnetic brake will wear significantly and the braking force will drop. Since the power off activated type electromagnetic brake is equipped, it helps maintain the position of the load when the power is cut off, but this brake cannot securely hold the load in place. Accordingly, do not use the electromagnetic brake as a safety brake. To use the electromagnetic brake to hold the load in place, do so after the motor has stopped.

Preparation

Items included with the motor with electromagnetic brake

- Varistor..... 1 pc.
- OPERATING MANUAL 1 copy (this document)

How to identify the product model

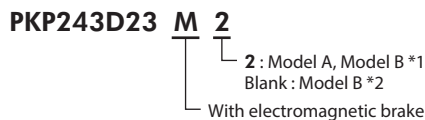

*1 Motor frame size 28 mm (1.10 in.)

*2 Motor frame size 35 mm (1.38 in.), 42 mm (1.65 in.), 56.4 mm (2.22 in.)


Thank you for purchasing an Oriental Motor product.

This manual describes product handling procedures and safety precautions.

- Please read it thoroughly to ensure safe operation.
- After reading the manual, keep it in a convenient place where it is readily available.


Names of parts

Motors of Model A (connector type)

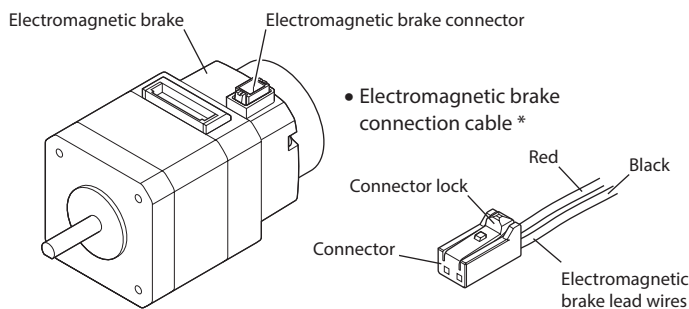

* This cable is provided as our product.

Motors of Model B (lead wire type)

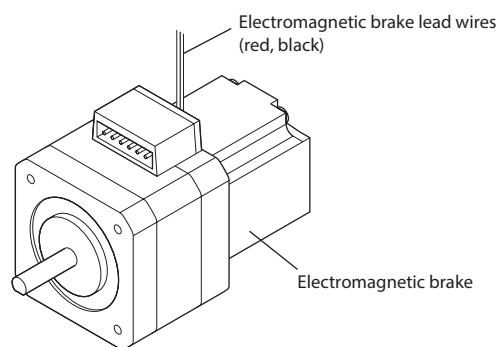


Connection

Notes about the connector type


When inserting the connector

Hold the connector main body, and insert it in straight securely. Inserting the connector in an inclined state may result in damage to connector or a connection failure.

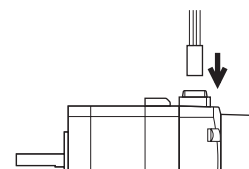


When unplugging the connector

Pull out the connector in straight while releasing the lock of the connector. Having the lead wires or pulling out the connector in a state of being locked may damage the connector.

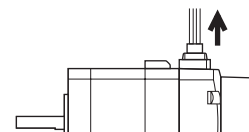



Secure the lead wires at the connection part to prevent the connection part from receiving stress due to the flexing of the lead wires or the lead wires' own mass. Also, do not excessively bend the lead wires near the connection part of the connector. Applying stress on the lead wires may cause poor contact or disconnection, leading to malfunction or heat generation.

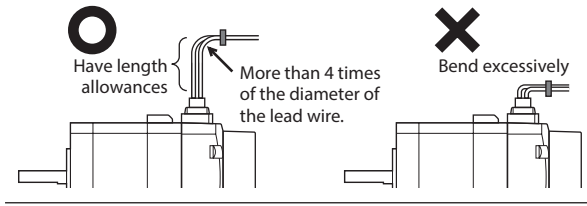

Specifications for electromagnetic brake connection cable

Connector pin assignments

Pin No.	Lead wire color
1	Red
2	Black

Applicable connector and lead wire


Type	Model
Connector housing	DF62C-2S-2.2C (HIROSE ELECTRIC CO., LTD.)
Contact	DF62-22SCA (HIROSE ELECTRIC CO., LTD.)
Designated crimping tool	HT801/DF62-22(10) (HIROSE ELECTRIC CO., LTD.)
Applicable lead wire	AWG22 (0.3 mm ²) Outer sheath diameter: ø1.2 to 1.5 mm (ø0.05 to 0.06 in.) Stripping length of wire insulation: 1.8 to 2.3 mm (0.07 to 0.09 in.)

Specifications of a power supply for electromagnetic brake

Model	Motor type	Power supply voltage	Current capacity
A (connector type)	PKP24	24 VDC±5%	0.07 A or more
	PKP26		0.18 A or more
B (lead wire type)	PKP22		0.05 A or more
	PKP23, PKP24		0.07 A or more
	PKP26		0.23 A or more

Connecting a power supply for electromagnetic brake and releasing the electromagnetic brake

- For the Model A (connector type), connect the electromagnetic brake connection cable to the electromagnetic brake connector.

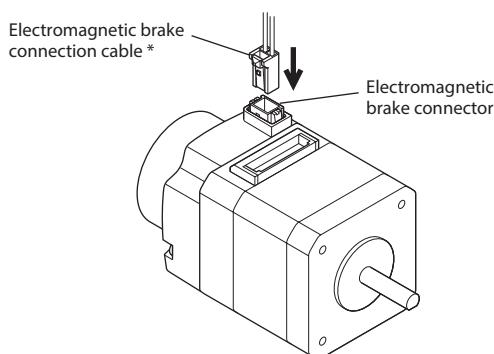


* This cable is provided as our product.

- Connect the varistor (included) in parallel between the 24 VDC terminal and GND terminal.

The varistor does not have polarity.

- Connect the electromagnetic brake lead wires to the 24 VDC power supply.

Connect the red lead wire to 24 VDC terminal, and the black lead wire to GND terminal.

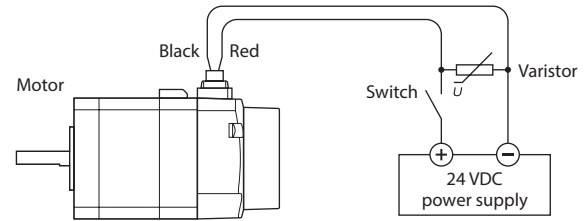

- Turn on the 24 VDC power supply.
The electromagnetic brake is released.



- Do not apply the voltage beyond its specifications. Doing so may increase heat generation in the electromagnetic brake, resulting in damage to the motor. Conversely, insufficient voltage may prevent the brake from releasing.
- Be sure to connect the varistor to protect the contact of the switch or to prevent electrical noise.
- The electromagnetic brake lead wires have polarities, so connect them in the correct polarities. If the lead wires are connected with their polarities reversed, the electromagnetic brake will not operate properly.

- Unauthorized reproduction or copying of all or part of this manual is prohibited.
- Oriental Motor shall not be liable whatsoever for any problems relating to industrial property rights arising from use of any information, circuit, equipment or device provided or referenced in this manual.
- Characteristics, specifications and dimensions are subject to change without notice.
- While we make every effort to offer accurate information in the manual, we welcome your input. Should you find unclear descriptions, errors or omissions, please contact your nearest Oriental Motor sales office.
- Orientalmotor** is a registered trademark or trademark of Oriental Motor Co., Ltd., in Japan and other countries.

© Copyright ORIENTAL MOTOR CO., LTD. 2018

Published in June 2019

- Please contact your nearest Oriental Motor office for further information.

ORIENTAL MOTOR U.S.A. CORP.
Technical Support Tel:(800)468-3982
8:30 A.M. to 5:00 P.M., P.S.T. (M-F)
7:30 A.M. to 5:00 P.M., C.S.T. (M-F)
www.orientalmotor.com

ORIENTAL MOTOR DO BRASIL LTDA.
Tel:+55-11-3266-6018
www.orientalmotor.com.br

ORIENTAL MOTOR (EUROPA) GmbH
Schiesstraße 44, 40549 Düsseldorf, Germany
Technical Support Tel:00 800/22 55 66 22
www.orientalmotor.de

ORIENTAL MOTOR (UK) LTD.
Tel:01256-347090
www.oriental-motor.co.uk

ORIENTAL MOTOR (FRANCE) SARL
Tel:01 47 86 97 50
www.orientalmotor.fr

ORIENTAL MOTOR ITALIA s.r.l.
Tel:02-93906346
www.orientalmotor.it

ORIENTAL MOTOR CO., LTD.
4-8-1 Higashiueno, Taito-ku, Tokyo 110-8536
Japan
Tel:03-6744-0361
www.orientalmotor.co.jp

ORIENTAL MOTOR ASIA PACIFIC PTE. LTD.
Singapore
Tel:1800-8420280
www.orientalmotor.com.sg

ORIENTAL MOTOR (MALAYSIA) SDN. BHD.
Tel:1800-806161
www.orientalmotor.com.my

ORIENTAL MOTOR (THAILAND) CO., LTD.
Tel:1800-888-881
www.orientalmotor.co.th

ORIENTAL MOTOR (INDIA) PVT. LTD.
Tel:+91-80-41125586
www.orientalmotor.co.in

TAIWAN ORIENTAL MOTOR CO., LTD.
Tel:0800-060708
www.orientalmotor.com.tw

SHANGHAI ORIENTAL MOTOR CO., LTD.
Tel:400-820-6516
www.orientalmotor.com.cn

INA ORIENTAL MOTOR CO., LTD.
Korea
Tel:080-777-2042
www.inaom.co.kr

ORIENTAL MOTOR CO., LTD.
Hong Kong Branch
Tel:+852-2427-9800