

OPERATING MANUAL

Brushless DC Fan
MDP Series



Introduction

■ Before using the fan

Only qualified personnel should work with the product. Use the product correctly after thoroughly reading the section "Safety precautions." In addition, be sure to observe the contents described in warning, caution, and note in this manual. The product described in this manual has been designed and manufactured to be incorporated in general industrial equipment. Do not use for any other purpose. For the power supply use a DC power supply with reinforced insulation on its primary and secondary sides. Oriental Motor Co., Ltd. is not responsible for any damage caused through failure to observe this warning.

Regulations and standards

■ Standards

This product is recognized by UL, and certified by CSA and TÜV Rheinland.

● Applicable Standards

Standards	Certification body
UL 507	UL
CSA C22.2 No.113	CSA
EN 60950-1	TÜV Rheinland

● Installation conditions (EN/IEC Standards)



For incorporating in equipment
Overvoltage category: I
Pollution degree: 2
Protection against electric shock: Class III equipment
Degree of protection: IP68*
* This product has been evaluated in accordance with EN 60529 and EN 60034-5.

■ RoHS Directive

The products do not contain the substances exceeding the restriction values of RoHS Directive (2011/65/EU).

Safety precautions

The precautions described below are intended to prevent danger or injury to the user and other personnel through safe, correct use of the product. Use the product only after carefully reading and fully understanding these instructions.

 Warning	Handling the product without observing the instructions that accompany a "Warning" symbol may result in serious injury or death.
 Caution	Handling the product without observing the instructions that accompany a "Caution" symbol may result in injury or property damage.
Note	The items under this heading contain important handling instructions that the user should observe to ensure safe use of the product.

Thank you for purchasing an Oriental Motor product. This Operating Manual describes product handling procedures and safety precautions.

- Please read it thoroughly to ensure safe operation.
- Always keep the manual where it is readily available.

Warning

- Do not use the product in explosive or corrosive environments, in the presence of flammable gases, locations subjected in water, or near combustibles. Doing so may result in fire or injury.
- Assign qualified personnel the task of installing, wiring, operating/controlling, inspecting and troubleshooting the product. Failure to do so may result in fire or injury.
- Shut off the power to the fan in the event the lock-protection circuit is activated. Otherwise, the fan will start unexpectedly when released from the locked condition, causing bodily injury or equipment damage.
- Install the fan in an enclosure in order to prevent injury.
- Keep the input-power voltage within the specified range to avoid fire.
- Connect the cables securely according to the wiring diagram in order to prevent fire.
- Do not forcibly bend, pull or pinch the cable. Doing so may fire.
- For the power supply use a DC power supply with reinforced insulation on its primary and secondary sides. Failure to do so may result in electric shock.
- Turn off the power in the event of a power failure, or the fan will suddenly start when the power is restored and may cause injury or damage to equipment.
- Do not disassemble or modify the fan. This may cause injury. Refer all such internal inspections and repairs to the branch or sales office from which you purchased the product.

Caution

- Do not use the fan beyond its specifications, or injury or damage to equipment may result.
- Keep your fingers and objects out of the openings in the fan. This may cause injury.
- Do not hold the rotating parts (blades) of the fan or lead wire. This may cause injury.
- Keep the area around the fan free of combustible materials in order to prevent fire or a burn.
- To prevent the risk of damage to equipment, leave nothing around the fan that would obstruct ventilation.
- Provide anti-static measures before installing the fan. Failure to do so may result in equipment damage.
- Do not touch the rotating parts (blades) when the fan is in operation. This may cause injury. The use of the optional fingerguard is recommended to ensure protection.
Wegen der Verletzungsgefahr dürfen die Lüfterflügel bei Ventilatorbetrieb nicht berührt werden. Der Gebrauch des als Sonderzubehör erhältlichen Fingerschutzes ist empfehlenswert, um erhöhte Sicherheit zu gewährleisten.
- When an abnormality is noted, stop the operation immediately, or fire or injury may occur.
- Dispose the product correctly in accordance with laws and regulations, or instructions of local governments.

Preparation

Verify that the items listed below are included. Report any missing or damaged items to the branch or sales office from which you purchased the product.

- Fan 1 pc
- OPERATING MANUAL (this manual) 1 copy

Accessories for fan kit products

- Finger guard 1 pc
- Set of mounting screws for finger guard 1 set

Installation

Location for installation

Install it in a well-ventilated location that provides easy access for inspection. The location must also satisfy the following conditions: However, this fan cannot be used in the water.

- Inside an enclosure that is installed indoors (provide vent holes)
- Operating ambient temperature
-10 to +60 °C (+14 to +140 °F) (non-freezing)
- Operating ambient humidity 85% or less (non-condensing)
- Area that is free of explosive atmosphere or toxic gas (such as sulfuric gas) or liquid
- Area not exposed to direct sun
- Area free of excessive amount of dust, iron particles or the like
- Area not subject to oil (oil droplets) or other liquids
- Area not subject to continuous vibration or excessive shocks
- Area free of radioactive materials, magnetic fields or vacuum
- Area free of excessive electromagnetic noise (from welders, power machinery, etc.)

When using near a switching circuit or high-frequency power supply, the induced current may flow inside the fan due to electromagnetic noise (conductive noise, radiative noise). If the induced current flows, the electric corrosion is caused in the bearings of the fan. As a result, it may generate the noise or shorten the service life of the products. Use the fan in the environment that the electromagnetic noise does not cause.


How to install the fan

Install the fan onto an appropriate flat metal plate having excellent vibration resistance and heat conductivity.

See the panel cut-out, mounting-hall reference drawing for information on how to provide mounting holes on the equipment used and secure the fan with screws (not supplied). For air orientation and rotational direction, see the indications shown on the fan's side frame.

Screw size	Tightening torque
M4	0.6 N·m (5.3 lb-in)


Note Be sure not to splash water on the lead wire terminal, otherwise water could seep inside the fan through the lead wire.

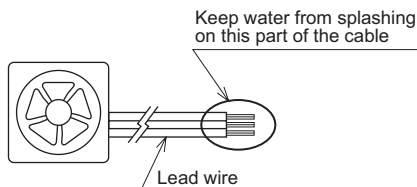

Connecting the power supply

Connect the red wire to the positive (+) power supply and the black wire to the ground connection.


Check the voltage specification on the product identification plate and input the correct voltage.



Connection and specifications of the alarm

Stall alarm, electronic alarm type

The yellow wire is lead wire for the alarm circuit. GND is common to the sensor and power supply. If the fan stalls while the power is on, an alarm signal is output.

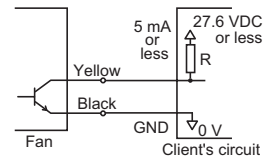

Note The stall alarm type of fan is not equipped with a delayed trip-point alarm circuit. Therefore, an external delay function is necessary to avoid the detection of fan start. The set time of the delay function should be at least one second.

Overheat protection

The fan is equipped with an internal protective circuit against overheating. In the event a lock-up condition is detected, this function automatically controls the current flow to the fan motor's windings, thus preventing the fan blades from locking and burning out.

The fan resumes operation automatically as soon as it is released from the locked condition. Be sure to shut off the power to the fan before performing an inspection.

- Unauthorized reproduction or copying of all or part of this manual is prohibited.
- Characteristics, specifications and dimensions are subject to change without notice.
- **Orientalmotor** and **ORIX** are registered trademarks or trademarks of Oriental Motor Co., Ltd., in Japan and other countries.

© Copyright ORIENTAL MOTOR CO., LTD. 2012

Published in June 2017

• Please contact your nearest Oriental Motor office for further information.

ORIENTAL MOTOR U.S.A. CORP.
Technical Support Tel:(800)468-3982
8:30 A.M. to 5:00 P.M., P.S.T. (M-F)
7:30 A.M. to 5:00 P.M., C.S.T. (M-F)
www.orientalmotor.com

ORIENTAL MOTOR DO BRASIL LTDA.
Tel:+55-11-3266-6018
www.orientalmotor.com.br

ORIENTAL MOTOR (EUROPA) GmbH
Schiesstraße 74, 40549 Düsseldorf, Germany
Technical Support Tel:00 800/22 55 66 22
www.orientalmotor.de

ORIENTAL MOTOR (UK) LTD.
Tel:01256-347090
www.oriental-motor.co.uk

ORIENTAL MOTOR (FRANCE) SARL
Tel:01 47 86 97 50
www.orientalmotor.fr

ORIENTAL MOTOR ITALIA S.r.l.
Tel:02-93906346
www.orientalmotor.it

ORIENTAL MOTOR CO., LTD.
4-8-1 Higashiueno, Taito-ku, Tokyo 110-8536
Japan
Tel:03-6744-0361
www.orientalmotor.co.jp

ORIENTAL MOTOR ASIA PACIFIC PTE. LTD.
Singapore
Tel:1800-8420280
www.orientalmotor.com.sg

ORIENTAL MOTOR (MALAYSIA) SDN. BHD.
Tel:1800-806161
www.orientalmotor.com.my

ORIENTAL MOTOR (THAILAND) CO., LTD.
Tel:1800-888-881
www.orientalmotor.co.th

ORIENTAL MOTOR (INDIA) PVT. LTD.
Tel:+91-80-41125586
www.orientalmotor.co.in

TAIWAN ORIENTAL MOTOR CO., LTD.
Tel:0800-060708
www.orientalmotor.com.tw

SHANGHAI ORIENTAL MOTOR CO., LTD.
Tel:400-820-6516
www.orientalmotor.com.cn

INA ORIENTAL MOTOR CO., LTD.
Korea
Tel:080-777-2042
www.inaom.co.kr

ORIENTAL MOTOR CO., LTD.
Hong Kong Branch
Tel:+852-2427-9800