



## OPERATING MANUAL

### 5-Phase Stepping Motor RKII Series Pulse input type Driver



#### Table of contents

Introduction .....	1	Preparation .....	3
Safety precautions .....	1	Installation .....	4
Precautions for use.....	2	Connection .....	5
General specifications .....	2	Inspection .....	8
Regulations and standards.....	3	Alarm (protective function).....	8

## Introduction

### ■ Before use

Only qualified personnel of electrical and mechanical engineering should work with the product.  
Use the product correctly after thoroughly reading the section "Safety precautions." In addition, be sure to observe the contents described in warning, caution, and note in this manual.  
The product described in this manual has been designed and manufactured to be incorporated in general industrial equipment. Do not use for any other purpose. Oriental Motor Co., Ltd. is not responsible for any damage caused through failure to observe this warning.

### ■ Operating manuals for the RKII Series

Operating manuals for the RKII Series are listed below.  
Read the manuals carefully before using the product.

- **RKII Series OPERATING MANUAL Motor (supplied with the motor)**

This manual explains the functions as well as the installation method and others for the motor.

- **RKII Series Pulse input type OPERATING MANUAL Driver (this document)**

This manual explains the functions as well as the installation method and others for the driver.

- **RKII Series Pulse input type USER MANUAL**

This manual explains the functions, installation/connection method as well as the troubleshooting and others for the motor and driver.

The "USER MANUAL" does not come with the product. For details, contact your nearest Oriental Motor sales office or download from Oriental Motor Website download page.

- **APPENDIX UL Standards and CSA Standards for RKII Series (supplied with the product)**

This appendix includes information required for certification of the UL Standards.

Thank you for purchasing an Oriental Motor product. This Operating Manual describes product handling procedures and safety precautions.

- Please read it thoroughly to ensure safe operation.
- Always keep the manual where it is readily available.

## Safety precautions

The precautions described below are intended to prevent danger or injury to the user and other personnel through safe, correct use of the product. Use the product only after carefully reading and fully understanding these instructions.



### Description of signs




	<b>WARNING</b>	Handling the product without observing the instructions that accompany a "Warning" symbol may result in serious injury or death.
	<b>CAUTION</b>	Handling the product without observing the instructions that accompany a "Caution" symbol may result in injury or property damage.
	<b>Note</b>	The items under this heading contain important handling instructions that the user should observe to ensure the safe use of the product.

### Description of graphic symbols

	Indicates "prohibited" actions that must not be performed.
	Indicates "compulsory" actions that must be performed.

<b>WARNING</b>	
	Do not use the product in explosive or corrosive environments, in the presence of flammable gases, locations subjected to splashing water, or near combustibles. This may cause fire, electric shock or injury.
	Do not transport, install the product, perform connections or inspections when the power is on. This may cause electric shock.
	Do not touch the driver while the power is on. This may cause fire or electric shock.
	The terminals on the driver's front panel marked with   symbol indicate the presence of high voltage. Do not touch these terminals while the power is on. This may cause fire or electric shock.
	Do not forcibly bend, pull or pinch the cable. This may cause fire or electric shock.
	Do not turn the AWO input or FREE input to ON while the motor is operating. This may cause injury or damage to equipment.
	Do not touch the connection terminals on the driver immediately (within 10 minute) after the power is turned off. This may cause electric shock.
	Do not disassemble or modify the product. This may cause injury or damage to equipment.
	Assign qualified personnel the task of installing, wiring, operating/controlling, inspecting and troubleshooting the product. Failure to do so may result in fire, electric shock, injury or damage to equipment.

 <b>WARNING</b>	
	If this product is used in an vertical application, be sure to provide a measure for the position retention of moving parts. Failure to do so may result in injury or damage to equipment.
	When the driver generates an alarm (any of the driver's protective functions is triggered), first remove the cause and then clear the protection function. Continuing the operation without removing the cause of the problem may cause malfunction of the motor and driver, leading to injury or damage to equipment.
	Install the product in an enclosure. Failure to do so may result in electric shock or injury.
	The motor and driver are designed with Class I equipment basic insulation. When installing the motor and driver, do not touch the product or be sure to ground them. Failure to do so may result in electric shock.
	Keep the driver's input-power voltage within the specified range. Failure to do so may result in fire or electric shock.
	Connect the cables securely according to the wiring diagram. Failure to do so may result in fire or electric shock.
	Turn off the driver power in the event of a power failure. Failure to do so may result in injury or damage to equipment.

 <b>CAUTION</b>	
	Do not use the product beyond its specifications. This may cause injury, electric shock or damage to equipment.
	Keep your fingers and objects out of the openings in the product. Failure to do so may result in fire, electric shock or injury.
	Do not touch the product during operation or immediately after stopping. This may cause a skin burn(s).
	Do not forcibly bend or pull the cable that was connected to the driver. Doing so may cause damage.
	Keep the area around the product free of combustible materials. Failure to do so may result in fire or a skin burn(s).
	Leave nothing around the product that would obstruct ventilation. Failure to do so may result in damage to equipment.
	Do not touch the terminals while performing the insulation resistance test or dielectric strength test. This may cause electric shock.
	Use a motor and driver only in the specified combination. Failure to do so may result in fire.
	For the 24 VDC power supply, use a DC power supply with reinforced insulation on its primary and secondary sides. Failure to do so may result in electric shock.
	Provide an emergency stop device or emergency stop circuit external to the equipment so that the entire equipment will operate safely in the event of a system failure or malfunction. Failure to do so may result in injury.
	Before supplying power to the driver, turn all input signals to the driver to OFF. Failure to do so may result in injury or damage to equipment.
	Before moving the motor directly with the hands, confirm that the AWO input or FREE input turns ON. Failure to do so may result in injury.
	When an abnormal condition has occurred, immediately stop operation and turn off the driver power. Failure to do so may result in fire, electric shock or injury.
	Use only an insulated screwdriver to adjust the driver's switches. Failure to do so may result in electric shock.
Dispose the product correctly in accordance with laws and regulations, or instructions of local governments.	

## Precautions for use

This section covers limitations and requirements the user should consider when using the product.

### • Always use the cable (supplied or accessory) to connect the motor and driver.

Be sure to use the cable (supplied or accessory) to connect the motor and driver. If a cable other than the supplied cable or accessory cable is used, the driver may generate a large amount of heat. In the following condition, an appropriate accessory cable must be purchased separately.

- If a flexible cable is to be used.
- If a cable of 3 m (9.8 ft.) or longer is to be used.
- If a motor and driver package without a cable was purchased.

### • Preventing leakage current

Stray capacitance exists between the driver's current-carrying line and other current-carrying lines, the earth and the motor, respectively. A high-frequency current may leak out through such capacitance, having a detrimental effect on the surrounding equipment. The actual leakage current depends on the driver's switching frequency, the length of wiring between the driver and motor, and so on.

When connecting an earth leakage breaker, use one of the following products offering resistance against high frequency current:

Mitsubishi Electric Corporation: NV series

### • When conducting the insulation resistance measurement and the dielectric strength test, be sure to separate the connection between the motor and the driver.

Conducting the insulation resistance measurement or dielectric strength test with the motor and driver connected may result in damage to the equipment.

### • Preventing electrical noise

See [USER MANUAL](#) for measures with regard to noise.

## General specifications

Degree of protection		IP20
Operation environment	Ambient temperature	0 to +55 °C (+32 to +131 °F) * (non-freezing)
	Humidity	85% or less (non-condensing)
	Altitude	Up to 1,000 m (3,300 ft.) above sea level
	Surrounding atmosphere	No corrosive gas, dust, water or oil
Storage environment Shipping environment	Ambient temperature	-25 to +70 °C (-13 to +158 °F) (non-freezing)
	Humidity	85% or less (non-condensing)
	Altitude	Up to 3,000 m (10,000 ft.) above sea level
Surrounding atmosphere		No corrosive gas, dust, water or oil

\* When installing a driver to a heat sink of a capacity at least equivalent to an aluminum plate [200×200×2 mm (7.87×7.87×0.08 in.)].

Insulation resistance	100 MΩ or more when 500 VDC megger is applied between the following places: <ul style="list-style-type: none"> <li>• PE terminal - Power supply terminals</li> <li>• Signal I/O terminals - Power supply terminals</li> </ul>
Dielectric strength	Sufficient to withstand the following for 1 minute: <ul style="list-style-type: none"> <li>• PE terminal - Power supply terminals 1.8 kVAC 50/60 Hz</li> <li>• Signal I/O terminals - Power supply terminals 1.9 kVAC 50/60 Hz</li> </ul>

## Regulations and standards

### ■ UL Standards

Check the "APPENDIX UL Standards and CSA Standards for RKII Series" for recognition information about UL Standards.

### ■ EU Directive

#### ● CE Marking

This product is affixed the CE Marking under the Low Voltage Directive and EMC Directive.

#### ● Low Voltage Directives

Applicable Standards	EN 61800-5-1
Installation conditions (EN Standard)	To be incorporated in equipment. Overvoltage category: II Pollution degree: 2 Degree of protection: IP20 Protection against electric shock: Class I

- This product cannot be used with cables normally used for IT power distribution systems.
- Install the product within the enclosure in order to avoid contact with hands.
- Be sure to maintain a protective ground in case hands should make contact with the product. Be sure to connect the Protective Earth lead of the cable for motor to the Protective Earth Terminal on the driver, and ground the driver's Protective Earth Terminal.
- To protect against electric shock using an earth leakage breaker (RCD), connect a type B earth leakage breaker to the primary side of the driver.
- When using a circuit breaker (MCCB), use a unit conforming to the EN or IEC standard.
- Isolate the motor cable, power-supply cable and other drive cables from the signal cables (CN1, CN4 and CN5) by means of double insulation.
- The temperature of the driver's heat sink may exceed 90 °C (194 °F) depending on the driving conditions. Accordingly, take heed of the following items:
  - Do not touch the driver.
  - Do not use the driver near flammable objects.
  - Always conduct a trial operation to check the driver temperature.

#### ● EMC Directive

This product is conducted EMC testing under the conditions specified in "Example of installation and wiring" on the USER MANUAL. The conformance of your mechanical equipment with the EMC Directive will vary depending on such factors as the configuration, wiring, and layout for other control system devices and electrical parts used with this product. It therefore must be verified through conducting EMC measures in a state where all parts including this product have been installed in the equipment.

#### Applicable Standards

EMI	EN 55011 Group1 Class A, EN 61000-6-4, EN 61800-3, EN 61000-3-2, EN 61000-3-3
EMS	EN 61000-6-2, EN 61800-3



This equipment is not intended for use in residential environments nor for use on a low-voltage public network supplied in residential premises, and it may not provide adequate protection to radio reception interference in such environments.

### ■ RoHS Directive

The products do not contain the substances exceeding the restriction values of RoHS Directive (2011/65/EU).

## Preparation

### ■ Checking the product

Verify that the items listed below are included. Report any missing or damaged items to the branch or sales office from which you purchased the product.

- Driver..... 1 unit
- CN1 connector (4 pins)..... 1 pc.  
(When the product is a motor with an electromagnetic brake)
- CN3 connector (3 pins)..... 1 pc.
- CN4 connector (6 pins)..... 1 pc.
- CN5 connector (9 pins)..... 1 pc.
- OPERATING MANUAL Driver..... 1 copy (this document)

### ■ Combinations of motors and drivers

#### How to identify the product model

- The box (□) indicates **A** (single shaft) or **B** (double shaft).
- The box (■) indicates **A** (single-phase 100-120 V) or **C** (single-phase 200-240 V).
- The box (●) represents a number indicating the gear ratio.
- The box (◆) indicates **L** (the gear output shaft faces to the left) or **R** (the gear output shaft faces to the right).
- The box (○) indicates the cable length (**-1**, **-2**, **-3**) when the connection cable is supplied.

#### ● Standard type

Model	Motor model	Driver model
RKS543□■○	PKE543□□	RKSD503-■
RKS544□■○	PKE544□□	
RKS545□■○	PKE545□□	
RKS564□■○	PKE564□□	RKSD507-■
RKS566□■○	PKE566□□	
RKS569□■○	PKE569□□	
RKS596□■○	PKE596□□	
RKS599□■○	PKE599□□	
RKS5913□■○	PKE5913□□	

#### ● Standard type with electromagnetic brake

Model	Motor model	Driver model
RKS543M■○	PKE543MC	RKSD503M-■
RKS544M■○	PKE544MC	
RKS545M■○	PKE545MC	
RKS564M■○	PKE564MC	RKSD507M-■
RKS566M■○	PKE566MC	
RKS569M■○	PKE569MC	
RKS596M■○	PKE596MC	
RKS599M■○	PKE599MC	
RKS5913M■○	PKE5913MC	

#### ● TS geared type

Model	Motor model	Driver model
RKS543□■-TS●○	PKE543□□-TS●	RKSD503-■
RKS564□■-TS●○	PKE564□□-TS●	RKSD507-■
RKS596□■-TS●○	PKE596□□-TS●	

### ● TS geared type with electromagnetic brake

Model	Motor model	Driver model
RKS543M-■-TS●○	PKE543MC-TS●	RKSD503M-■
RKS564M-■-TS●○	PKE564MC-TS●	RKSD507M-■
RKS596M-■-TS●○	PKE596MC-TS●	

### ● FC geared type

Model	Motor model	Driver model
RKS545A-■-FC●◆A○	PKE545AC-FC●◆A	RKSD503-■
RKS566A-■-FC●◆A○	PKE566AC-FC●◆A	RKSD507-■

### ● PS geared type

Model	Motor model	Driver model
RKS543□-■-PS●○	PKE543□C-PS●	RKSD503-■
RKS545□-■-PS●○	PKE545□C-PS●	
RKS564□-■-PS●○	PKE564□C-PS●	RKSD507-■
RKS566□-■-PS●○	PKE566□C-PS●	
RKS596□-■-PS●○	PKE596□C-PS●	
RKS599□-■-PS●○	PKE599□C-PS●	

### ● PS geared type with electromagnetic brake

Model	Motor model	Driver model
RKS543M-■-PS●○	PKE543MC-PS●	RKSD503M-■
RKS545M-■-PS●○	PKE545MC-PS●	
RKS564M-■-PS●○	PKE564MC-PS●	RKSD507M-■
RKS566M-■-PS●○	PKE566MC-PS●	
RKS596M-■-PS●○	PKE596MC-PS●	
RKS599M-■-PS●○	PKE599MC-PS●	

### ● Harmonic geared type


Model	Motor model	Driver model
RKS543□-■-HS●○	PKE543□C-HS●	RKSD503-■
RKS564□-■-HS●○	PKE564□C-HS●	RKSD507-■
RKS596□-■-HS●○	PKE596□C-HS●	

### ● Harmonic geared type with electromagnetic brake

Model	Motor model	Driver model
RKS543M-■-HS●○	PKE543MC-HS●	RKSD503M-■
RKS564M-■-HS●○	PKE564MC-HS●	RKSD507M-■
RKS596M-■-HS●○	PKE596MC-HS●	


## ■ Names and functions of parts

### ● Driver front side (example: electromagnetic brake type)

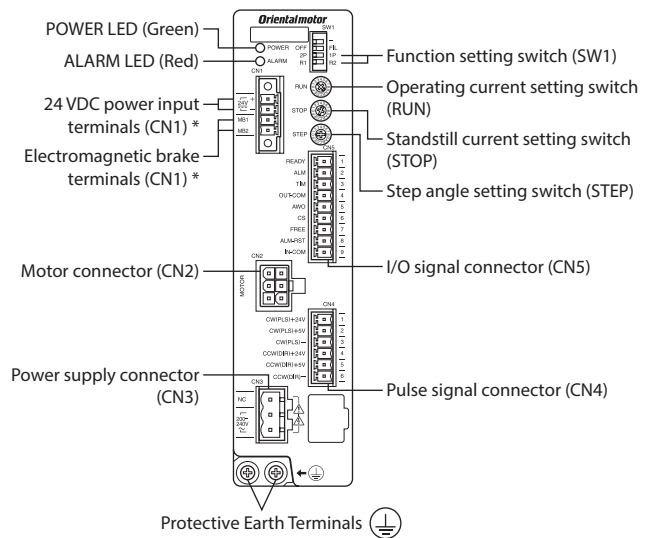

\* Electromagnetic brake type only

### ● Driver rear side

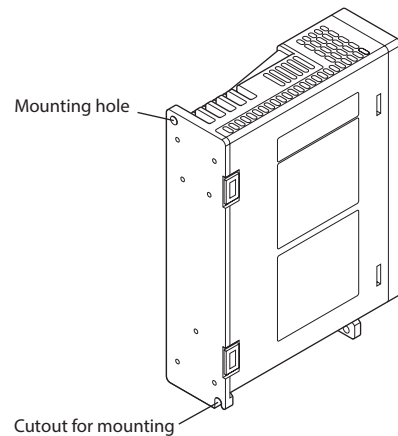

## Installation

### ■ Location for installation

The driver has been designed and manufactured to be installed within another device. Install them in a well-ventilated location that provides easy access for inspection.

The location must also satisfy the following conditions:

- Inside an enclosure that is installed indoors (provide vent holes)
- Operating ambient temperature 0 to +55 °C (+32 to +131 °F) (non-freezing)
- Operating ambient humidity 85% or less (non-condensing)
- Area that is free of explosive atmosphere or toxic gas (such as sulfuric gas) or liquid
- Area not exposed to direct sun
- Area free of excessive amount of dust, iron particles or the like
- Area not subject to splashing water (rain, water droplets), oil (oil droplets) or other liquids
- Area free of excessive salt
- Area not subject to continuous vibration or excessive shocks
- Area free of excessive electromagnetic noise (from welders, power machinery, etc.)
- Area free of radioactive materials, magnetic fields or vacuum
- 1,000 m (3,300 ft.) or lower above sea level

## ■ Installation method

The driver is designed so that heat is dissipated via air convection and conduction through the enclosure.


Install the driver on a flat metal plate [material: aluminium, 200×200×2 mm (7.87×7.87×0.08 in.) equivalent] having excellent heat conductivity.

There must be a clearance of at least 25 mm (0.98 in.) in the horizontal and vertical directions, between the driver and enclosure or other equipment within the enclosure. When two or more drivers are to be installed side by side, provide 20 mm (0.79 in.) and 25 mm (0.98 in.) clearances in the horizontal and vertical directions, respectively.


When installing two or more drivers in parallel, it is possible to install them closely in the horizontal direction. In this case, use the drivers in conditions that an ambient temperature is 0 to +40 °C (+32 to +104 °F) and the standstill current is 50% or less.

When installing the driver in an enclosure, use two screws (M4, not supplied) to secure the driver through the mounting holes.

- When installing drivers while keeping clearances in the horizontal and vertical directions.

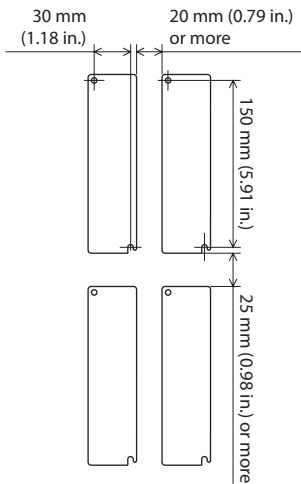


- When installing drivers closely in the horizontal direction.

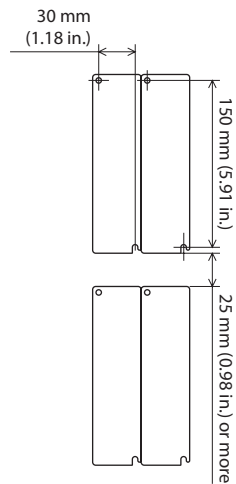

- Install the driver in an enclosure whose pollution degree is 2 or better environment, or whose degree of protection is IP54 minimum.
- Do not install any equipment that generates a large amount of heat or noise near the driver.
- Do not install the driver underneath the controller or other equipment vulnerable to heat.
- If the ambient temperature of the driver exceeds 55 °C (131 °F), improve the ventilation condition. Also, when the standstill current is set to 60%, use the driver in a condition that an ambient temperature does not exceed 50 °C (122 °F).
- Be sure to install the driver vertically (vertical position).

## Dimension [unit: mm (in.)]

Mass: 0.8 kg (1.76 lb)

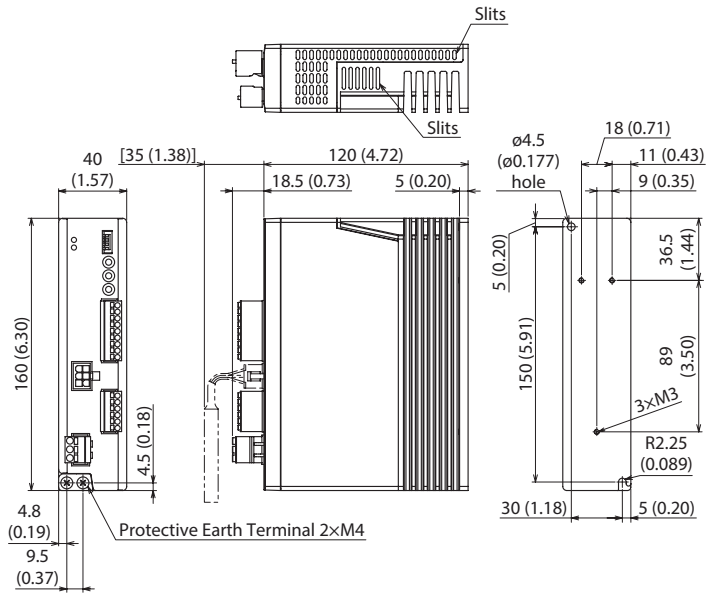

## Connection




- Have the connector plugged in securely. Insecure connections may cause malfunction or damage to the motor or driver.
- When plugging/unplugging the connector, turn off the power and wait for minimum 10 minutes before doing so. Residual voltage may cause electric shock.
- Do not wire the power supply cable of the driver in the same cable duct with other power lines or motor cables. Doing so may cause malfunction due to noise.
- The lead wires of the "cable for electromagnetic brake" have polarities, so connect them in the correct polarities. If the lead wires are connected with their polarities reversed, the electromagnetic brake will not operate properly.




- When unplugging the motor connector, do so while pressing the latches on the connector.
- If the distance between the motor and driver is extended to 15 to 20 m (49.2 to 65.6 ft.), use a power supply of 24 VDC±4%.
- When installing the motor to a moving part, use an accessory flexible cable offering excellent flexibility.

## ■ Connection example of standard type

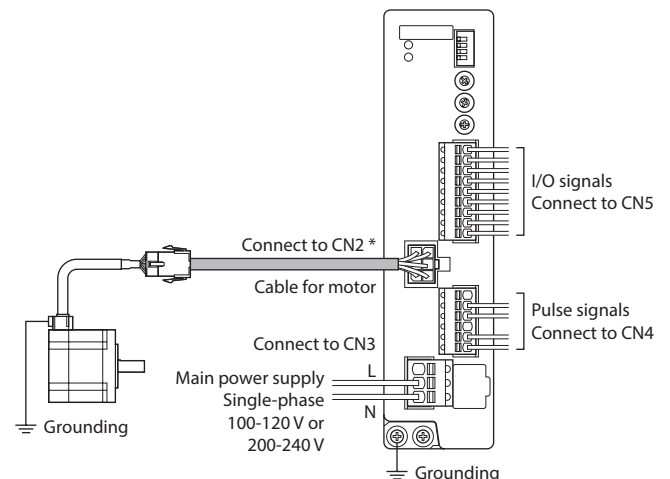

\* Keep 20 m (65.6 ft.) or less for the wiring distance between the motor and driver. Cables represented in gray color are supplied with the product or sold separately.

## ■ Connection example of standard type with electromagnetic brake

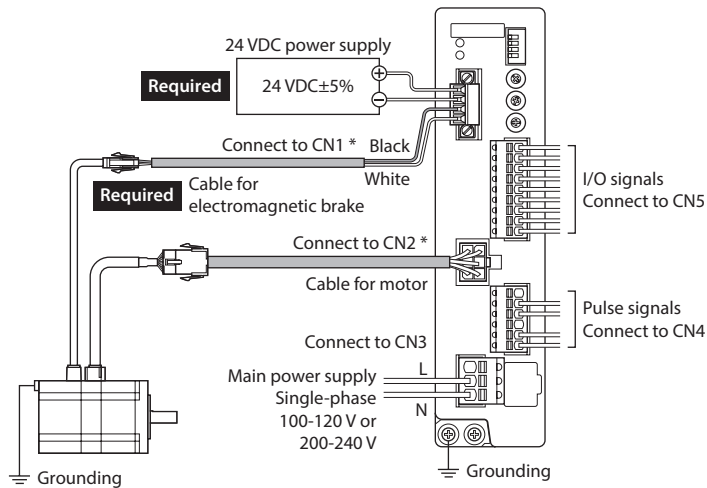


\* Keep 20 m (65.6 ft.) or less for the wiring distance between the motor and driver. Cables represented in gray color are supplied with the product or sold separately.

## ■ Connecting the 24 VDC power supply (CN1)


- Applicable lead wire: AWG28 to 16 (0.08 to 1.25 mm<sup>2</sup>)
- Strip length of the insulation cover: 7 mm (0.28 in.)

1. Insert the lead wire into the CN1 connector and tighten the screw using a screwdriver.
2. Insert the CN1 connector into CN1 and tighten the screws.

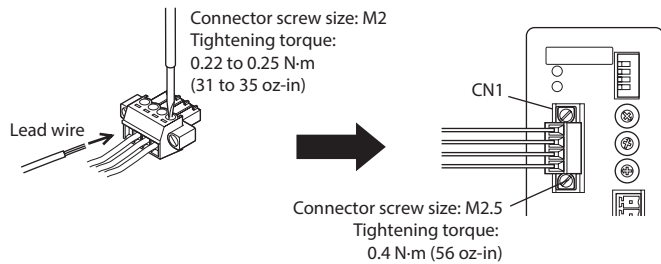

### ● Pin assignment

Display	Description
24V+	Connect the 24 VDC for electromagnetic brake.
24V-	
MB1	Connect the "cable for electromagnetic brake"
MB2	

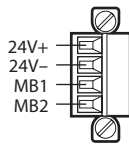


### ● Current capacity for the electromagnetic brake power

Model	Power supply voltage	Current capacity
RKS54	24 VDC±5%	0.1 A or more
RKS56		0.3 A or more
RKS59		0.6 A or more

## ■ Connecting the main power supply (CN3)


- Applicable lead wire: AWG16 to 14 (1.25 to 2.0 mm<sup>2</sup>)
- Strip length of the insulation cover: 10 mm (0.39 in.)

1. Insert the lead wire while pushing the button of the orange color with a screwdriver.
2. After having inserted, release the button to secure the lead wire.

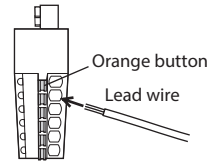

### ● Pin assignment

Pin No.	Display	Description
1	NC	Not used.
2	L	Connect the main power supply.
3	N	




### ● Current capacity of the main power supply

Model	Single-phase 100-120 V -15 to +10% 50/60 Hz	Single-phase 200-240 V -15 to +10% 50/60 Hz
RKS543	2.1 A or more	1.3 A or more
RKS544 RKS545	1.9 A or more	1.2 A or more
RKS564	4.0 A or more	2.4 A or more
RKS566	3.8 A or more	2.4 A or more
RKS569	4.0 A or more	2.5 A or more
RKS596	4.9 A or more	3.0 A or more
RKS599 RKS5913	3.5 A or more	2.2 A or more


## ■ Connecting the signals (CN4, CN5)

- Applicable lead wire: AWG26 to 16 (0.14 to 1.25 mm<sup>2</sup>)
- Strip length of the insulation cover: 9 mm (0.35 in.)

1. Insert the lead wire while pushing the button of the orange color with a screwdriver.
2. After having inserted, release the button to secure the lead wire.

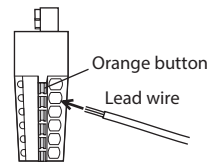


### ● Connecting the pulse signal (CN4)



Pin No.	Display	Description
1	CW(PLS)+24V	CW pulse input (Pulse input) [+24 V]
2	CW(PLS)+5V	CW pulse input (Pulse input) [+5 V or line driver]
3	CW(PLS)-	
4	CCW(DIR.)+24V	CCW pulse input (Direction input) [+24 V]
5	CCW(DIR.)+5V	CCW pulse input (Direction input) [+5 V or line driver]
6	CCW(DIR.)-	

● Connecting the I/O signal (CN5)



Pin No.	Display	I/O	Description
1	READY	Output	Ready
2	ALM		Alarm
3	TIM		Timing
4	OUT-COM		Output common
5	AWO	Input	All winding off
6	CS		Step angle switching
7	FREE		Motor excitation off, electromagnetic brake release
8	ALM-RST		Reset alarm
9	IN-COM		Input common


■ Connecting diagram




- Use input signals 12 to 24 VDC.
- Use output signals 12 to 24 VDC 10 mA or less. If the current exceeds 10 mA, connect an external resistor R0.
- The saturated voltage of the output signal is 3 VDC maximum.

● Connecting to a current sink output circuit


● When pulse input is of line driver type

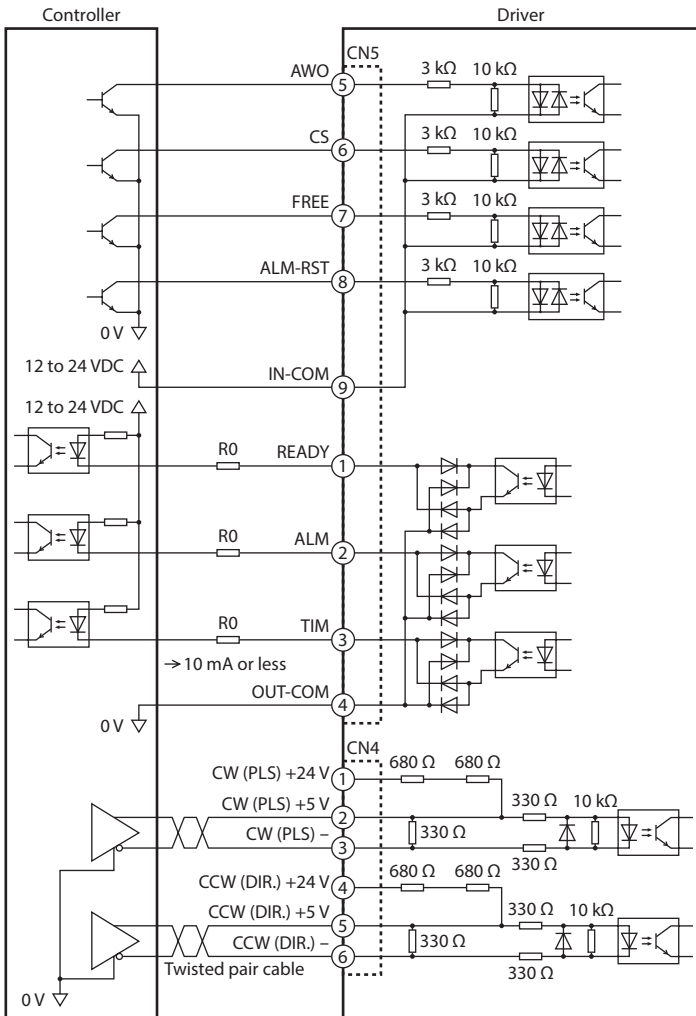

● When pulse input is of open-collector type (Input voltage: 5 VDC)

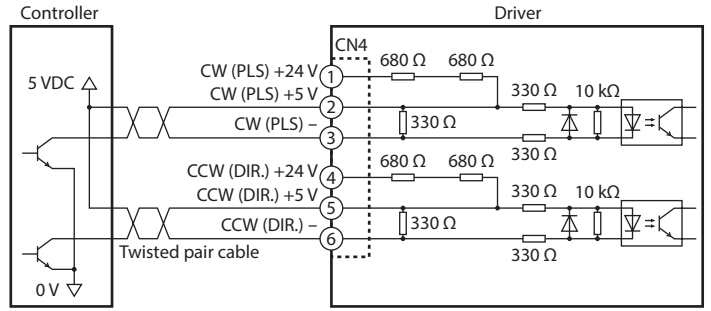


● When pulse input is of open-collector type (Input voltage: 24 VDC)

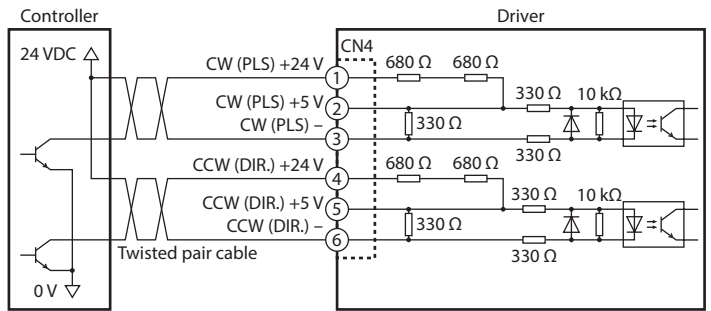


● Connecting to a current source output circuit


● When pulse input is of line driver type

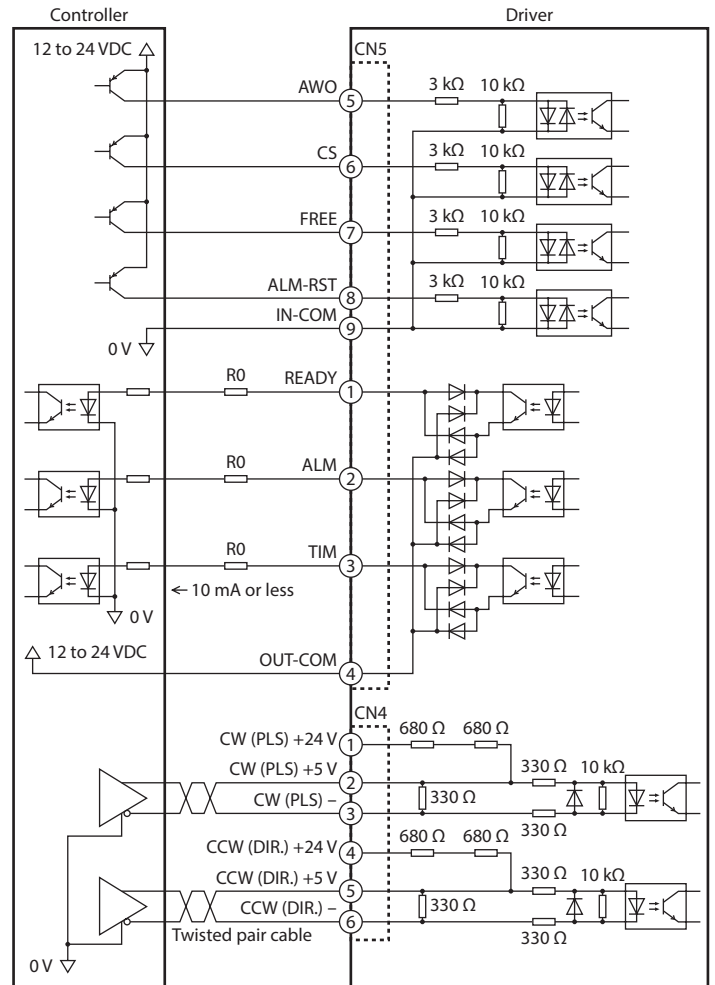

● When pulse input is of open-collector type  
(Input voltage: 5 VDC)

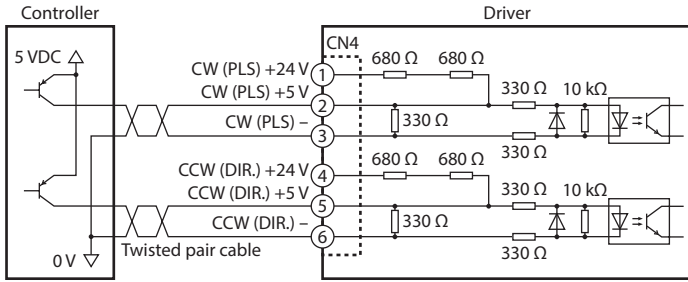

● When pulse input is of open-collector type  
(Input voltage: 24 VDC)

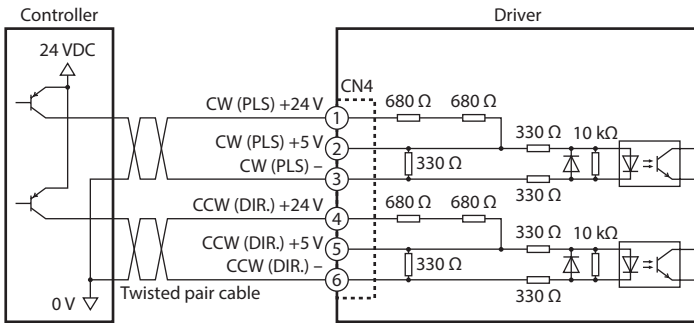


■ Grounding the driver

Be sure to ground the Protective Earth Terminal (screw size: M4) of the driver.  
Grounding wire: AWG16 to 14 (1.25 to 2.0 mm<sup>2</sup>)  
Tightening torque: 1.2 N·m (170 oz-in)

You can ground either of the two Protective Earth Terminals. The terminal that is not grounded is used as a service terminal. Use the service terminal according to your specific need, such as connecting it to the motor in order to ground the motor.

Do not share the grounding wire with a welder or any other power equipment.

When grounding the Protective Earth Terminal, use a round terminal and affix the grounding point near the driver.

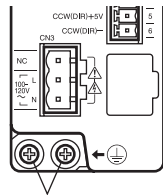

Protective Earth Terminal  
(Ground either of the terminals.)

Inspection

It is recommended that periodic inspections for the items listed below are conducted after each operation of the motor. If an abnormal condition is noted, discontinue any use and contact your nearest Oriental Motor sales office.

● During inspection

- Are the openings in the driver blocked?
- Are any of the mounting screws or connection parts of the driver loose?
- Is there attachment of dust, etc., on the driver?
- Are there any strange smells or appearances within the driver?



The driver uses semiconductor elements. Handle the driver with care since static electricity may damage semiconductor elements. Static electricity may damage the driver.

Alarm (protective function)

When an alarm generates, the ALM output will turn OFF and the ALARM LED will start blinking. Before resetting an alarm, always remove the cause of the alarm and ensure safety.

For details of alarms, refer to USER MANUAL.

- Unauthorized reproduction or copying of all or part of this manual is prohibited.
- Oriental Motor shall not be liable whatsoever for any problems relating to industrial property rights arising from use of any information, circuit, equipment or device provided or referenced in this manual.
- Characteristics, specifications and dimensions are subject to change without notice.
- While we make every effort to offer accurate information in the manual, we welcome your input. Should you find unclear descriptions, errors or omissions, please contact the nearest office.
- **Orientalmotor** is a registered trademark or trademark of Oriental Motor Co., Ltd., in Japan and other countries.

© Copyright ORIENTAL MOTOR CO., LTD. 2013

Published in March 2018

• Please contact your nearest Oriental Motor office for further information.

ORIENTAL MOTOR U.S.A. CORP.  
Technical Support Tel:(800)468-3982  
8:30 A.M. to 5:00 P.M., P.S.T. (M-F)  
7:30 A.M. to 5:00 P.M., C.S.T. (M-F)  
www.orientalmotor.com  
ORIENTAL MOTOR DO BRASIL LTDA.  
Tel:+55-11-3266-6018  
www.orientalmotor.com.br  
ORIENTAL MOTOR (EUROPA) GmbH  
Schiesstraße 44, 40549 Düsseldorf, Germany  
Technical Support Tel:00 800/22 55 66 22  
www.orientalmotor.de  
ORIENTAL MOTOR (UK) LTD.  
Tel:01256-347090  
www.oriental-motor.co.uk  
ORIENTAL MOTOR (FRANCE) SARL  
Tel:01 47 86 97 50  
www.orientalmotor.fr  
ORIENTAL MOTOR ITALIA s.r.l.  
Tel:02-93906346  
www.orientalmotor.it  
ORIENTAL MOTOR CO., LTD.  
4-8-1Higashiueno,Taito-ku,Tokyo 110-8536  
Japan  
Tel:03-6744-0361  
www.orientalmotor.co.jp

ORIENTAL MOTOR ASIA PACIFIC PTE. LTD.  
Singapore  
Tel:1800-8420280  
www.orientalmotor.com.sg  
ORIENTAL MOTOR (MALAYSIA) SDN. BHD.  
Tel:1800-806161  
www.orientalmotor.com.my  
ORIENTAL MOTOR (THAILAND) CO., LTD.  
Tel:1800-888-881  
www.orientalmotor.co.th  
ORIENTAL MOTOR (INDIA) PVT. LTD.  
Tel:+91-80-41125586  
www.orientalmotor.co.in  
TAIWAN ORIENTAL MOTOR CO., LTD.  
Tel:0800-060708  
www.orientalmotor.com.tw  
SHANGHAI ORIENTAL MOTOR CO., LTD.  
Tel:400-820-6516  
www.orientalmotor.com.cn  
INA ORIENTAL MOTOR CO., LTD.  
Korea  
Tel:080-777-2042  
www.inaom.co.kr  
ORIENTAL MOTOR CO., LTD.  
Hong Kong Branch  
Tel:+852-2427-9800