

## **Robot Controller**

# **MRC01**

---

## **USER MANUAL**

Introduction

Hardware

Operation

Control via EtherNet/IP

Parameters

I/O signals

Other functions

Troubleshooting

Thank you for purchasing an Oriental Motor product.

This Manual describes product handling procedures and safety precautions.

- Please read it thoroughly to ensure safe operation.
- Always keep the manual where it is readily available.



## 1 Introduction

|   |                               |    |
|---|-------------------------------|----|
| 1 | Before using the product..... | 8  |
| 2 | Overview of the product.....  | 9  |
| 3 | Safety precautions .....      | 10 |
| 4 | Precautions for use .....     | 12 |

## 2 Hardware

|     |   |    |
|-----|---|----|
| 1   | System configuration .....                            | 14 |
| 2   | Preparation.....                                      | 15 |
| 2-1 | Checking the product .....                            | 15 |
| 2-2 | Model list .....                                      | 15 |
| 2-3 | Drivers possible to combine .....                     | 15 |
| 2-4 | Information about nameplate .....                     | 15 |
| 2-5 | Names and functions of parts.....                     | 16 |
| 2-6 | Indication of LEDs.....                               | 17 |
| 3   | Installation.....                                     | 19 |
| 3-1 | Installation location .....                           | 19 |
| 3-2 | Installation method.....                              | 19 |
| 4   | Connection .....                                      | 21 |
| 4-1 | Connection example .....                              | 21 |
| 4-2 | Connecting the power supply and grounding (CN1) ..... | 22 |
| 4-3 | Connecting the EtherNet/IP cable (CN2, CN3) .....     | 22 |
| 4-4 | Connecting the RS-485 communication cable (CN6) ..... | 23 |
| 4-5 | Connecting the USB cable.....                         | 23 |
| 4-6 | Connecting the I/O signals (CN4).....                 | 24 |
| 4-7 | Noise elimination measures.....                       | 26 |
| 4-8 | Compliance with the EMC Directive .....               | 28 |
| 5   | Inspection and maintenance .....                      | 29 |
| 5-1 | Inspection.....                                       | 29 |
| 5-2 | Warranty.....   | 29 |
| 5-3 | Disposal.....   | 29 |
| 6   | Cable .....   | 30 |
| 6-1 | RS-485 communication cables .....                     | 30 |
| 6-2 | I/O signal cables .....                               | 30 |
| 7   | Accessories .....                                     | 31 |
| 7-1 | Relay contact protection parts/circuits.....          | 31 |
| 8   | Specifications .....                                  | 32 |
| 8-1 | Product specifications.....                           | 32 |
| 8-2 | General specifications.....                           | 32 |
| 9   | Regulations and standards.....                        | 33 |
| 9-1 | CE Marking .....                                      | 33 |



## 3 Operation

|     |   |    |
|-----|---|----|
| 1   | Robots that can be controlled by the controller ..... | 36 |
| 1-1 | Robot type.....                                       | 36 |
| 1-2 | Details of robots .....                               | 36 |
| 2   | Before starting operation .....                       | 40 |
| 2-1 | Operation preparation flow .....                      | 40 |
| 2-2 | Setting of robot .....                                | 40 |
| 2-3 | Origin setting .....                                  | 41 |
| 2-4 | Setting of position limit.....                        | 42 |
| 2-5 | Operation check.....                                  | 43 |
| 2-6 | Backup of data .....                                  | 44 |
| 2-7 | Maintenance.....                                      | 44 |
| 3   | Creation of operation program .....                   | 46 |
| 4   | Commands.....   | 48 |
| 4-1 | Move commands .....                                   | 48 |
| 4-2 | Control commands.....                                 | 71 |
| 4-3 | EtherNet/IP commands .....                            | 74 |

## 4 Control via EtherNet/IP

|     |   |     |
|-----|---|-----|
| 1   | Guidance .....  | 78  |
| 2   | Communication specifications .....  | 82  |
| 3   | Implicit message.....   | 83  |
| 3-1 | Implicit message format.....  | 83  |
| 3-2 | Input data .....  | 85  |
| 3-3 | Output data .....   | 99  |
| 3-4 | Processing order of Implicit communication .....                                | 114 |
| 3-5 | Data writing .....  | 115 |
| 3-6 | Data reading .....  | 116 |
| 4   | Direct data operation .....   | 118 |
| 4-1 | Overview of direct data operation .....   | 118 |
| 4-2 | Output data related to direct data operation.....                               | 119 |
| 4-3 | Output data required to execute direct data operation.....                      | 125 |
| 4-4 | Operation example .....   | 128 |
| 4-5 | Operation where <b>MRC01</b> controller and camera are used in combination..... | 129 |
| 4-6 | Override of linear interpolation operation .....                                | 133 |

## 5 Parameter

|   |                                     |     |
|---|-------------------------------------|-----|
| 1 | Timing for parameter to update..... | 136 |
| 2 | Protect release command .....       | 137 |
| 3 | Maintenance commands .....          | 138 |
| 4 | Monitor commands .....              | 140 |



|           |  |            |
|-----------|--|------------|
| <b>5</b>  | <b>Parameters: Basic setting.....</b>                  | <b>154</b> |
| 5-1       | Basic setting.....                                     | 154        |
| <b>6</b>  | <b>Parameters: Operation setting .....</b>             | <b>156</b> |
| 6-1       | Program/direct data operation.....                     | 156        |
| 6-2       | Point data (for program operation).....                | 157        |
| 6-3       | JOG/ZHOME operation.....                               | 160        |
| <b>7</b>  | <b>Parameters: Pallet setting.....</b>                 | <b>163</b> |
| 7-1       | Pallets 1 to 6.....                                    | 163        |
| 7-2       | Pallet next cell number.....                           | 167        |
| <b>8</b>  | <b>Parameters: I/O setting .....</b>                   | <b>168</b> |
| 8-1       | I/O operation and function .....                       | 168        |
| 8-2       | Direct-IN (DIN).....                                   | 171        |
| 8-3       | Direct-OUT (DOUT) .....                                | 173        |
| 8-4       | Remote-I/O (R-I/O).....                                | 175        |
| 8-5       | Virtual input parameters .....                         | 177        |
| 8-6       | User output setting parameters.....                    | 178        |
| <b>9</b>  | <b>Parameters: Protective function setting .....</b>   | <b>179</b> |
| 9-1       | Alarm/Information .....                                | 179        |
| 9-2       | Position limit.....                                    | 180        |
| 9-3       | AREA signal output / no entry area.....                | 182        |
| 9-4       | Speed limit .....                                      | 185        |
| 9-5       | Protection operation .....                             | 187        |
| <b>10</b> | <b>Parameters: Communication and I/F setting .....</b> | <b>188</b> |
| 10-1      | EtherNet/IP.....                                       | 188        |
| 10-2      | USB communication.....                                 | 189        |
| 10-3      | Driver internal communication .....                    | 189        |
| <b>11</b> | <b>Parameters: Robot setting.....</b>                  | <b>190</b> |
| 11-1      | End effector / Tool offsets .....                      | 190        |

## **6 I/O signals**

|          |   |            |
|----------|---|------------|
| <b>1</b> | <b>Overview of I/O signals .....</b>                      | <b>194</b> |
| 1-1      | Overview of input signals .....                           | 194        |
| 1-2      | Overview of output signals.....                           | 195        |
| 1-3      | Setting contents of input signals and output signals..... | 196        |
| <b>2</b> | <b>Signals list.....</b>                                  | <b>201</b> |
| 2-1      | Input signals list.....                                   | 201        |
| 2-2      | Output signals list.....                                  | 205        |
| <b>3</b> | <b>Signal type.....</b>                                   | <b>213</b> |
| 3-1      | Direct I/O.....   | 213        |
| 3-2      | Remote I/O .....  | 214        |
| <b>4</b> | <b>Input signals.....</b>                                 | <b>215</b> |
| 4-1      | Operation control .....                                   | 215        |
| 4-2      | Coordinates management .....                              | 220        |



|          |                                    |            |
|----------|------------------------------------|------------|
| 4-3      | Controller management.....         | 220        |
| <b>5</b> | <b>Output signals .....</b>        | <b>221</b> |
| 5-1      | Controller management.....         | 221        |
| 5-2      | Management of operation .....      | 222        |
| 5-3      | Response outputs.....              | 226        |
| <b>6</b> | <b>Control by direct I/O .....</b> | <b>228</b> |
| <b>7</b> | <b>Timing chart .....</b>          | <b>232</b> |

## 7 Other functions

|          |   |            |
|----------|---|------------|
| <b>1</b> | <b>To monitor using the MRC Studio software .....</b>                       | <b>238</b> |
| 1-1      | Monitor types and examples of use.....                                      | 238        |
| <b>2</b> | <b>To utilize the waveform monitor .....</b>                                | <b>239</b> |
| 2-1      | How to read the screen.....   | 239        |
| 2-2      | Enlarged view of waveform .....   | 241        |
| <b>3</b> | <b>To simulate the operation of the controller .....</b>                    | <b>243</b> |
| 3-1      | Operating procedure.....  | 243        |
| 3-2      | Coordinates.....  | 244        |
| 3-3      | Monitor .....   | 244        |
| 3-4      | Operation.....  | 244        |
| 3-5      | I/O signals .....   | 244        |
| <b>4</b> | <b>Setting the advanced speed limit (Polar/Cylindrical robot only).....</b> | <b>245</b> |

## 8 Troubleshooting

|          |  |            |
|----------|--|------------|
| <b>1</b> | <b>Detection of communication errors .....</b> | <b>248</b> |
| 1-1      | Communication timeout .....                    | 248        |
| 1-2      | IP address conflict.....                       | 248        |
| <b>2</b> | <b>Alarms.....</b>                             | <b>249</b> |
| 2-1      | Alarm reset .....                              | 249        |
| 2-2      | Alarm history .....                            | 249        |
| 2-3      | Alarm list .....                               | 250        |
| 2-4      | Timing chart.....                              | 257        |
| <b>3</b> | <b>Information .....</b>                       | <b>259</b> |
| 3-1      | Clearing information .....                     | 261        |
| 3-2      | Information history .....                      | 261        |
| 3-3      | Information list .....                         | 262        |







# 1 Introduction

---

This part explains the product overview and safety precautions in addition to the types and descriptions about operating manuals.

## ◆ Table of contents

|   |                                |    |
|---|--------------------------------|----|
| 1 | Before using the product ..... | 8  |
| 2 | Overview of the product.....   | 9  |
| 3 | Safety precautions .....       | 10 |
| 4 | Precautions for use.....       | 12 |



# 1 Before using the product

---

Only qualified personnel of electrical and mechanical engineering should work with the product.

Use the product correctly after thoroughly reading the section "4 Safety precautions" on p.10. In addition, be sure to observe the contents described in warning, caution, and note in this manual.

The product described in this manual is designed and manufactured to be incorporated in general industrial equipment. Do not use for any other purpose.

Oriental Motor Co., Ltd. is not responsible for any compensation for damage caused through failure to observe this warning.



## 2 Overview of the product

---

**MRC01** is a controller that controls a robot consisting of motors of the **AZ** Series and/or motorized actuators equipped with the **AZ** Series.

Using **MRC01** together with the programming software **MRC Studio** allows you to control a robot easily.

### ■ Applicable robot type

This controller can be used to control the following robot types. Refer to p.36 for details about each robot.

- **MRC01**: All types of robots are supported.
- **MRC01-C**: Only a Cartesian robot and a Cartesian robot (planar surface gantry) are supported.

### ■ Two types of control methods

- Operation by Implicit communication (periodic communication) of EtherNet/IP.
- Operation by using I/O signals.

### ■ Setting methods of operation programs and parameters

Operation programs are set using the **MRC Studio** software.

Parameters can be set using the **MRC Studio** software or via EtherNet/IP.

### ■ Equipped with direct data operation function

The direct data operation is a function to execute operation at the same time as rewriting of the data.

It is suitable to frequently change operation data such as the position (travel amount) or the speed, or to applications to adjust the position finely.

Direct data operation is performed via EtherNet/IP.

### ■ Providing the EDS File

The EDS file (Electronic Data Sheets file) is a file that describes the specific information of the EtherNet/IP compatible products. By importing the EDS file to the setting tool of the scanner, settings of EtherNet/IP can be performed before you receive the controller.

For details, contact your nearest Oriental Motor sales office.







### 3 Safety precautions

The precautions described below are intended to ensure the safe and correct use of the product, and to prevent the user and other personnel from exposure to the risk of injury. Use the product only after carefully reading and fully understanding these instructions.

In regard to a controller, it is prohibited to start operating the robot (i.e., to operate the device in accordance with the specified purpose) when the machine in which the controller is incorporated does not meet the relevant safety standards. The factory safety manager or safety personnel in charge of the applicable machine must ensure that the machine is operated only by qualified personnel who has expert knowledge on safety, and thereby prevent injury or damage to the machine.

The term “qualified personnel” refers to persons who have received the necessary training or education and have pertinent experience; who are familiar with the relevant standards and regulations; who are authorized by the factory safety manager to engage in the necessary activities; and who have the ability to discern and prevent potential dangers.

|  |  |
|--|--|
|  <b>WARNING</b> | Handling the product without observing the instructions that accompany a “WARNING” symbol may result in serious injury or death.     |
|  <b>CAUTION</b> | Handling the product without observing the instructions that accompany a “CAUTION” symbol may result in injury or property damage.   |
|                 | The items under this heading contain important handling instructions that the user should observe to ensure safe use of the product. |
|                 | The items under this heading contain related information and contents to gain a further understanding of the text in this manual.    |

#### **WARNING**

##### General

- Never use the product for equipment in connection with the maintenance or management of human life or health.
- Do not use the product in explosive or corrosive environments, in the presence of flammable gases, in places subjected to splashing water, or near combustibles. Doing so may result in fire or injury.
- Assign qualified personnel having expert knowledge on electrical and mechanical engineering as well as safety to the task of installing, wiring, operating/controlling, inspecting and troubleshooting the product. Handling by unqualified personnel may result in fire, injury, or damage to equipment.
- Conduct a risk assessment in a state where all parts and components including the controller have been installed in the equipment. Failure to do so may result in injury or damage to equipment.
- Use the product in a condition where the entire equipment complies with relevant international standards such as ISO 12100, ISO 10218-1, ISO 10218-2, national standards, and legal regulations such as occupational health and safety required in each country. Failure to do so may result in injury or damage to equipment.
- Provide a safety cage that satisfies the safety distance specified in ISO 13857 so that an operator or other personnel does not enter the movable range of the robot during operation of the equipment. Failure to do so may result in injury.
- Perform the teaching operation outside the safety cage. Failure to do so may result in injury.
- Provide appropriate safety measures in accordance with the results of the risk assessment of entire equipment when teaching, adjusting, or inspecting the robot inside the safety cage. Failure to do so may result in injury.
- Provide appropriate safety measures so that the entire equipment will operate safely in the event of a system failure or malfunction. Failure to do so may result in injury.
- Provide an emergency stop function for the equipment. Failure to do so may result in injury.
- The function and performance of the safety-related control system are appropriately determined according to the results of the risk assessment of the entire equipment. Failure to do so may result in injury.
- Do not touch the controller while the power is supplied. Doing so may result in fire.
- When an alarm of the controller is generated (any of the controller's protective functions is triggered), remove the cause before resetting the alarm (protective function). Continuing the operation without removing the cause of the problem may result in malfunction of the controller, leading to injury or damage to equipment.
- Do not disassemble or modify the controller. Doing so may result in injury or damage to equipment.

##### Installation and Wiring

- Install the controller inside an enclosure. Failure to do so may result in injury.
- Keep the input power voltage of the controller within the specified range. Failure to do so may result in fire.
- Connect the product securely according to the connection diagram. Failure to do so may result in fire.



- Do not forcibly bend, pull, or pinch the cable. Doing so may result in fire or damage to equipment.

### Operation

- Turn all input signals to the controller OFF before turning on the power supply. Failure to do so may result in injury or damage to equipment.
- Before operating a robot, check the condition of the surrounding area to ensure safety. This may cause injury or damage to equipment.
- Before operating a robot, check the setting value of the parameters. Failure to do so may result in injury or damage to equipment.
- Take appropriate safety measures when placing the motor in a non-excitation state. Failure to do so may result in injury or damage to equipment.
- Do not turn off the power or input a signal to place the motor in a non-excitation state during operation. The robot may operate unexpectedly. This may cause injury or damage to equipment.
- Turn all output signals OFF before Implicit communication of EtherNet/IP is started. Failure to do so may result in injury or damage to equipment.
- Turn off the power supply of the controller in the event of a power failure. Failure to do so may result in injury or damage to equipment.

### CAUTION

- Do not use the controller beyond its specifications. Doing so may result in injury or damage to equipment.
- Use a controller and a driver only in the specified combination. An incorrect combination may cause a fire.
- Do not place combustibles around the controller. Doing so may result in fire or a skin burn(s).
- Do not leave anything around the controller that would obstruct ventilation. Doing so may result in damage to equipment.
- Keep your fingers and objects out of the openings in the controller. Failure to do so may result in fire or injury.
- Do not forcibly bend or pull the cable that is connected to the controller. Doing so may cause damage to the product.
- If any abnormality is observed, stop the operation immediately to turn off the power supply. Failure to do so may result in fire or injury.
- Use a DC power supply with reinforced insulation on its primary and secondary sides for a power supply. Failure to do so may result in electric shock.
- Do not touch the terminals while conducting the insulation resistance measurement or the dielectric strength test. Doing so may result in electric shock.
- When installing and wiring, take measures against EMC. Without effective measures to suppress Electromagnetic Interference (EMI) caused by the product or driver to the surrounding control system equipment and Electromagnetic Susceptibility (EMS) generated by the product or driver, the function of your equipment may be seriously affected. Verify EMC compliance with the completed equipment. This may result in injury or damage to equipment.



## 4 Precautions for use

---

This chapter explains restrictions and requirements the user should consider when using the product.

- **When conducting the insulation resistance measurement or the dielectric strength test, be sure to disconnect the controller from other products.**

Conducting the insulation resistance measurement or the dielectric strength test with the controller and other products connected may result in damage to the product.

- **Note when connecting a power supply whose positive terminal is grounded**

The USB communication connector on the controller is not electrically insulated. When grounding the positive terminal of the power supply, do not connect any equipment (PC, etc.) whose negative terminal is grounded. Doing so may cause the controller and these equipment to short, damaging both. When connecting, do not ground equipment.

- **Saving data to the non-volatile memory**

Do not turn off the power supply while writing the data to the non-volatile memory, and also do not turn off for five seconds after the completion of writing the data. Doing so may abort writing the data and cause an alarm of EEPROM error to generate. The non-volatile memory can be rewritten approximately 100,000 times.

- **Noise elimination measures**

Refer to p.26 for noise elimination measures.



# 2 Hardware

---


This part explains names and functions of each part of the controller, installation and connection methods, and so on.

## ◆Table of contents

|          |  |           |          |  |           |
|----------|--|-----------|----------|--|-----------|
| <b>1</b> | <b>System configuration.....</b>                         | <b>14</b> | <b>5</b> | <b>Inspection and maintenance .....</b>    | <b>29</b> |
| <b>2</b> | <b>Preparation.....</b>                                  | <b>15</b> | 5-1      | Inspection.....                            | 29        |
| 2-1      | Checking the product.....                                | 15        | 5-2      | Warranty.....                              | 29        |
| 2-2      | Model list .....   | 15        | 5-3      | Disposal.....                              | 29        |
| 2-3      | Drivers possible to combine.....                         | 15        | <b>6</b> | <b>Cable .....</b>                         | <b>30</b> |
| 2-4      | Information about nameplate .....                        | 15        | 6-1      | RS-485 communication cables .....          | 30        |
| 2-5      | Names and functions of parts.....                        | 16        | 6-2      | I/O signal cables .....                    | 30        |
| 2-6      | Indication of LEDs.....                                  | 17        | <b>7</b> | <b>Accessories.....</b>                    | <b>31</b> |
| <b>3</b> | <b>Installation .....</b>                                | <b>19</b> | 7-1      | Relay contact protection parts/circuits .. | 31        |
| 3-1      | Installation location .....                              | 19        | <b>8</b> | <b>Specifications .....</b>                | <b>32</b> |
| 3-2      | Installation method .....                                | 19        | 8-1      | Product specifications.....                | 32        |
| <b>4</b> | <b>Connection .....</b>                                  | <b>21</b> | 8-2      | General specifications.....                | 32        |
| 4-1      | Connection example.....                                  | 21        | <b>9</b> | <b>Regulations and standards.....</b>      | <b>33</b> |
| 4-2      | Connecting the power supply and<br>grounding (CN1) ..... | 22        | 9-1      | CE Marking .....                           | 33        |
| 4-3      | Connecting the EtherNet/IP cable<br>(CN2, CN3) .....     | 22        |          |  |           |
| 4-4      | Connecting the RS-485 communication<br>cable (CN6) ..... | 23        |          |  |           |
| 4-5      | Connecting the USB cable.....                            | 23        |          |  |           |
| 4-6      | Connecting the I/O signals (CN4).....                    | 24        |          |  |           |
| 4-7      | Noise elimination measures .....                         | 26        |          |  |           |
| 4-8      | Compliance with the EMC Directive .....                  | 28        |          |  |           |



# 1 System configuration

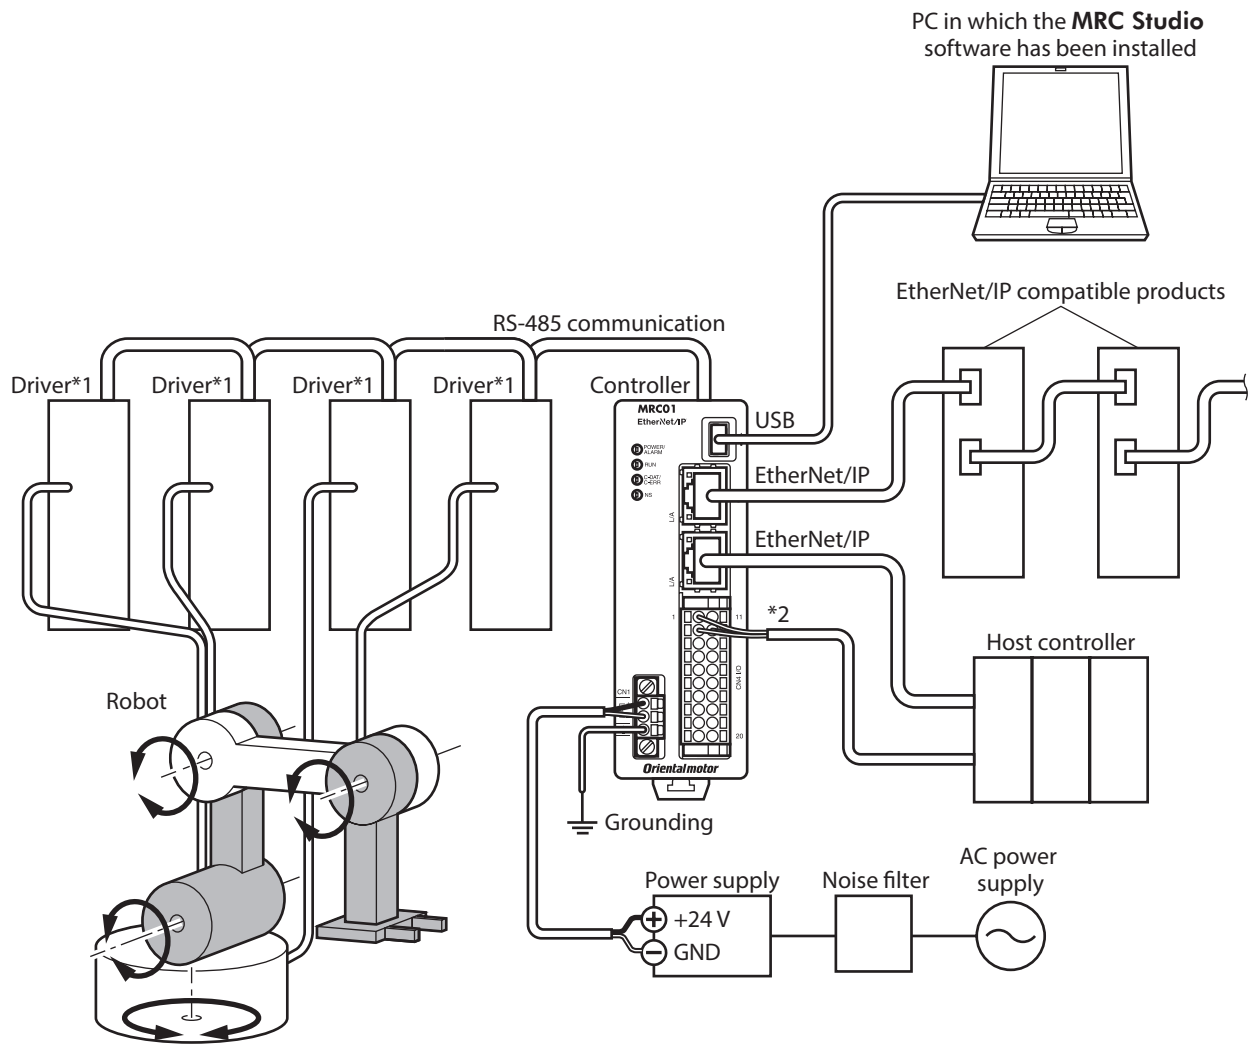

\*1 Connect a power supply to each driver.

\*2 Connect when using direct I/O or sensors.



## 2 Preparation

This chapter explains the items you should check, as well as names and functions of each part.

### 2-1 Checking the product

Verify that the items listed below are included. Report any missing or damaged items to the Oriental Motor sales office from which you purchased the product.

- Controller..... 1 unit
- CN1 connector (3 pins)..... 1 piece
- CN4 connector (20 pins) ..... 1 piece
- Instructions and Precautions for Safe Use..... 1 copy

#### Included connector model

| Type          | Part number          | Manufacturer                  |
|---------------|----------------------|-------------------------------|
| CN1 connector | FMC1,5/3-STF3,5      | PHOENIX CONTACT GmbH & Co. KG |
| CN4 connector | DFMC1,5/10-ST-3,5-LR |                               |

### 2-2 Model list

| Model          | Applicable robot type  |
|----------------|--|
| <b>MRC01</b>   | All  |
| <b>MRC01-C</b> | <ul style="list-style-type: none"> <li>• Cartesian robot</li> <li>• Cartesian robot (Planar surface gantry)</li> </ul> |


### 2-3 Drivers possible to combine

Drivers with which this controller can be combined are listed below. Check the driver model with the nameplate.

| Series           | Driver type                           | Model   | Driver version        |
|------------------|---------------------------------------|---|-----------------------|
| <b>AZ Series</b> | Built-in controller type              | <b>AZD-AD</b><br><b>AZD-CD</b><br><b>AZD-KD</b> | Version 4.20 or later |
|                  | mini Driver RS-485 communication type | <b>AZD-KR2D</b>                                 | All                   |


### 2-4 Information about nameplate

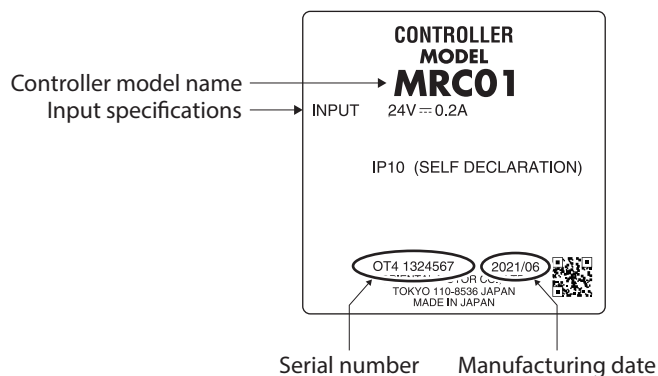

The figure shows an example.



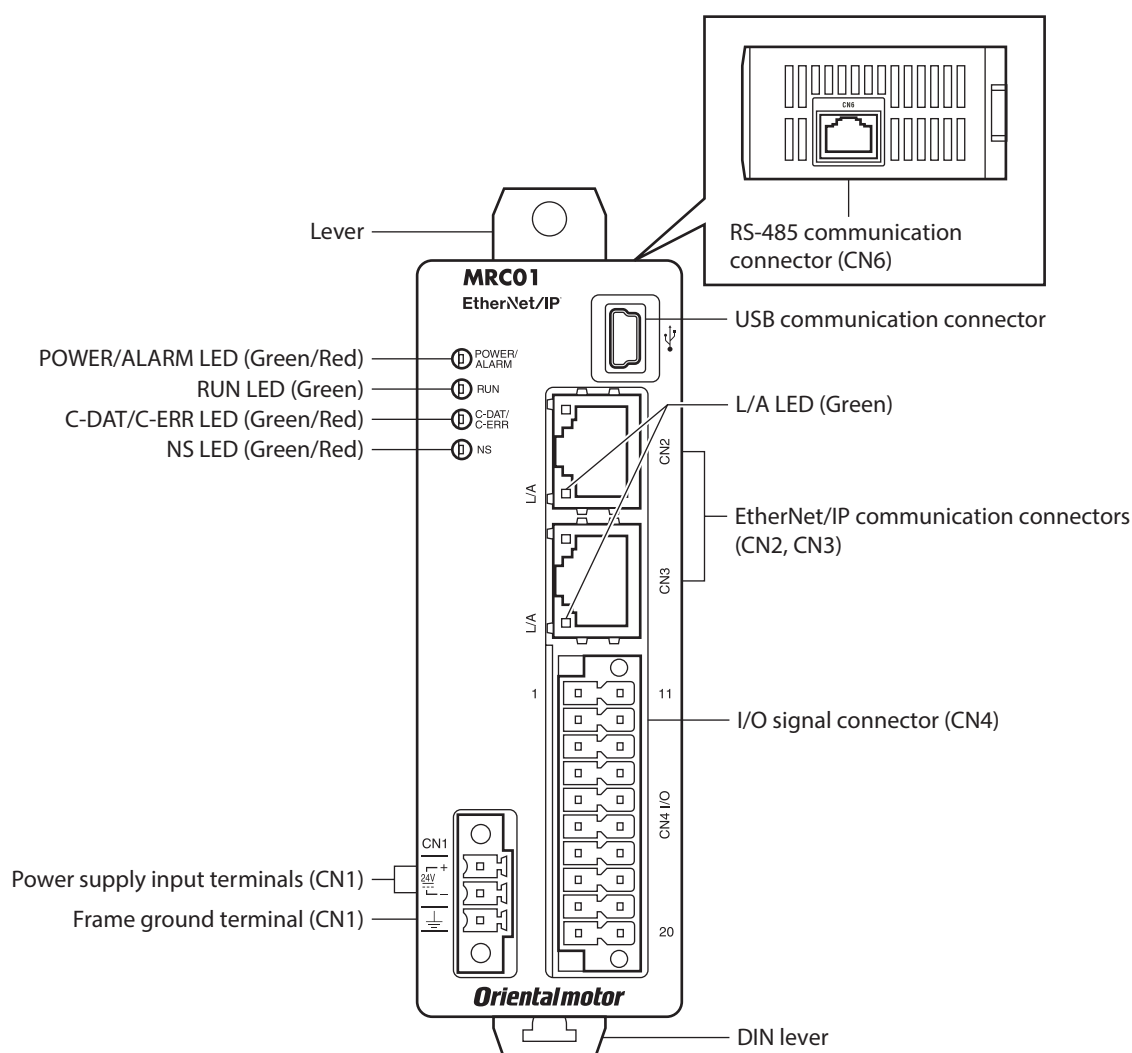

## 2-5 Names and functions of parts



| Type      | Name  | Sign  | Description  |
|-----------|---|---|--|
| LED       | POWER/ALARM LED (Green/Red)                     | POWER/ALARM   | This LED indicates the status of the controller.   |
|           | RUN LED (Green)                                 | RUN   | This LED is lit in green while program operation (*) is being executed.                        |
|           | C-DAT/C-ERR LED (Green/Red)                     | C-DAT/C-ERR   | This LED indicates the status of RS-485 communication.   |
|           | NS LED (Green/Red)                              | NS  | This LED indicates the communication status of EtherNet/IP.                                    |
|           | L/A LED (Green)                                 | L/A   | This LED indicates the LINK/ACT status of EtherNet/IP.   |
| Connector | USB communication connector                     |  | Connects a PC in which the <b>MRC Studio</b> software has been installed. (USB2.0 mini-B port) |
|           | EtherNet/IP communication connectors (CN2, CN3) | —   | Connects a scanner with the EtherNet/IP cable.   |
|           | I/O signal connector (CN4)                      | I/O   | Connects when using direct I/O or sensors.   |
|           | RS-485 communication connector (CN6)            | —   | Connects a driver with the RS-485 communication cable.   |
| Terminal  | Power supply input terminals (CN1)              | +, -  | Connects a power supply.   |
|           | Frame ground terminal (CN1)                     |  | Ground using a grounding wire of AWG 16 to 14 (1.25 to 2.0 mm <sup>2</sup> ) as necessary.     |



| Type   | Name      | Sign | Description   |
|--------|-----------|------|---|
| Others | DIN lever | —    | This is used to install the controller to a DIN rail.   |
|        | Levers    | —    | This is used together with the mounting hole of the DIN lever when the controller is installed with screws. |

\* It is operation of the program that was set with the operation program of the **MRC Studio** software.

## 2-6 Indication of LEDs

### ■ POWER/ALARM LED

This LED indicates the status of the controller.

| LED status  |          | Description  |
|---|----------|--|
| Green   | Red      |  |
| No light  | No light | The power supply is not turned on.   |
| Light   | No light | The power supply is turned on.   |
| No light  | Blinking | An alarm is being generated. The alarm message generated can be checked by counting the number of times the LED blinks. The LED is lit in green when the alarm is reset.   |
| Blinking twice at the same time *                         |          | <ul style="list-style-type: none"> <li>Information is being generated. The LED is lit in green when the information is cleared.</li> <li>The teaching screen is open on the <b>MRC Studio</b> software. The LED is lit in green when the teaching screen is closed.</li> </ul> |
| Repeating "Green → Red → Simultaneously lit * → No light" |          | This is the simulation mode. Refer to p.243 for the simulation mode.   |

\* Green and red colors may overlap and it may be visible to orange.

### ■ RUN LED

This LED indicates the status of program operation.

| LED status | Description                              |
|------------|--|
| No light   | Program operation has not been executed. |
| Light      | Program operation is being executed.     |

### ■ C-DAT/C-ERR LED

This LED indicates the communication status with the driver via RS-485 communication.

| LED status |          | Description  |
|------------|----------|--|
| Green      | Red      |  |
| No light   | No light | <ul style="list-style-type: none"> <li>Information of the robot has not been written to the controller.</li> <li>The power supply of the controller is not turned on.</li> </ul> |
| Light      | No light | This is in an online state. Communication is performed with the driver properly.   |
| Blinking   | No light | RS-485 communication is being established with the driver.   |
| No light   | Light    | An error occurs in communication with the driver.  |



## ■ NS LED

This LED indicates the communication status with the scanner via EtherNet/IP.

| LED status           |          | Description  |
|----------------------|----------|--|
| Green                | Red      |  |
| No light             | No light | <ul style="list-style-type: none"> <li>• This is in an offline state.</li> <li>• The power supply of the controller is not turned on.</li> </ul> |
| Blinking             | No light | This is in an online state. Connection has not been established with the scanner.  |
| Light                | No light | This is in an online state. Connection is being established with the scanner.  |
| No light             | Blinking | Connection timed out with the scanner.   |
| No light             | Light    | The setting of an IP address is duplicated in the same system.   |
| Blinking alternately |          | Self-diagnosis when turning on the power is executing.   |

## ■ L/A LED

This LED indicates the LINK/ACT status of EtherNet/IP.

| LED status | Description  |
|------------|--|
| No light   | <ul style="list-style-type: none"> <li>• This is in an offline state.</li> <li>• The frame of EtherNet/IP is not sent and received.</li> </ul> |
| Blinking   | <ul style="list-style-type: none"> <li>• This is in an online state.</li> <li>• The frame of EtherNet/IP is sent and received.</li> </ul>      |
| Light      | <ul style="list-style-type: none"> <li>• This is in an online state.</li> <li>• The frame of EtherNet/IP is not sent and received.</li> </ul>  |



## 3 Installation

This chapter explains the installation location and installation method of the controller.

### 3-1 Installation location

The controller is designed and manufactured to be incorporated in equipment. Install it in a well-ventilated location that provides easy access for inspection. The location must also satisfy the following conditions:

- Inside an enclosure that is installed indoors (provide vent holes)
- Operating ambient temperature: 0 to +55 °C [+32 to +131 °F] (non-freezing)
- Operating ambient humidity: 85 % or less (non-condensing)
- Area free of explosive atmosphere, toxic gas (such as sulfuric gas), or liquid
- Area not exposed to direct sun
- Area free of excessive amount of dust, iron particles or the like
- Area not subject to splashing water (rain, water droplets), oil (oil droplets) or other liquids
- Area free of excessive salt
- Area not subject to continuous vibration or excessive shocks
- Area free of excessive electromagnetic noise (from welders, power machinery, etc.)
- Area free of radioactive materials, magnetic fields or vacuum
- Up to 1,000 m (3,300 ft.) above sea level

### 3-2 Installation method

To install the controller, there are two methods. One is a method installing to a DIN rail and the other is that installing with screws.


When installing the controller and drivers side by side, observe the installation conditions of the drivers.



- Do not install any equipment that generates a large amount of heat or noise near the controller.
- Do not install the controller underneath a host controller or other equipment vulnerable to heat.
- If the ambient temperature of the controller exceeds 55 °C (131 °F), reconsider the ventilation condition such as providing forced cooling by using fans or creating spaces between the controller and other products.
- Be sure to install the controller vertically (in a vertical position). If the controller is installed in a direction other than a vertical position, its heat radiation effect will deteriorate.

#### ■ Installing to DIN rail


1. Pull down the DIN lever of the controller and lock it. Hang the hook at the rear to the DIN rail.
2. Hold the controller to the DIN rail, and push up the DIN lever to secure.
3. Secure both sides using end plates.

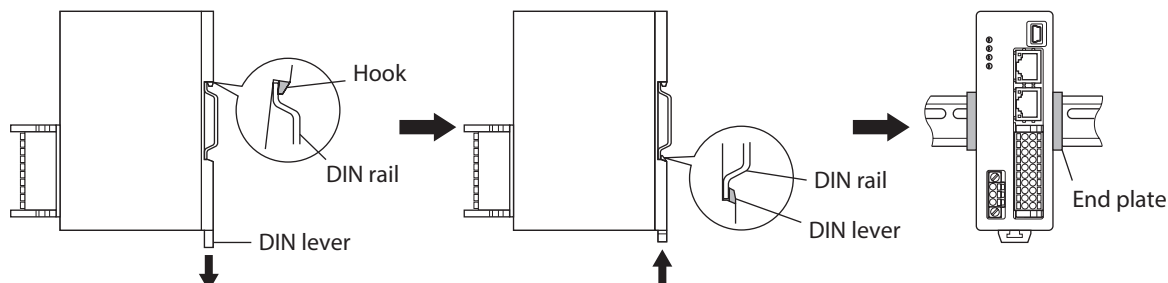



### Removing from DIN rail

Pull the DIN lever down until it locks using a flat tip screwdriver, and lift the bottom of the controller to remove it from the rail. Apply a force of about 10 to 20 N (2.2 to 4.5 lb.) to pull the DIN lever down to lock it. Excessive force may damage the DIN lever.

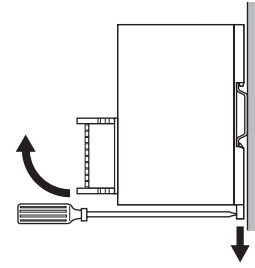


### ■ Installing with screws

1. Pull up and down the upper and lower levers on the rear side of the controller respectively until each lever clicks.
2. Secure the controller using screws (not included) through the two mounting holes.

Use screws and washers which sizes are  $\varnothing 10$  mm ( $\varnothing 0.39$  in.) or less.


• Screw size: M4

• Tightening torque: 0.7 N·m (99 oz-in)

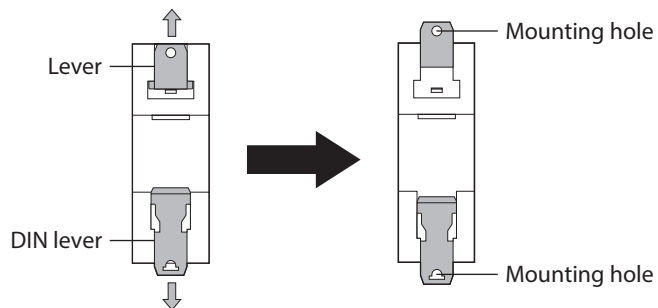

### ■ Dimensions [Unit: mm (in.)]

Mass: 0.12 kg (0.26 lb.)

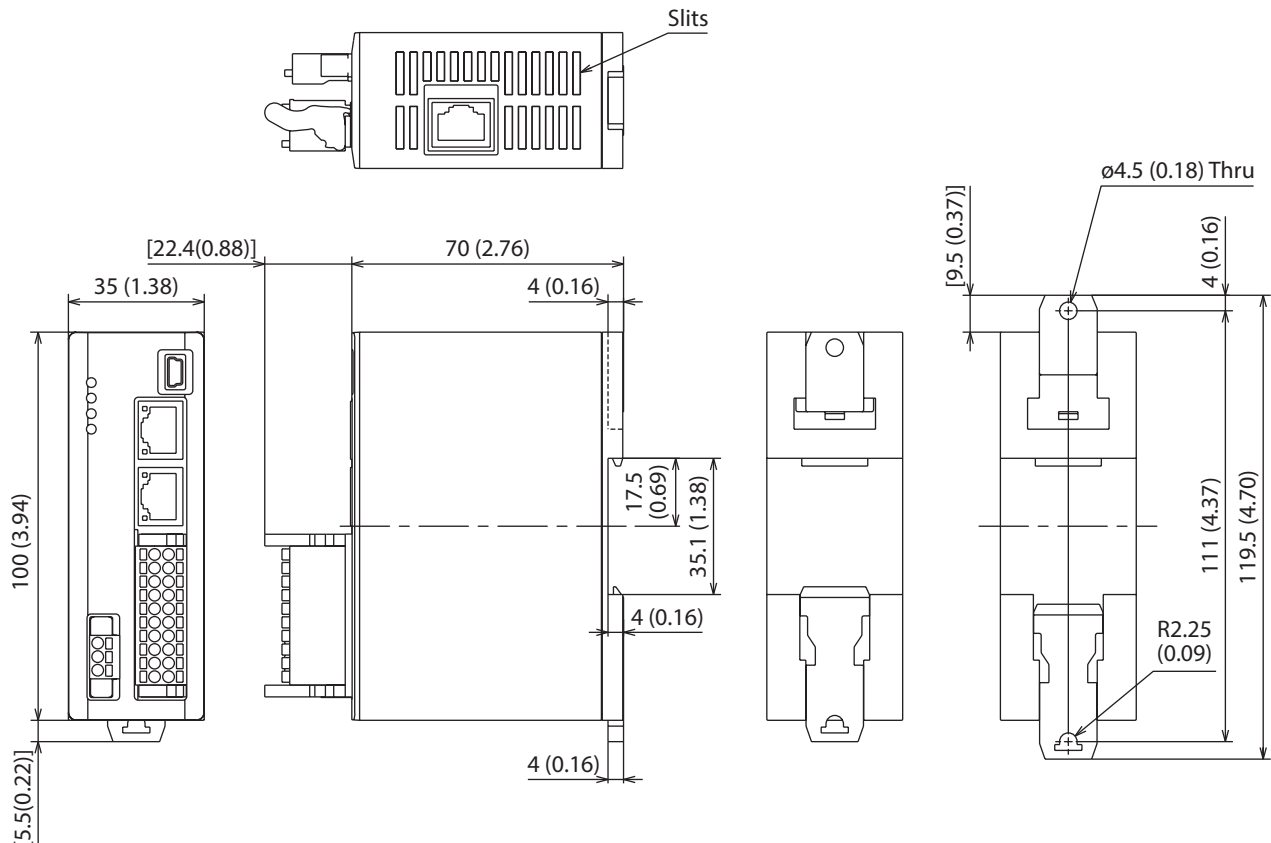




## 4 Connection

This chapter explains a connection example of the controller, a connection method of a power supply, a grounding method, and others.

It also explains installation and wiring methods to comply with the EMC Directive, as well as measures against electrical noise.

### 4-1 Connection example

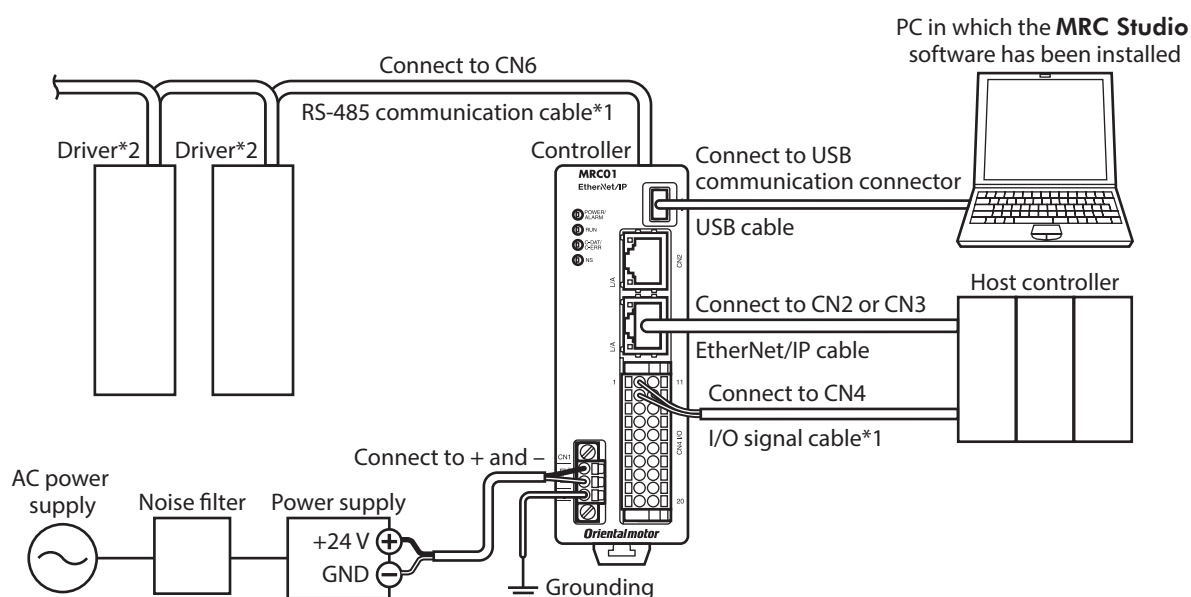

\*1 These cables are provided in Oriental Motor products.

\*2 Connect a power supply to each driver.

#### Note

- Connect the connectors securely. Insecure connector connections may cause malfunction or damage to the controller.
- Do not wire the power supply cable of the controller in the same cable duct with other power lines or motor cables. Doing so may cause malfunction due to noise.
- Keep 50 m (164 ft.) or less for the wiring distance between the controller and a driver located at the end. Exceeding 50 m (164 ft.) may cause malfunction.

#### memo

Before connecting or disconnecting a connector, turn off the power supply, and check the POWER/ALARM LED has been turned off.

### ■ Electrical wire size

| Connector | Terminal symbol | Recommended wire size                      | Screw size | Tightening torque                  |
|-----------|-----------------|--|------------|------------------------------------|
| CN1       | +, -, $\perp$   | AWG24 to 16 (0.2 to 1.25 mm <sup>2</sup> ) | M2.5       | 0.2 to 0.3 N·m<br>(28 to 42 oz-in) |
| CN4       | -               | AWG24 to 16 (0.2 to 1.25 mm <sup>2</sup> ) | -          | -                                  |




## 4-2 Connecting the power supply and grounding (CN1)

Use the CN1 connector (3 pins) to connect the power supply.

### ■ Pin assignment


| Sign | Description                 |
|------|-----------------------------|
| +    | Power supply input (24 VDC) |
| –    | Power supply ground         |
| ⏏    | Frame ground                |



### ■ Wiring method of CN1 connector

- Applicable lead wire: AWG 24 to 16 (0.2 to 1.25 mm<sup>2</sup>)
- Lead wire strip length: 10 mm (0.39 in.)

1. Strip the insulation of the lead wires.
2. Insert the lead wire while pushing the button of the orange color with a screwdriver.
3. After having inserted, release the button to secure the lead wire.
4. Insert the CN1 connector into CN1 to tighten the screws.
  - Screw size: M2.5
  - Tightening torque: 0.2 to 0.3 N·m (28 to 42 oz-in)

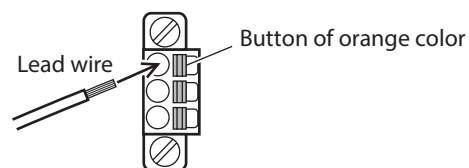

### ■ Power supply current capacity

| Input power supply voltage | Power supply current capacity |
|----------------------------|-------------------------------|
| 24 VDC±10 %                | 0.2 A or more                 |

### ■ Grounding the controller

Ground the controller as necessary.


Do not share the grounding wire with a welder or any other power equipment.

## 4-3 Connecting the EtherNet/IP cable (CN2, CN3)

Connect the EtherNet/IP cable to the EtherNet/IP communication connector (CN2, CN3).

### ■ Pin assignment

| Signal name | Description        |
|-------------|--------------------|
| TXP         | Transmitted data + |
| TXN         | Transmitted data – |
| RXP         | Received data +    |
| N.C.        | –                  |
| N.C.        | –                  |
| RXN         | Received data –    |
| N.C.        | –                  |
| N.C.        | –                  |

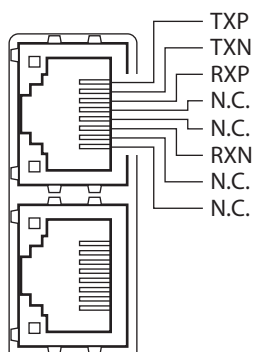




## 4-4 Connecting the RS-485 communication cable (CN6)

Connect the RS-485 communication cable to the RS-485 communication connector (CN6).  
The RS-485 communication cables are provided in Oriental Motor products. Refer to p.30 for the model name.  
Commercially available LAN cables (straight cables) can also be connected.

### ■ Pin assignment

| Signal name | Description                     |
|-------------|---------------------------------|
| N.C.        | —                               |
| SG          | Signal ground                   |
| TR+         | RS-485 communication signal (+) |
| N.C.        | —                               |
| N.C.        | —                               |
| TR-         | RS-485 communication signal (-) |
| N.C.        | —                               |
| N.C.        | —                               |

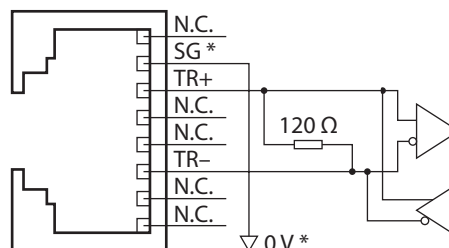

\* SG is electrically isolated from the power ground of the CN1 connector.

## 4-5 Connecting the USB cable

Using a USB cable with the following specifications, connect a PC in which the **MRC Studio** software has been installed to the USB communication connector.

|               |   |
|---------------|---|
| Specification | USB2.0 (Full speed)                                 |
| Cable         | Length: 3 m (9.8 ft.) or less<br>Shape: A to mini B |



- Connect the controller and a PC directly using a USB cable.
- In large electrically noisy environments, use the USB cable with a ferrite core or install a ferrite core to the USB cable.




## 4-6 Connecting the I/O signals (CN4)

Connect when using direct I/O or sensors.

Connect the I/O signal cable to the I/O signal connector (CN4) using the CN4 connector (20 pins).

### ■ Pin assignment

| Pin No. | Signal name | Description *                   |
|---------|-------------|---------------------------------|
| 1       | IN-COM      | Common for IN0 to IN7 inputs    |
| 2       | IN0         | Control input 0 (STOP)          |
| 3       | IN2         | Control Input 2 (ETO-CLR-DRV)   |
| 4       | IN4         | Control input 4 (PAUSE)         |
| 5       | IN6         | Control input 6 (PRG-DIN0)      |
| 6       | OUT-COM     | Common for OUT0 to OUT7 outputs |
| 7       | OUT0        | Control output 0 (READY)        |
| 8       | OUT2        | Control Input 2 (ETO-MON-DRV)   |
| 9       | OUT4        | Control output 4 (PAUSE-BSY)    |
| 10      | OUT6        | Control output 6 (PRG-DOUT0)    |

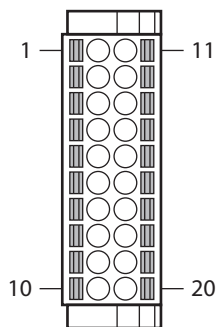


| Pin No. | Signal name | Description *                |
|---------|-------------|------------------------------|
| 11      | N.C.        | —                            |
| 12      | IN1         | Control input 1 (FREE-RB)    |
| 13      | IN3         | Control input 3 (ALM-RST)    |
| 14      | IN5         | Control input 5 (not used)   |
| 15      | IN7         | Control input 7 (PRG-DIN1)   |
| 16      | N.C.        | —                            |
| 17      | OUT1        | Control output 1 (MOVE)      |
| 18      | OUT3        | Control output 3 (ALM-B)     |
| 19      | OUT5        | Control output 5 (PRG-RUN)   |
| 20      | OUT7        | Control output 7 (PRG-DOUT1) |

\* Values in parentheses ( ) are initial values.


### ■ Wiring method of CN4 connector

- Applicable lead wire: AWG 24 to 16 (0.2 to 1.25 mm<sup>2</sup>)
  - Lead wire strip length: 10 mm (0.39 in.)
1. Strip the insulation of the lead wires.
  2. Insert the lead wire while pushing the button of the orange color with a screwdriver.
  3. After having inserted, release the button to secure the lead wire.

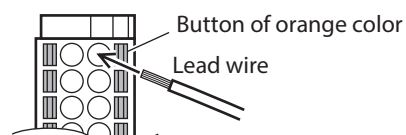



### ■ Connection example with a current sink output circuit

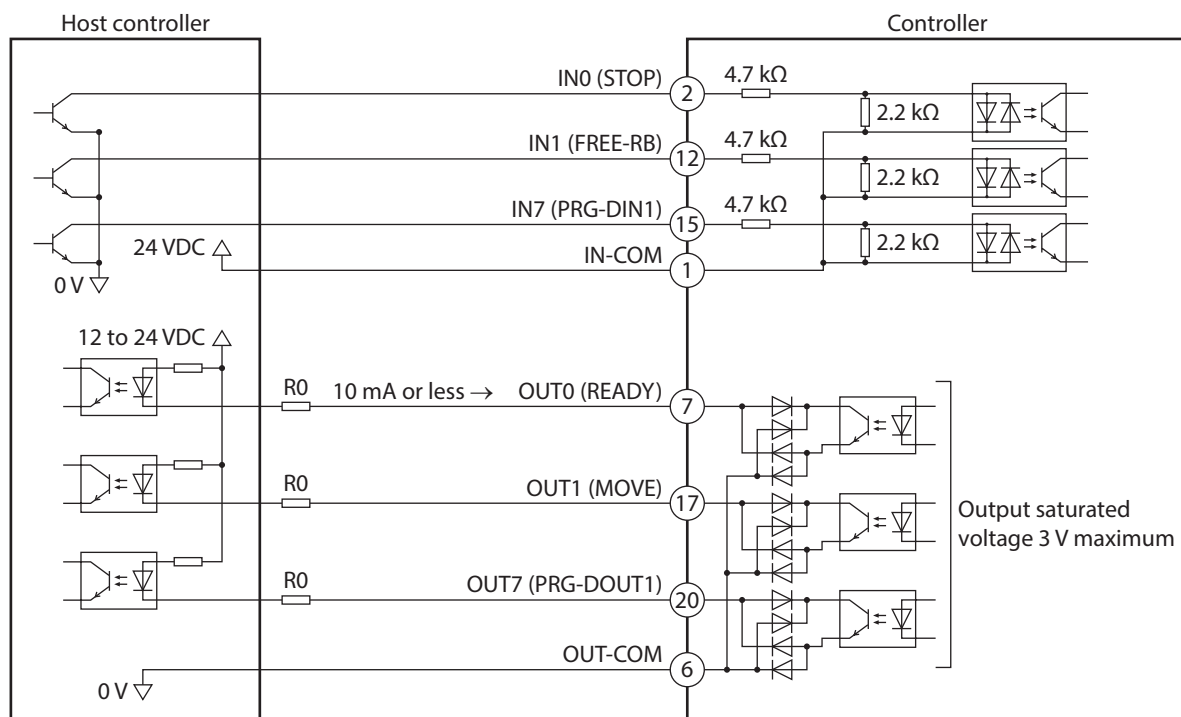

\* Values in parentheses ( ) are initial values.

**Note**


- Use input signals at 24 VDC.
- Use output signals at 12 to 24 VDC, 10 mA or less. If the current exceeds 10 mA, connect an external resistor R0 to keep 10 mA or less.

memo

The saturated voltage of the output signal is 3 VDC maximum.



## ■ Connection example with a current source output circuit

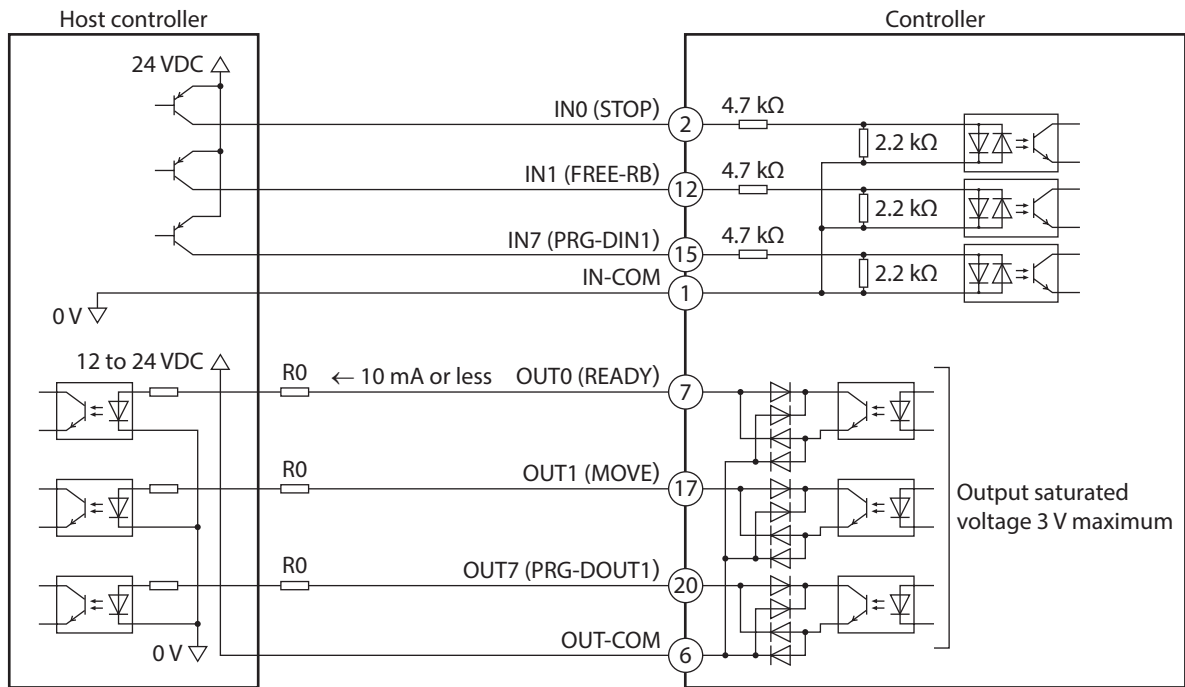

\* Values in parentheses ( ) are initial values.

### Note

- Use input signals at 24 VDC.
- Use output signals at 12 to 24 VDC, 10 mA or less. If the current exceeds 10 mA, connect an external resistor R0 to keep 10 mA or less.

### memo

The saturated voltage of the output signal is 3 VDC maximum.

## 4-7 Noise elimination measures

There are two types of electrical noises: One is a noise to invade into the controller from the outside and cause the controller to malfunction, and the other is a noise to emit from the controller and cause peripheral equipment to malfunction.

For the noise that is invaded from the outside, take measures to prevent a malfunction of the controller. It is needed to take adequate measures because signal lines are very likely to be affected by the noise.

For the noise that is emitted from the controller, take measures to suppress it.

### ■ Measures against electrical noise

There are the following three methods mainly to take measures against the electrical noise.

#### ● Noise suppression


- When relays or electromagnetic switches are used, use noise filters or CR circuits to suppress surge generated by them.
- Cover the controller by a metal plate such as aluminum. This is effective in shielding the electrical noise emitted from the controller.

#### ● Prevention of noise propagation

- Connect a noise filter on the AC input side of the DC power supply.
- Place the power lines, such as the motor and power supply cables, keeping a distance of 200 mm (7.87 in.) or more from the signal lines, and also do not bundle them or wire them in parallel. If a power cable and a signal cable have to cross, cross them at a right angle.
- Use shielded twisted pair cables for power lines and signal lines.
- Keep cables as short as possible without coiling and bundling extra lengths.



- Grounding multiple points will increase effect to block electrical noise because impedance on the grounding points is decreased. However, ground them so that a potential difference does not occur among the grounding points. I/O signal cables that include a grounding wire are provided in Oriental Motor products. Refer to p.30 for the model name.
- To ground a shielded cable, use a metal cable clamp that can maintain contact with the entire circumference of the shielded cable, and ground as near the product as possible.



### ● Suppression of effect by noise propagation

Loop the noise propagated cable around a ferrite core. Doing so will prevent the propagated noise invades into the controller or emits from the controller. The frequency band in which an effect by the ferrite core can be seen is generally 1 MHz or more. Check the frequency characteristics of the ferrite core used. When increasing the effect of noise attenuation by the ferrite core, loop the cable a lot.

## ■ Noise suppression product

### ● Noise filter

- Connect a noise filter (or equivalent) in the table below on the AC input side of the DC power supply. When a power supply transformer is used, be sure to connect a noise filter on the AC input side of the power supply transformer. Doing so will prevent the propagated noise through the power line. Install the noise filter as close to the input terminals of DC power supply as possible.

| Manufacturer              | Part number  |
|---------------------------|--------------|
| SOSHIN ELECTRIC CO., LTD. | HF2010A-UPF  |
| Schaffner EMC             | FN2070-10-06 |

- Use the AWG18 (0.75 mm<sup>2</sup>) or thicker wire for the input and output cables of the noise filter, and secure firmly using a cable clamp or others so that the cable does not come off the enclosure.
- Place the input cable as far apart as possible from the output cable, and do not wire the cables in parallel. If the input and output cables are placed at a close distance or if they are wired in parallel, the noise in the enclosure affects the power cable through stray capacitance, and the noise suppressing effect will reduce.
- Connect the ground terminal of the noise filter to the grounding point, using as thick and short a wire as possible.
- When connecting a noise filter in an enclosure, wire the input cable of the noise filter as short as possible. Wiring in long distance may reduce the noise suppressing effect.

## ■ Oriental Motor's noise suppression products

### ● I/O signal cables

These are shielded cables for good noise immunity to connect the controller and a host controller. Both ends of the cable are equipped with grounding wires useful to grounding. Refer to p.30 for the model name. The EMC testing is conducted using Oriental Motor I/O signal cable.

### ● Surge suppressors

These are effective to suppress the surge which occurs in a relay contact part. Connect when using a relay or electromagnetic switch. A CR circuit for surge suppression and a CR circuit module are provided. Refer to p.31 for the model name.



## 4-8 Compliance with the EMC Directive

Effective measures must be taken against EMI that the controller may give to adjacent control-system equipment, as well as EMS of the controller itself, in order to prevent a serious functional impediment in the machinery. The use of the following installation and wiring methods will enable the controller to comply with the EMC Directive. Oriental Motor conducts EMC testing on the controller in accordance with "Example of installation and wiring." The user is responsible for ensuring the machine's compliance with EMC, based on the installation and wiring explained below.

### ⚠ CAUTION

This equipment is not intended for use in residential environments nor for use on a low-voltage public network supplied in residential premises, and it may not provide adequate protection to radio reception interference in such environments.

#### ● Connecting the noise filter

In large electrically noisy environments, connect a noise filter. Refer to "Noise filter" on p.27 for details.

#### ● Connecting the power supply

For the power supply, use a DC power supply that complies with the EMC Directive.

Use shielded cables to wire and ground as short as possible. Refer to "Prevention of noise propagation" on p.26 for grounding the shielded cable.


#### ● Connecting the signal cable

Refer to "Prevention of noise propagation" on p.26.

#### ● Grounding method

- The cable used to ground the controller and a noise filter must be as thick and short as possible so that no potential difference is generated.
- Choose a large, thick and uniformly conductive surface for the grounding point.
- Ground the frame ground terminal of the controller. Refer to p.22 for the grounding method.

#### ● Example of installation and wiring

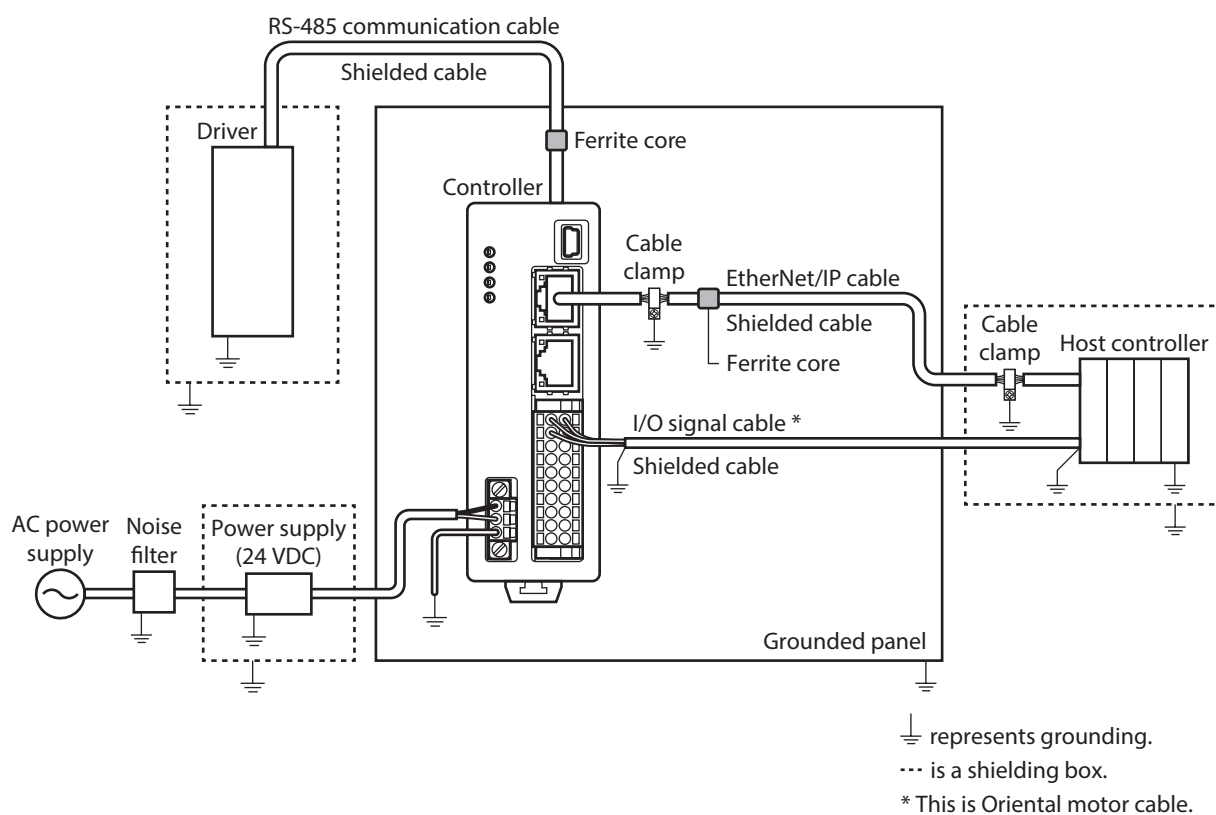

### Note

The controller uses components that are sensitive to static electricity. Take measures against static electricity since it may cause the controller to malfunction or suffer damage.



# 5 Inspection and maintenance

## 5-1 Inspection

It is recommended that periodic inspections are conducted for the items listed below after each operation of the robot. If an abnormality is found, discontinue any use and contact your nearest Oriental Motor sales office.

### ■ Inspection item

- Check if the openings on the controller are clogged.
- Check if dust is deposited on the controller.
- Check if the installation place secured the controller is loose.
- Check if the connection part with the controller is loose.
- Check if there is any abnormality or unusual smell on the controller.



The controller uses semiconductor components. Static electricity may damage the semiconductor components of the controller, so be extremely careful when handling them.

## 5-2 Warranty

Check on the Oriental Motor Website for the product warranty.

## 5-3 Disposal

Dispose the product correctly in accordance with laws and regulations, or instructions of local governments.



## 6 Cable

### 6-1 RS-485 communication cables

These cables are used when connecting the controller and a driver.

| Model            | Length [m (ft.)] | Applicable driver                               |
|------------------|------------------|---|
| <b>CC001-RS4</b> | 0.1 (0.3)        | <b>AZD-KD</b>                                   |
| <b>CC002-RS4</b> | 0.25 (0.8)       | <b>AZD-AD</b><br><b>AZD-CD</b><br><b>AZD-KD</b> |
| <b>CC02FLT6</b>  | 2 (6.6)          | <b>AZD-KR2D</b>                                 |
| <b>CC05FLT6</b>  | 5 (16.4)         |   |

### 6-2 I/O signal cables

These cables are shielded cables for control I/O of the controller offering excellent noise resistance. Both ends of the cable are equipped with grounding wires useful to grounding.  
Select the cable suitable for the number of I/O signals connected.

#### Model list

| Length<br>[m (ft.)] | Number of lead wires |                    |                    |                    |
|---------------------|----------------------|--------------------|--------------------|--------------------|
|                     | 6 pieces             | 10 pieces          | 12 pieces          | 16 pieces          |
| 0.5 (1.6)           | <b>CC06D005B-1</b>   | <b>CC10D005B-1</b> | <b>CC12D005B-1</b> | <b>CC16D005B-1</b> |
| 1 (3.3)             | <b>CC06D010B-1</b>   | <b>CC10D010B-1</b> | <b>CC12D010B-1</b> | <b>CC16D010B-1</b> |
| 1.5 (4.9)           | <b>CC06D015B-1</b>   | <b>CC10D015B-1</b> | <b>CC12D015B-1</b> | <b>CC16D015B-1</b> |
| 2 (6.6)             | <b>CC06D020B-1</b>   | <b>CC10D020B-1</b> | <b>CC12D020B-1</b> | <b>CC16D020B-1</b> |



# 7 Accessories

---

## 7-1 Relay contact protection parts/circuits

- **CR circuit for surge suppression**

This product is effective to suppress the surge which occurs in a relay contact part. Use it to protect the contacts of the relay or switch.

Model: **EPCR1201-2**

- **CR circuit module**

This product is effective to suppress the surge which occurs in a relay contact part. Use it to protect the contacts of the relay or switch.

4 pieces of CR circuit for surge suppression are mounted on the compact circuit, and this product can be installed to the DIN rail. This product can make the wiring easily and securely since it also supports terminal block connection.

Model: **VCS02**



## 8 Specifications

### 8-1 Product specifications

|                                     |                |   |
|-------------------------------------|----------------|---|
| Power supply                        | Input voltage  | 24 VDC $\pm$ 10 %   |
|                                     | Input current  | 0.2 A   |
| Interface                           | Field network  | EtherNet/IP   |
|                                     | Control input  | <ul style="list-style-type: none"> <li>• Number of input points: 8, photocoupler</li> <li>• Voltage: 24 VDC<math>\pm</math>10 %</li> </ul>  |
|                                     | Control output | <ul style="list-style-type: none"> <li>• Number of output points: 8, photocoupler/open collector</li> <li>• Voltage: 30 VDC or less</li> <li>• Output saturated voltage: 3 VDC maximum</li> <li>• Current: 10 mA or less</li> </ul> |
| RS-485 communication specifications |                | Modbus RTU<br>In conformance with EIA-485<br>Use a straight cable with twisted-pair wires (TIA/EIA-568B CAT5e or higher is recommended) and keep the total wiring distance to 50 m (164 ft.) or less. *1                            |
| Number of control axes              |                | <ul style="list-style-type: none"> <li>• <b>MRC01</b>: Maximum 8 axes*2</li> <li>• <b>MRC01-C</b>: Maximum 6 axes*2</li> </ul>  |

\*1 If the motor cable or the power supply cable generates an undesirable amount of noise depending on the wiring or configuration, shield the cable or install a ferrite core.

\*2 It is the number of axes including an end effector.

This controller can be used to control a single unit of the robot. For example, if an end effector (single axis) is also controlled when a 2-axis type Cartesian robot (XY) is used, the number of control axes will be three.

### 8-2 General specifications

|   |                        |   |
|---|------------------------|---|
| Degree of protection                        |                        | IP10  |
| Operating environment                       | Ambient temperature    | 0 to +55 °C [+32 to +131 °F] (non-freezing)   |
|   | Humidity               | 85 % or less (non-condensing)   |
|   | Altitude               | Up to 1,000 m (3,300 ft.) above sea level   |
|   | Surrounding atmosphere | No corrosive gas, dust, water or oil  |
| Storage environment<br>Shipping environment | Ambient temperature    | –25 to +70 °C [–13 to 158 °F] (non-freezing)  |
|   | Humidity               | 85 % or less (non-condensing)   |
|   | Altitude               | Up to 3,000 m (10,000 ft.) above sea level  |
|   | Surrounding atmosphere | No corrosive gas, dust, water or oil  |
| Insulation resistance                       |                        | 100 M $\Omega$ or more when 500 VDC megger is applied between the following places: <ul style="list-style-type: none"> <li>• Frame ground terminal - Power supply input terminal</li> </ul> |



# 9 Regulations and standards

---

## 9-1 CE Marking

This product is affixed with the mark under the following directive.

- **EU EMC Directive**

Refer to "4-8 Compliance with the EMC Directive" on p.28 for details about conformity.

- **EU RoHS Directive**

This product does not contain the substances exceeding the restriction values.







# 3      Operation

---

This part explains contents to be performed before starting operation as well as commands.

## ◆Table of contents

|          |   |           |
|----------|---|-----------|
| <b>1</b> | <b>Robots that can be controlled by the controller.....</b> | <b>36</b> |
| 1-1      | Robot type.....   | 36        |
| 1-2      | Details of robots.....                                      | 36        |
| <b>2</b> | <b>Before starting operation .....</b>                      | <b>40</b> |
| 2-1      | Operation preparation flow .....                            | 40        |
| 2-2      | Setting of robot .....                                      | 40        |
| 2-3      | Origin setting .....  | 41        |
| 2-4      | Setting of position limit.....                              | 42        |
| 2-5      | Operation check.....  | 43        |
| 2-6      | Backup of data .....  | 44        |
| 2-7      | Maintenance.....  | 44        |
| <b>3</b> | <b>Creation of operation program.....</b>                   | <b>46</b> |
| <b>4</b> | <b>Commands.....</b>  | <b>48</b> |
| 4-1      | Move commands .....   | 48        |
| 4-2      | Control commands .....                                      | 71        |
| 4-3      | EtherNet/IP commands .....                                  | 74        |



# 1 Robots that can be controlled by the controller

## 1-1 Robot type

For the robot type supported by the controller, refer to Oriental Motor Website or the setup screen of the **MRC Studio** software.

## 1-2 Details of robots

### ■ Degrees of freedom and number of axes for robots

The directions that can be operated and the number of motor axes that constitutes a robot vary depending on the robot type. For all robot types, up to two motor axes can be added for end effectors.

| Robot type                  |  | Direction that can operate |   |   |    |    |    | Number of axes * |
|-----------------------------|--|----------------------------|---|---|----|----|----|------------------|
| SCARA                       | 2-link tip up-down                         | X                          | Y | Z | –  | –  | –  | 3 (5)            |
|                             | 2-link base up-down                        | X                          | Y | Z | –  | –  | –  | 3 (5)            |
|                             | 2-link tip up-down + Rz                    | X                          | Y | Z | –  | –  | Rz | 4 (6)            |
|                             | 2-link base up-down + Rz                   | X                          | Y | Z | –  | –  | Rz | 4 (6)            |
|                             | 2-link + Rz without up-down                | X                          | Y | – | –  | –  | Rz | 3 (5)            |
|                             | 2-link without up-down                     | X                          | Y | – | –  | –  | –  | 2 (4)            |
|                             | 2-link base linear motion tip up-down      | X                          | Y | Z | –  | –  | Rz | 4 (6)            |
|                             | 2-link base linear motion base up-down     | X                          | Y | Z | –  | –  | Rz | 4 (6)            |
|                             | 2-link base linear motion without up-down  | X                          | Y | – | –  | –  | Rz | 3 (5)            |
|                             | 3-link tip up-down                         | X                          | Y | Z | –  | –  | Rz | 4 (6)            |
|                             | 3-link base up-down                        | X                          | Y | Z | –  | –  | Rz | 4 (6)            |
|                             | 3-link without up-down                     | X                          | Y | – | –  | –  | Rz | 3 (5)            |
| SCARA (360-degree rotation) | 360-degree rotation 3-link base up-down    | X                          | Y | Z | –  | –  | Rz | 4 (6)            |
|                             | 360-degree rotation 3-link without up-down | X                          | Y | – | –  | –  | Rz | 3 (5)            |
| Vertically articulated      | 3-link base rotation                       | X                          | Y | Z | Rx | –  | –  | 4 (6)            |
|                             | 3-link base linear motion                  | X                          | Y | Z | Rx | –  | –  | 4 (6)            |
|                             | 3-link base rotation + Rz                  | X                          | Y | Z | Rx | –  | Rz | 5 (7)            |
|                             | 3-link base linear motion + Rz             | X                          | Y | Z | Rx | –  | Rz | 5 (7)            |
|                             | 3-link without base axis                   | –                          | Y | Z | Rx | –  | –  | 3 (5)            |
|                             | 6-axis vertically articulated Model 1      | X                          | Y | Z | Rx | Ry | Rz | 6 (8)            |
|                             | 6-axis vertically articulated Model 2      | X                          | Y | Z | Rx | Ry | Rz | 6 (8)            |



| Robot type                          |  | Direction that can operate |   |   |    |    |    | Number of axes * |
|-------------------------------------|--|----------------------------|---|---|----|----|----|------------------|
| Vertically articulated (Palletizer) | 1 parallel-linkage base rotation           | X                          | Y | Z | Rx | –  | –  | 4 (6)            |
|                                     | 1 parallel-linkage base linear motion      | X                          | Y | Z | Rx | –  | –  | 4 (6)            |
|                                     | 1 parallel-linkage base rotation + Rz      | X                          | Y | Z | Rx | –  | Rz | 5 (7)            |
|                                     | 1 parallel-linkage base linear motion + Rz | X                          | Y | Z | Rx | –  | Rz | 5 (7)            |
|                                     | 1 parallel-linkage without base axis       | –                          | Y | Z | Rx | –  | –  | 3 (5)            |
|                                     | 2 parallel-linkage base rotation           | X                          | Y | Z | –  | –  | –  | 3 (5)            |
|                                     | 2 parallel-linkage base linear motion      | X                          | Y | Z | –  | –  | –  | 3 (5)            |
|                                     | 2 parallel-linkage base rotation + Rz      | X                          | Y | Z | –  | –  | Rz | 4 (6)            |
|                                     | 2 parallel-linkage base linear motion + Rz | X                          | Y | Z | –  | –  | Rz | 4 (6)            |
|                                     | 2 parallel-linkage without base axis       | –                          | Y | Z | –  | –  | –  | 2 (4)            |
| Delta robot                         | Delta robot                                | X                          | Y | Z | –  | –  | –  | 3 (5)            |
|                                     | Delta robot + Rz                           | X                          | Y | Z | –  | –  | Rz | 4 (6)            |
| Polar/Cylindrical robot             | Polar                                      | X                          | Y | – | –  | –  | –  | 2 (4)            |
|                                     | Polar + Rz                                 | X                          | Y | – | –  | –  | Rz | 3 (5)            |
|                                     | Cylindrical                                | X                          | Y | Z | –  | –  | –  | 3 (5)            |
|                                     | Cylindrical + Rz                           | X                          | Y | Z | –  | –  | Rz | 4 (6)            |
| Cartesian                           | 2-axis (XY)                                | X                          | Y | – | –  | –  | –  | 2 (4)            |
|                                     | 2-axis (XZ)                                | X                          | – | Z | –  | –  | –  | 2 (4)            |
|                                     | 2-axis (YZ)                                | –                          | Y | Z | –  | –  | –  | 2 (4)            |
|                                     | XY + Rz                                    | X                          | Y | – | –  | –  | Rz | 3 (5)            |
|                                     | XZ + Rz                                    | X                          | – | Z | –  | –  | Rz | 3 (5)            |
|                                     | YZ + Rz                                    | –                          | Y | Z | –  | –  | Rz | 3 (5)            |
|                                     | 3-axis (XYZ)                               | X                          | Y | Z | –  | –  | –  | 3 (5)            |
|                                     | XYZ + Rz                                   | X                          | Y | Z | –  | –  | Rz | 4 (6)            |
| Cartesian (Planar surface gantry)   | Planar surface gantry 2-axis (XY)          | X                          | Y | – | –  | –  | –  | 2 (4)            |
|                                     | Planar surface gantry 2-axis (XZ)          | X                          | – | Z | –  | –  | –  | 2 (4)            |
|                                     | Planar surface gantry 2-axis (YZ)          | –                          | Y | Z | –  | –  | –  | 2 (4)            |
|                                     | Planar surface gantry 2-axis (XY) + Rz     | X                          | Y | – | –  | –  | Rz | 3 (5)            |
|                                     | Planar surface gantry 2-axis (XZ) + Rz     | X                          | – | Z | –  | –  | Rz | 3 (5)            |
|                                     | Planar surface gantry 2-axis (YZ) + Rz     | –                          | Y | Z | –  | –  | Rz | 3 (5)            |
|                                     | Planar surface gantry 3-axis (XYZ)         | X                          | Y | Z | –  | –  | –  | 3 (5)            |
|                                     | Planar surface gantry 3-axis (XYZ) + Rz    | X                          | Y | Z | –  | –  | Rz | 4 (6)            |
| Small Robots <b>OVR</b>             | 4-axis vertically articulated              | X                          | Y | Z | –  | –  | Rz | 4 (6)            |
|                                     | 5-axis vertically articulated              | X                          | Y | Z | Rx | –  | Rz | 5 (7)            |
|                                     | 6-axis vertically articulated              | X                          | Y | Z | Rx | Ry | Rz | 6 (8)            |
|                                     | 3-axis SCARA                               | X                          | Y | – | –  | –  | Rz | 3 (5)            |
|                                     | 3-axis Cartesian                           | X                          | Y | Z | –  | –  | –  | 3 (5)            |
| Motion System Master                | <b>MSE3039K1-V</b>                         | X                          | Y | Z | –  | –  | –  | 3 (5)            |
|                                     | <b>MSE3039K1-V</b> + Rz                    | X                          | Y | Z | –  | –  | Rz | 4 (6)            |

\* The value in parentheses ( ) indicates the number of axes when two axes of end effectors are used.



## ■ Coordinate system


The controller controls a robot in the following coordinate systems.

### ● Base coordinate system

This is Cartesian coordinates with the base (installation surface) of a robot as a reference. Based on the origin of the base, the tool coordinate system and the TCP (Tool Center Point \*) are calculated in accordance with information about the link length and the axis position.

The origin of the base coordinate system cannot be changed.

\* The center point when controlling a tool at the tip of a robot

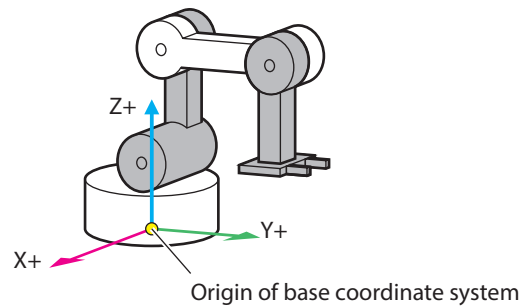


### ● User coordinate system (World coordinate system)

This is Cartesian coordinates to operate the TCP to set a desired position as the origin. When executing return-to-origin operation after setting the origin, the TCP moves to the origin of the user coordinate system.

Three user coordinate systems (user coordinate system 1 to user coordinate system 3) can be set to the **MRC01** controller and switched according to the operation.

When the setup of the robot is completed, the user coordinate system 1 is applied.


The origin is the same as the origin of the base coordinate system at this time.

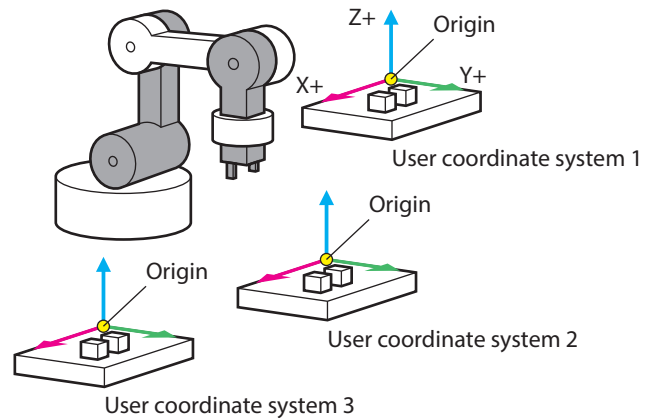


### ● Tool coordinate system

This is Cartesian coordinates with a tool attached to the tip of a robot as the origin. The position having offset by the tool offset from the origin is the TCP.


The coordinates in the tool coordinate system include  $T_x$ ,  $T_y$ , and  $T_z$ , which represent the direction the tool moves. If  $R_x$ ,  $R_y$  and  $R_z$  are set, the tool rotates around the TCP.  $R_x$  represents the rotation angle around the  $T_x$  axis,  $R_y$  around the  $T_y$  axis, and  $R_z$  around the  $T_z$  axis. For the directions in which the robot can be operated, refer to "Degrees of freedom and number of axes for robots" on p.36.

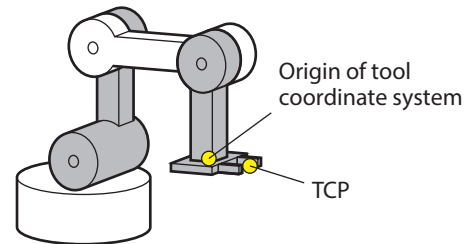


- $T_x$ ,  $T_y$ ,  $T_z$

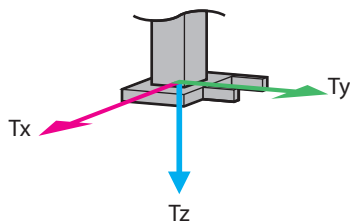


- $R_x+$ ,  $R_x-$

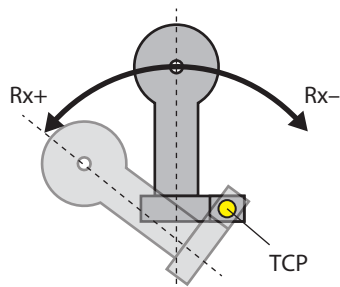

- $R_y+$ ,  $R_y-$

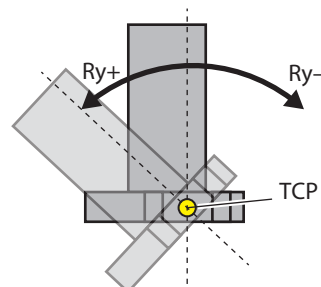

- $R_z+$ ,  $R_z-$

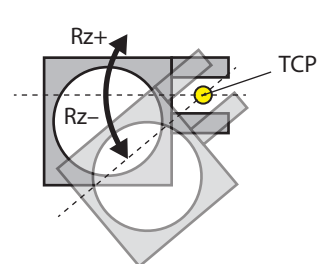



## ■ Definition of right-handed system / left-handed system


For a SCARA robot and a 6-axis vertically articulated robot, the posture of the robot is controlled by the right-handed system or the left-handed system.

### ● SCARA robot

The right-handed system and the left-handed system used in a SCARA robot are defined as shown in the figures. Since the direction in which the elbow joint is bent changes depending on the selected handed system, select the handed system so that the robot arm does not interfere with the peripheral equipment.


#### Right-handed system

This refers to a state where the axis of the elbow joint is bent to the left.

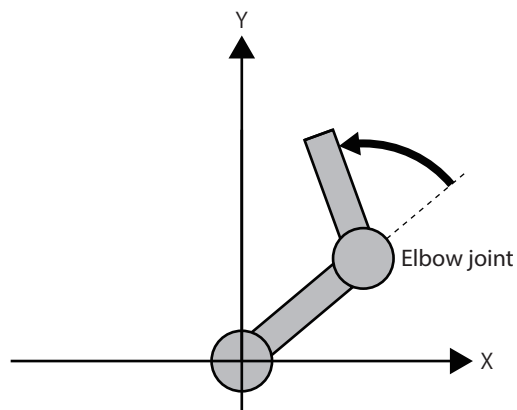

#### Left-handed system

This refers to a state where the axis of the elbow joint is bent to the right.

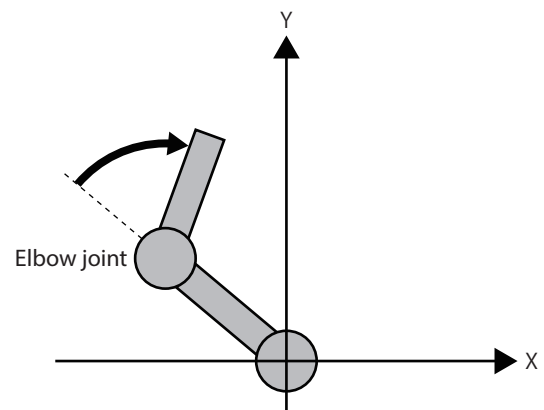


### ● 6-Axis vertically articulated robot


The right-handed system and the left-handed system used in a 6-axis vertically articulated robot are defined as shown in the figures.

Since the direction in which the joint of the fifth axis is bent changes depending on the posture of the robot, select the handed system according to the posture of the robot. If the handed system is not selected properly, the robot may cause unexpected movement.


#### Right-handed system of model 1

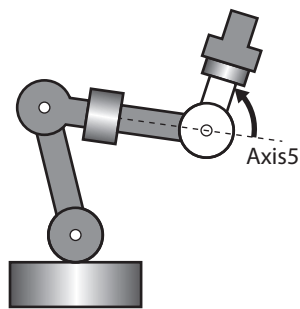


#### Left-handed system of model 1

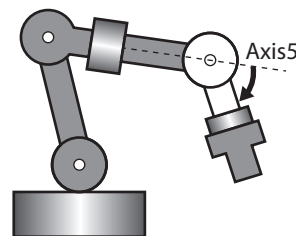

#### Right-handed system of model 2

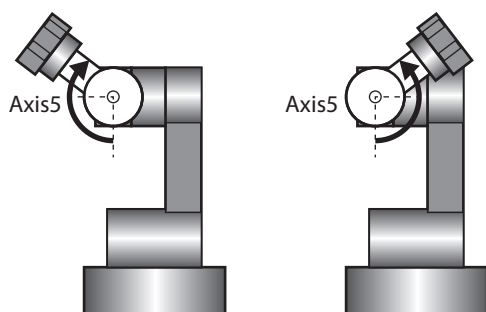

#### Left-handed system of model 2

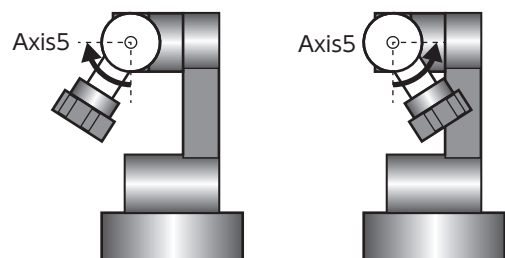




## 2 Before starting operation

### 2-1 Operation preparation flow


Use the **MRC Studio** software to prepare for operation.

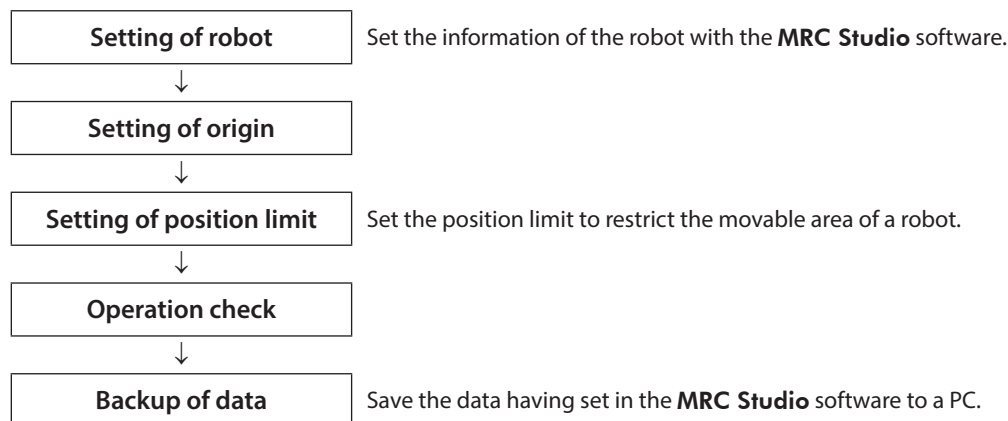

### 2-2 Setting of robot

Set the information of the robot with the **MRC Studio** software.

1. Start the **MRC Studio** software.
2. Click [COM port] to select "**MRC01**."
3. Click [Setup] on the start screen.



4. Set the robot type and the mechanism information according to the instructions on the screen.



To change the robot type, perform the setup again from the start screen. Except for the robot type, you can change using [Re-setup] under the [Maintenance] menu even after the setup is completed.




## 2-3 Origin setting

When the setup of the robot is completed, the origin of the user coordinate system 1 is applied. If the origin of the user coordinate system is set, the origin of the robot can be changed to a desired position. When high-speed return-to-origin operation is performed with a robot other than a Cartesian robot, set the origin of the user coordinate system. Otherwise, high-speed return-to-origin operation cannot be executed. Up to three user coordinate systems can be set. When using multiple user coordinate systems, set the origin for each.


**Note** Before operating a robot, check the condition of the surrounding area to ensure safety.

1. Click the [Communication] icon on the toolbar to set communication to an ON state (online state).  
Communication is started with the controller.
2. Click the [Teaching] icon on the toolbar.  
The teaching screen appears.
3. Using JOG operation or inching operation, operate the robot until the TCP reaches a position where the origin is desired to set.

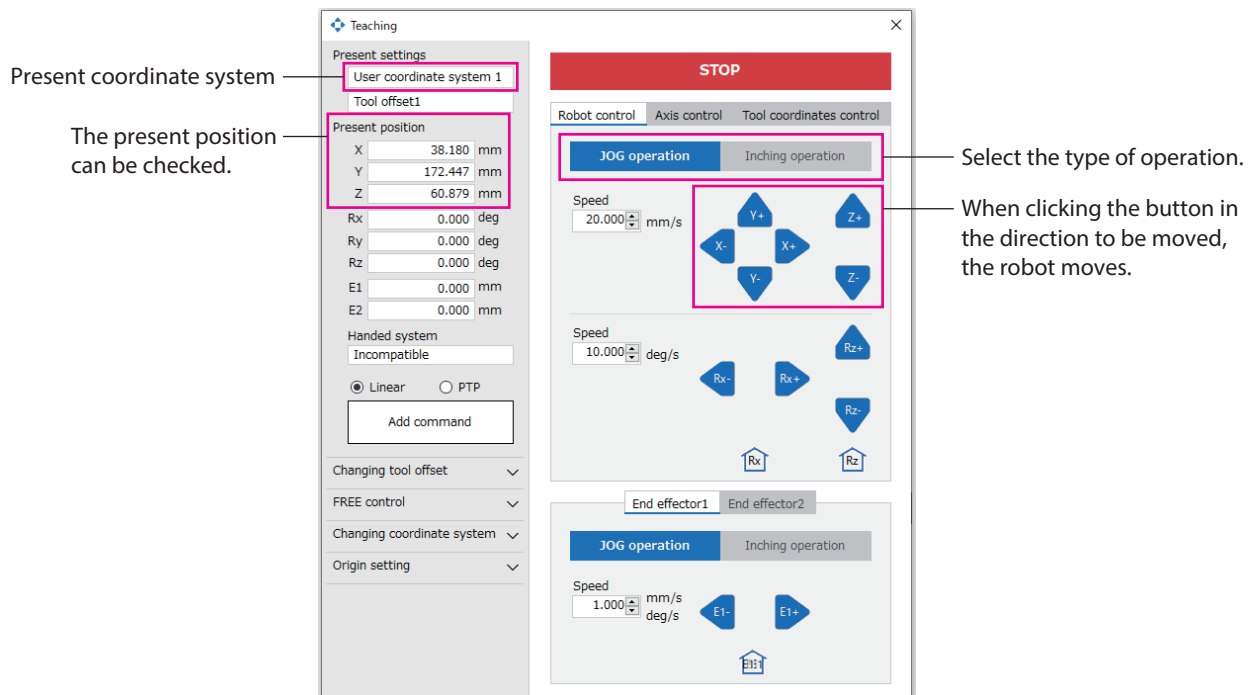

**Note** Just in case the origin is changed by mistake or the controller is replaced due to maintenance, keep the information of the present position that is desired to set as the origin.

4. Check that the present coordinate system is one of user coordinate system 1 to user coordinate system 3.  
The present coordinate system can be changed by "Changing coordinate system."
5. Click [Origin setting], and then click [Set TCP to origin].  
The origin is set and the values of X, Y, and Z at the present position change to zero.

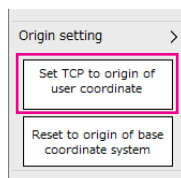

- memo**
- The origin is written to the non-volatile memory. The non-volatile memory can be rewritten approximately 100,000 times.
  - The origin having set can be checked using the origin offsets of the robot information monitor.
  - The origin can be set only when the present coordinate system is the user coordinate system.



## 2-4 Setting of position limit

It is recommended to set the position limit in order to prevent danger such as collision. The position limit can be set for the TCP or each axis.  
This section explains how to set the position limit of the TCP.

**Note** This is not a safety function that can apply to protection measures.

### ■ Setting of stop mode


The stop mode when the TCP reaches the position limit is set here.

1. Click [Parameter setting] on the menu.
2. Click [Protective function setting] > [Position limit] on the parameter group.
3. Set the stop mode of the robot with the "TCP position limit operation setting" parameter.  
In this case, set "Stop with alarm."

| Position limit |   |                 |
|----------------|---|-----------------|
| 1              | TCP position limit operation setting        | Stop with alarm |
| 2              | TCP position limit target coordinate system | Limit disable   |
|                |   | Stop            |
| 3              | TCP position limit X+ [mm]                  | Stop with alarm |

### ■ Setting of movable area

Set the movable area of the TCP.

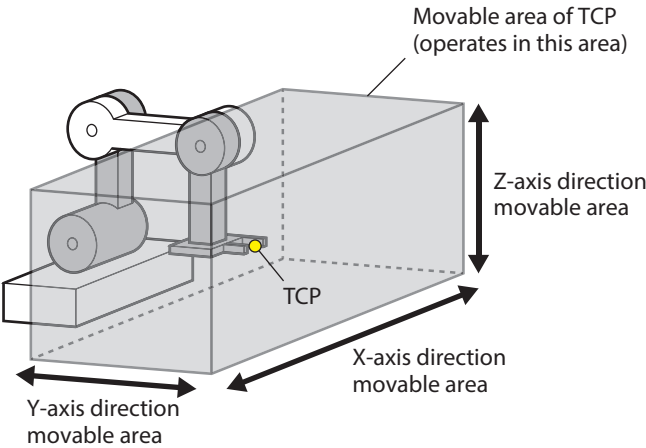

1. Click the [Teaching] icon on the toolbar.  
The teaching screen appears.
2. Using JOG operation or inching operation, move the TCP to the maximum position in the X-axis direction.
3. Check the value of the present position X, and set to the "TCP position limit X+" parameter.
4. Using JOG operation or inching operation, move the TCP to the minimum position in the X-axis direction.
5. Check the value of the present position X, and set to the "TCP position limit X-" parameter.
6. As in Steps 2 through 5, set the movable area of Y axis to the "TCP position limit Y" parameter and that of Z axis to the "TCP position limit Z" parameter.
7. Click the [Writing] icon on the toolbar.  
The parameters having set are written to the controller.

**memo** The position limit can also be set for each axis and an end effector. Set the "Axis position limit" parameter as necessary.



2-5

Operation check

Check if the items having set so far can operate properly.


Note

Before operating a robot, check the condition of the surrounding area to ensure safety.

■ Check of origin

Use the return-to-origin command to check that operation until the origin of the user coordinate system having set is performed.

1. Click [Operation program] on the menu.
2. Click [New] for the program number used.  
The operation program edit screen appears.
3. Click [Return-to-origin] of the move command.  
The return-to-origin command is added to the sequence.

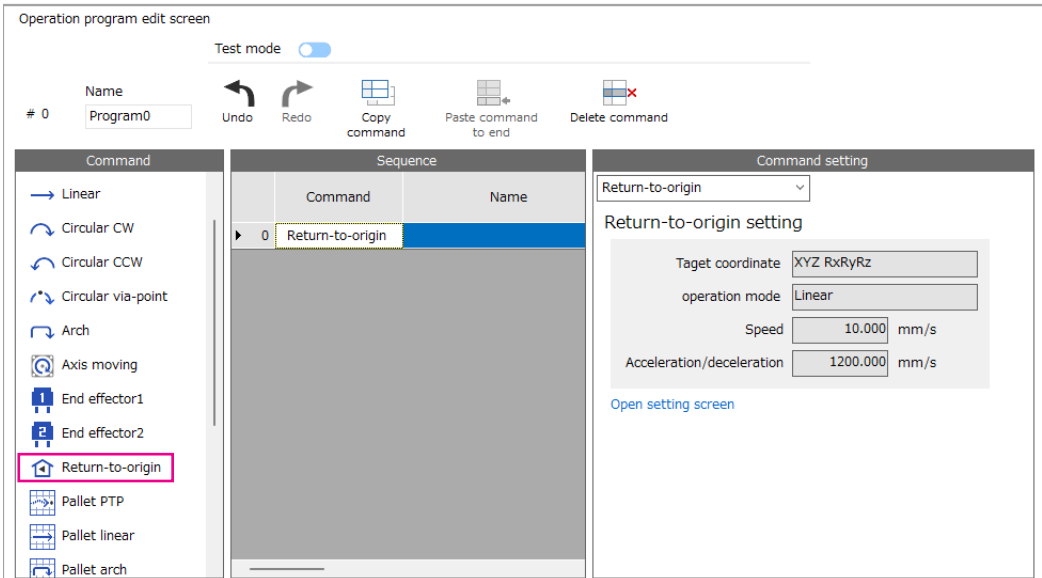


4. Set the test mode to ON.
5. Click [Step execution] of the test mode.  
High-speed return-to-origin operation is started.
6. When the robot stops, make sure that the values of X, Y, and Z of the present position have changed to 0.  
The present position can be checked on the teaching screen.



## ■ Check of TCP position limit

Operate to the TCP position limit and check that an alarm is generated.

1. Click the [Teaching] icon on the toolbar.  
The teaching screen appears.
2. Operate using JOG operation or inching operation.  
If the TCP position limit having set is detected, an alarm will be generated.
3. Click [Monitor] > [Alarm monitor] on the menu.  
The alarm monitor screen appears.
4. Check "C3: TCP software overtravel" is shown on the controller of the present alarm.

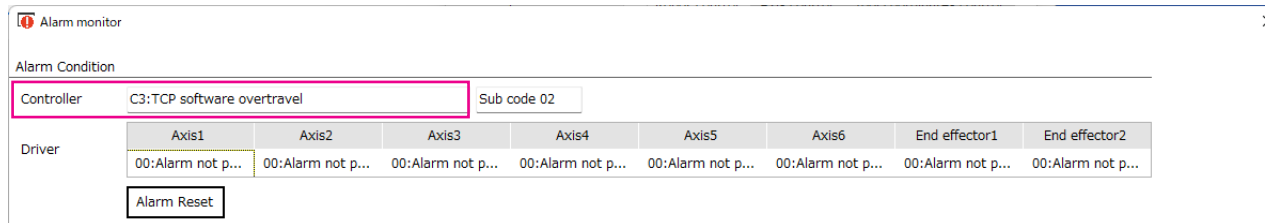

5. Click [Alarm reset].  
After the alarm is reset, escape from the position limit using JOG operation or inching operation.

## 2-6 Backup of data

Save the data having set in the **MRC Studio** software to a PC.

Backing up the data is recommended in case the controller is replaced for maintenance or the controller is damaged.

1. Click [Save As] under the [File] menu.
2. Input a file name and click [Save].  
A desired file name and storage destination can be used. The saving format is ".mrcx."

## 2-7 Maintenance

When the controller, driver, or motor is replaced, the data stored as backup can be applied to use.

### ■ When the controller is replaced

1. Replace the controller.
2. Turn on the power supply of the controller.
3. Open the backup data using the **MRC Studio** software.
  - 1) Click [Open] on the start screen.
  - 2) Select the mrcx file stored, and click [Open].
4. Click [Writing all data (including robot & origin of user coordinate system)] under the [Maintenance] menu.  
The backup data is written to the controller.



When the message "Turn on the power again" appears, turn off the power supply of the controller and then turn on it again.

5. Click [Monitor] > [Robot information monitor] on the menu.  
The robot information monitor screen appears.



- 6. Check the robot information.
  - 1) Set the [Communication] icon to ON.
  - 2) Check that the robot type, the number of axes, and enabled coordinates match the robot being connected.

Robot type 

Vertically articulated

3-link base rotation + Rz

Number of motion axes 

5

 Number of End-effector axes 

2

 Number of total axes 

7

Enabled coordinates 

X

Y

Z

Rx

Ry

Rz

E1

E2

- 3) Click [Monitor] > [Status monitor] on the menu.  
The status monitor screen appears.
- 4) Check that the origin offsets are the coordinates set in “2-3 Origin setting” on p.41.  
If the origin offsets are not correct, refer to “When the origin information is not stored in the mrcx file” in the next section to set the origin.

Coordinate system

Present coordinate system 

User coordinate system 1

Origin offsets (offset from the origin of base coordinate system to the origin of user coordinate system)

|                          | X         | Y          | Z         |
|--------------------------|-----------|------------|-----------|
| User coordinate system 1 | 38.180 mm | 172.447 mm | 60.879 mm |
| User coordinate system 2 | 0.000 mm  | 0.000 mm   | 0.000 mm  |
| User coordinate system 3 | 0.000 mm  | 0.000 mm   | 0.000 mm  |

● When the origin information is not stored in the mrcx file

- 1. Click [Origin setting of user coordinate system] under the [Maintenance] menu.
- 2. Input the position of the origin kept in “2-3 Origin setting” on p.41.
- 3. Click [Set to the controller].
- 4. Turn on the power supply of the controller again.

■ When a motor or a driver is replaced

- 1. Replace a motor or a driver.
- 2. Turn on the power supplies of the controller and the driver.
- 3. Open the backup data in the **MRC Studio** software.
  - 1) Click [Open] on the start screen.
  - 2) Select the mrcx file stored, and click [Open].
- 4. Click [Re-setup] under the [Maintenance] menu.  
When the setup wizard appears, perform the “Axis home setting.”




### 3 Creation of operation program

Create operation programs in the **MRC Studio** software.  
Up to 64 operation programs can be created. A single operation program can array up to 128 commands.  
The created operation program is executed using input signals or via EtherNet/IP.

**memo** The more operating programs and commands are, the longer it takes for the data in the **MRC Studio** software to read and write.




#### ■ Operation program edit screen

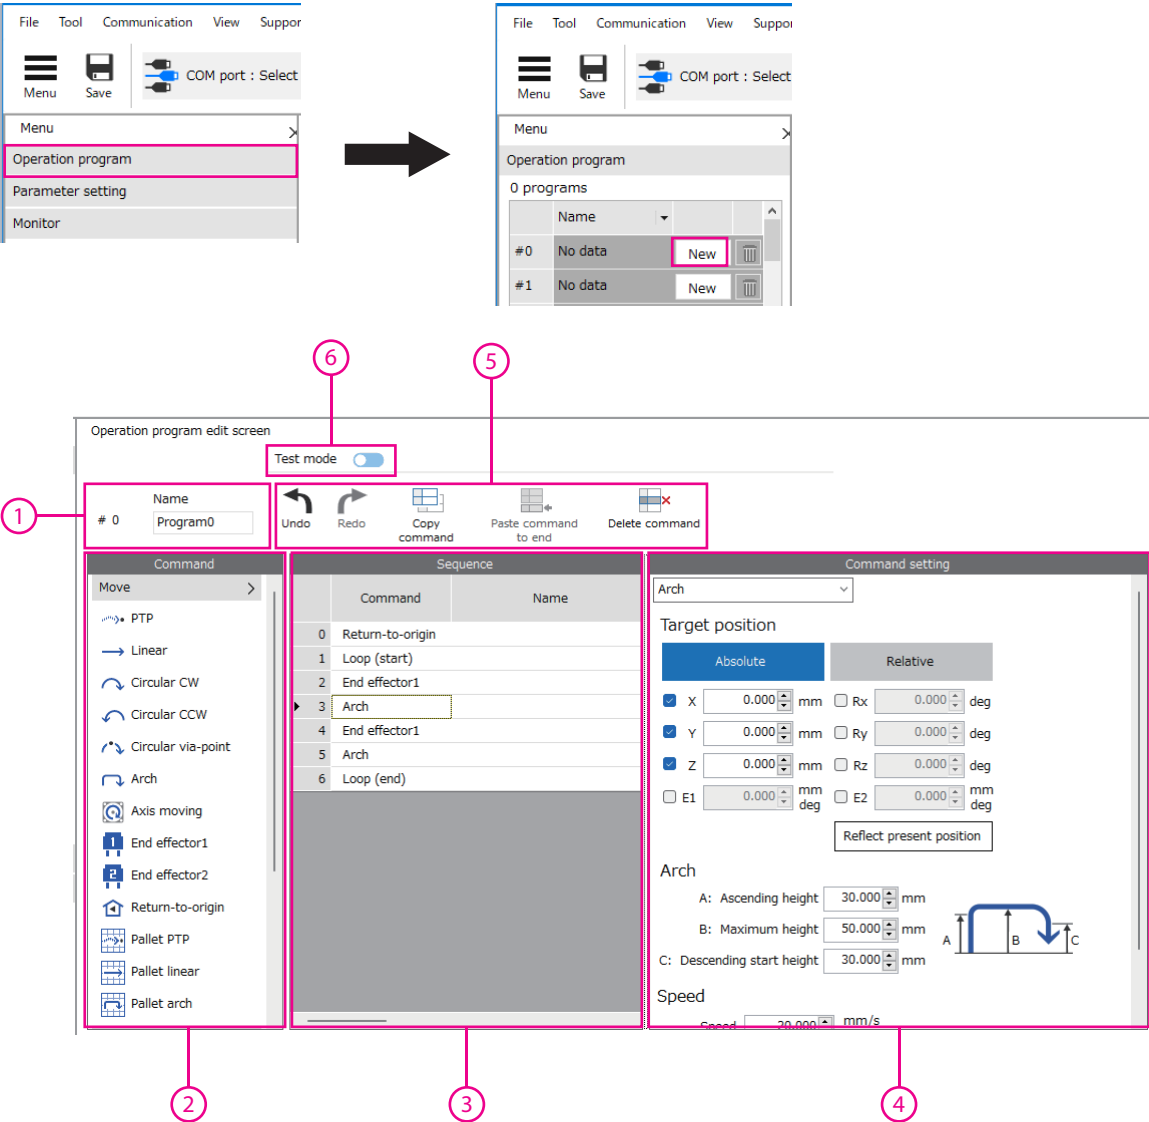Clicking [Operation program] on the menu appears operation programs. Clicking [New] on the operation program appears the operation program edit screen.



|   |   |
|---|---|
| 1 | This indicates the program number and the program name being edited.  |
| 2 | These are commands to control a robot. Commands include the move command and the control command. Clicking a command adds it to the sequence.   |
| 3 | Arrays the commands in the order in which they will be executed. The commands are executed in order starting from 0. Dragging and dropping the number of the command can change the order of the commands. Up to 128 commands can be arrayed in a single program. |
| 4 | Sets relevant parameters such as the target position and the target speed for each command.   |



|   |  |   |
|---|--|---|
| 5 | These are icons used to edit the operation programs.   |   |
| 6 | <p>The operation programs having set can be checked. Using the graphic monitor can check the movement on the 3D simulator.</p> <p>Setting the test mode to ON switches the icons used to edit the operation programs to the following.</p> <div><div>Test mode <input checked="" type="checkbox"/></div><div><div>250mm/s max.</div><div>TCP speed limit</div></div><div><div>-</div><div>Operation speed rate 100 %</div><div>+</div></div><div><div></div><div>Sequential execution</div></div><div><div></div><div>Step execution</div></div><div><div></div><div>Stop</div></div></div> |   |
|   | Operation speed rate   | Sets the operating speed rate when the command is executed in the test mode. Set the ratio to the speed on the command setting. The setting range is 10 to 200 %.           |
|   | Sequential execution   | Executes sequentially from the selected command to the last command.<br>If sequential execution is started from a command after the loop (start), the loop is not executed. |
|   | Step execution   | Executes only the selected commands.  |
|   | Stop   | Stops the command being executed.   |




# 4 Commands

## 4-1 Move commands

### ■ PTP

This is a command for PTP operation. Using PTP operation, the robot can move faster than linear interpolation operation since positioning of each motor is performed at the shortest distance from the present position to the target position. For a SCARA robot and a 6-axis vertically articulated robot, the handed system can be switched between the right-handed system and the left-handed system.

### ● Example of trajectory

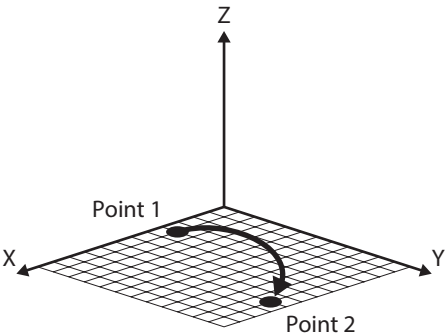

### ● Command setting

This is the command being edited.  
Changing this command name will also change the command selected in the sequence.  
Note this point.

Command setting

PTP

Target position

Specify numerically

Point data

Absolute

Relative

☒ X

0.000

mm

☐ Rx

0.000

deg

☒ Y

0.000

mm

☐ Ry

0.000

deg

☒ Z

0.000

mm

☐ Rz

0.000

deg

☐ E1

0.000

mm

☐ E2

0.000

mm

deg

Reflect present position

Speed

Speed

20.000

deg/s

Acceleration

1200.000

deg/s^2

Deceleration

1200.000

deg/s^2

Right-handed/Left-handed system

☒ No change from present handed system

☐ Right-handed system

☐ Left-handed system

☐ Change oppositely from present handed system

Method to specify the position

Coordinates or travel amount

• Checking a box enables a value.

• "E1" and "E2" represent an end effector.

Handed system selection



| MRC Studio<br>Command setting            | Screen indication                  | Setting range   | Initial value                           |
|--|------------------------------------|---|---|
| Target position                          | Method to specify the position     | <ul style="list-style-type: none"> <li>Specify numerically</li> <li>Point data</li> </ul>   | Specify numerically                     |
|  | Point data number*1                | 0 to 15   | 0                                       |
|  | X                                  | –5,000.000 to 5,000.000 mm  | 0                                       |
|  | Y                                  | –5,000.000 to 5,000.000 mm  | 0                                       |
|  | Z                                  | –5,000.000 to 5,000.000 mm  | 0                                       |
|  | E1                                 | –5,000.000 to 5,000.000 mm or<br>–5,000.000 to 5,000.000 deg  | 0                                       |
|  | E2                                 | –5,000.000 to 5,000.000 mm or<br>–5,000.000 to 5,000.000 deg  | 0                                       |
|  | Rx                                 | –270.000 to 270.000 deg   | 0                                       |
|  | Ry                                 | –90.000 to 90.000 deg   | 0                                       |
|  | Rz                                 | –270.000 to 270.000 deg   | 0                                       |
| Speed                                    | Speed                              | 0.010 to 2,000.000 deg/s  | 20.000                                  |
|  | Acceleration                       | 0.001 to 30,000.000 deg/s <sup>2</sup>  | 1,200.000                               |
|  | Deceleration                       | 0.001 to 30,000.000 deg/s <sup>2</sup>  | 1,200.000                               |
| Right-handed/<br>Left-handed<br>system*2 | Handed system<br>selection         | <ul style="list-style-type: none"> <li>No change from present handed system</li> <li>Right-handed system</li> <li>Left-handed system</li> <li>Change oppositely from present handed system</li> </ul> | No change from present<br>handed system |
| 1st Link rotation<br>angle setting*3     | 1st Link rotation<br>angle setting | <ul style="list-style-type: none"> <li>less than –180 deg</li> <li>–180 deg to +180 deg</li> <li>+180 deg or over</li> </ul>  | –180 deg to +180 deg                    |

\*1 It is displayed only when “Point data” is selected in the method to specify the position.

\*2 It is enabled for a SCARA robot and a 6-axis vertically articulated robot. Set if the handed system is desired to change for each command when repeating the PTP commands in a single operation program.

\*3 It is enabled in a SCARA (360-degree rotation) robot. Within the 1st arm's movable range of the robot (–360 to +360 degrees), set the rotation angle of the robot with respect to the target position.




- For “Speed” in PTP operation, set the speed of the axis that has the largest travel amount among the axes of the entire robot. In PTP operation, each axis operates according to the speed of the axis that has the largest travel amount in the entire robot. Therefore, the robot may operate faster in PTP operation than in linear interpolation operation or circular interpolation operation, where the speed of the TCP is set.
- If the same target position is set multiple times, selecting “Point data” in the method to specify the position can easily set the target position.
- When setting the target position using “Point data,” set the “Point data” parameter in advance. Note that the position information other than the end effector (E1, E2) can be set in the “Point data” parameter.



■ Linear

This is a command for linear interpolation operation. Linear interpolation operation is performed from the present position to the target position.

● Example of trajectory

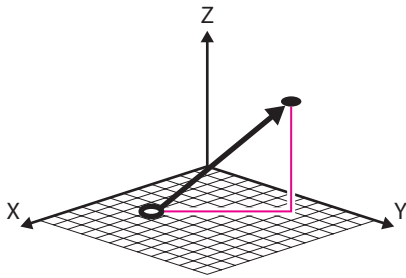

● Command setting

This is the command being edited.  
Changing this command name will also change the command selected in the sequence.  
Note this point.

Command setting

Linear

Target position

Specify numerically Point data

Absolute Relative

☒ X 0.000 mm ☐ Rx 0.000 deg

☒ Y 0.000 mm ☐ Ry 0.000 deg

☒ Z 0.000 mm ☐ Rz 0.000 deg

☐ E1 0.000 mm deg ☐ E2 0.000 mm deg

Reflect present position

Speed

Speed 20.000 mm/s

Acceleration 1200.000 mm/s<sup>2</sup>

Deceleration 1200.000 mm/s<sup>2</sup>

Method to specify the position

Coordinates or travel amount

- Checking a box enables a value.
- "E1" and "E2" represent an end effector.

| MRC Studio<br>Command setting | Screen indication              | Setting range  | Initial value       |
|-------------------------------|--------------------------------|--|---------------------|
| Target position               | Method to specify the position | • Specify numerically<br>• Point data                        | Specify numerically |
|                               | Point data number*             | 0 to 15  | 0                   |
|                               | X                              | −5,000.000 to 5,000.000 mm                                   | 0                   |
|                               | Y                              | −5,000.000 to 5,000.000 mm                                   | 0                   |
|                               | Z                              | −5,000.000 to 5,000.000 mm                                   | 0                   |
|                               | E1                             | −5,000.000 to 5,000.000 mm or<br>−5,000.000 to 5,000.000 deg | 0                   |
|                               | E2                             | −5,000.000 to 5,000.000 mm or<br>−5,000.000 to 5,000.000 deg | 0                   |
|                               | Rx                             | −270.000 to 270.000 deg                                      | 0                   |
|                               | Ry                             | −90.000 to 90.000 deg  | 0                   |
|                               | Rz                             | −270.000 to 270.000 deg                                      | 0                   |
| Speed                         | Speed                          | 0.010 to 2,000.000 mm/s                                      | 20.000              |
|                               | Acceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup>                        | 1,200.000           |
|                               | Deceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup>                        | 1,200.000           |

\* It is displayed only when "Point data" is selected in the method to specify the position.






- If multiple coordinates are set at the target position, the set speed may differ from the actual speed because the speed is automatically adjusted to the axis that takes the longest time to move.
- If the same target position is set multiple times, selecting "Point data" in the method to specify the position can easily set the target position.
- When setting the target position using "Point data," set the "Point data" parameter in advance. Note that the position information other than the end effector (E1, E2) can be set in the "Point data" parameter.

## ■ Circular CW, circular CCW, circular via-point

These are commands for circular interpolation operation. When the X and Y coordinates are set, circular interpolation operation is performed from the present position to the target position. When the X, Y and Z coordinates are set, helical interpolation operation is performed from the present position to the target position. The operation of one revolution (360 degrees) can be performed only when "Center position setting" is selected in the setting method of the circular arc. Operation exceeding one revolution (360°) is not available.

### ● Example of trajectory

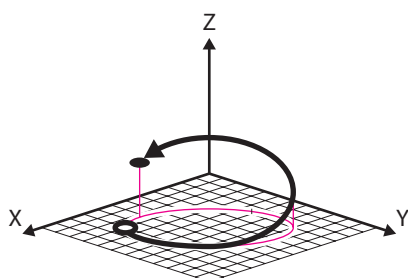

### ● Command setting

This is the command being edited.

Changing this command name will also change the command selected in the sequence. Note this point.

Method to specify the position

Coordinates or travel amount

- Checking a box enables a value.
- "E1" and "E2" represent an end effector.

Circular arc setting method

The screen on the left is when "Radius setting" is selected.

The following screen is shown when "Center position setting" is selected or when using the circular via-point command.

#### • Center position setting

You cannot input on this screen. Click "Open setting screen" and set the "Circular center position radius error tolerance" parameter.

#### • Circular via-point command



| MRC Studio<br>Command setting | Screen indication              | Setting range   | Initial value                    |
|-------------------------------|--------------------------------|---|----------------------------------|
| Target position               | Method to specify the position | <ul style="list-style-type: none"> <li>• Absolute</li> <li>• Relative</li> </ul>  | Absolute                         |
|                               | X                              | −5,000.000 to 5,000.000 mm  | 0                                |
|                               | Y                              | −5,000.000 to 5,000.000 mm  | 0                                |
|                               | Z                              | −5,000.000 to 5,000.000 mm  | 0                                |
|                               | E1                             | −5,000.000 to 5,000.000 mm or<br>−5,000.000 to 5,000.000 deg  | 0                                |
|                               | E2                             | −5,000.000 to 5,000.000 mm or<br>−5,000.000 to 5,000.000 deg  | 0                                |
|                               | Rx                             | −270.000 to 270.000 deg   | 0                                |
|                               | Ry                             | −90.000 to 90.000 deg   | 0                                |
|                               | Rz                             | −270.000 to 270.000 deg   | 0                                |
| Circular arc                  | Circular arc setting method    | <ul style="list-style-type: none"> <li>• Radius setting (180° or less)</li> <li>• Radius setting (180° or more)</li> <li>• Center position setting</li> </ul> | Radius setting<br>(180° or less) |
|                               | Radius                         | 1.000 to 5,000.000 mm   | 50.000                           |
|                               | X                              | −5,000.000 to 5,000.000 mm  | 50.000                           |
|                               | Y                              | −5,000.000 to 5,000.000 mm  | 50.000                           |
|                               | Radius error tolerance         | 0 to 500.000 mm   | 5.000                            |
| Speed                         | Speed                          | 0.010 to 2,000.000 mm/s   | 20.000                           |
|                               | Acceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup>   | 1,200.000                        |
|                               | Deceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup>   | 1,200.000                        |




If multiple coordinates are set at the target position, the set speed may differ from the actual speed because the speed is automatically adjusted to the axis that takes the longest time to move.

### ● Circular arc setting method

#### “Radius setting”


There are two types of circles with the same radius passing through the present position and the target position.

- When setting to 180° or less for radius setting: Passes through the trajectory of the green arrow.
- When setting to 180° or more for radius setting: Passes through the trajectory of the blue arrow.

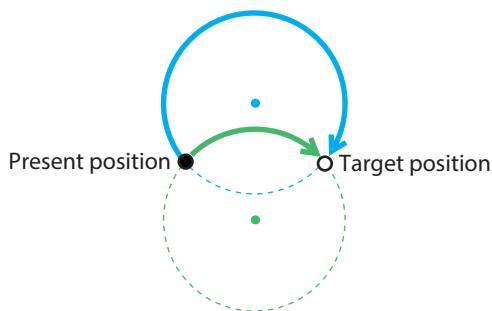


Set a value to “Radius” so that a value of twice the radius is equal to or greater than the linear distance between the present position and the target position. If this condition is not satisfied, or if the present position is equal to the target position, operation will not start and information of Operation start error will be generated.

- Operation can be started

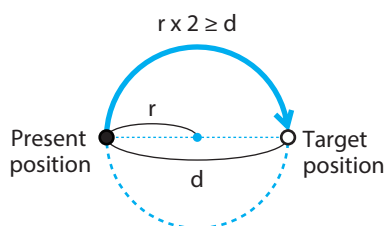


- Operation cannot be started

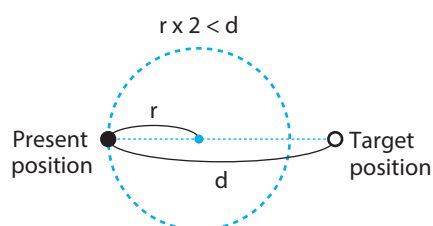




### "Center position setting"

Set relative coordinates from the present position to the target position to "X" and "Y".  
In the figure, X is 100 and Y is 50.

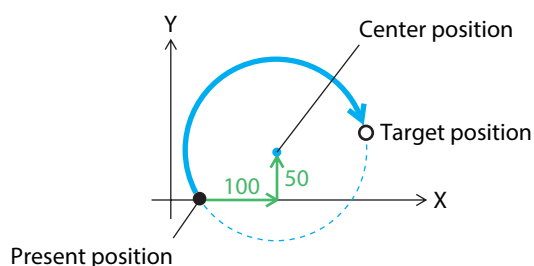

The radius of the circular arc is calculated from the distance A between the center position and the present position, and the distance B between the center position and the target position.

If A and B are equal, operation is performed in a circular arc trajectory with the specified circular arc as a center.

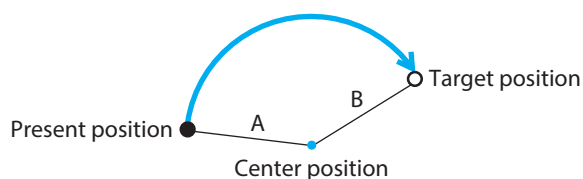


If A and B are different, operation is performed in a circular arc trajectory with the radius that is the average value of A and B.

If the absolute value of the difference between A and B exceeds the "Radius error tolerance," operation will not be started and information of Operation start error will be generated.


- Operation can be started

$$|A-B| \leq \text{Radius error tolerance}$$

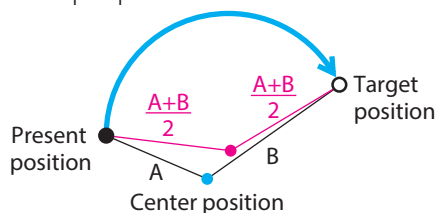

- Operation cannot be started


$$|A-B| > \text{Radius error tolerance}$$

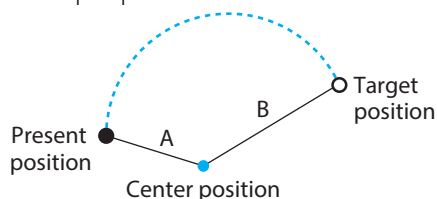

### Circular via-point command

Operation is performed following a circular arc trajectory passing through the via point.



When the target position is specified to "Absolute," input the absolute position of the via point to "X" and "Y." When it is specified to "Relative," input the relative position of the via point to "X" and "Y." The operating direction is determined depending on the position of the via point.

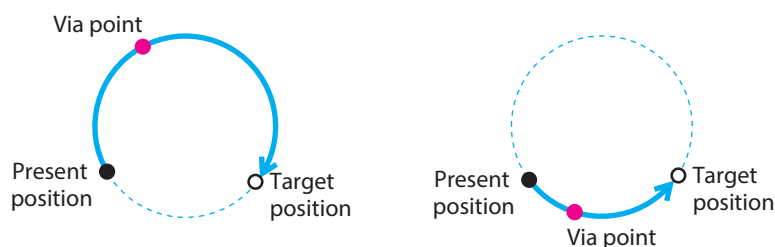



When the radius of the circular arc connecting the present position, via point, and target position is larger than the upper limit value (2,000 mm), or when the present position, via point, and target position are on the same straight line, operation is not started and information of Operation start error is generated.


- Operation can be started
- Operation cannot be started

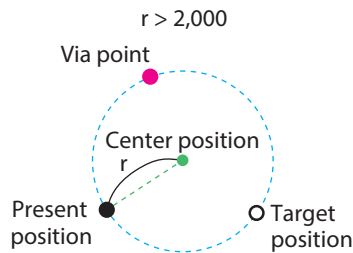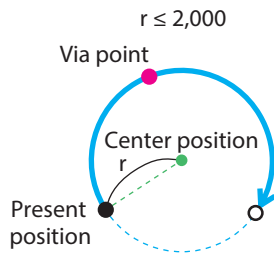

## ■ Arch

This is a command for arch interpolation operation. Pick & place operation can be performed using only the arch command since a series of motion, which is starting from ascending, moving in horizontal, and to descending, can be performed without slowing the speed down.

### ● Example of trajectory

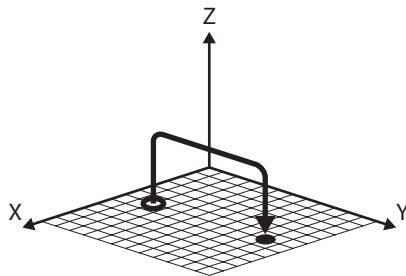

### ● Command setting

This is the command being edited.

Changing this command name will also change the command selected in the sequence.  
Note this point.

Command setting

Arch

Target position

Specify numerically | Point data

Absolute | Relative

☒ X 0.000 mm ☐ Rx 0.000 deg

☒ Y 0.000 mm ☐ Ry 0.000 deg

☒ Z 0.000 mm ☐ Rz 0.000 deg

☐ E1 0.000 mm deg ☐ E2 0.000 mm deg

Reflect present position

Arch

A: Ascending height 30.000 mm

B: Maximum height 50.000 mm

C: Descending start height 30.000 mm

Speed

Speed 20.000 mm/s

Acceleration 1200.000 mm/s<sup>2</sup>

Deceleration 1200.000 mm/s<sup>2</sup>

Method to specify the position

Coordinates or travel amount

- Checking a box enables a value.
- "E1" and "E2" represent an end effector.



| MRC Studio<br>Command setting | Screen indication              | Setting range   | Initial value       |
|-------------------------------|--------------------------------|---|---------------------|
| Target position               | Method to specify the position | <ul style="list-style-type: none"> <li>Specify numerically</li> <li>Point data</li> </ul> | Specify numerically |
|                               | Point data number*             | 0 to 15   | 0                   |
|                               | X                              | –5,000.000 to 5,000.000 mm  | 0                   |
|                               | Y                              | –5,000.000 to 5,000.000 mm  | 0                   |
|                               | Z                              | –5,000.000 to 5,000.000 mm  | 0                   |
|                               | E1                             | –5,000.000 to 5,000.000 mm or<br>–5,000.000 to 5,000.000 deg                              | 0                   |
|                               | E2                             | –5,000.000 to 5,000.000 mm or<br>–5,000.000 to 5,000.000 deg                              | 0                   |
|                               | Rx                             | –270.000 to 270.000 deg   | 0                   |
|                               | Ry                             | –90.000 to 90.000 deg   | 0                   |
|                               | Rz                             | –270.000 to 270.000 deg   | 0                   |
| Arch                          | A: Ascending height            | –5,000.000 to 5,000.000 mm  | 30.000              |
|                               | B: Maximum height              | –5,000.000 to 5,000.000 mm  | 50.000              |
|                               | C: Descending start height     | –5,000.000 to 5,000.000 mm  | 30.000              |
| Speed                         | Speed                          | 0.010 to 2,000.000 mm/s   | 20.000              |
|                               | Acceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup>   | 1,200.000           |
|                               | Deceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup>   | 1,200.000           |

\* It is displayed only when "Point data" is selected in the method to specify the position.



- If multiple coordinates are set at the target position, the set speed may differ from the actual speed because the speed is automatically adjusted to the axis that takes the longest time to move.
- If the same target position is set multiple times, selecting "Point data" in the method to specify the position can easily set the target position.
- When setting the target position using "Point data," set the "Point data" parameter in advance. Note that the position information other than the end effector (E1, E2) can be set in the "Point data" parameter.




### ● Setting of arch


Set values with reference to the present position to "A: Ascending height," "B: Maximum height," and "C: Descending start height" of the arch. Setting these items will determine the trajectory of the arch based on the distance between the present position and the target position.

If the distance between the present position and the target position is less than the sum of the arch radius at ascending and that at descending, the target position will be exceeded. Therefore, "A: Ascending height" and "C: Descending start height" are automatically corrected so that the arch radius at ascending and that at descending are half of the distance between the present position and the target position.

- Before correction  
Distance between present position and target position < Arch radius when ascending + Arch radius when descending

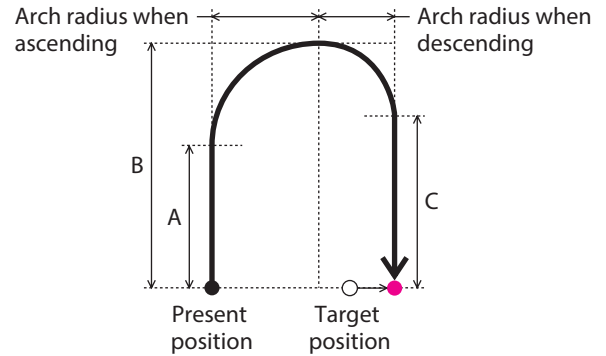

- After correction  
Distance between present position and target position = Arch radius when ascending + Arch radius when descending

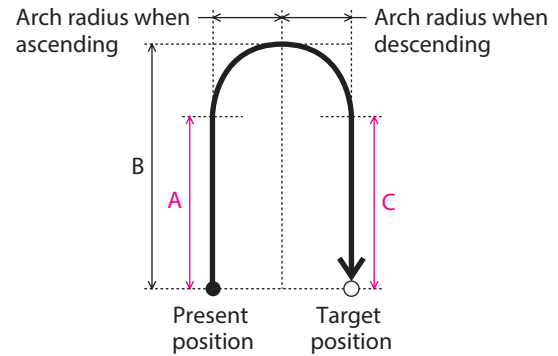




### When making the arch trajectory upward

If the arch is set to one of the following, the arch trajectory is upward.


- "A: Ascending height" is larger than 0
- "A: Ascending height" is 0 and "B: Maximum height" is larger than 0

Set a value larger than the difference between the present position height and the target position height (Z coordinate) to "C: Descending start height." If this condition is not satisfied, operation is not started and information of Operation start error will be generated.

- Operation can be started

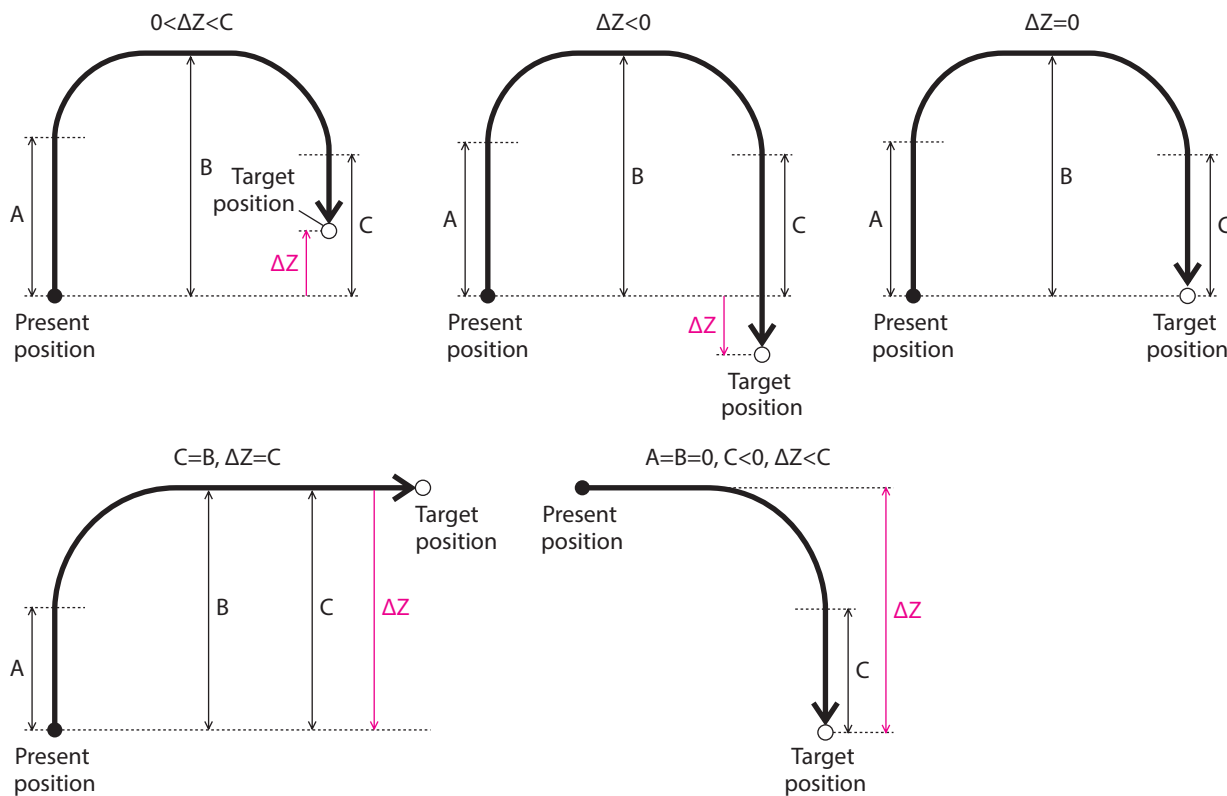

- Operation cannot be started

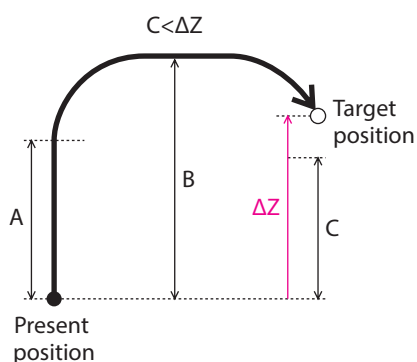




### When making the arch trajectory downward

If the arch is set to one of the following, the arch trajectory is downward.


- "A: Ascending height" is smaller than 0
- "A: Ascending height" is 0 and "B: Maximum height" is smaller than 0

Set a value smaller than the difference between the present position height and the target position height (Z coordinate) to "C: Descending start height." If this condition is not satisfied, operation is not started and information of Operation start error will be generated.

- Operation can be started

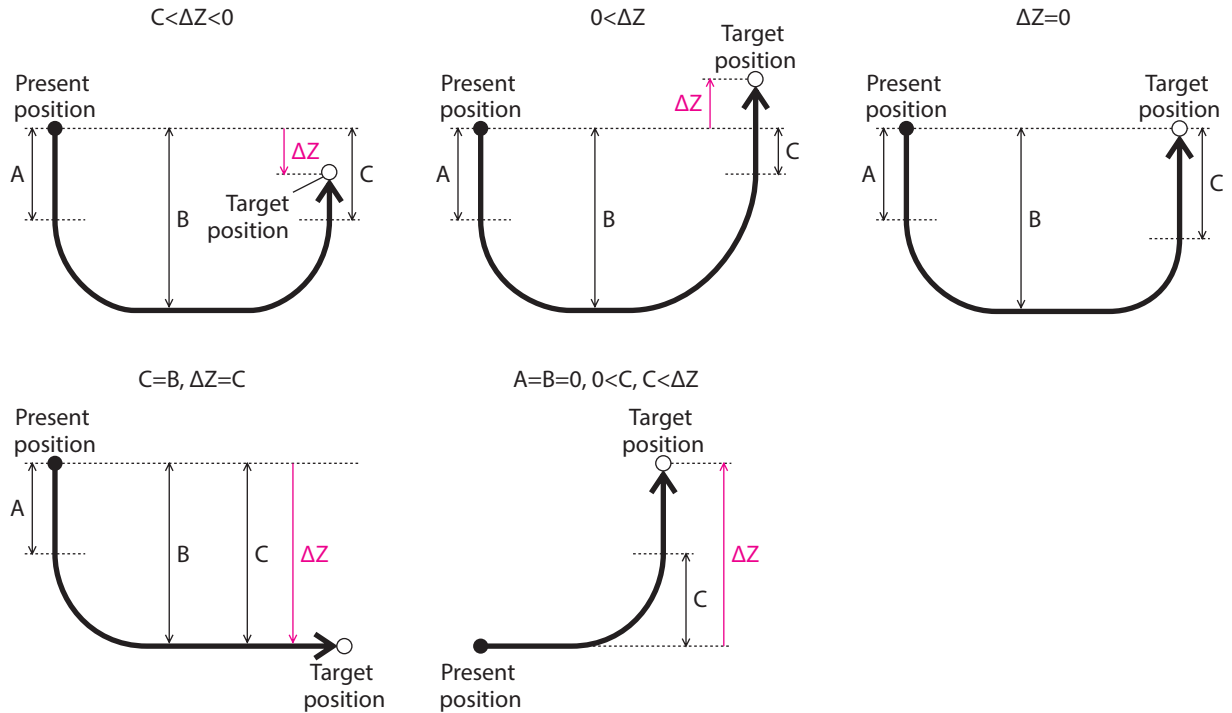

- Operation cannot be started

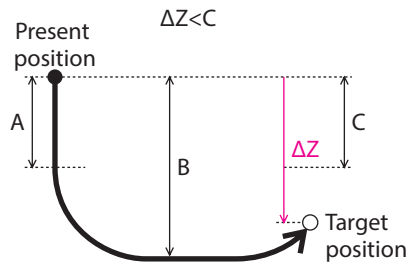



■ Axis moving

This is a command to move the selected axis.

● Command setting

This is the command being edited.  
Changing this command name will also change the command selected in the sequence.  
Note this point.

Command setting

Axis moving

Target axis

Axis1

Target position

Absolute

Relative

0.000 mm or deg

The unit depends on the mechanism type.

Speed

Speed 20.000 mm/s or deg/s

Acceleration 1200.000 mm/s<sup>2</sup> or deg/s<sup>2</sup>

Deceleration 1200.000 mm/s<sup>2</sup> or deg/s<sup>2</sup>

Method to specify the position

| MRC Studio<br>Command setting | Screen indication              | Setting range  | Initial value |
|-------------------------------|--------------------------------|--|---------------|
| Target axis                   | Target axis                    | Axis1 to Axis6   | Axis1         |
| Target position               | Method to specify the position | • Absolute<br>• Relative   | Absolute      |
|                               | Position                       | −5,000.000 to 5,000.000 mm or<br>−5,000.000 to 5,000.000 deg                       | 0             |
| Speed                         | Speed                          | 0.010 to 2,000.000 mm/s or<br>0.010 to 2,000.000 deg/s                             | 20.000        |
|                               | Acceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup> or<br>0.001 to 30,000.000 deg/s <sup>2</sup> | 1,200.000     |
|                               | Deceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup> or<br>0.001 to 30,000.000 deg/s <sup>2</sup> | 1,200.000     |



■ End effector 1, End effector 2

This is a command for end-effector operation. This command is used to operate an end effector only. Only an end effector can execute push-motion operation.

● Command setting

This is the command being edited.  
Changing this command name will also change the command selected in the sequence.  
Note this point.

Command setting

End effector1

Target position

Absolute Relative

0.000 mm or deg

The unit depends on the mechanism type.

Speed

Speed 20.000 mm/s or deg/s

Acceleration 1200.000 mm/s<sup>2</sup> or deg/s<sup>2</sup>

Deceleration 1200.000 mm/s<sup>2</sup> or deg/s<sup>2</sup>

Push-motion operation setting

Operation setting parameter is followed

Push current 50.0% Open setting screen

- When "Push-motion enable" is selected on the Push-motion operation setting  
You can input on this screen.
- When "Operation setting parameter is followed" is selected in the Push-motion operation setting  
You cannot input on this screen. Click "Open setting screen" and set the "Push current" parameter.

| MRC Studio<br>Command setting | Screen indication              | Setting range  | Initial value                           |
|-------------------------------|--------------------------------|--|---|
| Target position               | Method to specify the position | • Absolute<br>• Relative   | Absolute                                |
|                               | Position                       | −5,000.000 to 5,000.000 mm or<br>−5,000.000 to 5,000.000 deg                               | 0                                       |
| Speed                         | Speed                          | 0.010 to 2,000.000 mm/s or<br>0.010 to 2,000.000 deg/s                                     | 20.000                                  |
|                               | Acceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup> or<br>0.001 to 30,000.000 deg/s <sup>2</sup>         | 1,200.000                               |
|                               | Deceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup> or<br>0.001 to 30,000.000 deg/s <sup>2</sup>         | 1,200.000                               |
| Push-motion operation setting | Push-motion operation setting  | • Operation setting parameter is followed<br>• Push-motion disable<br>• Push-motion enable | Operation setting parameter is followed |
|                               | Push current                   | 0 to 100.0 %   | 50.0                                    |



## ■ End-effector 1 + 2

This is a command for end-effector operation. This command is used to operate both end-effector 1 and end-effector 2 simultaneously.

Use this command when performing push-motion operation of the end effectors in two axes simultaneously.

### ● Command setting

This is the command being edited.  
Changing this command name will also change the command selected in the sequence.  
Note this point.

Method to specify the position

When "Operation setting parameter is followed" is selected in the Push-motion operation setting, this screen cannot be used to input data. Click "Open setting screen" to set the "Push current" parameter.

| MRC Studio command setting    | Screen view                    | Setting range  | Initial value |
|-------------------------------|--------------------------------|--|---------------|
| Target position               | Method to specify the position | <ul style="list-style-type: none"> <li>• Absolute</li> <li>• Relative</li> </ul>   | Absolute      |
|                               | E1                             | −5,000.000 to 5,000.000 mm or<br>−5,000.000 to 5,000.000 deg                       | 0             |
|                               | E2                             | −5,000.000 to 5,000.000 mm or<br>−5,000.000 to 5,000.000 deg                       | 0             |
| Speed                         | Speed                          | 0.010 to 2,000.000 mm/s or<br>0.010 to 2,000.000 deg/s                             | 20.000        |
|                               | Acceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup> or<br>0.001 to 30,000.000 deg/s <sup>2</sup> | 1,200.000     |
|                               | Deceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup> or<br>0.001 to 30,000.000 deg/s <sup>2</sup> | 1,200.000     |
| Push-motion operation setting | E1 Push current                | 0 to 100.0 %   | 50.0          |
|                               | E2 Push current                | 0 to 100.0 %   | 50.0          |




Return-to-origin

This is a command for high-speed return-to-origin operation. High-speed return-to-origin operation of the coordinates set in "Target coordinates" is performed.

**memo** When high-speed return-to-origin operation is performed with a robot other than a Cartesian robot, set the origin of the user coordinate system in advance. Refer to "2-3 Origin setting" on p.41 for how to set.

Command setting

This is the command being edited.  
Changing this command name will also change the command selected in the sequence.  
Note this point.

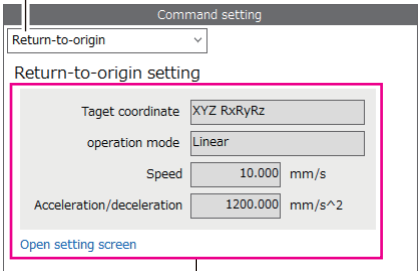

You cannot input on this screen.  
Click "Open setting screen" and set the applicable parameter.

| MRC Studio<br>Command setting | Screen indication                    | Setting range   | Initial value                           |
|-------------------------------|--------------------------------------|---|---|
| Return-to-origin<br>setting   | Target coordinates                   | <ul style="list-style-type: none"><li>• XYZ RxRyRz E1E2</li><li>• XYZ RxRyRz</li><li>• XYZ RxRyRz E1</li><li>• XYZ RxRyRz E2</li><li>• XYZ E1E2</li><li>• XYZ E1</li><li>• XYZ E2</li><li>• XYZ</li></ul> | XYZ RxRyRz                              |
|                               | Operation mode*1                     | <ul style="list-style-type: none"><li>• PTP</li><li>• Linear</li></ul>  | Linear                                  |
|                               | Speed                                | 1 to 250.000 mm/s*2   | 10.000                                  |
|                               | Acceleration/deceleration            | 1 to 3,000.000 mm/s <sup>2</sup> *3   | 1,200.000                               |
|                               | Handed system*4                      | No change from present<br>handed system<br>Right-handed system<br>Left-handed system  | No change from present<br>handed system |
|                               | 1st Link rotation angle<br>setting*5 | <ul style="list-style-type: none"><li>• less than -180 deg</li><li>• -180 deg to +180 deg</li><li>• +180 deg or over</li></ul>  | -180 deg to +180 deg                    |

\*1 It is the operation mode for high-speed return-to-origin operation. Select "Linear" to avoid obstacles and return to the origin.  
\*2 If the operation mode is PTP, the unit is "deg/s." Note that "mm/s" is still displayed on the screen.  
\*3 If the operation mode is PTP, the unit is "deg/s<sup>2</sup>." Note that "mm/s<sup>2</sup>" is still displayed on the screen.  
\*4 This is enabled when the operation mode is "PTP" for a SCARA robot and a 6-axis articulated robot.  
\*5 This is enabled when the operation mode is "PTP" for a SCARA (360-degree rotation) robot. Within the 1st arm's movable range of the robot (-360 to +360 degrees), set the rotation angle of the robot with respect to the target position.



## ■ Pallet PTP

This is a command for pallet operation. PTP operation is performed by calculating the next cell from the pallet number and the start position S.

### ● Command setting

This is the command being edited.  
Changing this command name will also change the command selected in the sequence.  
Note this point.

You cannot input on this screen.  
Click "Open setting screen" and set the parameter.

Method to specify the position  
Coordinates or travel amount  
• Checking a box enables a value.  
• "E1" and "E2" represent an end effector.

| MRC Studio<br>Command setting | Screen indication              | Setting range  | Initial value |
|-------------------------------|--------------------------------|--|---------------|
| Pallet                        | Pallet number                  | 1 to 6   | 1             |
| Start position S              | Method to specify the position | <ul style="list-style-type: none"> <li>• Absolute</li> <li>• Relative</li> </ul> | Absolute      |
|                               | X                              | −5,000.000 to 5,000.000 mm   | 0             |
|                               | Y                              | −5,000.000 to 5,000.000 mm   | 0             |
|                               | Z                              | −5,000.000 to 5,000.000 mm   | 0             |
|                               | E1                             | −5,000.000 to 5,000.000 mm or<br>−5,000.000 to 5,000.000 deg                     | 0             |
|                               | E2                             | −5,000.000 to 5,000.000 mm or<br>−5,000.000 to 5,000.000 deg                     | 0             |
|                               | Rx                             | −270.000 to 270.000 deg  | 0             |
|                               | Ry                             | −90.000 to 90.000 deg  | 0             |
|                               | Rz                             | −270.000 to 270.000 deg  | 0             |
| Speed                         | Speed                          | 0.010 to 2,000.000 deg/s   | 20.000        |
|                               | Acceleration                   | 0.001 to 30,000.000 deg/s <sup>2</sup>   | 1,200.000     |
|                               | Deceleration                   | 0.001 to 30,000.000 deg/s <sup>2</sup>   | 1,200.000     |



| MRC Studio<br>Command setting             | Screen indication                  | Setting range   | Initial value                           |
|---|------------------------------------|---|---|
| Right-handed/<br>Left-handed<br>system *1 | Handed system<br>selection         | <ul style="list-style-type: none"> <li>• No change from present handed system</li> <li>• Right-handed system</li> <li>• Left-handed system</li> <li>• Change oppositely from present handed system</li> </ul> | No change from present<br>handed system |
| 1st Link rotation<br>angle setting*2      | 1st Link rotation<br>angle setting | <ul style="list-style-type: none"> <li>• less than –180 deg</li> <li>• –180 deg to +180 deg</li> <li>• +180 deg or over</li> </ul>  | –180 deg to +180 deg                    |

\*1 It is enabled for a SCARA robot and a 6-axis vertically articulated robot. Set if the handed system is desired to change for each command when repeating the PTP commands in a single operation program.

\*2 It is enabled in a SCARA (360-degree rotation) robot. Within the 1st arm's movable range of the robot (–360 to +360 degrees), set the rotation angle of the robot with respect to the target position.



If multiple coordinates are set at the start position S, the set speed may differ from the actual speed because the speed is automatically adjusted to the axis that takes the longest time to move.




## ■ Pallet linear

This is a command for pallet operation. Linear interpolation operation is performed by calculating the next cell from the pallet number and the start position S.

### ● Command setting

This is the command being edited.  
Changing this command name will also change the command selected in the sequence.  
Note this point.

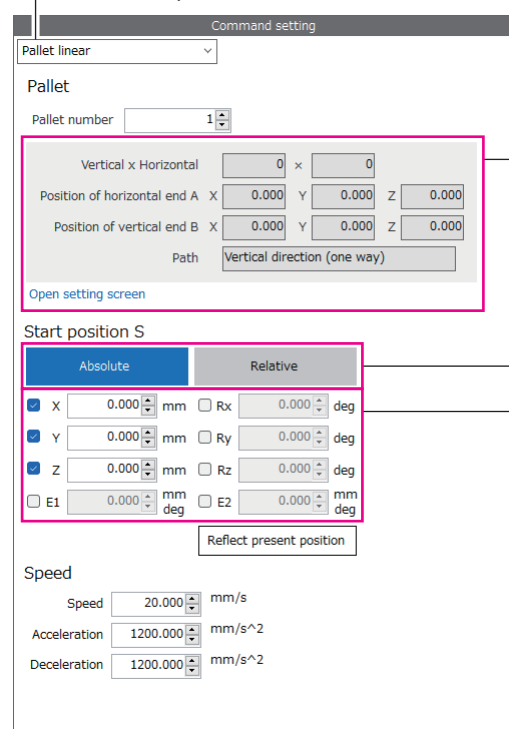

You cannot input on this screen.  
Click "Open setting screen" and set the parameter.

Method to specify the position

Coordinates or travel amount

- Checking a box enables a value.
- "E1" and "E2" represent an end effector.

| MRC Studio<br>Command setting | Screen indication              | Setting range  | Initial value |
|-------------------------------|--------------------------------|--|---------------|
| Pallet                        | Pallet number                  | 1 to 6   | 1             |
| Start position S              | Method to specify the position | <ul style="list-style-type: none"> <li>• Absolute</li> <li>• Relative</li> </ul> | Absolute      |
|                               | X                              | −5,000.000 to 5,000.000 mm   | 0             |
|                               | Y                              | −5,000.000 to 5,000.000 mm   | 0             |
|                               | Z                              | −5,000.000 to 5,000.000 mm   | 0             |
|                               | E1                             | −5,000.000 to 5,000.000 mm or<br>−5,000.000 to 5,000.000 deg                     | 0             |
|                               | E2                             | −5,000.000 to 5,000.000 mm or<br>−5,000.000 to 5,000.000 deg                     | 0             |
|                               | Rx                             | −270.000 to 270.000 deg  | 0             |
|                               | Ry                             | −90.000 to 90.000 deg  | 0             |
| Speed                         | Rz                             | −270.000 to 270.000 deg  | 0             |
|                               | Speed                          | 0.010 to 2,000.000 mm/s  | 20.000        |
|                               | Acceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup>  | 1,200.000     |
|                               | Deceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup>  | 1,200.000     |



If multiple coordinates are set at the start position S, the set speed may differ from the actual speed because the speed is automatically adjusted to the axis that takes the longest time to move.



## ■ Pallet arch

This is a command for pallet operation. Arch interpolation operation is performed by calculating the next cell from the pallet number and the start position S.

### ● Command setting

This is the command being edited.

Changing this command name will also change the command selected in the sequence.

Note this point.

Command setting

Pallet arch

Pallet

Pallet number 1

Vertical x Horizontal 0 x 0

Position of horizontal end A X 0.000 Y 0.000 Z 0.000

Position of vertical end B X 0.000 Y 0.000 Z 0.000

Path Vertical direction (one way)

Open setting screen

Start position S

Absolute Relative

X 0.000 mm Rx 0.000 deg

Y 0.000 mm Ry 0.000 deg

Z 0.000 mm Rz 0.000 deg

E1 0.000 mm deg E2 0.000 mm deg

Reflect present position

Arch

A: Ascending height 30.000 mm

B: Maximum height 50.000 mm

C: Descending start height 30.000 mm

Speed

Speed 20.000 mm/s

Acceleration 1200.000 mm/s<sup>2</sup>

Deceleration 1200.000 mm/s<sup>2</sup>

You cannot input on this screen.

Click "Open setting screen" and set the parameter.

Method to specify the position

Coordinates or travel amount

• Checking a box enables a value.

• "E1" and "E2" represent an end effector.

| MRC Studio<br>Command setting | Screen indication              | Setting range  | Initial value |
|-------------------------------|--------------------------------|--|---------------|
| Pallet                        | Pallet number                  | 1 to 6   | 1             |
| Start position S              | Method to specify the position | <ul style="list-style-type: none"> <li>• Absolute</li> <li>• Relative</li> </ul> | Absolute      |
|                               | X                              | −5,000.000 to 5,000.000 mm   | 0             |
|                               | Y                              | −5,000.000 to 5,000.000 mm   | 0             |
|                               | Z                              | −5,000.000 to 5,000.000 mm   | 0             |
|                               | E1                             | −5,000.000 to 5,000.000 mm or<br>−5,000.000 to 5,000.000 deg                     | 0             |
|                               | E2                             | −5,000.000 to 5,000.000 mm or<br>−5,000.000 to 5,000.000 deg                     | 0             |
|                               | Rx                             | −270.000 to 270.000 deg  | 0             |
|                               | Ry                             | −90.000 to 90.000 deg  | 0             |
|                               | Rz                             | −270.000 to 270.000 deg  | 0             |
| Arch *                        | A: Ascending height            | −5,000.000 to 5,000.000 mm   | 30.000        |
|                               | B: Maximum height              | −5,000.000 to 5,000.000 mm   | 50.000        |
|                               | C: Descending start height     | −5,000.000 to 5,000.000 mm   | 30.000        |
| Speed                         | Speed                          | 0.010 to 2,000.000 mm/s  | 20.000        |
|                               | Acceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup>  | 1,200.000     |
|                               | Deceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup>  | 1,200.000     |

\* Refer to p.56 for setting of the arch.






If multiple coordinates are set at the start position S, the set speed may differ from the actual speed because the speed is automatically adjusted to the axis that takes the longest time to move.

## ■ Parameters related to pallet operation commands

| Name           |                                       | Setting range  |
|----------------|---------------------------------------|--|
| Pallets 1 to 6 | Horizontal direction end X coordinate | −5,000.000 to 5,000.000 mm   |
|                | Horizontal direction end Y coordinate | −5,000.000 to 5,000.000 mm   |
|                | Horizontal direction end Z coordinate | −5,000.000 to 5,000.000 mm   |
|                | Horizontal cell count                 | 0 to 256   |
|                | Vertical direction end X coordinate   | −5,000.000 to 5,000.000 mm   |
|                | Vertical direction end Y coordinate   | −5,000.000 to 5,000.000 mm   |
|                | Vertical direction end Z coordinate   | −5,000.000 to 5,000.000 mm   |
|                | Vertical cell count                   | 0 to 256   |
|                | Path                                  | <ul style="list-style-type: none"> <li>• Vertical direction (one way)</li> <li>• Vertical direction (back and forth)</li> <li>• Horizontal direction (one way)</li> <li>• Horizontal direction (back and forth)</li> </ul> |
|                | Number of cells                       | 0 to 65,536  |

### ● Operating range of pallet

The operating range of the pallet is determined by the coordinates of the start position S, the horizontal direction end of the pallet, and the vertical direction end of the pallet. The horizontal direction end represents the end cell in the X-axis direction from the start position S, and the vertical direction end represents the end cell in the Y-axis direction from the start position S. Set the relative coordinates from the start position S in the horizontal direction end and the vertical direction end.

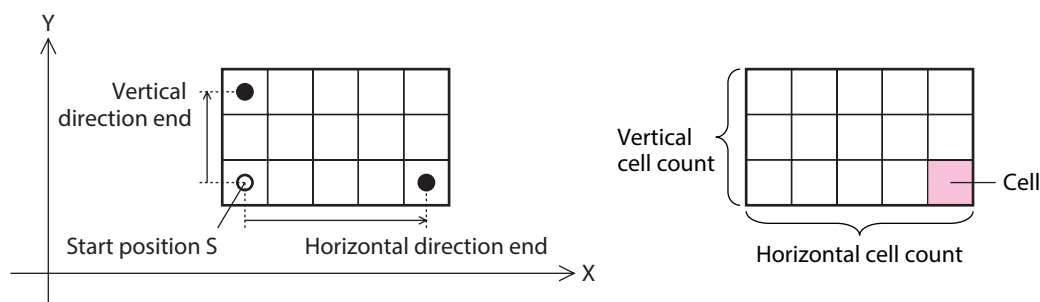

### ● Number of cells of pallet

The maximum number of cells of the pallet is determined by the number of cells set in the “Horizontal cell count” and “vertical cell count” parameters.

If the “Number of cells” parameter is set, the number of cells used can be limited.

#### When using all cells

Set “0 (initial value)” to the “Number of cells” parameter.

#### ● Setting of parameters

| Name                  | Setting value                  |
|-----------------------|--------------------------------|
| Horizontal cell count | 5                              |
| Vertical cell count   | 3                              |
| Path                  | Horizontal direction (one way) |
| Number of cells       | 0 (Initial value)              |

#### ● Range to be used

|    |    |    |    |    |
|----|----|----|----|----|
| 11 | 12 | 13 | 14 | 15 |
| 6  | 7  | 8  | 9  | 10 |
| ①  | 2  | 3  | 4  | 5  |

Start position S



When using some parts of cells

Set the number of cells used to the "Number of cells" parameter.

- Setting of parameters

| Name                  | Setting value                  |
|-----------------------|--------------------------------|
| Horizontal cell count | 5                              |
| Vertical cell count   | 3                              |
| Path                  | Horizontal direction (one way) |
| Number of cells       | 10                             |

- Range to be used

|    |    |    |    |    |
|----|----|----|----|----|
| 11 | 12 | 13 | 14 | 15 |
| 6  | 7  | 8  | 9  | 10 |
| ①  | 2  | 3  | 4  | 5  |


Start position S

- Pallet counters

Commands of pallet operation have a counter indicating the next cell (next cell number) for each pallet number. The next cell number is counted up each time the pallet operation command is completed with reference to the start position S. (It is not counted up when stopped in the middle of operation.) When the next cell number reaches the number of cells set in the "Number of cells" parameter, it returns to 1.


When the "Number of cells" parameter is "0 (initial value)"

When the next cell number reaches the maximum number of cells (horizontal cell count × vertical cell count), it returns to 1.

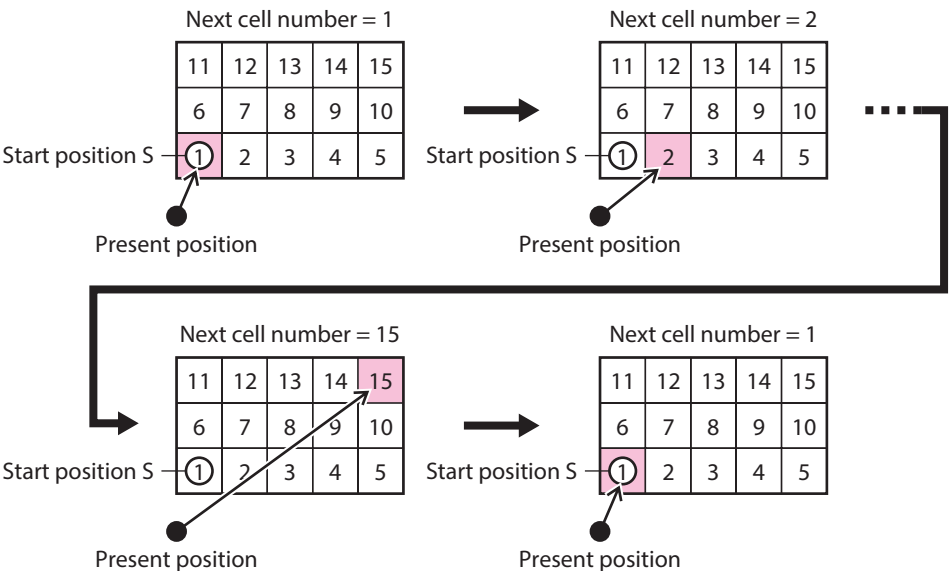

When the "Number of cells" parameter is "10"

When the next cell number reaches 10, it returns to 1.

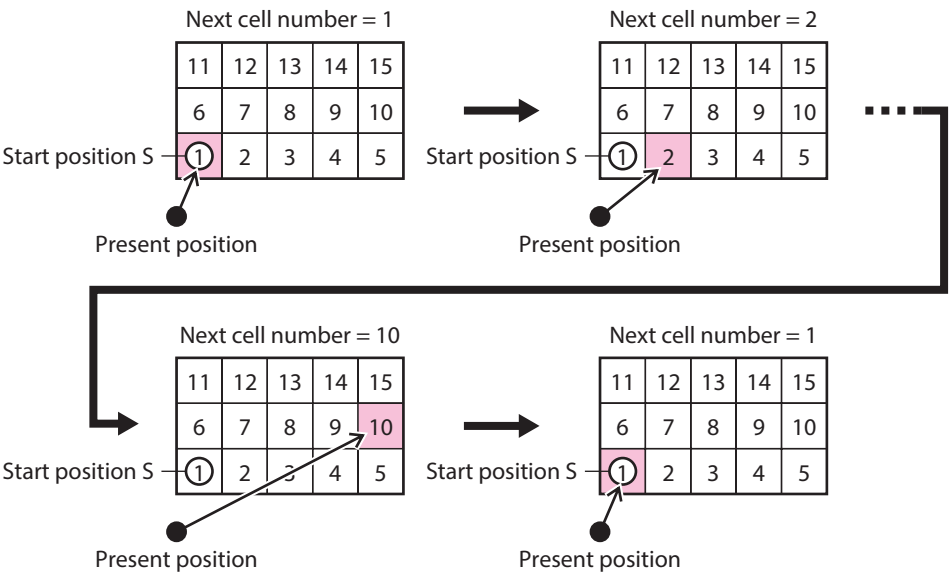





### ● "Path" parameter

For the "Path" parameter, set the direction of traveling to the next cell.


Path: Vertical direction (one way)

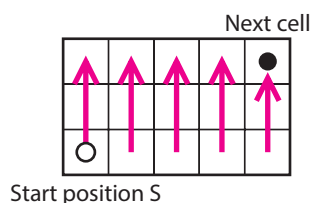


Path: Vertical direction (back and forth)

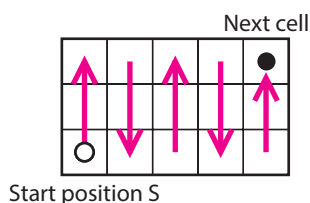

Path: Horizontal direction (one way)

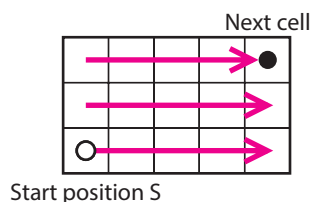


Path: Horizontal direction (back and forth)

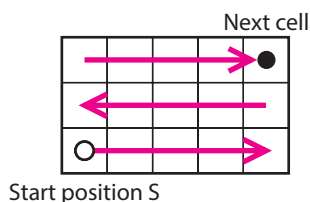


The path for the negative direction or the oblique direction can also be set depending on the setting for the horizontal direction end and the vertical direction end.


• Example: Negative direction

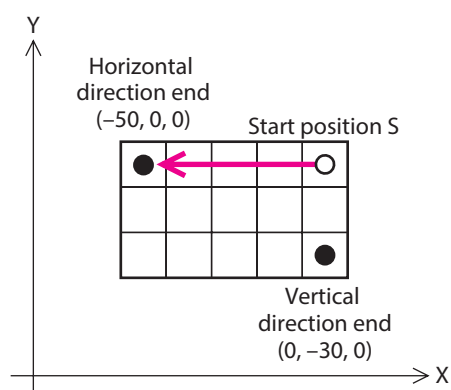

• Example: Oblique direction

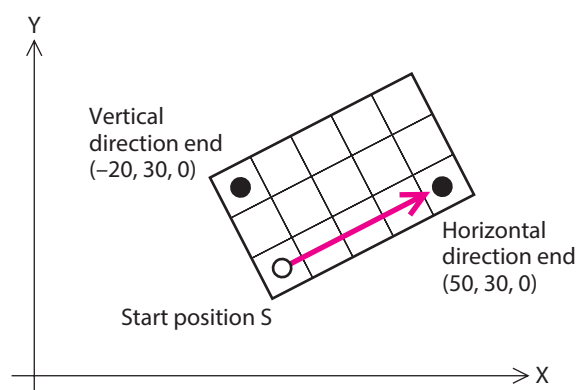

If the Z coordinate for the horizontal direction end and/or the vertical direction end, the path inclined in the Z direction can also be specified. It is the coordinates on a plane that includes the horizontal direction end and the vertical direction end having set.

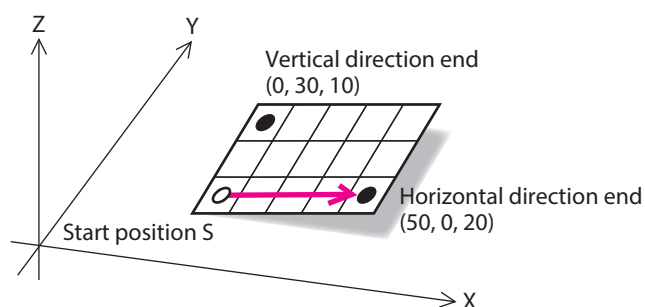




■ **Linear (Tool)**

This is a command that performs linear interpolation operation in the tool coordinates system. It controls the robot using Cartesian coordinates with the tool attached to the tip of the robot as the origin.

● **Example of trajectory**

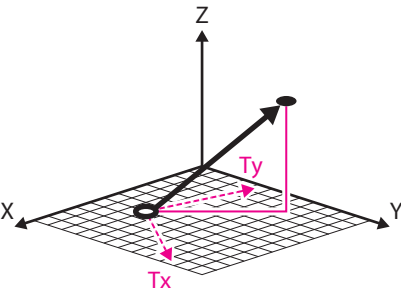

● **Command setting**

This is the command being edited.  
Changing this command name will also change the command selected in the sequence.  
Note this point.

Command setting

Linear (Tool) ▼

Target position

Relative

☒ Tx 0.000 mm

☒ Ty 0.000 mm

☒ Tz 0.000 mm

Speed

Speed 20.000 mm/s

Acceleration 1200.000 mm/s<sup>2</sup>

Deceleration 1200.000 mm/s<sup>2</sup>

Checking a box enables a value.

| MRC Studio<br>Command<br>setting | Screen indication | Setting range                         | Initial value |
|----------------------------------|-------------------|---------------------------------------|---------------|
| Target position                  | Tx                | −5,000.000 to 5,000.000 mm            | 0             |
|                                  | Ty                | −5,000.000 to 5,000.000 mm            | 0             |
|                                  | Tz                | −5,000.000 to 5,000.000 mm            | 0             |
| Speed                            | Speed             | 0.010 to 2,000.000 mm/s               | 20.000        |
|                                  | Acceleration      | 0.001 to 30,000.000 mm/s <sup>2</sup> | 1,200.000     |
|                                  | Deceleration      | 0.001 to 30,000.000 mm/s <sup>2</sup> | 1,200.000     |



## 4-2 Control commands

### ■ Wait (time)

The next command is executed after the specified wait time has elapsed.

| MRC Studio<br>Command setting | Setting range | Initial value |
|-------------------------------|---------------|---------------|
| Waiting time                  | 0.1 to 65.5 s | 0.1           |

### ■ Wait (signal)

The next command is executed after the specified signal satisfies the waiting end condition (ON or OFF).

| MRC Studio<br>Command setting | Setting range                                     | Initial value |
|-------------------------------|---|---------------|
| Signal                        | PRG-DIN0 to PRG-DIN15 or<br>PRG-RIN0 to PRG-RIN31 | PRG-DIN0      |
| Waiting end condition         | OFF/ON  | ON            |

### ■ Loop start / Loop end

The command from the loop (start) to the loop (end) is repeated a specified number of loop times.

| MRC Studio<br>Command setting | Setting range        | Initial value |
|-------------------------------|----------------------|---------------|
| Number of loop times          | 2 to 254 or infinite | 2             |

### ■ Signal output

This command is used to change the output status of a single signal or the output status of all signals at simultaneously. Use this command when operating a robot in combination with an external device.

| MRC Studio<br>Command setting | Setting range   | Initial value |
|-------------------------------|---|---------------|
| Signal                        | <ul style="list-style-type: none"> <li>• All (PRG-DOUT &amp; PRG-ROUT)</li> <li>• All remote outputs (PRG-ROUT)</li> <li>• All direct outputs (PRG-DOUT)</li> <li>• PRG-DOUT0 to PRG-DOUT15, PRG-ROUT0 to PRG-ROUT31</li> </ul> | PRG-DOUT0     |
| Output status                 | <ul style="list-style-type: none"> <li>• OFF</li> <li>• ON</li> </ul>   | ON            |



If the "Signal output" command is executed after the move command, the output status of the signal is updated more than 200 ms before the robot stops operating. If the output status of the signal is desired to update after the robot has completely stopped, set the "Wait (time)" command before the "Signal output" command and set a waiting time of 200 ms or more.



## ■ Signal output (Multiple selection)

The output status of multiple signals can be changed as desired. Use this command when operating a robot in combination with an external device.

| MRC Studio<br>command setting | Setting range   | Initial value            |
|-------------------------------|---|--------------------------|
| Signal                        | <ul style="list-style-type: none"> <li>Remote output (PRG-ROUT)</li> <li>Direct output (PRG-DOUT)</li> <li>All (PRG-DOUT &amp; PRG-ROUT)</li> </ul> | Remote output (PRG-ROUT) |
| Output status (PRG-ROUT)      | Selects ON/OFF of PRG-ROUT0 to PRG-ROUT31   | All signals are ON.      |
| Output status (PRG-DOUT)      | Selects ON/OFF of PRG-DOUT0 to PRG-DOUT15   | All signals are ON.      |



If the "Signal output (Multiple selection)" command is executed after the move command, the output status of the signal is updated more than 200 ms before the robot stops operating. If the output status of the signal is desired to update after the robot has completely stopped, set the "Wait (time)" command before the "Signal output (Multiple selection)" command and set a waiting time of 200 ms or more.

## ■ Changing tool offset

This is a command to switch the tool offset.

Two offset values of TCP can be set to the controller according to the shape of the tool being used. When using two tools with different shapes, TCP can be switched according to the tool being controlled.

| MRC Studio<br>Command setting | Setting range   | Initial value |
|-------------------------------|---|---------------|
| Changing tool offset          | <ul style="list-style-type: none"> <li>Tool offset1</li> <li>Tool offset2</li> <li>Change from the present tool offset</li> </ul> | Tool offset1  |



The present TCP also changes when the tool offset is switched. Even if the operation is the same, the movement of the robot also changes when the tool offsets are different.

### Related parameters

| Parameter ID |       | Parameter name                                | Description   | Setting range                      | Initial value |
|--------------|-------|---|---|------------------------------------|---------------|
| Dec          | Hex   |   |   |                                    |               |
| 601          | 0259h | Tool offset1 Tx [mm]                          | Sets the offset value of the Tx direction of the tool offset 1.       | 0 to 100,000<br>(1=0.01 mm)        | 0             |
| 602          | 025Ah | Tool offset1 Ty [mm]                          | Sets the offset value of the Ty direction of the tool offset 1.       | 0 to 100,000<br>(1=0.01 mm)        | 0             |
| 603          | 025Bh | Tool offset1 Tz [mm]                          | Sets the offset value of the Tz direction of the tool offset 1.       | 0 to 100,000<br>(1=0.01 mm)        | 0             |
| 4294         | 10C6h | Tool offset2 Tx [mm]                          | Sets the offset value of the Tx direction of the tool offset 2.       | 0 to 100,000<br>(1=0.01 mm)        | 0             |
| 4295         | 10C7h | Tool offset2 Ty [mm]                          | Sets the offset value of the Ty direction of the tool offset 2.       | 0 to 100,000<br>(1=0.01 mm)        | 0             |
| 4296         | 10C8h | Tool offset2 Tz [mm]                          | Sets the offset value of the Tz direction of the tool offset 2.       | 0 to 100,000<br>(1=0.01 mm)        | 0             |
| 4556         | 11CCh | Tool offset selection when power is turned on | Sets the tool offset number that is used when the power is turned on. | 0: Tool offset1<br>1: Tool offset2 | 0             |



## ■ Changing coordinate system

This is a command to switch the coordinate system.  
Select the coordinate system to be used for operation.

| MRC Studio<br>command setting | Setting range   | Initial value            |
|-------------------------------|---|--------------------------|
| Changing<br>coordinate system | <ul style="list-style-type: none"><li>• User coordinate system 1</li><li>• User coordinate system 2</li><li>• User coordinate system 3</li><li>• Base coordinate system</li></ul> | User coordinate system 1 |



## 4-3 EtherNet/IP commands

These are commands used to set the target position via EtherNet/IP. The target position can be selected using “(DD) Camera coordinate” or “(DD) Position” of the Implicit message. Executing the command will start operation to the target position specified in the position information selection.

For details of operation of each command, refer to “4-1 Move commands” on p.48.

### ■ PTP (Ref. DD)

#### ● Command setting

This is the command being edited.  
Changing this command name will also change the command selected in the sequence.  
Note this point.

Command setting

PTP (Ref. DD)

Target position

Use “(DD) Camera coordinate” (Camera1)

☒ X ☐ DD enable mm ☐ Rx 0.000 deg  
☒ Y ☐ DD enable mm ☐ Ry 0.000 deg  
☒ Z 0.000 mm ☐ DD disable Rz 0.000 deg  
☐ E1 0.000 mm deg ☐ E2 0.000 mm deg

The axis of “DD enable” refers to the value of the Implicit communication “(DD) Camera coordinate”.

Speed

Speed 20.000 deg/s

Acceleration 1200.000 deg/s<sup>2</sup>

Deceleration 1200.000 deg/s<sup>2</sup>

Right-handed/Left-handed system

☒ No change from present handed system  
☐ Right-handed system  
☐ Left-handed system  
☐ Change oppositely from present handed system

Position information selection

Coordinates or travel amount

- Checking a box enables a value.
- “E1” and “E2” represent an end effector.
- “(DD) Camera coordinate” sets the coordinate axes of X, Y, and Rz.
- “(DD) Position” sets all coordinate axes.

Target position

Use “(DD) Position”

☒ X ☐ DD enable mm ☐ DD disable deg  
☒ Y ☐ DD enable mm ☐ DD disable deg  
☒ Z ☐ DD enable mm ☐ DD disable deg  
☐ E1 ☐ DD disable mm deg ☐ E2 ☐ DD disable mm deg

The axis of “DD enable” refers to the value of the Implicit communication “(DD) Position”.

Handed system selection

| MRC Studio command setting       | Screen view                    | Setting range   | Initial value                           |
|----------------------------------|--------------------------------|---|---|
| Target position                  | Position information selection | <ul style="list-style-type: none"> <li>• Use “(DD) Camera coordinate” (Camera 1)</li> <li>• Use “(DD) Camera coordinate” (Camera 2)</li> <li>• Use “(DD) Position”</li> </ul>                                 | Use “(DD) Camera coordinate” (Camera 1) |
|                                  | X                              | –5,000.000 to 5,000.000 mm  | 0                                       |
|                                  | Y                              | –5,000.000 to 5,000.000 mm  | 0                                       |
|                                  | Z                              | –5,000.000 to 5,000.000 mm  | 0                                       |
|                                  | E1                             | –5,000.000 to 5,000.000 mm or<br>–5,000.000 to 5,000.000 deg  | 0                                       |
|                                  | E2                             | –5,000.000 to 5,000.000 mm or<br>–5,000.000 to 5,000.000 deg  | 0                                       |
|                                  | Rx                             | –270.000 to 270.000 deg   | 0                                       |
|                                  | Ry                             | –90.000 to 90.000 deg   | 0                                       |
| Speed                            | Rz                             | –270.000 to 270.000 deg   | 0                                       |
|                                  | Speed                          | 0.010 to 2,000.000 deg/s  | 20.000                                  |
|                                  | Acceleration                   | 0.001 to 30,000.000 deg/s <sup>2</sup>  | 1,200.000                               |
|                                  | Deceleration                   | 0.001 to 30,000.000 deg/s <sup>2</sup>  | 1,200.000                               |
| Right-handed/Left-handed system* | Handed system selection        | <ul style="list-style-type: none"> <li>• No change from present handed system</li> <li>• Right-handed system</li> <li>• Left-handed system</li> <li>• Change oppositely from present handed system</li> </ul> | No change from present handed system    |

\* It is enabled for a SCARA robot and a 6-axis vertically articulated robot. Set if the handed system is desired to change for each command when repeating the PTP commands in a single operation program.



## ■ Linear (Ref. DD)

### ● Command setting

This is the command being edited.  
Changing this command name will also change the command selected in the sequence.  
Note this point.

Command setting

Linear (Ref. DD)

Target position

Use "(DD) Camera coordinate" (Camera1)

☒ X ☐ DD enable mm ☐ Rx 0.000 deg  
☒ Y ☐ DD enable mm ☐ Ry 0.000 deg  
☒ Z 0.000 mm ☐ Rz DD disable deg  
☐ E1 0.000 mm deg ☐ E2 0.000 mm deg

The axis of "DD enable" refers to the value of the Implicit communication "(DD) Camera coordinate".

Speed

Speed 20.000 mm/s

Acceleration 1200.000 mm/s<sup>2</sup>

Deceleration 1200.000 mm/s<sup>2</sup>

Position information selection

Coordinates or travel amount

- Checking a box enables a value.
- "E1" and "E2" represent an end effector.
- "(DD) Camera coordinate" sets the coordinate axes of X, Y, and Rz.
- "(DD) Position" sets all coordinate axes.

Target position

Use "(DD) Position"

☒ X ☐ DD enable mm ☐ Rx DD disable deg  
☒ Y ☐ DD enable mm ☐ Ry DD disable deg  
☒ Z ☐ DD enable mm ☐ Rz DD disable deg  
☐ E1 DD disable mm deg ☐ E2 DD disable mm deg

The axis of "DD enable" refers to the value of the Implicit communication "(DD) Position".

| MRC Studio command setting | Screen view                    | Setting range   | Initial value                           |
|----------------------------|--------------------------------|---|---|
| Target position            | Position information selection | <ul style="list-style-type: none"> <li>• Use "(DD) Camera coordinate" (Camera 1)</li> <li>• Use "(DD) Camera coordinate" (Camera 2)</li> <li>• Use "(DD) Position"</li> </ul> | Use "(DD) Camera coordinate" (Camera 1) |
|                            | X                              | −5,000.000 to 5,000.000 mm  | 0                                       |
|                            | Y                              | −5,000.000 to 5,000.000 mm  | 0                                       |
|                            | Z                              | −5,000.000 to 5,000.000 mm  | 0                                       |
|                            | E1                             | −5,000.000 to 5,000.000 mm or<br>−5,000.000 to 5,000.000 deg  | 0                                       |
|                            | E2                             | −5,000.000 to 5,000.000 mm or<br>−5,000.000 to 5,000.000 deg  | 0                                       |
|                            | Rx                             | −270.000 to 270.000 deg   | 0                                       |
|                            | Ry                             | −90.000 to 90.000 deg   | 0                                       |
|                            | Rz                             | −270.000 to 270.000 deg   | 0                                       |
| Speed                      | Speed                          | 0.010 to 2,000.000 mm/s   | 20.000                                  |
|                            | Acceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup>   | 1,200.000                               |
|                            | Deceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup>   | 1,200.000                               |



## ■ Arch (Ref. DD)

### ● Command setting

This is the command being edited.  
Changing this command name will also change the command selected in the sequence.  
Note this point.

**Command setting**

Arch (Ref. DD)

**Target position**

Use "(DD) Camera coordinate" (Camera1)

☒ X ☐ DD enable mm ☐ Rx 0.000 deg  
☒ Y ☐ DD enable mm ☐ Ry 0.000 deg  
☒ Z 0.000 mm ☐ Rz DD disable deg  
☐ E1 0.000 mm deg ☐ E2 0.000 mm deg

The axis of "DD enable" refers to the value of the Implicit communication "(DD) Camera coordinate".

**Arch**

A: Ascending height 30.000 mm  
 B: Maximum height 50.000 mm  
 C: Descending start height 30.000 mm

**Speed**

Speed 20.000 mm/s  
 Acceleration 1200.000 mm/s<sup>2</sup>  
 Deceleration 1200.000 mm/s<sup>2</sup>

**Position information selection**

**Coordinates or travel amount**

- Checking a box enables a value.
- "E1" and "E2" represent an end effector.
- "(DD) Camera coordinate" sets the coordinate axes of X, Y, and Rz.
- "(DD) Position" sets all coordinate axes.

**Target position**

Use "(DD) Position"

☒ X ☐ DD enable mm ☐ Rx DD disable deg  
☒ Y ☐ DD enable mm ☐ Ry DD disable deg  
☒ Z ☐ DD enable mm ☐ Rz DD disable deg  
☐ E1 DD disable mm deg ☐ E2 DD disable mm deg

The axis of "DD enable" refers to the value of the Implicit communication "(DD) Position".

| MRC Studio command setting | Screen view                    | Setting range   | Initial value                           |
|----------------------------|--------------------------------|---|---|
| Target position            | Position information selection | <ul style="list-style-type: none"> <li>• Use "(DD) Camera coordinate" (Camera 1)</li> <li>• Use "(DD) Camera coordinate" (Camera 2)</li> <li>• Use "(DD) Position"</li> </ul> | Use "(DD) Camera coordinate" (Camera 1) |
|                            | X                              | -5,000.000 to 5,000.000 mm  | 0                                       |
|                            | Y                              | -5,000.000 to 5,000.000 mm  | 0                                       |
|                            | Z                              | -5,000.000 to 5,000.000 mm  | 0                                       |
|                            | E1                             | -5,000.000 to 5,000.000 mm or<br>-5,000.000 to 5,000.000 deg  | 0                                       |
|                            | E2                             | -5,000.000 to 5,000.000 mm or<br>-5,000.000 to 5,000.000 deg  | 0                                       |
|                            | Rx                             | -270.000 to 270.000 deg   | 0                                       |
|                            | Ry                             | -90.000 to 90.000 deg   | 0                                       |
| Arch                       | Rz                             | -270.000 to 270.000 deg   | 0                                       |
|                            | A: Ascending height            | -5,000.000 to 5,000.000 mm  | 30.000                                  |
|                            | B: Maximum height              | -5,000.000 to 5,000.000 mm  | 50.000                                  |
| Speed                      | C: Descending start height     | -5,000.000 to 5,000.000 mm  | 30.000                                  |
|                            | Speed                          | 0.010 to 2,000.000 mm/s   | 20.000                                  |
|                            | Acceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup>   | 1,200.000                               |
|                            | Deceleration                   | 0.001 to 30,000.000 mm/s <sup>2</sup>   | 1,200.000                               |



# 4 Control via EtherNet/IP

---

This part explains how to control via EtherNet/IP.


## ◆Table of contents

|     |  |     |
|-----|--|-----|
| 1   | Guidance .....   | 78  |
| 2   | Communication specifications .....   | 82  |
| 3   | Implicit message.....  | 83  |
| 3-1 | Implicit message format .....  | 83  |
| 3-2 | Input data .....   | 85  |
| 3-3 | Output data .....  | 99  |
| 3-4 | Processing order of Implicit communication .....                                 | 114 |
| 3-5 | Data writing .....   | 115 |
| 3-6 | Data reading .....   | 116 |
| 4   | Direct data operation .....  | 118 |
| 4-1 | Overview of direct data operation .....  | 118 |
| 4-2 | Output data related to direct data operation .....                               | 119 |
| 4-3 | Output data required to execute direct data operation .....                      | 125 |
| 4-4 | Operation example .....  | 128 |
| 4-5 | Operation where <b>MRC01</b> controller and camera are used in combination ..... | 129 |
| 4-6 | Override of linear interpolation operation .....                                 | 133 |



# 1 Guidance

If you are new to this product, read this section to understand the operation flow.  
This example is a method that operation programs and parameters are set using the **MRC Studio** software to operate a robot via EtherNet/IP.

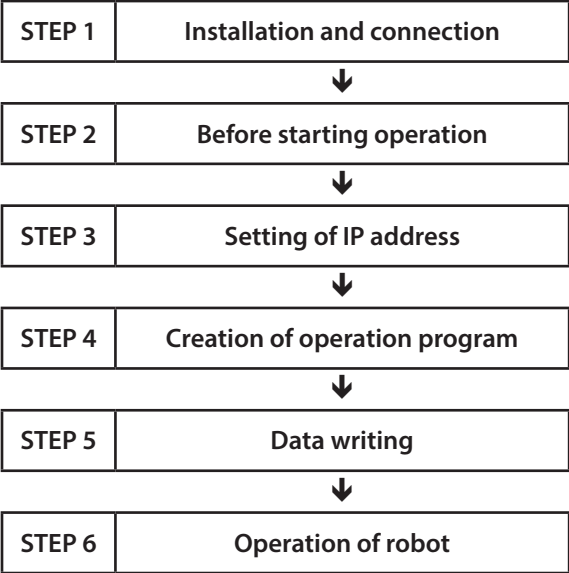

● **Operating conditions**

This operation is performed under the following conditions.


- Setting of controller  
IP address: 192.168.1.2
- Setting of robot  
Robot type : SCARA robot 2-link base up-down  
End effector: Not used
- Setting of driver  
Driver connected: **AZD-KD** 3 units  
Address number setting: Set in order of communication ID=1, 2, and 3 from near the robot.  
Transmission rate: 230,400 bps  
Communication protocol: Modbus RTU  
Termination resistor: Set only for driver of communication ID=3

Note

- Before operating a robot, check the condition of the surrounding area to ensure safety.
- Before starting based on the guidance, import the EDS file to the setting tool of the scanner and register the system configuration in advance. For details, contact your nearest Oriental Motor sales office.



## STEP 1 Check the installation and the connection.

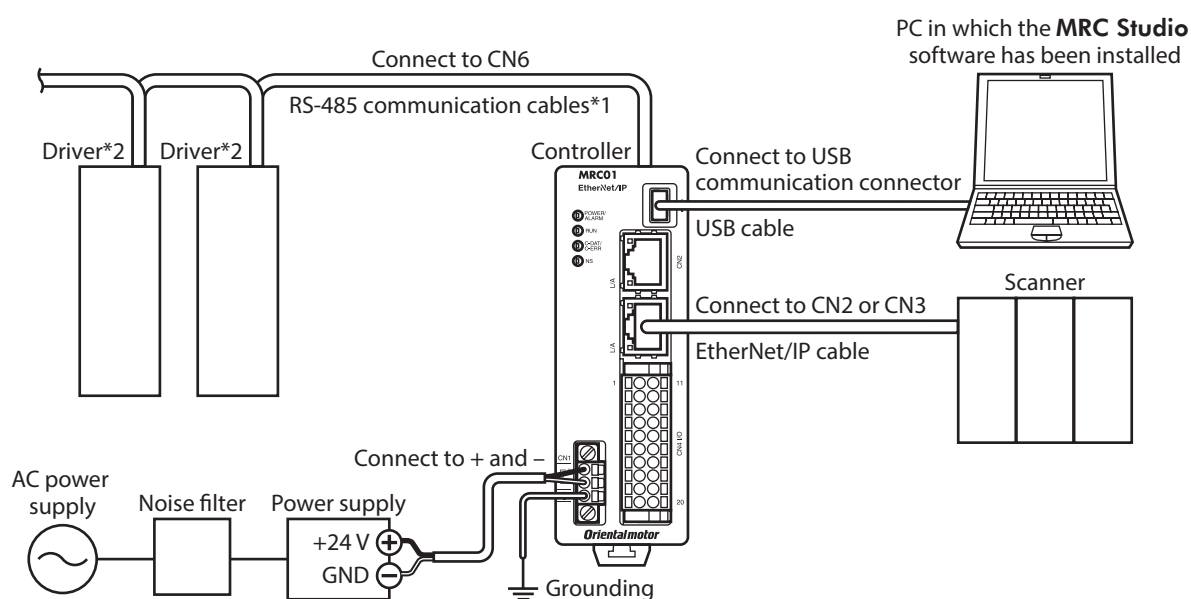

\*1 These cables are provided in Oriental Motor products.

\*2 Connect a power supply to each driver.



For details on connecting the driver power supply and the motor, refer to the operating manuals for products used and connect them properly according to the connection diagram.

## STEP 2 Make preparations for operation.

Refer to "2 Before starting operation" on p.40.

## STEP 3 Set an IP address.

In this example, an IP address of the controller is set using the **MRC Studio** software.

1. Click [Parameter setting] on the menu.
2. Click [Communication IF] > [EtherNet/IP] on the parameter group.
3. Set the "Configuration Control (attr. 3)" parameter to "Parameter" and the "IP Address 4" parameter to "2."



## STEP 4 Create an operation program.


As an example, this section explains how to execute the following operation.

### ● Setting example


- Program number: 1
- Setting method of target position: Relative
- Travel amount: +5 mm in Z direction

### ● Flow of operation

1. Click [Operation program] on the menu.
2. Click [New] of No. 1.  
The operation program edit screen appears.

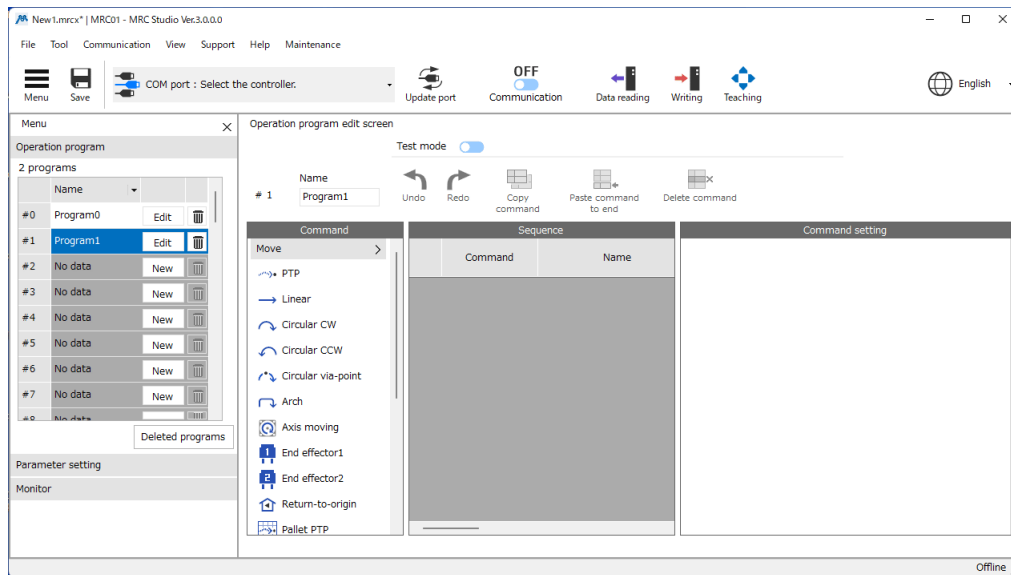

3. Click [PTP] of the move command.  
The PTP command is added to the sequence.
4. Edit the target position on the command setting.
  - 1) Click [Relative] on the target position.
  - 2) Uncheck the X and Y axes.
  - 3) Set the Z axis to 5.000 mm.

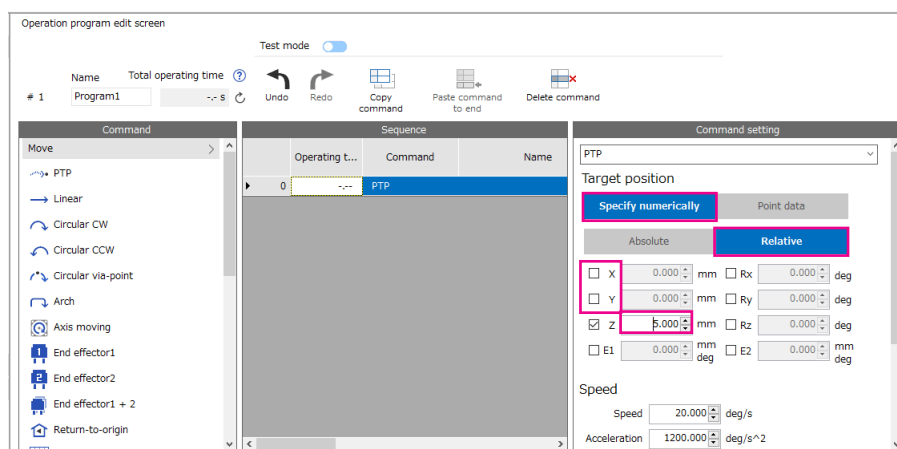



## STEP 5 Write the data and turn on the power supply again.

Write the IP address and the operation program to the controller.

1. Click the [Writing] icon.
2. Click [OK].
3. Turn on the power supply of the controller again.

## STEP 6 Execute operation of the robot.

Descriptions are given using the scanner as the subject.

1. Check the READY output has been turned ON.
2. Select the program No. 1 to turn the START input ON.  
The robot operates 5 mm in the Z direction.
3. Check the READY output has been turned OFF and turn the START input OFF.



The travel amount of the robot can be checked on the status monitor of the **MRC Studio** software.

## STEP 7 Were you able to operate?

How did it go? Were you able to operate properly? If the robot does not operate properly, check the following points.

- Is the POWER/ALARM LED blinking in red?  
An alarm is being generated. Refer to "2 Alarms" on p.249 for details.
- Is the C-DAT/C-ERR LED unlit?  
– Information of the robot has not been written to the controller.  
– The power supply of the controller is not turned on.
- Was the setup wizard of the **MRC Studio** software completed successfully?  
If the ROBOT-EN output is in an OFF state, the setting of the robot has not been completed successfully. Set from STEP 2 again.
- Are the power supply, the motor, the driver, the EtherNet/IP cable, and the RS-485 communication cable connected securely?
- Is the C-DAT/C-ERR LED lit in red?  
A communication error of RS-485 communication is being detected. Refer to p.250 for details.
- Is the NS LED lit in red or blinking in red?  
A communication error of EtherNet/IP is being detected. Refer to p.248 for details.
- Is the IP address set correctly?



## 2 Communication specifications

|                           |   |                                      |
|---------------------------|---|--------------------------------------|
| Communication standards   | EtherNet/IP (conforms to CT17)  |                                      |
| Vendor ID                 | 187: Oriental Motor Company   |                                      |
| Device type               | 43: Generic Device  |                                      |
| Transmission rate         | 10/100 Mbps (autonegotiation)   |                                      |
| Communication mode        | Full duplex/Half duplex (autonegotiation)   |                                      |
| Cable specifications      | Shielded twisted pair (STP) cable<br>straight-through/crossover cable, category 5e or higher is recommended<br>(cable length: 50 m (164 ft.) or less) |                                      |
| Number of occupied bytes  | Output (scanner → controller)   | 2 to 228 bytes (Initial value: 172)* |
|                           | Input (controller → scanner)  | 2 to 228 bytes (Initial value: 172)* |
| Implicit communication    | Number of connections   | 2                                    |
|                           | Connection type   | Exclusive Owner, Input Only          |
|                           | Communication cycle (RPI)   | 10 to 3,200 ms                       |
|                           | Connection type (scanner → controller)  | Point-to-Point                       |
|                           | Connection type (controller → scanner)  | Point-to-Point, Multicast            |
|                           | Data trigger  | Cyclic                               |
| IP address setting method | Parameter, DHCP   |                                      |
| Network topology          | Star, Linear bus, Ring (Device Level Ring)  |                                      |

\* The number of bytes can be set with the **MRC Studio** software.



## 3 Implicit message

### 3-1 Implicit message format

This section shows transfer contents of implicit message. The order of data is in little-endian format.

Contents of implicit message cannot be changed since they are fixed.

Refer to p.87 for details about Input data and p.101 for details about Output data.

| Operation example     | Byte     | Input (controller → scanner)                        | Output (scanner → controller)                   |
|-----------------------|----------|---|---|
| Remote I/O operation  | 0, 1     | Remote I/O (R-OUT)                                  | Remote I/O (R-IN)                               |
|                       | 2, 3     | Program number selection_R                          | Program number selection                        |
|                       | 4 to 7   | Controller control (monitor)                        | Controller control input                        |
|                       | 8, 9     | JOG operation response (user coordinate system)     | JOG operation input                             |
|                       | 10, 11   | Inching operation response (user coordinate system) | Inching operation input                         |
|                       | 12, 13   | JOG operation response (axis)                       | JOG operation input (axis)                      |
|                       | 14, 15   | Inching operation response (axis)                   | Inching operation input (axis)                  |
| JOG/inching operation | 16, 17   | Operation error code                                | JOG operating speed (X, Y, Z, Tx, Ty, Tz)       |
|                       | 18, 19   | Present alarm of controller                         |   |
|                       | 20 to 23 | Information of controller                           | JOG operating speed (Rx, Ry, Rz)                |
|                       | 24 to 27 | Present alarm code of axis (axis 1 to axis 4)       | JOG operating speed (End effector 1, 2)         |
|                       | 28 to 31 | Present alarm code of axis (axis 5 to axis 8) *     | JOG operating speed (axis)                      |
|                       | 32, 33   | Operation mode display                              | JOG operation travel amount (X, Y, Z)           |
|                       | 34       | Present robot type                                  |   |
|                       | 35       | Number of axes                                      |   |
|                       | 36 to 39 | Controller assignable monitor 0                     | JOG operation travel amount (Rx, Ry, Rz)        |
|                       | 40 to 43 | Controller assignable monitor 1                     | JOG operation travel amount (End effector 1, 2) |
|                       | 44 to 47 | Controller assignable monitor 2                     | JOG operation travel amount (axis)              |
|                       | 48 to 51 | Controller assignable monitor 3                     | Input signal for program operation              |
| Direct data operation | 52, 53   | (DD) TRIG_R   | (DD) TRIG                                       |
|                       | 54, 55   | (DD) Status   | Reserved  |
|                       | 56, 57   | (DD) Operation mode_R                               | (DD) Operation mode                             |
|                       | 58       | (DD) Axis selection_R                               | (DD) Axis selection                             |
|                       | 59       | (DD) TCP operation target coordinates selection_R   | (DD) TCP operation target coordinates selection |
|                       | 60 to 63 | Feedback position X coordinate                      | (DD) Position X coordinate                      |
|                       | 64 to 67 | Feedback position Y coordinate                      | (DD) Position Y coordinate                      |
|                       | 68 to 71 | Feedback position Z coordinate                      | (DD) Position Z coordinate                      |
|                       | 72 to 75 | Feedback position Rx coordinate                     | (DD) Position Rx coordinate                     |
|                       | 76 to 79 | Feedback position Ry coordinate                     | (DD) Position Ry coordinate                     |
|                       | 80 to 83 | Feedback position Rz coordinate                     | (DD) Position Rz coordinate                     |
|                       | 84 to 87 | Feedback position E1 coordinate                     | (DD) Position E1 coordinate                     |
|                       | 88 to 91 | Feedback position E2 coordinate                     | (DD) Position E2 coordinate                     |
|                       | 92 to 95 | TCP feedback speed (X, Y, Z)                        | (DD) Speed                                      |



| Operation example     | Byte       | Input (controller → scanner)       | Output (scanner → controller)   |
|-----------------------|------------|------------------------------------|---|
| Direct data operation | 96, 97     | Present handed system              | (DD) Acceleration   |
|                       | 98, 99     | Present tool offset                |   |
|                       | 100 to 103 | Axis 1 assignable monitor 0        | (DD) Deceleration   |
|                       | 104 to 107 | Axis 1 assignable monitor 1        | (DD) Position (axis)  |
|                       | 108, 109   | Axis 1 assignable monitor 2        | (DD) End-effector 1, 2 operation mode                                 |
|                       | 110, 111   |                                    | (DD) End-effector 1, 2 push current                                   |
|                       | 112, 113   | Axis 2 assignable monitor 0        | (DD) PTP operation handed system selection                            |
|                       | 114, 115   |                                    | (DD) Circular interpolation operation setting method                  |
|                       | 116 to 119 | Axis 2 assignable monitor 1        | (DD) Circular interpolation operation radius                          |
|                       | 120 to 123 | Axis 2 assignable monitor 2        | (DD) Circular interpolation operation center coordinate / via-point X |
|                       | 124 to 127 | Axis 3 assignable monitor 0        | (DD) Circular interpolation operation center coordinate / via-point Y |
|                       | 128 to 131 | Axis 3 assignable monitor 1        | (DD) Arch interpolation operation ascending height                    |
|                       | 132 to 135 | Axis 3 assignable monitor 2        | (DD) Arch interpolation operation maximum height                      |
|                       | 136 to 139 | Axis 4 assignable monitor 0        | (DD) Arch interpolation operation descending start height             |
|                       | 140, 141   | Axis 4 assignable monitor 1        | (DD) Pallet number selection  |
|                       | 142, 143   |                                    | (DD) Tool offset selection  |
|                       | 144, 145   | Axis 4 assignable monitor 2        | (DD) Coordinate system selection                                      |
|                       | 146, 147   |                                    | (DD) Camera number selection  |
|                       | 148 to 151 | Axis 5 assignable monitor 0        | (DD) Camera coordinate X coordinate                                   |
|                       | 152 to 155 | Axis 5 assignable monitor 1        | (DD) Camera coordinate Y coordinate                                   |
|                       | 156 to 159 | Axis 5 assignable monitor 2        | (DD) Camera coordinate Rz coordinate                                  |
|                       | 160, 161   | Axis 6 assignable monitor 0        | (DD) PTP operation 1st Link rotation angle setting                    |
|                       | 162, 163   |                                    | Reserved  |
|                       | 164 to 167 | Axis 6 assignable monitor 1        |   |
|                       | 168 to 171 | Axis 6 assignable monitor 2        |   |
| Read/write command    | 172, 173   | Read parameter target selection_R  | Read parameter target selection                                       |
|                       | 174, 175   | Read parameter ID_R                | Read parameter ID   |
|                       | 176, 177   | Reserved                           | Reserved  |
|                       | 178, 179   | Read/write status                  | Write request   |
|                       | 180, 181   | Write parameter target selection_R | Write parameter target selection                                      |
|                       | 182, 183   | Write parameter ID_R               | Write parameter ID  |
|                       | 184 to 187 | Read data                          | Write data  |
|                       | 188 to 191 | Axis 7 assignable monitor 0*       | Reserved  |
|                       | 192 to 195 | Axis 7 assignable monitor 1*       |   |
|                       | 196 to 199 | Axis 7 assignable monitor 2*       |   |
|                       | 200 to 203 | Axis 8 assignable monitor 0*       |   |
|                       | 204 to 207 | Axis 8 assignable monitor 1*       |   |
|                       | 208 to 211 | Axis 8 assignable monitor 2*       |   |
|                       | 212 to 227 | Reserved                           |   |

\* The axis 7 is the end effector 1 and the axis 8 is the end effector 2.



## ■ Implicit communication format size

Refer to the operation example of “3-1 Implicit message format” on p.83, and set the format size of Implicit communication with the **MRC Studio** software. Choosing an appropriate format size can eliminate sending and receiving of unnecessary information to reduce communication tasks.

| Operation example     | Format size |
|-----------------------|-------------|
| Remote I/O operation  | 16 bytes    |
| JOG/inching operation | 52 bytes    |
| Direct data operation | 172 bytes   |
| Read/write command    | 228 bytes   |

## ● Related parameters

These items can be set with the **MRC Studio** software only. There is no parameter ID.

| Name  | Description                              | Setting range  | Initial value |
|---|--|----------------|---------------|
| Implicit communication format size (Input)  | Sets the format size of the Input data.  | 2 to 228 bytes | 172           |
| Implicit communication format size (Output) | Sets the format size of the Output data. | 2 to 228 bytes | 172           |

## 3-2 Input data

Data transferred from the controller to a scanner is called Input data.

## ■ Input data format

Contents of the Input data are as follows. Refer to p.87 for details. The order of data is in little-endian format.

| Assembly Instance | Attribute | Byte     | Size (Byte) | Description   |
|-------------------|-----------|----------|-------------|---|
| 100               | 3         | 0, 1     | 2           | Remote I/O (R-OUT)                                  |
|                   |           | 2, 3     | 2           | Program number selection_R                          |
|                   |           | 4 to 7   | 4           | Controller control (monitor)                        |
|                   |           | 8, 9     | 2           | JOG operation response (user coordinate system)     |
|                   |           | 10, 11   | 2           | Inching operation response (user coordinate system) |
|                   |           | 12, 13   | 2           | JOG operation response (axis)                       |
|                   |           | 14, 15   | 2           | Inching operation response (axis)                   |
|                   |           | 16, 17   | 2           | Operation error code                                |
|                   |           | 18, 19   | 2           | Present alarm of controller                         |
|                   |           | 20 to 23 | 4           | Information of controller                           |
|                   |           | 24 to 31 | 8           | Present alarm code of axis*1                        |
|                   |           | 32, 33   | 2           | Operation mode display                              |
|                   |           | 34       | 1           | Present robot type                                  |
|                   |           | 35       | 1           | Number of axes                                      |
|                   |           | 36 to 39 | 4           | Controller assignable monitor 0                     |
|                   |           | 40 to 43 | 4           | Controller assignable monitor 1                     |
|                   |           | 44 to 47 | 4           | Controller assignable monitor 2                     |
|                   |           | 48 to 51 | 4           | Controller assignable monitor 3                     |
|                   |           | 52, 53   | 2           | (DD) TRIG_R   |
|                   |           | 54, 55   | 2           | (DD) Status   |
|                   |           | 56, 57   | 2           | (DD) Operation mode_R                               |
|                   |           | 58       | 1           | (DD) Axis selection_R                               |
|                   |           | 59       | 1           | (DD) TCP operation target coordinates selection_R   |



| Assembly Instance | Attribute | Byte       | Size (Byte) | Description  |
|-------------------|-----------|------------|-------------|--|
| 100               | 3         | 60 to 63   | 4           | Feedback position / Command position X coordinate*2  |
|                   |           | 64 to 67   | 4           | Feedback position / Command position Y coordinate*2  |
|                   |           | 68 to 71   | 4           | Feedback position / Command position Z coordinate*2  |
|                   |           | 72 to 75   | 4           | Feedback position / Command position Rx coordinate*2 |
|                   |           | 76 to 79   | 4           | Feedback position / Command position Ry coordinate*2 |
|                   |           | 80 to 83   | 4           | Feedback position / Command position Rz coordinate*2 |
|                   |           | 84 to 87   | 4           | Feedback position / Command position E1 coordinate*2 |
|                   |           | 88 to 91   | 4           | Feedback position / Command position E2 coordinate*2 |
|                   |           | 92 to 95   | 4           | TCP Feedback speed / Command speed (X, Y, Z)*3       |
|                   |           | 96, 97     | 2           | Present handed system                                |
|                   |           | 98, 99     | 2           | Present tool offset                                  |
|                   |           | 100 to 103 | 4           | Axis 1 assignable monitor 0                          |
|                   |           | 104 to 107 | 4           | Axis 1 assignable monitor 1                          |
|                   |           | 108 to 111 | 4           | Axis 1 assignable monitor 2                          |
|                   |           | 112 to 115 | 4           | Axis 2 assignable monitor 0                          |
|                   |           | 116 to 119 | 4           | Axis 2 assignable monitor 1                          |
|                   |           | 120 to 123 | 4           | Axis 2 assignable monitor 2                          |
|                   |           | 124 to 127 | 4           | Axis 3 assignable monitor 0                          |
|                   |           | 128 to 131 | 4           | Axis 3 assignable monitor 1                          |
|                   |           | 132 to 135 | 4           | Axis 3 assignable monitor 2                          |
|                   |           | 136 to 139 | 4           | Axis 4 assignable monitor 0                          |
|                   |           | 140 to 143 | 4           | Axis 4 assignable monitor 1                          |
|                   |           | 144 to 147 | 4           | Axis 4 assignable monitor 2                          |
|                   |           | 148 to 151 | 4           | Axis 5 assignable monitor 0                          |
|                   |           | 152 to 155 | 4           | Axis 5 assignable monitor 1                          |
|                   |           | 156 to 159 | 4           | Axis 5 assignable monitor 2                          |
|                   |           | 160 to 163 | 4           | Axis 6 assignable monitor 0                          |
|                   |           | 164 to 167 | 4           | Axis 6 assignable monitor 1                          |
|                   |           | 168 to 171 | 4           | Axis 6 assignable monitor 2                          |
|                   |           | 172, 173   | 2           | Read parameter target selection_R                    |
|                   |           | 174, 175   | 2           | Read parameter ID_R                                  |
|                   |           | 176, 177   | 2           | Reserved   |
|                   |           | 178, 179   | 2           | Read/write status                                    |
|                   |           | 180, 181   | 2           | Write parameter target selection_R                   |
|                   |           | 182, 183   | 2           | Write parameter ID_R                                 |
|                   |           | 184 to 187 | 4           | Read data  |
|                   |           | 188 to 191 | 4           | Axis 7 assignable monitor 0*1                        |
|                   |           | 192 to 195 | 4           | Axis 7 assignable monitor 1*1                        |
|                   |           | 196 to 199 | 4           | Axis 7 assignable monitor 2*1                        |
|                   |           | 200 to 203 | 4           | Axis 8 assignable monitor 0*1                        |
|                   |           | 204 to 207 | 4           | Axis 8 assignable monitor 1*1                        |
|                   |           | 208 to 211 | 4           | Axis 8 assignable monitor 2*1                        |



| Assembly Instance | Attribute | Byte       | Size (Byte) | Description |
|-------------------|-----------|------------|-------------|-------------|
| 100               | 3         | 212 to 227 | 16          | Reserved    |

\*1 The axis 7 is the end-effector 1 and the axis 8 is the end-effector 2.

\*2 The feedback position or command position can be selected with the "Implicit communication Position / Speed monitor selection" parameter.

When teaching a robot with a scanner, monitoring the command position can perform high-accuracy operation.

\*3 The feedback speed or command speed can be selected with the "Implicit communication Position / Speed monitor selection" parameter.

## ■ Details of Input data

### ● Remote I/O (R-OUT)

These are output signals accessed via EtherNet/IP.

The assignments of signals can be changed using the "R-OUT output function" parameters.

| Bit | Name    | Description   | Initial assignment |
|-----|---------|---|--------------------|
| 0   | R-OUT0  | Output in response to the signal assigned with the "R-OUT output function" parameter. | 416: PRG-ROUT0     |
| 1   | R-OUT1  |   | 417: PRG-ROUT1     |
| 2   | R-OUT2  |   | 418: PRG-ROUT2     |
| 3   | R-OUT3  |   | 419: PRG-ROUT3     |
| 4   | R-OUT4  |   | 420: PRG-ROUT4     |
| 5   | R-OUT5  |   | 421: PRG-ROUT5     |
| 6   | R-OUT6  |   | 422: PRG-ROUT6     |
| 7   | R-OUT7  |   | 423: PRG-ROUT7     |
| 8   | R-OUT8  |   | 424: PRG-ROUT8     |
| 9   | R-OUT9  |   | 425: PRG-ROUT9     |
| 10  | R-OUT10 |   | 426: PRG-ROUT10    |
| 11  | R-OUT11 |   | 427: PRG-ROUT11    |
| 12  | R-OUT12 |   | 428: PRG-ROUT12    |
| 13  | R-OUT13 |   | 429: PRG-ROUT13    |
| 14  | R-OUT14 |   | 430: PRG-ROUT14    |
| 15  | R-OUT15 |   | 431: PRG-ROUT15    |

### ● Program number selection\_R

| Bit     | Name     | Description                            |
|---------|----------|--|
| 0       | M0_R     | Output in response to an input signal. |
| 1       | M1_R     |  |
| 2       | M2_R     |  |
| 3       | M3_R     |  |
| 4       | M4_R     |  |
| 5       | M5_R     |  |
| 6 to 15 | Reserved | 0 is returned.                         |



● **Controller control (monitor)**

| Bit | Name        | Description  |
|-----|-------------|--|
| 0   | STOP_R      | Output in response to an input signal.   |
| 1   | PAUSE-BSY   | Output during a pause.   |
| 2   | START_R     | Output in response to an input signal.   |
| 3   | SSTART_R    |  |
| 4   | READY       | Output when the controller and all drivers are ready to operate.   |
| 5   | Reserved    | 0 is returned.   |
| 6   | PRG-RUN     | Output when program operation is being executed.   |
| 7   | ALM-A-CNT   | Output the alarm status of the controller (normally open).   |
| 8   | ALM-A-DRV   | Output the alarm status of the driver (normally open).   |
| 9   | INFO-CNT    | Output the Information status of the controller.   |
| 10  | INFO-DRV    | Output the Information status of the driver.   |
| 11  | Reserved    | 0 is returned.   |
| 12  | ETO-MON-DRV | Output when there is a driver in the power removal status.   |
| 13  | CRNT-LMTD1  | Output when the current limit is performed by the CRNT-LMT1 input.   |
| 14  | SPD-LMTD1   | Output when the speed limit is performed by the SPD-LMTD1 input.   |
| 15  | Reserved    | 0 is returned.   |
| 16  | HOME-END    | Output when high-speed return-to-origin operation is completed or when the origin of the user coordinate system is rewritten to the present TCP by turning the P-PRESET-RB input ON. |
| 17  | CMD-END-CNT | Output when program operation or direct data operation is completed.   |
| 18  | MOVE-CNT    | Output while the robot operates.   |
| 19  | CMD-END     | Output when all motors stopped after program operation or direct data operation was completed.   |
| 20  | MOVE        | Output while the robot operates.   |
| 21  | CRNT-RB     | Output when all motion axes (motors driving the robot) are in an excitation state.   |
| 22  | CRNT-E1     | Output when the end-effector axis 1 (a motor driving the end effector 1) is in an excitation state.  |
| 23  | CRNT-E2     | Output when the end-effector axis 2 (a motor driving the end effector 2) is in an excitation state.  |
| 24  | Reserved    | 0 is returned.   |
| 25  | ROBOT-EN    | Output while the setup of the robot is properly completed.   |
| 26  | SGL-LMT     | Output when the robot is near the singularity.   |
| 27  | PST-ERR     | Output while the elbow joint (*) of a vertically articulated robot is at a negative angle.   |
| 28  | Reserved    | 0 is returned.   |
| 29  | TLC-RB      | Output when the output torque of any of the motion axes (motors driving the robot) reaches the upper limit value.  |
| 30  | TLC-E1      | Output when the output torque of the end-effector axis 1 (a motor driving the end effector 1) reaches the upper limit value.   |
| 31  | TLC-E2      | Output when the output torque of the end-effector axis 2 (a motor driving the end effector 2) reaches the upper limit value.   |

\* With base axis: Axis 3,  
Without base axis: Axis 2



● JOG operation response (user coordinate system)

| Bit | Name      | Description                            |
|-----|-----------|--|
| 0   | JOG-X+_R  | Output in response to an input signal. |
| 1   | JOG-X-_R  |  |
| 2   | JOG-Y+_R  |  |
| 3   | JOG-Y-_R  |  |
| 4   | JOG-Z+_R  |  |
| 5   | JOG-Z-_R  |  |
| 6   | JOG-RX+_R |  |
| 7   | JOG-RX-_R |  |
| 8   | JOG-RY+_R |  |
| 9   | JOG-RY-_R |  |
| 10  | JOG-RZ+_R |  |
| 11  | JOG-RZ-_R |  |
| 12  | JOG-E1+_R |  |
| 13  | JOG-E1-_R |  |
| 14  | JOG-E2+_R |  |
| 15  | JOG-E2-_R |  |

● Inching operation response (user coordinate system)

| Bit | Name        | Description                            |
|-----|-------------|--|
| 0   | JOG-P-X+_R  | Output in response to an input signal. |
| 1   | JOG-P-X-_R  |  |
| 2   | JOG-P-Y+_R  |  |
| 3   | JOG-P-Y-_R  |  |
| 4   | JOG-P-Z+_R  |  |
| 5   | JOG-P-Z-_R  |  |
| 6   | JOG-P-RX+_R |  |
| 7   | JOG-P-RX-_R |  |
| 8   | JOG-P-RY+_R |  |
| 9   | JOG-P-RY-_R |  |
| 10  | JOG-P-RZ+_R |  |
| 11  | JOG-P-RZ-_R |  |
| 12  | JOG-P-E1+_R |  |
| 13  | JOG-P-E1-_R |  |
| 14  | JOG-P-E2+_R |  |
| 15  | JOG-P-E2-_R |  |



● JOG operation response (axis)

| Bit | Name      | Description                            |
|-----|-----------|--|
| 0   | JOG-A1+_R | Output in response to an input signal. |
| 1   | JOG-A1-_R |  |
| 2   | JOG-A2+_R |  |
| 3   | JOG-A2-_R |  |
| 4   | JOG-A3+_R |  |
| 5   | JOG-A3-_R |  |
| 6   | JOG-A4+_R |  |
| 7   | JOG-A4-_R |  |
| 8   | JOG-A5+_R |  |
| 9   | JOG-A5-_R |  |
| 10  | JOG-A6+_R |  |
| 11  | JOG-A6-_R |  |
| 12  | JOG-A7+_R |  |
| 13  | JOG-A7-_R |  |
| 14  | JOG-A8+_R |  |
| 15  | JOG-A8-_R |  |

● Inching operation response (axis)

| Bit | Name        | Description                            |
|-----|-------------|--|
| 0   | JOG-P-A1+_R | Output in response to an input signal. |
| 1   | JOG-P-A1-_R |  |
| 2   | JOG-P-A2+_R |  |
| 3   | JOG-P-A2-_R |  |
| 4   | JOG-P-A3+_R |  |
| 5   | JOG-P-A3-_R |  |
| 6   | JOG-P-A4+_R |  |
| 7   | JOG-P-A4-_R |  |
| 8   | JOG-P-A5+_R |  |
| 9   | JOG-P-A5-_R |  |
| 10  | JOG-P-A6+_R |  |
| 11  | JOG-P-A6-_R |  |
| 12  | JOG-P-A7+_R |  |
| 13  | JOG-P-A7-_R |  |
| 14  | JOG-P-A8+_R |  |
| 15  | JOG-P-A8-_R |  |



● Operation error code

| Bit     | Name                 | Code     | Description  |
|---------|----------------------|----------|--|
| 0 to 15 | Operation error code | 0        | No error is detected.  |
|         |                      | 1        | The robot exceeded the operable range.   |
|         |                      | 2        | The robot approached the singularity during interpolation operation. Or interpolation operation was started from near singularity.   |
|         |                      | 3        | The command position of the TCP exceeded the TCP position limit.   |
|         |                      | 4        | The command speed of the TCP exceeded the maximum TCP speed.   |
|         |                      | 5 to 9   | When the "User-defined area operation setting" parameter was set to "2: AREA output, no entry with alarm", the command position of the TCP entered the no entry area (user-defined area).<br>5: User-defined area 0<br>6: User-defined area 1<br>7: User-defined area 2<br>8: User-defined area 3<br>9: User-defined area 4  |
|         |                      | 10 to 13 | The setting of circular interpolation operation is wrong.<br>10: When the circular arc setting method is "0: Radius setting (180° or less)" or "1: Radius setting (180° or more)", the radius was too short. Refer to p.52 for details about the radius setting.<br>11: When the circular arc setting method is "0: Radius setting (180° or less)" or "1: Radius setting (180° or more)", the X and Y coordinates of the target position were the same as the present position.<br>12: When the circular arc setting method is "2: Center position setting," the wrong target position was set. Refer to p.53 for details about the center position setting.<br>13: Circular interpolation operation could not be executed because the operation distance was too short. |
|         |                      | 14 to 16 | The setting of arch interpolation operation is wrong.<br>14: The X and Y coordinates of the target position were the same as the present position.<br>15: The arch trajectory could not be generated because the Z coordinate of the target position was too high.<br>16: The signs of the values set to "A: Ascending height" and "B: Maximum height" were different.   |
|         |                      | 17       | Operation was executed in a state where there was an axis which home was not set.  |
|         |                      | 18       | The base coordinate system is selected with a robot other than a Cartesian robot. Or high-speed return-to-origin operation was executed in a state where the origin offsets of X, Y, and Z of the selected user coordinate system were all set to zero.  |
|         |                      | 20 to 27 | There is an axis that exceeded the axis position limit.<br>20 (axis 1) to 27 (axis 8)*   |
|         |                      | 30 to 37 | There is an axis that exceeded the maximum speed. Or the operation where the wrist joint part of a SCARA robot or a vertical articulated robot passes through the negative side of the Y-axis was executed.<br>30 (axis 1) to 37 (axis 8)*   |
|         |                      | 39       | Interpolation operation was executed while a vertically articulated robot was in an incorrect posture. Or the Delta robot was executed the operation from an incorrect posture.  |
|         |                      | 40 to 47 | There is an axis that a load exceeded 100 % during operation.<br>40 (axis 1) to 47 (axis 8)*   |
|         |                      | 50 to 57 | There is an axis that has put into a non-excitation state during operation.<br>50 (axis 1) to 57 (axis 8)*   |
|         |                      | 60 to 67 | There is an axis that an alarm was generated during operation.<br>60 (axis 1) to 67 (axis 8)*  |



| Bit     | Name                 | Code     | Description  |
|---------|----------------------|----------|--|
| 0 to 15 | Operation error code | 70 to 77 | <ul style="list-style-type: none"> <li>There is an axis that the angle fell outside the range of <math>-170^{\circ}</math> to <math>170^{\circ}</math> during operation. In the case of the base rotation axis or wrist drive axis of a SCARA (360-degree rotation) robot, there is an axis that the angle fell outside the range of <math>-360^{\circ}</math> to <math>360^{\circ}</math>. 70 (axis 1) to 77 (axis 8)*</li> <li>There is an axis at which the wrap range of the driver is exceeded. 70 (axis 1) to 77 (axis 8)*</li> <li>With a SCARA robot or a vertically articulated robot that the base axis rotates, operation that causes the TCP position or the wrist joint to move beyond the negative side of the Y-axis of the base coordinate system (directly behind the robot) was executed.</li> </ul> |
|         |                      | 80 to 87 | There is an axis that communication with the controller was failed. 80 (axis 1) to 87 (axis 8)*  |
|         |                      | 97       | The setting of arch interpolation operation is wrong. The arch trajectory could not be generated because the Z coordinate of the target position was too small.  |
|         |                      | 100, 101 | The maximum value of the rotation axis limit was exceeded.<br>100: The maximum speed set in the rotation axis limit was exceeded.<br>101: The maximum acceleration/deceleration set in the rotation axis limit was exceeded.   |
|         |                      | 110      | The imaging position of the camera was failed to transform to the base coordinate system of the robot.   |
|         |                      | 111, 112 | Operation using the imaging position of the camera was executed in a state where calibration was not performed. Refer to p.129 for the calibration.<br>111: Camera No.1<br>112: Camera No.2  |
|         |                      | 113      | Operation referring to "Direct data operation position" was executed in a state where an out-of-range value was set in "Direct data operation position" of Implicit communication. The commands to be in use are the following. <ul style="list-style-type: none"> <li>PTP (Ref. DD) command</li> <li>Linear (Ref. DD) command</li> <li>Arch (Ref. DD) command</li> </ul>  |
|         |                      | 114      | Operation referring to "Direct data operation camera coordinate" was executed in a state where an out-of-range value was set in "Direct data operation camera coordinate" of Implicit communication. The commands to be in use are the following. <ul style="list-style-type: none"> <li>PTP (Ref. DD) command</li> <li>Linear (Ref. DD) command</li> <li>Arch (Ref. DD) command</li> </ul>  |

\* The axis 7 is the end-effector 1 and the axis 8 is the end-effector 2.

#### ● Present alarm of controller

| Bit     | Name                        | Description  |
|---------|-----------------------------|--|
| 0 to 15 | Present alarm of controller | This indicates the alarm code being generated in the controller. |

#### ● Information of controller

| Bit     | Name                      | Description  |
|---------|---------------------------|--|
| 0 to 31 | Information of controller | This indicates the information code being generated in the controller. |



- **Present alarm code of axis**

| Bit      | Name                         | Description   |
|----------|------------------------------|---|
| 0 to 7   | Present alarm code of axis 1 | This indicates the alarm code being generated in the axis 1.                  |
| 8 to 15  | Present alarm code of axis 2 | This indicates the alarm code being generated in the axis 2.                  |
| 16 to 23 | Present alarm code of axis 3 | This indicates the alarm code being generated in the axis 3.                  |
| 24 to 31 | Present alarm code of axis 4 | This indicates the alarm code being generated in the axis 4.                  |
| 32 to 39 | Present alarm code of axis 5 | This indicates the alarm code being generated in the axis 5.                  |
| 40 to 47 | Present alarm code of axis 6 | This indicates the alarm code being generated in the axis 6.                  |
| 48 to 55 | Present alarm code of axis 7 | This indicates the alarm code being generated in the axis 7 (end-effector 1). |
| 56 to 63 | Present alarm code of axis 8 | This indicates the alarm code being generated in the axis 8 (end-effector 2). |

- **Operation mode display**

| Bit     | Name                   | Description  |
|---------|------------------------|--|
| 0 to 15 | Operation mode display | This indicates the operation mode.<br>0: Automatic mode<br>1: Operation prohibition mode |

- **Present robot type**

| Bit    | Name               | Description  |
|--------|--------------------|--|
| 0 to 7 | Present robot type | This indicates the robot type having set.<br>0: Not set<br>1: Cartesian robot<br>2: SCARA<br>3: Vertically articulated<br>4: Delta robot<br>5: Polar/Cylindrical |

- **Number of axes**

| Bit     | Name           | Description  |
|---------|----------------|--|
| 8 to 15 | Number of axes | This is the number of axes having set. An end effector is also included. |

- **Controller assignable monitor 0**

| Bit     | Name                            | Description  |
|---------|---------------------------------|--|
| 0 to 31 | Controller assignable monitor 0 | This indicates the monitor value of the "Controller assignable monitor address 0" parameter. |

- **Controller assignable monitor 1**

| Bit     | Name                            | Description  |
|---------|---------------------------------|--|
| 0 to 31 | Controller assignable monitor 1 | This indicates the monitor value of the "Controller assignable monitor address 1" parameter. |

- **Controller assignable monitor 2**

| Bit     | Name                            | Description  |
|---------|---------------------------------|--|
| 0 to 31 | Controller assignable monitor 2 | This indicates the monitor value of the "Controller assignable monitor address 2" parameter. |

- **Controller assignable monitor 3**

| Bit     | Name                            | Description  |
|---------|---------------------------------|--|
| 0 to 31 | Controller assignable monitor 3 | This indicates the monitor value of the "Controller assignable monitor address 3" parameter. |



- (DD) TRIG\_R

| Bit     | Name                         | Description                            |
|---------|------------------------------|--|
| 0 to 15 | Direct data operation TRIG_R | Output in response to an input signal. |

- (DD) Status

| Bit     | Name                            | Description  |
|---------|---------------------------------|--|
| 0       | Direct data operation SET-ERR   | Output when the parameter beginning with (DD) is out of the setting range among "3-1 Implicit message format" on p.83.   |
| 1       | Direct data operation EXE-ERR   | Output when direct data operation is failed to execute.  |
| 2       | DCMD-RDY                        | Output when linear interpolation operation by direct data operation is ready to start.   |
| 3 to 7  | Reserved                        | 0 is returned.   |
| 8       | Direct data operation SET-C-ERR | Output when "(DD) Camera number selection" in "3-1 Implicit message format" on p.83 is out of range or a camera number that has not been calibrated is selected. |
| 9 to 15 | Reserved                        | 0 is returned.   |

- (DD) Operation mode\_R

| Bit     | Name  | Description   |
|---------|---|---|
| 0 to 15 | Direct data operation operation mode response | Output in response to the direct data operation operation mode. |

- (DD) Axis selection\_R

| Bit    | Name   | Description   |
|--------|--|---|
| 0 to 7 | Direct data operation axis selection (number) response | Output in response to the axis number performing direct data operation. |

- (DD) TCP operation target coordinates selection\_R

| Bit | Name   | Description  |
|-----|--|--|
| 0   | Direct data operation TCP operation target coordinates selection response X  | This indicates the coordinate performing direct data operation in bits.<br>0: Disable, 1: Enable |
| 1   | Direct data operation TCP operation target coordinates selection response Y  |  |
| 2   | Direct data operation TCP operation target coordinates selection response Z  |  |
| 3   | Direct data operation TCP operation target coordinates selection response Rx |  |
| 4   | Direct data operation TCP operation target coordinates selection response Ry |  |
| 5   | Direct data operation TCP operation target coordinates selection response Rz |  |
| 6   | Direct data operation TCP operation target coordinates selection response E1 |  |
| 7   | Direct data operation TCP operation target coordinates selection response E2 |  |

- Feedback position / Command position X coordinate

| Bit     | Name  | Description   |
|---------|---|---|
| 0 to 31 | Feedback position / Command position X coordinate | This indicates the feedback position or command position of the X coordinate. |



- **Feedback position / Command position Y coordinate**

| Bit     | Name  | Description   |
|---------|---|---|
| 0 to 31 | Feedback position / Command position Y coordinate | This indicates the feedback position or command position of the Y coordinate. |

- **Feedback position / Command position Z coordinate**

| Bit     | Name  | Description   |
|---------|---|---|
| 0 to 31 | Feedback position / Command position Z coordinate | This indicates the feedback position or command position of the Z coordinate. |

- **Feedback position / Command position Rx coordinate**

| Bit     | Name   | Description  |
|---------|--|--|
| 0 to 31 | Feedback position / Command position Rx coordinate | This indicates the feedback position or command position of the Rx coordinate. |

- **Feedback position / Command position Ry coordinate**

| Bit     | Name   | Description  |
|---------|--|--|
| 0 to 31 | Feedback position / Command position Ry coordinate | This indicates the feedback position or command position of the Ry coordinate. |

- **Feedback position / Command position Rz coordinate**

| Bit     | Name   | Description  |
|---------|--|--|
| 0 to 31 | Feedback position / Command position Rz coordinate | This indicates the feedback position or command position of the Rz coordinate. |

- **Feedback position / Command position E1 coordinate**

| Bit     | Name   | Description  |
|---------|--|--|
| 0 to 31 | Feedback position / Command position E1 coordinate | This indicates the feedback position or command position of the E1 coordinate. |

- **Feedback position / Command position E2 coordinate**

| Bit     | Name   | Description  |
|---------|--|--|
| 0 to 31 | Feedback position / Command position E2 coordinate | This indicates the feedback position or command position of the E2 coordinate. |

- **TCP Feedback speed / Command speed (X, Y, Z)**

| Bit     | Name                                       | Description   |
|---------|--|---|
| 0 to 31 | TCP Feedback speed / Command speed X, Y, Z | This indicates the feedback speed or command speed of the TCP. This is the speed on the Cartesian coordinates of XYZ. |

- **Present handed system**

| Bit     | Name                  | Description  |
|---------|-----------------------|--|
| 0 to 15 | Present handed system | This indicates the present handed system.<br>0: Not supported, 1: Right-handed system, 2: Left-handed system |

- **Present tool offset**

| Bit     | Name                | Description  |
|---------|---------------------|--|
| 0 to 15 | Present tool offset | This indicates the present tool offset number.<br>1: Tool offset 1, 2: Tool offset 2 |



- **Axis 1 assignable monitor 0**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 1 assignable monitor 0 | This indicates the monitor value of the "Driver assignable monitor address 0" parameter for the axis 1. |

- **Axis 1 assignable monitor 1**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 1 assignable monitor 1 | This indicates the monitor value of the "Driver assignable monitor address 1" parameter for the axis 1. |

- **Axis 1 assignable monitor 2**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 1 assignable monitor 2 | This indicates the monitor value of the "Driver assignable monitor address 2" parameter for the axis 1. |

- **Axis 2 assignable monitor 0**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 2 assignable monitor 0 | This indicates the monitor value of the "Driver assignable monitor address 0" parameter for the axis 2. |

- **Axis 2 assignable monitor 1**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 2 assignable monitor 1 | This indicates the monitor value of the "Driver assignable monitor address 1" parameter for the axis 2. |

- **Axis 2 assignable monitor 2**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 2 assignable monitor 2 | This indicates the monitor value of the "Driver assignable monitor address 2" parameter for the axis 2. |

- **Axis 3 assignable monitor 0**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 3 assignable monitor 0 | This indicates the monitor value of the "Driver assignable monitor address 0" parameter for the axis 3. |

- **Axis 3 assignable monitor 1**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 3 assignable monitor 1 | This indicates the monitor value of the "Driver assignable monitor address 1" parameter for the axis 3. |

- **Axis 3 assignable monitor 2**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 3 assignable monitor 2 | This indicates the monitor value of the "Driver assignable monitor address 2" parameter for the axis 3. |

- **Axis 4 assignable monitor 0**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 4 assignable monitor 0 | This indicates the monitor value of the "Driver assignable monitor address 0" parameter for the axis 4. |



- **Axis 4 assignable monitor 1**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 4 assignable monitor 1 | This indicates the monitor value of the "Driver assignable monitor address 1" parameter for the axis 4. |

- **Axis 4 assignable monitor 2**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 4 assignable monitor 2 | This indicates the monitor value of the "Driver assignable monitor address 2" parameter for the axis 4. |

- **Axis 5 assignable monitor 0**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 5 assignable monitor 0 | This indicates the monitor value of the "Driver assignable monitor address 0" parameter for the axis 5. |

- **Axis 5 assignable monitor 1**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 5 assignable monitor 1 | This indicates the monitor value of the "Driver assignable monitor address 1" parameter for the axis 5. |

- **Axis 5 assignable monitor 2**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 5 assignable monitor 2 | This indicates the monitor value of the "Driver assignable monitor address 2" parameter for the axis 5. |

- **Axis 6 assignable monitor 0**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 6 assignable monitor 0 | This indicates the monitor value of the "Driver assignable monitor address 0" parameter for the axis 6. |

- **Axis 6 assignable monitor 1**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 6 assignable monitor 1 | This indicates the monitor value of the "Driver assignable monitor address 1" parameter for the axis 6. |

- **Axis 6 assignable monitor 2**

| Bit     | Name                        | Description   |
|---------|-----------------------------|---|
| 0 to 31 | Axis 6 assignable monitor 2 | This indicates the monitor value of the "Driver assignable monitor address 2" parameter for the axis 6. |

- **Read parameter target selection\_R**

| Bit     | Name                              | Description   |
|---------|-----------------------------------|---|
| 0 to 15 | Read parameter target selection_R | This indicates a response of the read parameter target selection.<br>0: Controller<br>1 to 8: Axis number |

- **Read parameter ID\_R**

| Bit     | Name                | Description   |
|---------|---------------------|---|
| 0 to 15 | Read parameter ID_R | This indicates a response of the read parameter ID. |



- **Read/write status**

| Bit    | Name       | Description   |
|--------|------------|---|
| 0 to 6 | Reserved   | 0 is returned.  |
| 7      | RD-ERR     | Output when an error occurred in reading.<br>If reading is performed properly, the RD-ERR is turned OFF                                     |
| 8      | WR-END     | Output in response to the WR-REQ. The WR-END is also turned ON while the WR-REQ is ON.<br>OFF: Write request waiting<br>ON: Write completed |
| 9      | SYS-BSY    | Output when the controller is in an internal processing state.  |
| 10     | Reserved   | 0 is returned.  |
| 11     | WR-SET-ERR | Output when the write parameter ID or write data is out of the setting range.   |
| 12     | WR-IF-ERR  | Output when writing cannot be executed while user I/F is being communicated.  |
| 13     | WR-NV-ERR  | Output when writing cannot be executed while the non-volatile memory is processed.  |
| 14     | WR-EXE-ERR | Output when a command cannot be executed.   |
| 15     | WR-ERR     | Output when an error occurred in writing.<br>If the WR-REQ is turned OFF or writing is performed properly, the WR-ERR is turned OFF.        |

- **Write parameter target selection\_R**

| Bit     | Name                               | Description   |
|---------|------------------------------------|---|
| 0 to 15 | Write parameter target selection_R | This indicates a response of the write parameter target selection.<br>0: Controller |

- **Write parameter ID\_R**

| Bit     | Name                 | Description  |
|---------|----------------------|--|
| 0 to 15 | Write parameter ID_R | This indicates a response of the write parameter ID. |

- **Read data**

| Bit     | Name      | Description   |
|---------|-----------|---|
| 0 to 31 | Read data | This indicates the setting value of the parameter shown in the read parameter ID_R. |

- **Axis 7 assignable monitor 0**

| Bit     | Name                        | Description  |
|---------|-----------------------------|--|
| 0 to 31 | Axis 7 assignable monitor 0 | This indicates the monitor value of the "Driver assignable monitor address 0" parameter for the axis 7 (end-effector 1). |

- **Axis 7 assignable monitor 1**

| Bit     | Name                        | Description  |
|---------|-----------------------------|--|
| 0 to 31 | Axis 7 assignable monitor 1 | This indicates the monitor value of the "Driver assignable monitor address 1" parameter for the axis 7 (end-effector 1). |

- **Axis 7 assignable monitor 2**

| Bit     | Name                        | Description  |
|---------|-----------------------------|--|
| 0 to 31 | Axis 7 assignable monitor 2 | This indicates the monitor value of the "Driver assignable monitor address 2" parameter for the axis 7 (end-effector 1). |

- **Axis 8 assignable monitor 0**

| Bit     | Name                        | Description  |
|---------|-----------------------------|--|
| 0 to 31 | Axis 8 assignable monitor 0 | This indicates the monitor value of the "Driver assignable monitor address 0" parameter for the axis 8 (end-effector 2). |



- **Axis 8 assignable monitor 1**

| Bit     | Name                        | Description  |
|---------|-----------------------------|--|
| 0 to 31 | Axis 8 assignable monitor 1 | This indicates the monitor value of the "Driver assignable monitor address 1" parameter for the axis 8 (end-effector 2). |

- **Axis 8 assignable monitor 2**

| Bit     | Name                        | Description  |
|---------|-----------------------------|--|
| 0 to 31 | Axis 8 assignable monitor 2 | This indicates the monitor value of the "Driver assignable monitor address 2" parameter for the axis 8 (end-effector 2). |

### 3-3 Output data

Data transferred from a scanner to the controller is called Output data.

- **Output data format**

Contents of the Output data are as follows. Refer to p.101 for details. The order of data is in little-endian format.

| Assembly Instance | Attribute | Byte     | Size (Byte) | Description                                     |
|-------------------|-----------|----------|-------------|---|
| 101               | 3         | 0, 1     | 2           | Remote I/O (R-IN)                               |
|                   |           | 2, 3     | 2           | Program number selection                        |
|                   |           | 4 to 7   | 4           | Controller control input                        |
|                   |           | 8, 9     | 2           | JOG operation input                             |
|                   |           | 10, 11   | 2           | Inching operation input                         |
|                   |           | 12, 13   | 2           | JOG operation input (axis)                      |
|                   |           | 14, 15   | 2           | Inching operation input (axis)                  |
|                   |           | 16 to 19 | 4           | JOG operating speed (X, Y, Z, Tx, Ty, Tz)       |
|                   |           | 20 to 23 | 4           | JOG operating speed (Rx, Ry, Rz)                |
|                   |           | 24 to 27 | 4           | JOG operating speed (End effector 1, 2)         |
|                   |           | 28 to 31 | 4           | JOG operating speed (axis)                      |
|                   |           | 32 to 35 | 4           | JOG operation travel amount (X, Y, Z)           |
|                   |           | 36 to 39 | 4           | JOG operation travel amount (Rx, Ry, Rz)        |
|                   |           | 40 to 43 | 4           | JOG operation travel amount (End effector 1, 2) |
|                   |           | 44 to 47 | 4           | JOG operation travel amount (axis)              |
|                   |           | 48 to 51 | 4           | Input signal for program operation              |
|                   |           | 52, 53   | 2           | (DD) TRIG                                       |
|                   |           | 54, 55   | 2           | Reserved  |
|                   |           | 56, 57   | 2           | (DD) Operation mode                             |
|                   |           | 58       | 1           | (DD) Axis selection                             |
|                   |           | 59       | 1           | (DD) TCP operation target coordinates selection |
|                   |           | 60 to 63 | 4           | (DD) Position X coordinate                      |
|                   |           | 64 to 67 | 4           | (DD) Position Y coordinate                      |
|                   |           | 68 to 71 | 4           | (DD) Position Z coordinate                      |
|                   |           | 72 to 75 | 4           | (DD) Position Rx coordinate                     |
|                   |           | 76 to 79 | 4           | (DD) Position Ry coordinate                     |
|                   |           | 80 to 83 | 4           | (DD) Position Rz coordinate                     |
|                   |           | 84 to 87 | 4           | (DD) Position E1 coordinate                     |
|                   |           | 88 to 91 | 4           | (DD) Position E2 coordinate                     |
|                   |           | 92 to 95 | 4           | (DD) Speed                                      |
|                   |           | 96 to 99 | 4           | (DD) Acceleration                               |



| Assembly Instance | Attribute | Byte       | Size (Byte) | Description   |
|-------------------|-----------|------------|-------------|---|
| 101               | 3         | 100 to 103 | 4           | (DD) Deceleration   |
|                   |           | 104 to 107 | 4           | (DD) Position (axis)  |
|                   |           | 108, 109   | 2           | (DD) End-effector 1, 2 operation mode                                 |
|                   |           | 110, 111   | 2           | (DD) End-effector 1, 2 push current                                   |
|                   |           | 112, 113   | 2           | (DD) PTP operation handed system selection                            |
|                   |           | 114, 115   | 2           | (DD) Circular interpolation operation setting method                  |
|                   |           | 116 to 119 | 4           | (DD) Circular interpolation operation radius                          |
|                   |           | 120 to 123 | 4           | (DD) Circular interpolation operation center coordinate / via-point X |
|                   |           | 124 to 127 | 4           | (DD) Circular interpolation operation center coordinate / via-point Y |
|                   |           | 128 to 131 | 4           | (DD) Arch interpolation operation ascending height                    |
|                   |           | 132 to 135 | 4           | (DD) Arch interpolation operation maximum height                      |
|                   |           | 136 to 139 | 4           | (DD) Arch interpolation operation descending start height             |
|                   |           | 140, 141   | 2           | (DD) Pallet number selection  |
|                   |           | 142, 143   | 2           | (DD) Tool offset selection  |
|                   |           | 144, 145   | 2           | (DD) Coordinate system selection                                      |
|                   |           | 146, 147   | 2           | (DD) Camera number selection  |
|                   |           | 148 to 151 | 4           | (DD) Camera coordinate X coordinate                                   |
|                   |           | 152 to 155 | 4           | (DD) Camera coordinate Y coordinate                                   |
|                   |           | 156 to 159 | 4           | (DD) Camera coordinate Rz coordinate                                  |
|                   |           | 160, 161   | 2           | (DD) PTP operation 1st Link rotation angle setting                    |
|                   |           | 162 to 171 | 10          | Reserved  |
|                   |           | 172, 173   | 2           | Read parameter target selection                                       |
|                   |           | 174, 175   | 2           | Read parameter ID   |
|                   |           | 176, 177   | 2           | Reserved  |
|                   |           | 178, 179   | 2           | Write request   |
|                   |           | 180, 181   | 2           | Write parameter target selection                                      |
|                   |           | 182, 183   | 2           | Write parameter ID  |
|                   |           | 184 to 187 | 4           | Write data  |
|                   |           | 188 to 227 | 40          | Reserved  |



## ■ Details of Output data

### ● Remote I/O (R-IN)

These are input signals accessed via EtherNet/IP.

The assignments of signals can be changed using the “R-IN input function” parameters.

| Bit | Name   | Description   | Initial assignment |
|-----|--------|---|--------------------|
| 0   | R-IN0  | Execute the signal assigned with the “R-IN input function” parameter. | 192: PRG-RIN0      |
| 1   | R-IN1  |   | 193: PRG-RIN1      |
| 2   | R-IN2  |   | 194: PRG-RIN2      |
| 3   | R-IN3  |   | 195: PRG-RIN3      |
| 4   | R-IN4  |   | 196: PRG-RIN4      |
| 5   | R-IN5  |   | 197: PRG-RIN5      |
| 6   | R-IN6  |   | 198: PRG-RIN6      |
| 7   | R-IN7  |   | 199: PRG-RIN7      |
| 8   | R-IN8  |   | 200: PRG-RIN8      |
| 9   | R-IN9  |   | 201: PRG-RIN9      |
| 10  | R-IN10 |   | 202: PRG-RIN10     |
| 11  | R-IN11 |   | 203: PRG-RIN11     |
| 12  | R-IN12 |   | 204: PRG-RIN12     |
| 13  | R-IN13 |   | 205: PRG-RIN13     |
| 14  | R-IN14 |   | 206: PRG-RIN14     |
| 15  | R-IN15 |   | 207: PRG-RIN15     |

### ● Program number selection

| Bit     | Name     | Description                                    | Initial value |
|---------|----------|--|---------------|
| 0       | M0       | The program number is selected using six bits. | 0             |
| 1       | M1       |  |               |
| 2       | M2       |  |               |
| 3       | M3       |  |               |
| 4       | M4       |  |               |
| 5       | M5       |  |               |
| 6 to 15 | Reserved | A value is disregarded.                        | 0             |



### ● Controller control input

| Bit      | Name         | Description   |
|----------|--------------|---|
| 0        | STOP         | This is used to stop the operation of the robot.  |
| 1        | PAUSE        | This is used to stop the operation of the robot temporarily.  |
| 2        | START        | This is used to execute the operation of the program number being selected. After operation is started, the command having set is executed automatically.   |
| 3        | SSTART       | This is used to execute the operation of the program number being selected. After operation is started and the command having set is completed, the next command is executed when turning the SSTART input OFF and then ON again. |
| 4        | Reserved     | A value is disregarded.   |
| 5        | Reserved     | A value is disregarded.   |
| 6        | Reserved     | A value is disregarded.   |
| 7        | ALM-RST      | This is used to reset the alarm being generated presently.  |
| 8        | Reserved     | A value is disregarded.   |
| 9        | INFO-CLR     | This is used to clear the information status.   |
| 10       | PRG-DOUT-CLR | This is used to turn the output status OFF for all of PRG-DOUT0 to PRG-DOUT15.  |
| 11       | PRG-ROUT-CLR | This is used to turn the output status OFF for all of PRG-ROUT0 to PRG-ROUT31.  |
| 12       | ETO-CLR-DRV  | This is used to turn the ETO-CLR input ON for all drivers except <b>AZD-KR2D</b> .  |
| 13       | CRNT-LMT1    | This is used to execute the current limit.  |
| 14       | SPD-LMT1     | This is used to execute the speed limit.  |
| 15       | Reserved     | A value is disregarded.   |
| 16       | ZHOME-ALL    | This is used to execute high-speed return-to-origin operation. All coordinates (X, Y, Z, Rx, Ry, Rz, E1, E2) are returned to the origin, respectively.  |
| 17       | ZHOME-RB     | This is used to execute high-speed return-to-origin operation. Coordinates other than the end effector (X, Y, Z, Rx, Ry, Rz) are returned to the origin, respectively.  |
| 18       | ZHOME-E1     | This is used to execute high-speed return-to-origin operation. The coordinates of the end effector 1 are returned to the origin.  |
| 19       | ZHOME-E2     | This is used to execute high-speed return-to-origin operation. The coordinates of the end effector 2 are returned to the origin.  |
| 20       | Reserved     | A value is disregarded.   |
| 21       | FREE-RB      | This is used to shut off the current of all motion axes (motors driving the robot) to put all motors into a non-excitation state.   |
| 22       | FREE-E1      | This is used to shut off the current of the end-effector axis 1 (a motor driving the end effector 1) to put the motor into a non-excitation state.  |
| 23       | FREE-E2      | This is used to shut off the current of the end-effector axis 2 (a motor driving the end effector 2) to put the motor into a non-excitation state.  |
| 24 to 31 | Reserved     | A value is disregarded.   |



### ● JOG operation input

| Bit | Name    | Description  |
|-----|---------|--|
| 0   | JOG-X+  | This is used to execute JOG operation in the positive direction of X.  |
| 1   | JOG-X-  | This is used to execute JOG operation in the negative direction of X.  |
| 2   | JOG-Y+  | This is used to execute JOG operation in the positive direction of Y.  |
| 3   | JOG-Y-  | This is used to execute JOG operation in the negative direction of Y.  |
| 4   | JOG-Z+  | This is used to execute JOG operation in the positive direction of Z.  |
| 5   | JOG-Z-  | This is used to execute JOG operation in the negative direction of Z.  |
| 6   | JOG-RX+ | This is used to execute JOG operation in the positive direction of Rx. |
| 7   | JOG-RX- | This is used to execute JOG operation in the negative direction of Rx. |
| 8   | JOG-RY+ | This is used to execute JOG operation in the positive direction of Ry. |
| 9   | JOG-RY- | This is used to execute JOG operation in the negative direction of Ry. |
| 10  | JOG-RZ+ | This is used to execute JOG operation in the positive direction of Rz. |
| 11  | JOG-RZ- | This is used to execute JOG operation in the negative direction of Rz. |
| 12  | JOG-E1+ | This is used to execute JOG operation in the positive direction of E1. |
| 13  | JOG-E1- | This is used to execute JOG operation in the negative direction of E1. |
| 14  | JOG-E2+ | This is used to execute JOG operation in the positive direction of E2. |
| 15  | JOG-E2- | This is used to execute JOG operation in the negative direction of E2. |

### ● Inching operation input

| Bit | Name      | Description  |
|-----|-----------|--|
| 0   | JOG-P-X+  | This is used to execute inching operation in the positive direction of X.  |
| 1   | JOG-P-X-  | This is used to execute inching operation in the negative direction of X.  |
| 2   | JOG-P-Y+  | This is used to execute inching operation in the positive direction of Y.  |
| 3   | JOG-P-Y-  | This is used to execute inching operation in the negative direction of Y.  |
| 4   | JOG-P-Z+  | This is used to execute inching operation in the positive direction of Z.  |
| 5   | JOG-P-Z-  | This is used to execute inching operation in the negative direction of Z.  |
| 6   | JOG-P-RX+ | This is used to execute inching operation in the positive direction of Rx. |
| 7   | JOG-P-RX- | This is used to execute inching operation in the negative direction of Rx. |
| 8   | JOG-P-RY+ | This is used to execute inching operation in the positive direction of Ry. |
| 9   | JOG-P-RY- | This is used to execute inching operation in the negative direction of Ry. |
| 10  | JOG-P-RZ+ | This is used to execute inching operation in the positive direction of Rz. |
| 11  | JOG-P-RZ- | This is used to execute inching operation in the negative direction of Rz. |
| 12  | JOG-P-E1+ | This is used to execute inching operation in the positive direction of E1. |
| 13  | JOG-P-E1- | This is used to execute inching operation in the negative direction of E1. |
| 14  | JOG-P-E2+ | This is used to execute inching operation in the positive direction of E2. |
| 15  | JOG-P-E2- | This is used to execute inching operation in the negative direction of E2. |



- JOG operation input (axis)

| Bit | Name    | Description  |
|-----|---------|--|
| 0   | JOG-A1+ | This is used to execute JOG operation in the forward direction of the axis 1.                  |
| 1   | JOG-A1– | This is used to execute JOG operation in the reverse direction of the axis 1.                  |
| 2   | JOG-A2+ | This is used to execute JOG operation in the forward direction of the axis 2.                  |
| 3   | JOG-A2– | This is used to execute JOG operation in the reverse direction of the axis 2.                  |
| 4   | JOG-A3+ | This is used to execute JOG operation in the forward direction of the axis 3.                  |
| 5   | JOG-A3– | This is used to execute JOG operation in the reverse direction of the axis 3.                  |
| 6   | JOG-A4+ | This is used to execute JOG operation in the forward direction of the axis 4.                  |
| 7   | JOG-A4– | This is used to execute JOG operation in the reverse direction of the axis 4.                  |
| 8   | JOG-A5+ | This is used to execute JOG operation in the forward direction of the axis 5.                  |
| 9   | JOG-A5– | This is used to execute JOG operation in the reverse direction of the axis 5.                  |
| 10  | JOG-A6+ | This is used to execute JOG operation in the forward direction of the axis 6.                  |
| 11  | JOG-A6– | This is used to execute JOG operation in the reverse direction of the axis 6.                  |
| 12  | JOG-A7+ | This is used to execute JOG operation in the forward direction of the axis 7 (end-effector 1). |
| 13  | JOG-A7– | This is used to execute JOG operation in the reverse direction of the axis 7 (end-effector 1). |
| 14  | JOG-A8+ | This is used to execute JOG operation in the forward direction of the axis 8 (end-effector 2). |
| 15  | JOG-A8– | This is used to execute JOG operation in the reverse direction of the axis 8 (end-effector 2). |

- Inching operation input (axis)

| Bit | Name      | Description  |
|-----|-----------|--|
| 0   | JOG-P-A1+ | This is used to execute inching operation in the forward direction of the axis 1.                  |
| 1   | JOG-P-A1– | This is used to execute inching operation in the reverse direction of the axis 1.                  |
| 2   | JOG-P-A2+ | This is used to execute inching operation in the forward direction of the axis 2.                  |
| 3   | JOG-P-A2– | This is used to execute inching operation in the reverse direction of the axis 2.                  |
| 4   | JOG-P-A3+ | This is used to execute inching operation in the forward direction of the axis 3.                  |
| 5   | JOG-P-A3– | This is used to execute inching operation in the reverse direction of the axis 3.                  |
| 6   | JOG-P-A4+ | This is used to execute inching operation in the forward direction of the axis 4.                  |
| 7   | JOG-P-A4– | This is used to execute inching operation in the reverse direction of the axis 4.                  |
| 8   | JOG-P-A5+ | This is used to execute inching operation in the forward direction of the axis 5.                  |
| 9   | JOG-P-A5– | This is used to execute inching operation in the reverse direction of the axis 5.                  |
| 10  | JOG-P-A6+ | This is used to execute inching operation in the forward direction of the axis 6.                  |
| 11  | JOG-P-A6– | This is used to execute inching operation in the reverse direction of the axis 6.                  |
| 12  | JOG-P-A7+ | This is used to execute inching operation in the forward direction of the axis 7 (end-effector 1). |
| 13  | JOG-P-A7– | This is used to execute inching operation in the reverse direction of the axis 7 (end-effector 1). |
| 14  | JOG-P-A8+ | This is used to execute inching operation in the forward direction of the axis 8 (end-effector 2). |
| 15  | JOG-P-A8– | This is used to execute inching operation in the reverse direction of the axis 8 (end-effector 2). |



- JOG operating speed (X, Y, Z, Tx, Ty, Tz)

| Bit     | Name                                      | Description   | Initial value |
|---------|---|---|---------------|
| 0 to 31 | JOG operating speed (X, Y, Z, Tx, Ty, Tz) | This is used to set the operating speed for JOG operation and inching operation on the X, Y, and Z coordinates, and that for JOG operation on the Tx, Ty, and Tz coordinates.<br>[Setting range]<br>1 to 250,000 (1=0.001 mm/s) | 20,000        |

- JOG operating speed (Rx, Ry, Rz)

| Bit     | Name                             | Description   | Initial value |
|---------|----------------------------------|---|---------------|
| 0 to 31 | JOG operating speed (Rx, Ry, Rz) | This is used to set the operating speed for JOG operation and inching operation on the Rx, Ry, and Rz coordinates.<br>[Setting range]<br>1 to 250,000 (1=0.001 deg/s) | 10,000        |

- JOG operating speed (End effector 1, 2)

| Bit     | Name                                    | Description  | Initial value |
|---------|---|--|---------------|
| 0 to 31 | JOG operating speed (End effector 1, 2) | This is used to set the operating speed of the end effector 1 and end effector 2 for JOG operation and inching operation.<br>[Setting range]<br>1 to 250,000 (1=0.001 mm/s or 1=0.001 deg/s) | 1,000         |

- JOG operating speed (Axis)

| Bit     | Name                       | Description   | Initial value |
|---------|----------------------------|---|---------------|
| 0 to 31 | JOG operating speed (Axis) | This is used to set the operating speed for JOG operation and inching operation of the axis.<br>[Setting range]<br>1 to 250,000 (1=0.001 mm/s or 1=0.001 deg/s) | 10,000        |

- JOG operation travel amount (X, Y, Z)

| Bit     | Name                                  | Description   | Initial value |
|---------|---------------------------------------|---|---------------|
| 0 to 31 | JOG operation travel amount (X, Y, Z) | This is used to set the travel amount for inching operation on the X, Y, and Z coordinates.<br>[Setting range]<br>1 to 200,000 (1=0.001 mm) | 10,000        |

- JOG operation travel amount (Rx, Ry, Rz)

| Bit     | Name                                     | Description   | Initial value |
|---------|--|---|---------------|
| 0 to 31 | JOG operation travel amount (Rx, Ry, Rz) | This is used to set the travel amount for inching operation on the Rx, Ry, and Rz coordinates.<br>[Setting range]<br>1 to 200,000 (1=0.001 deg) | 5,000         |

- JOG operation travel amount (End effector 1, 2)

| Bit     | Name  | Description   | Initial value |
|---------|---|---|---------------|
| 0 to 31 | JOG operation travel amount (End effector 1, 2) | This is used to set the travel amount of the end effector 1 and end effector 2 for inching operation.<br>[Setting range]<br>10 to 100,000 (1=0.001 mm or 1=0.001 deg) | 1,000         |



- JOG operation travel amount (Axis)

| Bit     | Name                               | Description   | Initial value |
|---------|------------------------------------|---|---------------|
| 0 to 31 | JOG operation travel amount (Axis) | This is used to set the travel amount for inching operation of the axis.<br><b>[Setting range]</b><br>10 to 100,000 (1=0.001 mm or 1=0.001 deg) | 5,000         |

- Input for program operation

| Bit | Name      | Description   |
|-----|-----------|---|
| 0   | PRG-RIN0  | These are general-purpose input signals exclusively for remote input that can be set to "Wait (signal)" of the control command for program operation. |
| 1   | PRG-RIN1  |   |
| 2   | PRG-RIN2  |   |
| 3   | PRG-RIN3  |   |
| 4   | PRG-RIN4  |   |
| 5   | PRG-RIN5  |   |
| 6   | PRG-RIN6  |   |
| 7   | PRG-RIN7  |   |
| 8   | PRG-RIN8  |   |
| 9   | PRG-RIN9  |   |
| 10  | PRG-RIN10 |   |
| 11  | PRG-RIN11 |   |
| 12  | PRG-RIN12 |   |
| 13  | PRG-RIN13 |   |
| 14  | PRG-RIN14 |   |
| 15  | PRG-RIN15 |   |
| 16  | PRG-RIN16 |   |
| 17  | PRG-RIN17 |   |
| 18  | PRG-RIN18 |   |
| 19  | PRG-RIN19 |   |
| 20  | PRG-RIN20 |   |
| 21  | PRG-RIN21 |   |
| 22  | PRG-RIN22 |   |
| 23  | PRG-RIN23 |   |
| 24  | PRG-RIN24 |   |
| 25  | PRG-RIN25 |   |
| 26  | PRG-RIN26 |   |
| 27  | PRG-RIN27 |   |
| 28  | PRG-RIN28 |   |
| 29  | PRG-RIN29 |   |
| 30  | PRG-RIN30 |   |
| 31  | PRG-RIN31 |   |



● (DD) TRIG

| Bit     | Name                       | Description   | Initial value |
|---------|----------------------------|---|---------------|
| 0 to 15 | Direct data operation TRIG | <p>This is used to set the trigger for direct data operation.<br/>(About TRIG ⇨ p.123)</p> <p><b>[Setting range]</b></p> <p>–6: Operation command<br/> –5: Position (one of the following items: X, Y, Z, Rx, Ry, Rz, E1, E2, and axis)<br/> –4: Operating speed<br/> –3: Acceleration<br/> –2: Deceleration<br/> 0: Disable<br/> 1: All data updated</p> | 0             |

● (DD) Operation mode

| Bit     | Name                                 | Description  | Initial value |
|---------|--------------------------------------|--|---------------|
| 0 to 15 | Direct data operation operation mode | <p>This is used to set the operation mode or control command for direct data operation.</p> <p><b>[Setting range]</b></p> <p>0: Disable<br/> 1: PTP operation (absolute positioning)<br/> 2: PTP operation (relative positioning)<br/> 3: Linear interpolation operation (absolute positioning)<br/> 4: Linear interpolation operation (relative positioning)<br/> 5: Circular (CW) interpolation operation (absolute positioning)<br/> 6: Circular (CW) interpolation operation (relative positioning)<br/> 7: Circular (CCW) interpolation operation (absolute positioning)<br/> 8: Circular (CCW) interpolation operation (relative positioning)<br/> 9: Arch interpolation operation (absolute positioning)<br/> 10: Arch interpolation operation (relative positioning)<br/> 11: End-effector 1 operation (absolute positioning)<br/> 12: End-effector 1 operation (relative positioning)<br/> 13: Axis operation (absolute positioning)<br/> 14: Axis operation (relative positioning)<br/> 15: Circular interpolation_via-point (absolute positioning)<br/> 16: Circular interpolation_via-point (relative positioning)<br/> 17: Pallet_PTP operation (absolute positioning)<br/> 18: Pallet_PTP operation (relative positioning)<br/> 19: Pallet_Linear interpolation operation (absolute positioning)<br/> 20: Pallet_Linear interpolation operation (relative positioning)<br/> 21: Pallet_Arch interpolation operation (absolute positioning)<br/> 22: Pallet_Arch interpolation operation (relative positioning)<br/> 23: End-effector 2 operation (absolute positioning)<br/> 24: End-effector 2 operation (relative positioning)<br/> 25: Changing tool offset<br/> 26: Changing coordinate system<br/> 27: End-effector 1 + 2 operation (absolute position)<br/> 28: End-effector 1 + 2 operation (relative position)<br/> 29: PTP operation (camera imaging position)<br/> 30: Linear interpolation operation (camera imaging position)<br/> 31: Arch interpolation operation (camera imaging position)<br/> 32: Linear interpolation operation (tool coordinates)</p> | 0             |

● (DD) Axis selection

| Bit    | Name                                 | Description  | Initial value |
|--------|--------------------------------------|--|---------------|
| 0 to 7 | Direct data operation axis selection | <p>This is used to select the axis number performing direct data operation.</p> <p><b>[Setting range]</b></p> <p>0: Disable<br/> 1 to 8: Axis number</p> | 0             |



- (DD) TCP operation target coordinates selection

| Bit | Name  | Description   | Initial value |
|-----|---|---|---------------|
| 0   | Direct data operation TCP operation target coordinates selection X  | These are used to select the coordinates performing direct data operation in bits.<br><b>[Setting range]</b><br>0: Disable<br>1: Enable | 0             |
| 1   | Direct data operation TCP operation target coordinates selection Y  |   |               |
| 2   | Direct data operation TCP operation target coordinates selection Z  |   |               |
| 3   | Direct data operation TCP operation target coordinates selection Rx |   |               |
| 4   | Direct data operation TCP operation target coordinates selection Ry |   |               |
| 5   | Direct data operation TCP operation target coordinates selection Rz |   |               |
| 6   | Direct data operation TCP operation target coordinates selection E1 |   |               |
| 7   | Direct data operation TCP operation target coordinates selection E2 |   |               |

- (DD) Position X coordinate

| Bit     | Name  | Description  | Initial value |
|---------|---|--|---------------|
| 0 to 31 | Direct data operation position X coordinate | This is used to set the target position of the X coordinate for direct data operation.<br><b>[Setting range]</b><br>–5,000,000 to 5,000,000 (1=0.001 mm) | 0             |

- (DD) Position Y coordinate

| Bit     | Name  | Description  | Initial value |
|---------|---|--|---------------|
| 0 to 31 | Direct data operation position Y coordinate | This is used to set the target position of the Y coordinate for direct data operation.<br><b>[Setting range]</b><br>–5,000,000 to 5,000,000 (1=0.001 mm) | 0             |

- (DD) Position Z coordinate

| Bit     | Name  | Description  | Initial value |
|---------|---|--|---------------|
| 0 to 31 | Direct data operation position Z coordinate | This is used to set the target position of the Z coordinate for direct data operation.<br><b>[Setting range]</b><br>–5,000,000 to 5,000,000 (1=0.001 mm) | 0             |

- (DD) Position Rx coordinate

| Bit     | Name   | Description  | Initial value |
|---------|--|--|---------------|
| 0 to 31 | Direct data operation position Rx coordinate | This is used to set the target position of the Rx coordinate for direct data operation.<br><b>[Setting range]</b><br>–270,000 to 270,000 (1=0.001 deg) | 0             |

- (DD) Position Ry coordinate

| Bit     | Name   | Description  | Initial value |
|---------|--|--|---------------|
| 0 to 31 | Direct data operation position Ry coordinate | This is used to set the target position of the Ry coordinate for direct data operation.<br><b>[Setting range]</b><br>–90,000 to 90,000 (1=0.001 deg) | 0             |



- (DD) Position Rz coordinate

| Bit     | Name   | Description   | Initial value |
|---------|--|---|---------------|
| 0 to 31 | Direct data operation position Rz coordinate | This is used to set the target position of the Rz coordinate for direct data operation.<br>[Setting range]<br>-270,000 to 270,000 (1=0.001 deg) | 0             |

- (DD) Position E1 coordinate

| Bit     | Name   | Description  | Initial value |
|---------|--|--|---------------|
| 0 to 31 | Direct data operation position E1 coordinate | This is used to set the target position of the end effector 1 for direct data operation.<br>[Setting range]<br>-5,000,000 to 5,000,000 (1=0.001 mm or 1=0.001 deg) | 0             |

- (DD) Position E2 coordinate

| Bit     | Name   | Description  | Initial value |
|---------|--|--|---------------|
| 0 to 31 | Direct data operation position E2 coordinate | This is used to set the target position of the end effector 2 for direct data operation.<br>[Setting range]<br>-5,000,000 to 5,000,000 (1=0.001 mm or 1=0.001 deg) | 0             |

- (DD) Speed

| Bit     | Name                                  | Description   | Initial value |
|---------|---------------------------------------|---|---------------|
| 0 to 31 | Direct data operation operating speed | This is used to set the target speed for direct data operation.<br>[Setting range]<br>10 to 2,000,000 (1=0.001 mm/s or 1=0.001 deg/s) | 20,000        |



If multiple coordinates are set at the target position or the start position S, the set speed may differ from the actual speed because the speed is automatically adjusted to the axis that takes the longest time to move.

- (DD) Acceleration

| Bit     | Name                               | Description   | Initial value |
|---------|------------------------------------|---|---------------|
| 0 to 31 | Direct data operation acceleration | This is used to set the acceleration for direct data operation.<br>[Setting range]<br>10 to 30,000,000 (1=0.001 mm/s <sup>2</sup> or 1=0.001 deg/s <sup>2</sup> ) | 1,200,000     |

- (DD) Deceleration

| Bit     | Name                               | Description   | Initial value |
|---------|------------------------------------|---|---------------|
| 0 to 31 | Direct data operation deceleration | This is used to set the deceleration for direct data operation.<br>[Setting range]<br>10 to 30,000,000 (1=0.001 mm/s <sup>2</sup> or 1=0.001 deg/s <sup>2</sup> ) | 1,200,000     |

- (DD) Position (axis)

| Bit     | Name                                  | Description  | Initial value |
|---------|---------------------------------------|--|---------------|
| 0 to 31 | Direct data operation position (axis) | This is used to set the target position of axis operation for direct data operation.<br>[Setting range]<br>-5,000,000 to 5,000,000 (1=0.001 mm or 1=0.001 deg) | 0             |



- (DD) End-effector 1, 2 operation mode

| Bit     | Name   | Description  | Initial value |
|---------|--|--|---------------|
| 0 to 15 | Direct data operation end-effector 1, 2 operation mode | This is used to select the operation mode of the end effector 1 and end effector 2 for direct data operation.<br>[Setting range]<br>0: Parameter setting is followed<br>1: Positioning operation<br>2: Push-motion positioning operation | 0             |

- (DD) End-effector 1, 2 push current

| Bit     | Name   | Description  | Initial value |
|---------|--|--|---------------|
| 0 to 15 | Direct data operation end-effector 1, 2 push current | This is used to set the push operating current of the end effector 1 and end effector 2 for direct data operation. This is enabled when the end-effector operation mode is set to "2: Push-motion positioning operation."<br>[Setting range]<br>1 to 1,000 (1=0.1 %) | 500           |

- (DD) PTP operation handed system selection

| Bit     | Name  | Description  | Initial value |
|---------|---|--|---------------|
| 0 to 15 | Direct data operation PTP operation handed system selection | This is used to set the handed system of PTP operation for direct data operation. It is enabled for a SCARA robot and a 6-axis vertically articulated robot.<br>[Setting range]<br>0 : No change from present handed system<br>1 : Right-handed system<br>2 : Left-handed system<br>3 : Change oppositely from present handed system | 0             |

- (DD) Circular interpolation operation setting method

| Bit     | Name  | Description  | Initial value |
|---------|---|--|---------------|
| 0 to 15 | Direct data operation Circular interpolation operation setting method | This is used to set how to specify the center coordinate of circular interpolation operation for direct data operation. This is enabled when the operation mode is "Circular (CW) interpolation operation" or "Circular (CCW) interpolation operation."<br>[Setting range]<br>0: Radius setting (180° or less)<br>1: Radius setting (180° or more)<br>2: Center position setting | 0             |

- (DD) Circular interpolation operation radius

| Bit     | Name  | Description  | Initial value |
|---------|---|--|---------------|
| 0 to 31 | Direct data operation Circular interpolation operation radius | This is used to set the radius of circular interpolation operation for direct data operation. This is enabled when the setting method of circular interpolation operation is "0: Radius setting (180° or less)" or "1: Radius setting (180° or more)."<br>[Setting range]<br>1,000 to 5,000,000 (1=0.001 mm) | 50,000        |



● (DD) Circular interpolation operation center coordinate / via-point X

| Bit     | Name   | Description  | Initial value |
|---------|--|--|---------------|
| 0 to 31 | Direct data operation circular interpolation operation center coordinate / via-point X | <p>This is used to set the center coordinate (X) or the via-point coordinate (X) of circular interpolation operation for direct data operation. The setting methods are shown below.</p> <ul style="list-style-type: none"> <li>When the setting method of circular interpolation operation is "2: Center position setting," input the X coordinate of the center of the circular arc in a relative position.</li> <li>When the operation mode is "15: Circular interpolation_via-point (absolute positioning)," input the X coordinate of the via point in an absolute position.</li> <li>When the operating mode is "16: Circular interpolation_via-point (relative positioning)," input the X coordinate of the via point in a relative position.</li> </ul> <p><b>[Setting range]</b><br/>–5,000,000 to 5,000,000 (1=0.001 mm)</p> | 0             |

● (DD) Circular interpolation operation center coordinate / via-point Y

| Bit     | Name   | Description  | Initial value |
|---------|--|--|---------------|
| 0 to 31 | Direct data operation circular interpolation operation center coordinate / via-point Y | <p>This is used to set the center coordinate (Y) or the via-point coordinate (Y) of circular interpolation operation for direct data operation. The setting methods are shown below.</p> <ul style="list-style-type: none"> <li>When the setting method of circular interpolation operation is "2: Center position setting," input the Y coordinate of the center of the circular arc in a relative position.</li> <li>When the operation mode is "15: Circular interpolation_via-point (absolute positioning)," input the Y coordinate of the via point in an absolute position.</li> <li>When the operating mode is "16: Circular interpolation_via-point (relative positioning)," input the Y coordinate of the via point in a relative position.</li> </ul> <p><b>[Setting range]</b><br/>–5,000,000 to 5,000,000 (1=0.001 mm)</p> | 0             |

● (DD) Arch interpolation operation ascending height

| Bit     | Name  | Description   | Initial value |
|---------|---|---|---------------|
| 0 to 31 | Direct data operation arch interpolation operation ascending height | <p>This is used to set the ascending height of arch interpolation operation for direct data operation.</p> <p><b>[Setting range]</b><br/>–5,000,000 to 5,000,000 (1=0.001 mm)</p> | 30,000        |

● (DD) Arch interpolation operation maximum height

| Bit     | Name  | Description  | Initial value |
|---------|---|--|---------------|
| 0 to 31 | Direct data operation arch interpolation operation maximum height | <p>This is used to set the maximum height of arch interpolation operation for direct data operation. Set a value larger than the ascending height or the descending start height.</p> <p><b>[Setting range]</b><br/>–5,000,000 to 5,000,000 (1=0.001 mm)</p> | 50,000        |

● (DD) Arch interpolation operation descending start height

| Bit     | Name   | Description  | Initial value |
|---------|--|--|---------------|
| 0 to 31 | Direct data operation arch interpolation operation descending start height | <p>This is used to set the descending start height of arch interpolation operation for direct data operation.</p> <p><b>[Setting range]</b><br/>–2,000,000 to 2,000,000 (1=0.001 mm)</p> | 30,000        |



- (DD) Pallet number selection

| Bit     | Name  | Description   | Initial value |
|---------|---|---|---------------|
| 0 to 15 | Direct data operation pallet number selection | This is used to set the pallet number of pallet operation for direct data operation.<br><b>[Setting range]</b><br>0: Disable<br>1 to 6: Pallet number | 0             |

- (DD) Tool offset

| Bit     | Name                              | Description  | Initial value |
|---------|-----------------------------------|--|---------------|
| 0 to 15 | Direct data operation tool offset | This is used to set the tool offset of the changing tool offset for direct data operation.<br><b>[Setting range]</b><br>0: Disable<br>1, 2: Tool offset number<br>3: Change from the present tool offset | 0             |

- (DD) Coordinate system selection

| Bit     | Name  | Description   | Initial value |
|---------|---|---|---------------|
| 0 to 15 | Direct data operation coordinate system selection | This is used to set the coordinate system of changing coordinate system for direct data operation.<br><b>[Setting range]</b><br>–1: Base coordinate system<br>0: Disable<br>1: User coordinate system 1<br>2: User coordinate system 2<br>3: User coordinate system 3 | 0             |

- (DD) Camera number selection

| Bit     | Name  | Description  | Initial value |
|---------|---|--|---------------|
| 0 to 15 | Direct data operation camera number selection | This is used to set the camera number when operation is performed with the values of the coordinates of the load captured by the camera.<br><b>[Setting range]</b><br>0: Disable<br>1: Camera 1<br>2: Camera 2 | 0             |

- (DD) Camera coordinate X coordinate

| Bit     | Name   | Description  | Initial value |
|---------|--|--|---------------|
| 0 to 31 | Direct data operation camera coordinate X coordinate | This is used to set the X coordinate of the load captured by the camera.<br><b>[Setting range]</b><br>–20,000,000 to 20,000,000 (1=0.001 px) | 0             |

- (DD) Camera coordinate Y coordinate

| Bit     | Name   | Description  | Initial value |
|---------|--|--|---------------|
| 0 to 31 | Direct data operation camera coordinate Y coordinate | This is used to set the Y coordinate of the load captured by the camera.<br><b>[Setting range]</b><br>–20,000,000 to 20,000,000 (1=0.001 px) | 0             |



- (DD) Camera coordinate Rz coordinate

| Bit     | Name  | Description   | Initial value |
|---------|---|---|---------------|
| 0 to 31 | Direct data operation camera coordinate Rz coordinate | This is used to set the Rz coordinate (angle) of the load captured by the camera.<br>[Setting range]<br>–270,000 to 270,000 (1=0.001 deg) | 0             |

- (DD) PTP operation 1st Link rotation angle setting

| Bit     | Name  | Description  | Initial value |
|---------|---|--|---------------|
| 0 to 15 | Direct data operation PTP operation 1st Link rotation angle setting | This is used to set the rotation angle of the 1st arm for PTP operation.<br>This is enabled in a SCARA (360-degree rotation) robot.<br>[Setting range]<br>–1: less than –180 deg<br>0: –180 deg to +180 deg<br>1: +180 deg or over | 0             |

- Read parameter target selection

| Bit     | Name                            | Description  | Initial value |
|---------|---------------------------------|--|---------------|
| 0 to 15 | Read parameter target selection | This is used to set the target to be read from.<br>[Setting range]<br>0: Controller<br>1 to 8: Axis number | 0             |

- Read parameter ID

| Bit     | Name              | Description   | Initial value |
|---------|-------------------|---|---------------|
| 0 to 15 | Read parameter ID | This is used to set the parameter ID to be read from. | 0             |

- Write request

| Bit     | Name     | Description   | Initial value |
|---------|----------|---|---------------|
| 0 to 7  | Reserved | A value is disregarded.   | 0             |
| 8       | WR-REQ   | This is used to set the write request.<br>[Setting range]<br>0: Disable<br>1: Write request (ON edge) | 0             |
| 9 to 15 | Reserved | A value is disregarded.   | 0             |

- Write parameter target selection

| Bit     | Name                             | Description  | Initial value |
|---------|----------------------------------|--|---------------|
| 0 to 15 | Write parameter target selection | This is used to select the device to be written to.<br>Any value other than 0 is disabled.<br>[Setting range]<br>0: Controller | 0             |

- Write parameter ID

| Bit     | Name               | Description  | Initial value |
|---------|--------------------|--|---------------|
| 0 to 15 | Write parameter ID | This is used to set the parameter ID to be written to. | 0             |




- **Write data**

| Bit     | Name       | Description   | Initial value |
|---------|------------|---|---------------|
| 0 to 31 | Write data | This is used to set a value to be written to the parameter specified by the write parameter ID. | 0             |

### 3-4 Processing order of Implicit communication

The processing order of Implicit communication is shown below.

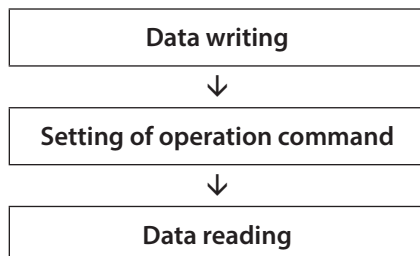

- If multiple operation commands are set in the Implicit message format, the operation command of direct data operation is prioritized.
- If the operation commands for remote I/O (R-IN) and the controller control input are set at the same time, operation is as follows.
  - If the same operation command is set: The robot will start.
  - If different operation commands are set: The robot will not start, and information of operation start error will be generated.



### 3-5 Data writing

This section explains the flow that data is written from the scanner to the controller via Implicit communication.

#### ■ Area of Implicit message format used



##### Input (transfer from controller to scanner)

| Byte     | Description                        |
|----------|------------------------------------|
| 178, 179 | Read/write status                  |
| 180, 181 | Write parameter target selection_R |
| 182, 183 | Write parameter ID_R               |

##### Output (transfer from scanner to controller)

| Byte       | Description                      |
|------------|----------------------------------|
| 178, 179   | Write request                    |
| 180, 181   | Write parameter target selection |
| 182, 183   | Write parameter ID               |
| 184 to 187 | Write data                       |

#### ■ Flow that data is written to

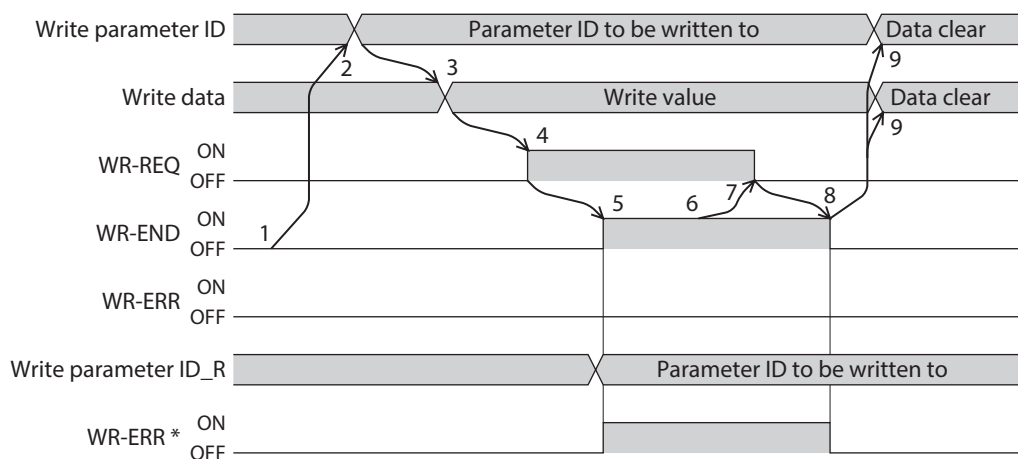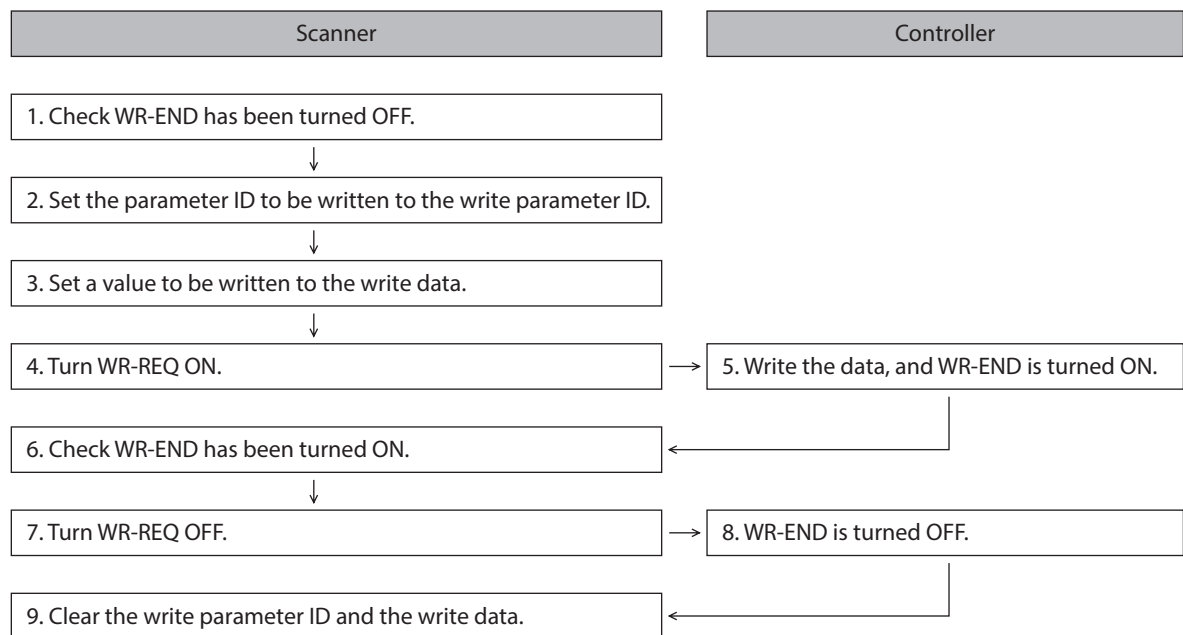

\* If an error occurs while data is being written, the WR-END and WR-ERR are simultaneously turned ON.



3-6

Data reading

This section explains the flow that data is read from the controller to the scanner via Implicit communication. There are the following two methods to read data.

- Method to use an area of “Read data”
- Method to use an area of “Assignable monitor”

■ When an area of read data is used

- Area of Implicit message format used


Input (transfer from controller to scanner)

| Byte       | Description                       |
|------------|-----------------------------------|
| 172, 173   | Read parameter target selection_R |
| 174, 175   | Read parameter ID_R               |
| 178, 179   | Read/write status                 |
| 184 to 187 | Read data                         |

Output (transfer from scanner to controller)

| Byte     | Description                     |
|----------|---------------------------------|
| 172, 173 | Read parameter target selection |
| 174, 175 | Read parameter ID               |

- Flow that data is read from

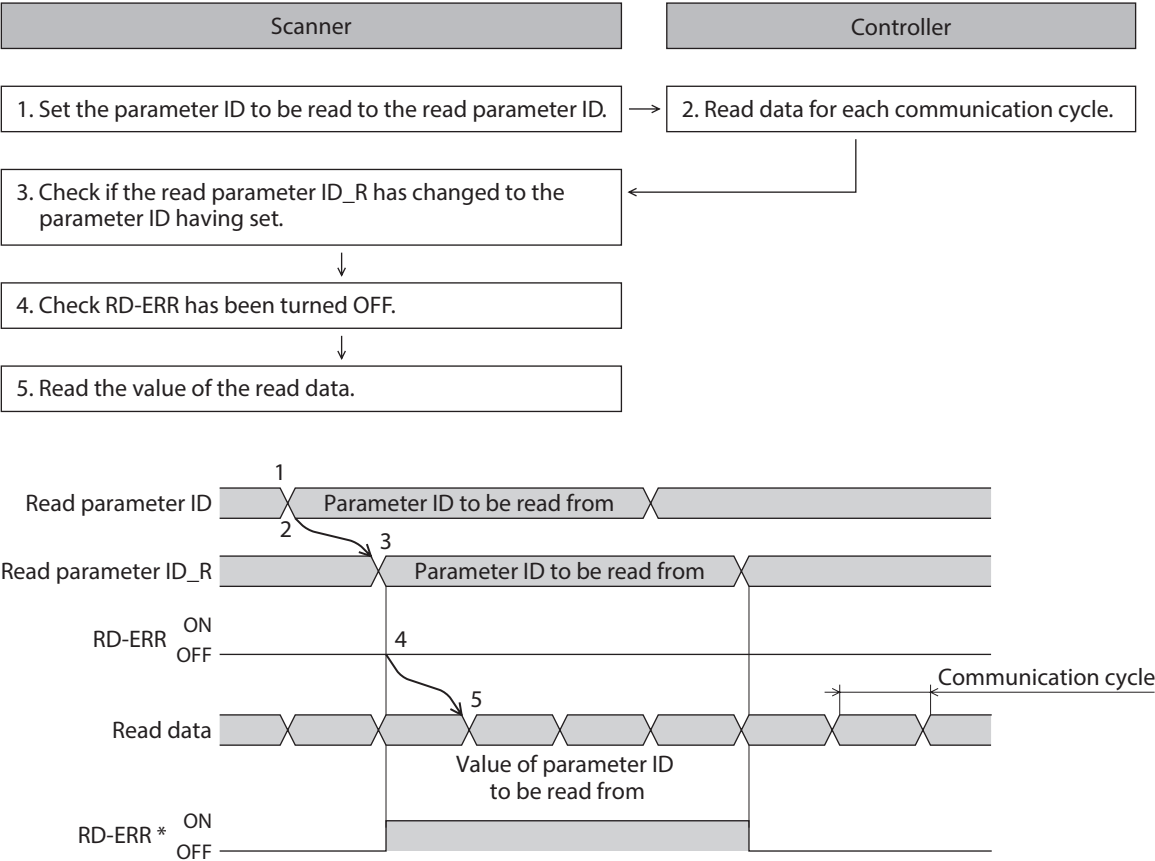

\* If the parameter ID out of the setting range is set to the read parameter ID, the RD-ERR is turned ON at the same time when the read parameter ID\_R is updated.





## ■ When an area of assignable monitor is used

### ● Area of Implicit message format used

Input (transfer from controller to scanner)

| Byte       | Description                       |
|------------|-----------------------------------|
| 36 to 39   | Controller assignable monitor 0   |
| 40 to 43   | Controller assignable monitor 1   |
| 44 to 47   | Controller assignable monitor 2   |
| 48 to 51   | Controller assignable monitor 3   |
| 100 to 111 | Axis 1 assignable monitor 0 to 2  |
| 112 to 123 | Axis 2 assignable monitor 0 to 2  |
| 124 to 135 | Axis 3 assignable monitor 0 to 2  |
| 136 to 147 | Axis 4 assignable monitor 0 to 2  |
| 148 to 159 | Axis 5 assignable monitor 0 to 2  |
| 160 to 171 | Axis 6 assignable monitor 0 to 2  |
| 188 to 199 | Axis 7 assignable monitor 0 to 2* |
| 200 to 211 | Axis 8 assignable monitor 0 to 2* |

\* The axis 7 is the end-effector 1 and the axis 8 is the end-effector 2.

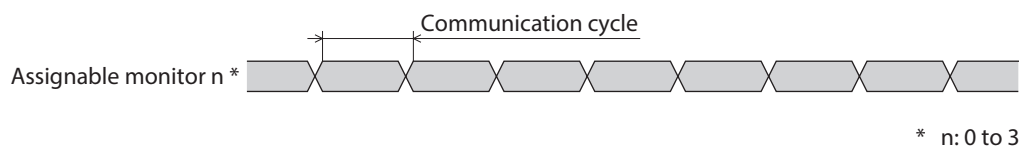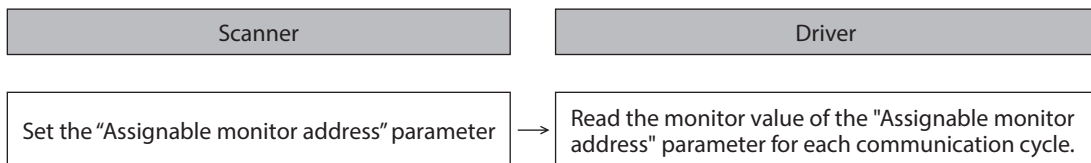

### ● Related parameters

| Parameter ID |       | Name                                    | Description  | Setting range                                | Initial value                     |
|--------------|-------|---|--|--|-----------------------------------|
| Dec          | Hex   |   |  |  |                                   |
| 3746         | 0EA2h | Driver assignable monitor address 0     | Sets the parameter ID of the item to be monitored. | Driver assignable monitor address<br>⇒ p.189 | 107: Torque monitor               |
| 3747         | 0EA3h | Driver assignable monitor address 1     |  |  | 124: Driver temperature           |
| 3748         | 0EA4h | Driver assignable monitor address 2     |  |  | 125: Motor temperature            |
| 25600        | 6400h | Controller assignable monitor address 0 | Sets the parameter ID of the item to be monitored. | Monitor command<br>⇒ p.140                   | 1448: Driver communication status |
| 25601        | 6401h | Controller assignable monitor address 1 |  |  | 1247: TCP feedback speed RxRyRz   |
| 25602        | 6402h | Controller assignable monitor address 2 |  |  | 653: Enabled coordinates          |
| 25603        | 6403h | Controller assignable monitor address 3 |  |  | 124: Controller temperature       |



## 4 Direct data operation

---

### 4-1 Overview of direct data operation

Direct data operation is a mode that allows execution of operation at the same time as rewriting of data.

It is suitable to frequently change operation data such as the position (travel amount) or the speed, or to applications to adjust the position finely.

There are the following six types of triggers to execute operation at the same time as rewriting of data.

- One of the following items: Operation command, position, speed, acceleration, and deceleration
- The above five items are collectively rewritten



## 4-2 Output data related to direct data operation

Output data related to direct data operation is shown in table. Operation can be executed without setting all Output data. Refer to p.125 for details.

| Byte   | Name                                 | Description  | Initial value |
|--------|--------------------------------------|--|---------------|
| 52, 53 | Direct data operation TRIG           | <p>This is used to set the trigger for direct data operation.<br/>(About TRIG ⇨ p.123)</p> <p><b>[Setting range]</b><br/>           –6: Operation command<br/>           –5: Position (one of the following items: X, Y, Z, Rx, Ry, Rz, E1, E2, and axis)<br/>           –4: Speed<br/>           –3: Acceleration<br/>           –2: Deceleration<br/>           0: Disable<br/>           1: All data updated</p>  | 0             |
| 56, 57 | Direct data operation operation mode | <p>This is used to set the operation mode or control command for direct data operation.</p> <p><b>[Setting range]</b><br/>           0: Disable<br/>           1: PTP operation (absolute positioning)<br/>           2: PTP operation (relative positioning)<br/>           3: Linear interpolation operation (absolute positioning)<br/>           4: Linear interpolation operation (relative positioning)<br/>           5: Circular (CW) interpolation operation (absolute positioning)<br/>           6: Circular (CW) interpolation operation (relative positioning)<br/>           7: Circular (CCW) interpolation operation (absolute positioning)<br/>           8: Circular (CCW) interpolation operation (relative positioning)<br/>           9: Arch interpolation operation (absolute positioning)<br/>           10: Arch interpolation operation (relative positioning)<br/>           11: End-effector 1 operation (absolute positioning)<br/>           12: End-effector 1 operation (relative positioning)<br/>           13: Axis operation (absolute positioning)<br/>           14: Axis operation (relative positioning)<br/>           15: Circular interpolation_via-point (absolute positioning)<br/>           16: Circular interpolation_via-point (relative positioning)<br/>           17: Pallet_PTP operation (absolute positioning)<br/>           18: Pallet_PTP operation (relative positioning)<br/>           19: Pallet_Linear interpolation operation (absolute positioning)<br/>           20: Pallet_Linear interpolation operation (relative positioning)<br/>           21: Pallet_Arch interpolation operation (absolute positioning)<br/>           22: Pallet_Arch interpolation operation (relative positioning)<br/>           23: End-effector 2 operation (absolute positioning)<br/>           24: End-effector 2 operation (relative positioning)<br/>           25: Changing tool offset<br/>           26: Changing coordinate system<br/>           27: End-effector 1 + 2 operation (absolute position)<br/>           28: End-effector 1 + 2 operation (relative position)<br/>           29: PTP operation (camera imaging position)<br/>           30: Linear interpolation operation (camera imaging position)<br/>           31: Arch interpolation operation (camera imaging position)<br/>           32: Linear interpolation operation (tool coordinates)</p> | 0             |
| 58     | Direct data operation axis selection | <p>This is used to select the number of the axis to be the target for direct data operation.</p> <p><b>[Setting range]</b><br/>           0: Disable<br/>           1 to 8: Axis number</p>  | 0             |



| Byte     | Name  | Description   | Initial value |
|----------|---|---|---------------|
| 59       | Direct data operation TCP operation target coordinates selection X  | These are used to select the coordinate to be the target for direct data operation in bits.<br><b>[Setting range]</b><br>0: Disable<br>1: Enable                          | 0             |
|          | Direct data operation TCP operation target coordinates selection Y  |   |               |
|          | Direct data operation TCP operation target coordinates selection Z  |   |               |
|          | Direct data operation TCP operation target coordinates selection Rx |   |               |
|          | Direct data operation TCP operation target coordinates selection Ry |   |               |
|          | Direct data operation TCP operation target coordinates selection Rz |   |               |
|          | Direct data operation TCP operation target coordinates selection E1 |   |               |
|          | Direct data operation TCP operation target coordinates selection E2 |   |               |
| 60 to 63 | Direct data operation position X coordinate                         | This is used to set the target position of the X coordinate for direct data operation.<br><b>[Setting range]</b><br>–5,000,000 to 5,000,000 (1=0.001 mm)                  | 0             |
| 64 to 67 | Direct data operation position Y coordinate                         | This is used to set the target position of the Y coordinate for direct data operation.<br><b>[Setting range]</b><br>–5,000,000 to 5,000,000 (1=0.001 mm)                  | 0             |
| 68 to 71 | Direct data operation position Z coordinate                         | This is used to set the target position of the Z coordinate for direct data operation.<br><b>[Setting range]</b><br>–5,000,000 to 5,000,000 (1=0.001 mm)                  | 0             |
| 72 to 75 | Direct data operation position Rx coordinate                        | This is used to set the target position of the Rx coordinate for direct data operation.<br><b>[Setting range]</b><br>–270,000 to 270,000 (1=0.001 deg)                    | 0             |
| 76 to 79 | Direct data operation position Ry coordinate                        | This is used to set the target position of the Ry coordinate for direct data operation.<br><b>[Setting range]</b><br>–90,000 to 90,000 (1=0.001 deg)                      | 0             |
| 80 to 83 | Direct data operation position Rz coordinate                        | This is used to set the target position of the Rz coordinate for direct data operation.<br><b>[Setting range]</b><br>–270,000 to 270,000 (1=0.001 deg)                    | 0             |
| 84 to 87 | Direct data operation position E1 coordinate                        | This is used to set the target position of the end effector 1 for direct data operation.<br><b>[Setting range]</b><br>–5,000,000 to 5,000,000 (1=0.001 mm or 1=0.001 deg) | 0             |
| 88 to 91 | Direct data operation position E2 coordinate                        | This is used to set the target position of the end effector 2 for direct data operation.<br><b>[Setting range]</b><br>–5,000,000 to 5,000,000 (1=0.001 mm or 1=0.001 deg) | 0             |



| Byte       | Name  | Description   | Initial value |
|------------|---|---|---------------|
| 92 to 95   | Direct data operation operating speed                                 | This is used to set the target speed for direct data operation.<br><b>[Setting range]</b><br>10 to 2,000,000 (1=0.001 mm/s or 1=0.001 deg/s)  | 20,000        |
| 96 to 99   | Direct data operation acceleration                                    | This is used to set the acceleration for direct data operation.<br><b>[Setting range]</b><br>10 to 30,000,000<br>(1=0.001 mm/s <sup>2</sup> or 1=0.001 deg/s <sup>2</sup> )   | 1,200,000     |
| 100 to 103 | Direct data operation deceleration                                    | This is used to set the deceleration for direct data operation.<br><b>[Setting range]</b><br>10 to 30,000,000 (1=0.001 mm/s <sup>2</sup> or 1=0.001 deg/s <sup>2</sup> )  | 1,200,000     |
| 104 to 107 | Direct data operation position (axis)                                 | This is used to set the target position of axis operation for direct data operation.<br><b>[Setting range]</b><br>-5,000,000 to 5,000,000 (1=0.001 mm or 1=0.001 deg)   | 0             |
| 108, 109   | Direct data operation end-effector 1, 2 operation mode                | This is used to select the operation mode of the end effector 1 and end effector 2 for direct data operation.<br><b>[Setting range]</b><br>0: Parameter setting is followed<br>1 : Positioning operation<br>2 : Push-motion positioning operation   | 0             |
| 110, 111   | Direct data operation end-effector 1, 2 push current                  | This is used to set the push operating current of the end effector 1 and end effector 2 for direct data operation. This is enabled when the end-effector operation mode is set to "2: Push-motion positioning operation."<br><b>[Setting range]</b><br>1 to 1,000 (1=0.1 %)   | 500           |
| 112, 113   | Direct data operation PTP operation handed system selection           | This is used to set the handed system of PTP operation for direct data operation. This is enabled for a SCARA robot and a 6-axis vertically articulated robot.<br><b>[Setting range]</b><br>0 : No change from present handed system<br>1 : Right-handed system<br>2 : Left-handed system<br>3 : Change oppositely from present handed system   | 0             |
| 114, 115   | Direct data operation circular interpolation operation setting method | This is used to set how to specify the center coordinate of circular interpolation operation for direct data operation. This is enabled when the operation mode is "Circular (CW) interpolation operation" or "Circular (CCW) interpolation operation."<br><b>[Setting range]</b><br>0: Radius setting (180° or less)<br>1: Radius setting (180° or more)<br>2: Center position setting | 0             |
| 116 to 119 | Direct data operation circular interpolation operation radius         | This is used to set the radius of circular interpolation operation for direct data operation. This is enabled when the setting method of circular interpolation operation is "0: Radius setting (180° or less)" or "1: Radius setting (180° or more)."<br><b>[Setting range]</b><br>1,000 to 5,000,000 (1=0.001 mm)   | 50,000        |



| Byte       | Name   | Description  | Initial value |
|------------|--|--|---------------|
| 120 to 123 | Direct data operation circular interpolation operation center coordinate / via-point X | <p>This is used to set the center coordinate (X) or the via-point coordinate (X) of circular interpolation operation for direct data operation. The setting methods are shown below.</p> <ul style="list-style-type: none"> <li>• When the setting method of circular interpolation operation is "2: Center position setting," input the X coordinate of the center of the circular arc in a relative position.</li> <li>• When the operation mode is "15: Circular interpolation_via-point (absolute positioning)," input the X coordinate of the via point in an absolute position.</li> <li>• When the operating mode is "16: Circular interpolation_via-point (relative positioning)," input the X coordinate of the via point in a relative position.</li> </ul> <p><b>[Setting range]</b><br/>–5,000,000 to 5,000,000 (1=0.001 mm)</p> | 0             |
| 124 to 127 | Direct data operation circular interpolation operation center coordinate / via-point Y | <p>This is used to set the center coordinate (Y) or the via-point coordinate (Y) of circular interpolation operation for direct data operation. The setting methods are shown below.</p> <ul style="list-style-type: none"> <li>• When the setting method of circular interpolation operation is "2: Center position setting," input the Y coordinate of the center of the circular arc in a relative position.</li> <li>• When the operation mode is "15: Circular interpolation_via-point (absolute positioning)," input the Y coordinate of the via point in an absolute position.</li> <li>• When the operating mode is "16: Circular interpolation_via-point (relative positioning)," input the Y coordinate of the via point in a relative position.</li> </ul> <p><b>[Setting range]</b><br/>–5,000,000 to 5,000,000 (1=0.001 mm)</p> | 0             |
| 128 to 131 | Direct data operation arch interpolation operation ascending height                    | <p>This is used to set the ascending height of arch interpolation operation for direct data operation.</p> <p><b>[Setting range]</b><br/>–5,000,000 to 5,000,000 (1=0.001 mm)</p>  | 30,000        |
| 132 to 135 | Direct data operation arch interpolation operation maximum height                      | <p>This is used to set the maximum height of arch interpolation operation for direct data operation. Set a value larger than the ascending height or the descending start height.</p> <p><b>[Setting range]</b><br/>–5,000,000 to 5,000,000 (1=0.001 mm)</p>   | 50,000        |
| 136 to 139 | Direct data operation arch interpolation operation descending start height             | <p>This is used to set the descending start height of arch interpolation operation for direct data operation.</p> <p><b>[Setting range]</b><br/>–2,000,000 to 2,000,000 (1=0.001 mm)</p>   | 30,000        |
| 140, 141   | Direct data operation pallet number selection  | <p>This is used to set the pallet number of pallet operation for direct data operation.</p> <p><b>[Setting range]</b><br/>0: Disable<br/>1 to 6: Pallet number</p>   | 0             |
| 142, 143   | Direct data operation tool offset  | <p>This is used to set the tool offset of the changing tool offset for direct data operation.</p> <p><b>[Setting range]</b><br/>0: Disable<br/>1, 2: Tool offset number<br/>3: Change from the present tool offset</p>   | 0             |



| Byte       | Name  | Description  | Initial value |
|------------|---|--|---------------|
| 144, 145   | Direct data operation coordinate system selection                   | This is used to set the coordinate system of changing coordinate system for direct data operation.<br>[Setting range]<br>–1: Base coordinate system<br>0: Disable<br>1: User coordinate system 1<br>2: User coordinate system 2<br>3: User coordinate system 3 | 0             |
| 146, 147   | Direct data operation camera number selection                       | This is used to set the camera number when operation is performed with the values of the coordinates of the load captured by the camera.<br>[Setting range]<br>0: Disable<br>1: Camera 1<br>2: Camera 1  | 0             |
| 148 to 151 | Direct data operation camera coordinate X coordinate                | This is used to set the X coordinate of the load captured by the camera.<br>[Setting range]<br>–20,000,000 to 20,000,000 (1=0.001 px)  | 0             |
| 152 to 155 | Direct data operation camera coordinate Y coordinate                | This is used to set the Y coordinate of the load captured by the camera.<br>[Setting range]<br>–20,000,000 to 20,000,000 (1=0.001 px)  | 0             |
| 156 to 159 | Direct data operation camera coordinate Rz coordinate               | This is used to set the Rz coordinate (angle) of the load captured by the camera.<br>[Setting range]<br>–270,000 to 270,000 (1=0.001 deg)  | 0             |
| 160, 161   | Direct data operation PTP operation 1st Link rotation angle setting | This is used to set the rotation angle of the 1st arm for PTP operation.<br>This is enabled in a SCARA (360-degree rotation) robot.<br>[Setting range]<br>–1: less than –180 deg<br>0: –180 deg to +180 deg<br>1: +180 deg or over                             | 0             |



For “direct data operation operating speed,” if multiple coordinates are set at the target position or the start position S, the set speed may differ from the actual speed because the speed is automatically adjusted to the axis that takes the longest time to move.

## ■ TRIG

This is a trigger to execute operation at the same time as rewriting of data in direct data operation.

### ● When TRIG is “0”

Direct data operation is disabled.

### ● When TRIG is “1”

All data is applied to execute direct data operation. To execute the next direct data operation, set “Direct data operation TRIG” to “0” once. After that, operation is executed when setting “Direct data operation TRIG” to “1” again.



- **When TRIG is “-6 to -2”**

Direct data operation is executed only when the target data is changed.  
Operation cannot be executed when the target data has not been changed.

| Setting range | TRIG   |
|---------------|--|
| -6            | Operation command  |
| -5            | Position (one of the following items: X, Y, Z, Rx, Ry, Rz, E1, E2, and axis) |
| -4            | Speed  |
| -3            | Acceleration   |
| -2            | Deceleration   |



### 4-3 Output data required to execute direct data operation

The Output data required to execute direct data operation varies depending on the operation mode.

| Operation mode   | Output data   |
|--|---|
| 1: PTP operation (absolute positioning)<br>2: PTP operation (relative positioning)   | <ul style="list-style-type: none"> <li>• TCP operation target coordinates selection</li> <li>• Position (Coordinates other than the axis)</li> <li>• Speed</li> <li>• Acceleration</li> <li>• Deceleration</li> <li>• PTP operation handed system selection</li> </ul>  |
| 3: Linear interpolation operation (absolute positioning)<br>4: Linear interpolation operation (relative positioning)<br>32: Linear interpolation operation (tool coordinates)  | <ul style="list-style-type: none"> <li>• TCP operation target coordinates selection</li> <li>• Position (Coordinates other than the axis)</li> <li>• Speed</li> <li>• Acceleration</li> <li>• Deceleration</li> </ul>   |
| 5: Circular (CW) interpolation operation (absolute positioning)<br>6: Circular (CW) interpolation operation (relative positioning)<br>7: Circular (CCW) interpolation operation (absolute positioning)<br>8: Circular (CCW) interpolation operation (relative positioning)<br>15: Circular interpolation_via-point (absolute positioning)<br>16: Circular interpolation_via-point (relative positioning) | <ul style="list-style-type: none"> <li>• TCP operation target coordinates selection</li> <li>• Position (Coordinates other than the axis)</li> <li>• Speed</li> <li>• Acceleration</li> <li>• Deceleration</li> <li>• Circular interpolation operation setting method</li> <li>• Circular interpolation operation radius</li> <li>• Circular interpolation operation center coordinate / via-point X</li> <li>• Circular interpolation operation center coordinate / via-point Y</li> </ul> |
| 9: Arch interpolation operation (absolute positioning)<br>10: Arch interpolation operation (relative positioning)  | <ul style="list-style-type: none"> <li>• TCP operation target coordinates selection</li> <li>• Position (Coordinates other than the axis)</li> <li>• Speed</li> <li>• Acceleration</li> <li>• Deceleration</li> <li>• Arch interpolation operation ascending height</li> <li>• Arch interpolation operation maximum height</li> <li>• Arch interpolation operation descending start height</li> </ul>   |
| 11: End-effector 1 operation (absolute positioning)<br>12: End-effector 1 operation (relative positioning)<br>23: End-effector 2 operation (absolute positioning)<br>24: End-effector 2 operation (relative positioning)   | <ul style="list-style-type: none"> <li>• TCP operation target coordinates selection</li> <li>• Position (Coordinates other than the axis)</li> <li>• Speed</li> <li>• Acceleration</li> <li>• Deceleration</li> <li>• End-effector 1, 2 operation mode</li> <li>• End-effector 1, 2 push current</li> </ul>   |
| 13: Axis operation (absolute positioning)<br>14: Axis operation (relative positioning)   | <ul style="list-style-type: none"> <li>• Axis selection</li> <li>• Speed</li> <li>• Acceleration</li> <li>• Deceleration</li> <li>• Position (Axis)</li> </ul>  |



| Operation mode   | Output data  |
|--|--|
| 17: Pallet_PTP operation (absolute positioning)<br>18: Pallet_PTP operation (relative positioning)                                   | <ul style="list-style-type: none"> <li>• TCP operation target coordinates selection</li> <li>• Position (Coordinates other than the axis)</li> <li>• Speed</li> <li>• Acceleration</li> <li>• Deceleration</li> <li>• PTP operation handed system selection</li> <li>• Pallet number selection</li> </ul>  |
| 19: Pallet_Linear interpolation operation (absolute positioning)<br>20: Pallet_Linear interpolation operation (relative positioning) | <ul style="list-style-type: none"> <li>• TCP operation target coordinates selection</li> <li>• Position (Coordinates other than the axis)</li> <li>• Speed</li> <li>• Acceleration</li> <li>• Deceleration</li> <li>• Pallet number selection</li> </ul>   |
| 21: Pallet_Arch interpolation operation (absolute positioning)<br>22: Pallet_Arch interpolation operation (relative positioning)     | <ul style="list-style-type: none"> <li>• TCP operation target coordinates selection</li> <li>• Position (Coordinates other than the axis)</li> <li>• Speed</li> <li>• Acceleration</li> <li>• Deceleration</li> <li>• Arch interpolation operation ascending height</li> <li>• Arch interpolation operation maximum height</li> <li>• Arch interpolation operation descending start height</li> <li>• Pallet number selection</li> </ul> |
| 25: Changing tool offset   | <ul style="list-style-type: none"> <li>• Tool offset</li> </ul>  |
| 26: Changing coordinate system   | Coordinate system selection  |
| 27: End-effector 1 + 2 operation (absolute position)<br>28: End-effector 1 + 2 operation (relative position)                         | <ul style="list-style-type: none"> <li>• TCP operation target coordinates selection</li> <li>• Position (Coordinates other than the axis)</li> <li>• Speed</li> <li>• Acceleration</li> <li>• Deceleration</li> <li>• End-effector 1, 2 operation mode*</li> <li>• End-effector 1, 2 push current*</li> </ul>  |
| 29: PTP operation (camera imaging position)  | <ul style="list-style-type: none"> <li>• TCP operation target coordinates selection</li> <li>• Position (Coordinates other than the axis)</li> <li>• Speed</li> <li>• Acceleration</li> <li>• Deceleration</li> <li>• PTP operation handed system selection</li> <li>• Camera number selection</li> <li>• Camera coordinate X coordinate</li> <li>• Camera coordinate Y coordinate</li> <li>• Camera coordinate Rz coordinate</li> </ul> |
| 30: Linear interpolation operation (camera imaging position)   | <ul style="list-style-type: none"> <li>• TCP operation target coordinates selection</li> <li>• Position (Coordinates other than the axis)</li> <li>• Speed</li> <li>• Acceleration</li> <li>• Deceleration</li> <li>• Camera number selection</li> <li>• Camera coordinate X coordinate</li> <li>• Camera coordinate Y coordinate</li> <li>• Camera coordinate Rz coordinate</li> </ul>  |



| Operation mode   | Output data   |
|--|---|
| 31: Arch interpolation operation (camera imaging position) | <ul style="list-style-type: none"> <li>• TCP operation target coordinates selection</li> <li>• Position (Coordinates other than the axis)</li> <li>• Speed</li> <li>• Acceleration</li> <li>• Deceleration</li> <li>• Arch interpolation operation ascending height</li> <li>• Arch interpolation operation maximum height</li> <li>• Arch interpolation operation descending start height</li> <li>• Camera number selection</li> <li>• Camera coordinate X coordinate</li> <li>• Camera coordinate Y coordinate</li> <li>• Camera coordinate Rz coordinate</li> </ul> |

\* Although these are not used in operation, set the values within the setting range. Operation cannot be performed if the values are set outside the range.



## 4-4 Operation example

The condition to execute direct data operation can be selected one of the following: operation command, position, speed, acceleration, deceleration, or all data updated.



Before operating a robot, check the condition of the surrounding area to ensure safety.

### ■ When setting TRIG to “1: All data updated” to execute operation

As an example, this section explains how to perform the following direct data operation.

#### ● Setting example

- Robot type: SCARA robot 2-link base up-down
- End effector: Not used
- Position (travel amount): +5 mm in Z direction
- TRIG: All data updated
- Operating mode: Linear interpolation operation (relative positioning)

#### ● Operation processing flow

Descriptions are given using the scanner as the subject.

1. Check the READY has been turned ON.
  2. Set the following data.  
Only the Output data required to execute the operation is set here. Refer to p.119 for other Output data.
- Output (scanner → controller)

| Byte       | Name  | Setting value | Note  |
|------------|---|---------------|---|
| 56, 57     | Direct data operation operation mode                                | 4             | Linear interpolation operation (relative positioning) |
| 59         | Direct data operation TCP operation target coordinates selection X  | 0             | Z Coordinate: Enable                                  |
|            | Direct data operation TCP operation target coordinates selection Y  | 0             |   |
|            | Direct data operation TCP operation target coordinates selection Z  | 1             |   |
|            | Direct data operation TCP operation target coordinates selection Rx | 0             |   |
|            | Direct data operation TCP operation target coordinates selection Ry | 0             |   |
|            | Direct data operation TCP operation target coordinates selection Rz | 0             |   |
|            | Direct data operation TCP operation target coordinates selection E1 | 0             |   |
|            | Direct data operation TCP operation target coordinates selection E2 | 0             |   |
| 60 to 63   | Direct data operation position X coordinate                         | 0             | Z Coordinate: 5 mm (1=0.001 mm)                       |
| 64 to 67   | Direct data operation position Y coordinate                         | 0             |   |
| 68 to 71   | Direct data operation position Z coordinate                         | 5,000         |   |
| 72 to 75   | Direct data operation position Rx coordinate                        | 0             |   |
| 76 to 79   | Direct data operation position Ry coordinate                        | 0             |   |
| 80 to 83   | Direct data operation position Rz coordinate                        | 0             |   |
| 84 to 87   | Direct data operation position E1 coordinate                        | 0             |   |
| 88 to 91   | Direct data operation position E2 coordinate                        | 0             |   |
| 92 to 95   | Direct data operation operating speed                               | 20,000        | Initial value   |
| 96 to 99   | Direct data operation acceleration                                  | 1,200,000     |   |
| 100 to 103 | Direct data operation deceleration                                  | 1,200,000     |   |



## 3. Set "Direct data operation TRIG" to "1."

Direct data operation is started.

- Output (scanner → controller)

| Byte   | Name                       | Setting value | Note             |
|--------|----------------------------|---------------|------------------|
| 52, 53 | Direct data operation TRIG | 1             | All data updated |

## 4. Check that "Direct data operation TRIG\_R" has been "1" and set "Direct data operation TRIG" to "0."

- Output (scanner → controller)

| Byte   | Name                       | Setting value | Note    |
|--------|----------------------------|---------------|---------|
| 52, 53 | Direct data operation TRIG | 0             | Disable |

## 4-5 Operation where MRC01 controller and camera are used in combination

The **MRC01** is equipped with the calibration function (\*) that supports a two-dimensional vision system. Therefore, even if an image processing device does not have the calibration function, the robot can be operated by using the **MRC01** and the camera in combination.


Because calibration can be performed semi-automatically using the **MRC Studio** software, it is possible to eliminate operator variation in correction accuracy and perform a highly accurate adjustment in a short time. The calibration function can also be used to readjust the position when the robot or camera is displaced.

\* This is an adjustment function that converts the position and angle information of the load captured by the camera to the coordinate system of the robot. Calibration is necessary when using the vision system as a robot eye.




- The **MRC01** can be calibrated with two cameras.
- The calibration methods supported by the **MRC01** are the "hand-eye method," where the camera is installed to the tip of the robot, and the "fixed camera method," where the camera is installed to a device or location other than the robot.

- Hand-eye method

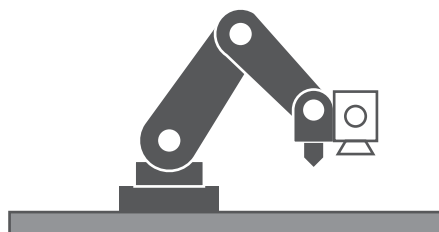

- Fixed camera method

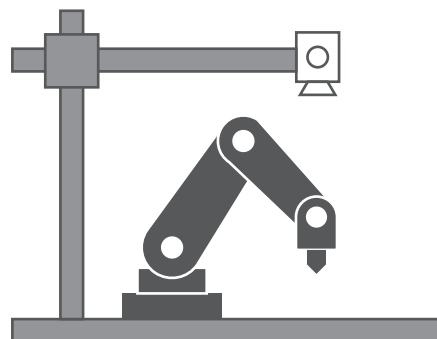




## ■ Example of use


By using the **MRC01** and the camera in combination, the robot can be used for a variety of applications that were difficult to achieve on the robot itself.

- Align loads that have been placed in a random position.
- Pick up loads that have been placed in a random position on the pallet.
- A single robot handles multiple loads without changing the operation program or jigs.


Alignment of loads that have been placed in a random position

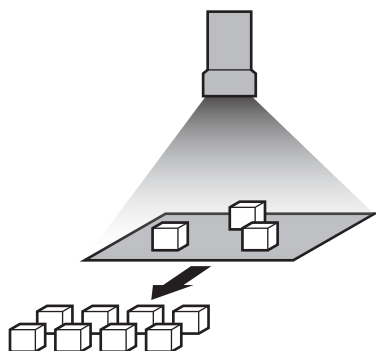

Pickup of loads that have been placed in a random position on the pallet

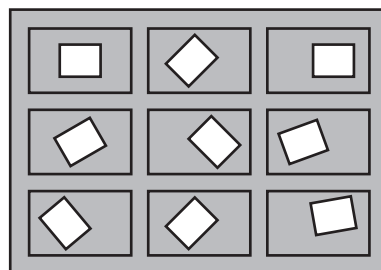

## ■ System configuration

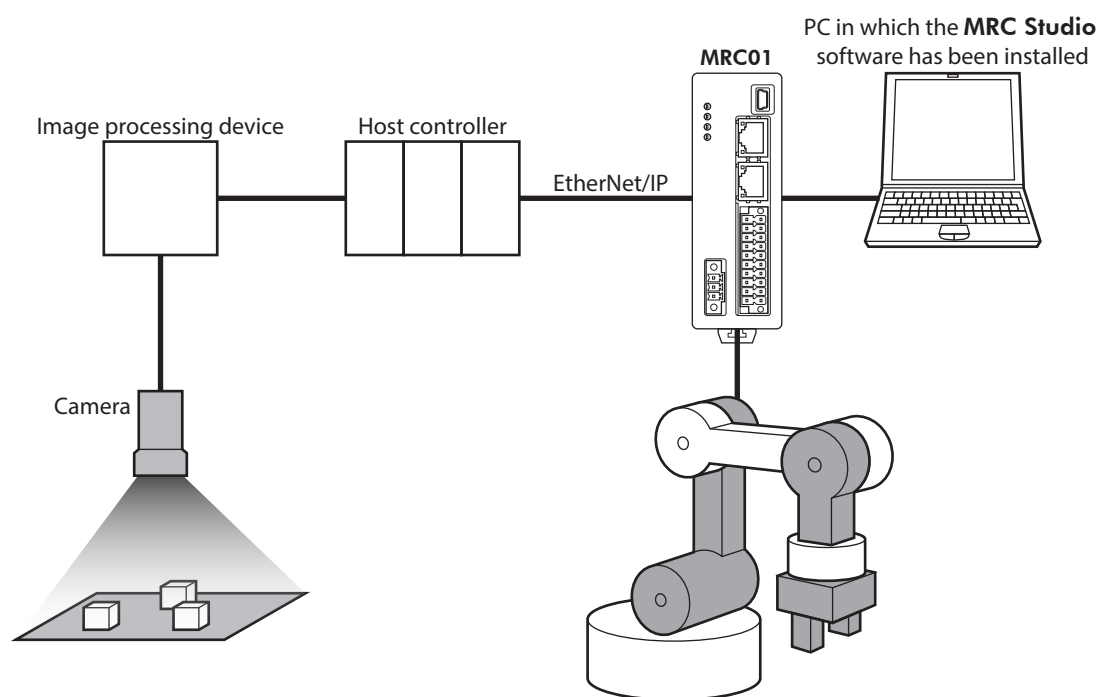




## ■ Calibration method

This section is described under the assumption that the setup of the robot has been completed.  
A single camera is used for calibration.

1. Install the camera.
2. Set the inspection program so that the image processing device can acquire the imaging position and angle of the load. (The angle setting is optional.)  
For details on the setting of the inspection program, refer to the instruction manual of the image processing device.
3. Connect the **MRC01** to a PC in which the **MRC Studio** software has been installed.
4. Click [Robot vision calibration] from the [Maintenance] menu of the **MRC Studio** software.

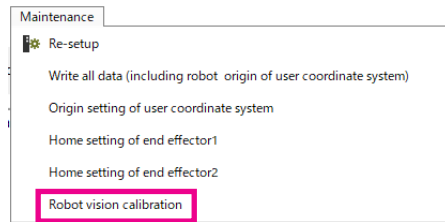

5. Follow the on-screen instructions to perform the calibration.



- If the positional relationship between the robot and the camera is changed, perform the calibration again.
- The manufacturer of the image processing device or camera is not specified. Use products that can acquire and send the imaging position and angle of the load to the host controller.
- Even if no host controller is connected, calibration can be performed as long as the camera and robot are installed.



## ■ Operation flow

Execute direct data operation or program operation after performing calibration.

This section explains how to execute direct data operation using the **MRC01** and the camera in combination. For program operation, refer to the description of each command.

### ● Operation example: When setting “1: All data updated” to TRIG to execute operation

#### Setting example

- Robot type: Vertically articulated 3-link base rotation + Rz
- End effector: Not used
- Target position: Directly above the load (position of Z=10 mm)
- Operation mode: Linear interpolation operation (camera imaging position)
- Camera number: Camera 1

#### Operation processing flow

Descriptions are given using the scanner as the subject.

1. Check the READY has been turned ON.
2. The imaging position and angle of the load are acquired using the image processing device.
3. Set the following data.  
Only the Output data required to execute the operation is set here. Refer to p.119 for other Output data.

- Output (scanner → controller)

| Byte       | Name  | Setting value | Note   |
|------------|---|---------------|--|
| 56, 57     | Direct data operation operation mode                                | 30            | Linear interpolation operation (camera imaging position) |
| 59         | Direct data operation TCP operation target coordinates selection X  | 1             | X Y Z Rz coordinates: Enable                             |
|            | Direct data operation TCP operation target coordinates selection Y  | 1             |  |
|            | Direct data operation TCP operation target coordinates selection Z  | 1             |  |
|            | Direct data operation TCP operation target coordinates selection Rx | 0             |  |
|            | Direct data operation TCP operation target coordinates selection Ry | 0             |  |
|            | Direct data operation TCP operation target coordinates selection Rz | 1             |  |
|            | Direct data operation TCP operation target coordinates selection E1 | 0             |  |
|            | Direct data operation TCP operation target coordinates selection E2 | 0             |  |
| 68 to 71   | Direct data operation position Z coordinate                         | 10,000        |  |
| 72 to 75   | Direct data operation position Rx coordinate                        | 0             |  |
| 76 to 79   | Direct data operation position Ry coordinate                        | 0             |  |
| 84 to 87   | Direct data operation position E1 coordinate                        | 0             |  |
| 88 to 91   | Direct data operation position E2 coordinate                        | 0             |  |
| 92 to 95   | Direct data operation speed   | 20,000        | Initial value  |
| 96 to 99   | Direct data operation acceleration                                  | 1,200,000     |  |
| 100 to 103 | Direct data operation deceleration                                  | 1,200,000     |  |
| 146, 147   | Direct data operation camera number selection                       | 1             | Camera 1   |



- Output (scanner → controller)

| Byte       | Name  | Setting value | Note   |
|------------|---|---------------|--|
| 148 to 151 | Direct data operation camera coordinate X coordinate  | *1            | These are used to set the position and angle captured by the camera. |
| 152 to 155 | Direct data operation camera coordinate Y coordinate  | *1            |  |
| 156 to 159 | Direct data operation camera coordinate Rz coordinate | *2            |  |

\*1 Input the X and Y coordinates of the load captured by the camera. (1=0.001 px)

\*2 Input the Rz coordinate (angle) of the load captured by the camera. (1=0.001 deg)



When operating by acquiring the position captured by the camera, the **MRC01** automatically converts the X, Y, and Rz coordinates from the values set in the "Direct data operation camera coordinate" to the values that match the coordinate system of the robot. The setting values of X, Y, and Rz coordinates of the "Direct data operation position" are not used.

4. Set the "Direct data operation TRIG" to "1."

Direct data operation is started.

- Output (scanner → controller)

| Byte   | Name                       | Setting value | Note           |
|--------|----------------------------|---------------|----------------|
| 52, 53 | Direct data operation TRIG | 1             | Apply all data |

5. Check that the "Direct data operation TRIG\_R" has been "1" and set the "Direct data operation TRIG" to "0."

- Output (scanner → controller)

| Byte   | Name                       | Setting value | Note    |
|--------|----------------------------|---------------|---------|
| 52, 53 | Direct data operation TRIG | 0             | Disable |

## 4-6 Override of linear interpolation operation

"Override of linear interpolation operation" is a function that switches to a different linear interpolation operation while interpolation operation (linear interpolation, circular interpolation, arch interpolation) by direct data operation is being executed.

The operation modes that can be switched are listed below.

- 3: Linear interpolation operation (absolute positioning)
- 4: Linear interpolation operation (relative positioning)
- 30: Linear interpolation operation (camera imaging position)



With the override function, the operation is switched while the speed is maintained. Therefore, if the operation is switched to one in which the robot's travel direction changes significantly while the robot is operating at high speed, a large load will be applied to a specific axis, which may cause damage to the motor or gear unit.

### ■ How to execute the override function

1. Set the "Direct data operation Override" parameter to "1: Enable."
2. Check that the DCMD-RDY output is in an ON state, then execute a new linear interpolation operation.

#### Related parameter

| Parameter ID |       | Name                           | Description  | Setting range           | Initial value |
|--------------|-------|--------------------------------|--|-------------------------|---------------|
| Dec          | Hex   |                                |  |                         |               |
| 4559         | 11CFh | Direct data operation Override | Sets the override function that switches to a different linear interpolation operation while the interpolation operation by direct data operation is being executed. | 0: Disable<br>1: Enable | 0             |







# 5 Parameter

---

This part describes the parameter lists to be used in the MRC Studio software and via EtherNet/IP.

## ◆Table of contents

|          |  |            |           |  |            |
|----------|--|------------|-----------|--|------------|
| <b>1</b> | <b>Timing for parameter to update.....</b> | <b>136</b> | <b>9</b>  | <b>Parameters: Protective function setting.....</b>    | <b>179</b> |
| <b>2</b> | <b>Protect release command.....</b>        | <b>137</b> | 9-1       | Alarm/Information .....                                | 179        |
| <b>3</b> | <b>Maintenance commands.....</b>           | <b>138</b> | 9-2       | Position limit.....                                    | 180        |
| <b>4</b> | <b>Monitor commands.....</b>               | <b>140</b> | 9-3       | AREA signal output / no entry area.....                | 182        |
| <b>5</b> | <b>Parameters: Basic setting .....</b>     | <b>154</b> | 9-4       | Speed limit .....                                      | 185        |
| 5-1      | Basic setting.....                         | 154        | 9-5       | Protection operation .....                             | 187        |
| <b>6</b> | <b>Parameters: Operation setting.....</b>  | <b>156</b> | <b>10</b> | <b>Parameters: Communication and I/F setting .....</b> | <b>188</b> |
| 6-1      | Program/direct data operation.....         | 156        | 10-1      | EtherNet/IP .....                                      | 188        |
| 6-2      | Point data (for program operation).....    | 157        | 10-2      | USB communication .....                                | 189        |
| 6-3      | JOG/ZHOME operation.....                   | 160        | 10-3      | Driver internal communication .....                    | 189        |
| <b>7</b> | <b>Parameters: Pallet setting.....</b>     | <b>163</b> | <b>11</b> | <b>Parameters: Robot setting .....</b>                 | <b>190</b> |
| 7-1      | Pallets 1 to 6.....                        | 163        | 11-1      | End effector / Tool offsets .....                      | 190        |
| 7-2      | Pallet next cell number.....               | 167        |           |  |            |
| <b>8</b> | <b>Parameters: I/O setting.....</b>        | <b>168</b> |           |  |            |
| 8-1      | I/O operation and function .....           | 168        |           |  |            |
| 8-2      | Direct-IN (DIN).....                       | 171        |           |  |            |
| 8-3      | Direct-OUT (DOUT) .....                    | 173        |           |  |            |
| 8-4      | Remote-I/O (R-I/O) .....                   | 175        |           |  |            |
| 8-5      | Virtual input parameters.....              | 177        |           |  |            |
| 8-6      | User output setting parameters.....        | 178        |           |  |            |



# 1 Timing for parameter to update


All data used in the **MRC01** controller is 32 bits wide.

Parameters are stored in the RAM or the non-volatile memory. The parameters stored in the RAM are erased once the power supply is shut off, however, those stored in the non-volatile memory are retained even if the power supply is shut off.

When the power supply of the controller is turned on, the parameters stored in the non-volatile memory are sent to the RAM, and the recalculation and setup for the parameters are executed in the RAM.

Parameters set with the **MRC Studio** software are stored in the non-volatile memory if [Writing] is performed. Parameters set via Implicit communication are saved in the RAM. To save the parameters stored in the RAM to the non-volatile memory, execute the "Write batch NV memory" of the maintenance command.

When a parameter is changed, the timing to update the new value varies depending on the parameter. Refer to "Notation rules" for the update timing.

- • Parameters set via Implicit communication are saved in the RAM. For parameters which update timing is "D: after turning on the power again," be sure to save in the non-volatile memory before turning off the power supply.
- The non-volatile memory can be rewritten approximately 100,000 times.

## ■ Notation rules

### ● Timing to update

In this part, each update timing is represented in an alphabet.

| Notation | Timing to update                 | Description  |
|----------|----------------------------------|--|
| A        | Immediately                      | Recalculation and setup are immediately executed when the parameter is written.                              |
| B        | After operation stop             | Recalculation and setup are executed when the operation is stopped.  |
| C        | After executing Configuration    | Recalculation and setup are executed after Configuration is executed or the power supply is turned on again. |
| D        | After turning on the power again | Recalculation and setup are executed after the power supply is turned on again.                              |



## 2 Protect release command

| Parameter ID |       | Name            | Description  | Initial value | Key code                 |
|--------------|-------|-----------------|--|---------------|--------------------------|
| Dec          | Hex   |                 |  |               |                          |
| 34           | 0022h | HMI release key | Input a key code to release a state of limiting the functions of the <b>MRC Studio</b> software. | 0             | 864617234<br>(33890312h) |



A state of limiting the functions of the **MRC Studio** software can also be released with the HMI input.



### 3 Maintenance commands

Maintenance commands are used to execute resetting alarms, batch processing of the non-volatile memory or the like.



The maintenance commands include processing in which the memory is operated, such as batch processing of the non-volatile memory and P-PRESET-RB execution. Exercise caution not to execute them unnecessarily in succession.



For commands other than "Alarm history details," setting the write data is not required.

| Parameter ID |       | Name  | Description   |
|--------------|-------|---|---|
| Dec          | Hex   |   |   |
| 192          | 00C0h | Alarm reset   | Resets the alarm being generated. Some alarms cannot be reset.  |
| 194          | 00C2h | Clear alarm history   | Clears the alarm history.   |
| 197          | 00C5h | P-PRESET-RB execution   | Rewrites the origin of the user coordinate system to the present TCP.   |
| 198          | 00C6h | Configuration   | Executes recalculation and setup of the parameter.<br>Refer to the next section for details about Configuration.  |
| 199          | 00C7h | Batch data initialization<br>(excluding parameters for<br>mechanism and<br>communication) | Restores the parameters stored in the non-volatile memory to their initial values. (Parameters related to the mechanism and communication settings are excluded.)   |
| 200          | 00C8h | Read batch NV memory  | Reads the parameters stored in the non-volatile memory to the RAM. All parameters stored in the RAM are overwritten.  |
| 201          | 00C9h | Write batch NV memory   | Writes the parameters stored in the RAM to the non-volatile memory. All parameters stored in the non-volatile memory are overwritten. The non-volatile memory can be rewritten approximately 100,000 times. |
| 202          | 00CAh | Batch data initialization<br>(excluding mechanism<br>parameters)                          | Restores the parameters stored in the non-volatile memory to their initial values. (Parameters related to the mechanism setting are excluded.)  |
| 206          | 00CEh | Clear command history   | Clears the command history.   |
| 208          | 00D0h | Execution of ETO-CLR input<br>for all drivers   | Turn the ETO-CLR input ON for all drivers except <b>AZD-KR2D</b> .  |
| 211          | 00D3h | Clear information   | Clears the information being generated.   |
| 212          | 00D4h | Clear information history   | Clears the information history.   |
| 213          | 00D5h | Alarm history details   | When writing the number of history (1 to 10) to this command and executing the "Alarm history details" of the monitor command, the detailed items of the specified alarm history can be checked.            |



## ■ Configuration

Configuration can be executed when all of the following conditions are satisfied.

- An alarm is not present.
- The robot is not operated.
- Neither teaching nor writing data is being performed using the **MRC Studio** software.

The table below shows the status of the controller before and after Configuration is executed.

| Item            | Configuration is ready to execute | Configuration is being executed   | After configuration is executed             |
|-----------------|-----------------------------------|---|---|
| POWER/ALARM LED | Green light                       | Red and green colors blink simultaneously (Green and red colors may overlap and it may be visible to orange.) | It depends on the status of the controller. |
| Output signal   | Enable                            | Disable   | Enable                                      |
| Input signals   | Enable                            | Disable   | Enable                                      |



Even if monitor is executed while Configuration is being executed, the correct monitor value may not return.



## 4 Monitor commands

These commands are used to monitor the command position, the command speed, the alarm history, and the information history, etc. All commands are for READ.

| Parameter ID |       | Name                              | Description   |
|--------------|-------|-----------------------------------|---|
| Dec          | Hex   |                                   |   |
| 64           | 0040h | Present alarm                     | Indicates the alarm code presently being generated.   |
| 65           | 0041h | Alarm history 1                   | Indicates the latest alarm history. When an alarm is present, the code is also indicated in the alarm history 1 simultaneously.                       |
| 66           | 0042h | Alarm history 2                   | Indicates the alarm history.  |
| 67           | 0043h | Alarm history 3                   |   |
| 68           | 0044h | Alarm history 4                   |   |
| 69           | 0045h | Alarm history 5                   |   |
| 70           | 0046h | Alarm history 6                   |   |
| 71           | 0047h | Alarm history 7                   |   |
| 72           | 0048h | Alarm history 8                   |   |
| 73           | 0049h | Alarm history 9                   |   |
| 74           | 004Ah | Alarm history 10                  | Indicates the oldest alarm history.   |
| 97           | 0061h | Program number presently selected | Indicates the program number being selected. The priority is in order of the direct selection (D-SEL), and the M0 to M5 inputs.                       |
| 106          | 006Ah | Direct I/O                        | Indicates the status of direct I/O.<br>(Arrangement of bits ⇨ p.150)  |
| 123          | 007Bh | Information                       | Indicates the information code being generated.<br>(Details of Information code ⇨ p.149)  |
| 124          | 007Ch | Controller temperature            | Indicates the present temperature of the controller. (1=0.1 °C)   |
| 150          | 0096h | Starting number of loop           | Indicates the command number that is the starting point of loop operation being executed.<br>It is held until the next program operation is executed. |
| 151          | 0097h | Number of loop times              | Indicates the number of times that loop operation being executed is repeated.<br>It is held until the next program operation is executed.             |
| 152          | 0098h | Present program number            | Indicates the program number being executed.<br>It is held until the next program operation is executed.  |
| 153          | 0099h | Present command number            | Indicates the command number of program operation being executed.<br>It is held until the next program operation is executed.                         |
| 162          | 00A2h | Number of power-on times          | Indicates the number of times the power supply was turned on.   |
| 169          | 00A9h | Elapsed time from BOOT            | Indicates a time period having elapsed since the power supply was turned on.  |
| 176          | 00B0h | I/O status 1                      | Indicates the ON-OFF status of the internal I/O.<br>(Arrangement of bits ⇨ p.150)   |
| 177          | 00B1h | I/O status 2                      |   |
| 178          | 00B2h | I/O status 3                      |   |
| 179          | 00B3h | I/O status 4                      |   |
| 180          | 00B4h | I/O status 5                      |   |
| 181          | 00B5h | I/O status 6                      |   |
| 182          | 00B6h | I/O status 7                      |   |
| 183          | 00B7h | I/O status 8                      |   |
| 184          | 00B8h | I/O status 9                      |   |



| Parameter ID |       | Name   | Description   |
|--------------|-------|--|---|
| Dec          | Hex   |  |   |
| 185          | 00B9h | I/O status 10                                | Indicates the ON-OFF status of the internal I/O.<br>(Arrangement of bits ⇨ p.150)   |
| 186          | 00BAh | I/O status 11                                |   |
| 187          | 00BBh | I/O status 12                                |   |
| 188          | 00BCh | I/O status 13                                |   |
| 189          | 00BDh | I/O status 14                                |   |
| 190          | 00BEh | I/O status 15                                |   |
| 191          | 00BFh | I/O status 16                                |   |
| 653          | 028Dh | Enabled coordinates                          | Indicates the coordinates where the robot can operate in bits.<br>0000 0001: X<br>0000 0010: Y<br>0000 0100: Z<br>0000 1000: Rx<br>0001 0000: Ry<br>0010 0000: Rz<br>0100 0000: E1<br>1000 0000: E2                             |
| 697          | 02B9h | Present coordinate system                    | Indicates the present coordinate system.<br>0: Base coordinate system<br>1: User coordinate system 1<br>2: User coordinate system 2<br>3: User coordinate system 3  |
| 1047         | 0417h | Present 1st Link rotation angle information  | Indicates the present rotation angle of the 1st arm.<br>This is enabled in a SCARA (360-degree rotation) robot. For other robots, "0" is displayed.<br>-1: less than -180 deg<br>0: -180 deg to +180 deg<br>1: +180 deg or over |
| 1053         | 041Dh | Command position (user coordinate system) X  | Indicates the command position in the user coordinate system. (1=0.001 mm)  |
| 1054         | 041Eh | Command position (user coordinate system) Y  |   |
| 1055         | 041Fh | Command position (user coordinate system) Z  |   |
| 1069         | 042Dh | Feedback position (user coordinate system) X | Indicates the feedback position in the user coordinate system. (1=0.001 mm)   |
| 1070         | 042Eh | Feedback position (user coordinate system) Y |   |
| 1071         | 042Fh | Feedback position (user coordinate system) Z |   |
| 1101         | 044Dh | Command position (base coordinate system) X  | Indicates the command position in the base coordinate system. (1=0.001 mm)  |
| 1102         | 044Eh | Command position (base coordinate system) Y  |   |
| 1103         | 044Fh | Command position (base coordinate system) Z  |   |
| 1105         | 0451h | Command position Rx                          | Indicates the command position of each coordinate. (1=0.001 deg)  |
| 1106         | 0452h | Command position Ry                          |   |
| 1107         | 0453h | Command position Rz                          |   |
| 1117         | 045Dh | Feedback position (base coordinate system) X | Indicates the feedback position in the base coordinate system. (1=0.001 mm)   |
| 1118         | 045Eh | Feedback position (base coordinate system) Y |   |
| 1119         | 045Fh | Feedback position (base coordinate system) Z |   |



| Parameter ID |       | Name                             | Description  |
|--------------|-------|----------------------------------|--|
| Dec          | Hex   |                                  |  |
| 1121         | 0461h | Feedback position Rx             | Indicates the feedback position of each coordinate.<br>(1=0.001 deg)         |
| 1122         | 0462h | Feedback position Ry             |  |
| 1123         | 0463h | Feedback position Rz             |  |
| 1125         | 0465h | Command speed X                  | Indicates the command speed of each coordinate.<br>(1=0.001 mm/s)            |
| 1126         | 0466h | Command speed Y                  |  |
| 1127         | 0467h | Command speed Z                  |  |
| 1129         | 0469h | Command speed Rx                 | Indicates the command speed of each coordinate.<br>(1=0.001 deg/s)           |
| 1130         | 046Ah | Command speed Ry                 |  |
| 1131         | 046Bh | Command speed Rz                 |  |
| 1141         | 0475h | Feedback speed X                 | Indicates the feedback speed of each coordinate.<br>(1=0.001 mm/s)           |
| 1142         | 0476h | Feedback speed Y                 |  |
| 1143         | 0477h | Feedback speed Z                 |  |
| 1145         | 0479h | Feedback speed Rx                | Indicates the feedback speed of each coordinate.<br>(1=0.001 deg/s)          |
| 1146         | 047Ah | Feedback speed Ry                |  |
| 1147         | 047Bh | Feedback speed Rz                |  |
| 1149         | 047Dh | Command position Axis 1          | Indicates the command position of each axis.<br>(1=0.001 mm or 1=0.001 deg)  |
| 1150         | 047Eh | Command position Axis 2          |  |
| 1151         | 047Fh | Command position Axis 3          |  |
| 1152         | 0480h | Command position Axis 4          |  |
| 1153         | 0481h | Command position Axis 5          |  |
| 1154         | 0482h | Command position Axis 6          |  |
| 1155         | 0483h | Command position end-effector 1  |  |
| 1156         | 0484h | Command position end-effector 2  | Indicates the feedback position of each axis.<br>(1=0.001 mm or 1=0.001 deg) |
| 1165         | 048Dh | Feedback position Axis 1         |  |
| 1166         | 048Eh | Feedback position Axis 2         |  |
| 1167         | 048Fh | Feedback position Axis 3         |  |
| 1168         | 0490h | Feedback position Axis 4         |  |
| 1169         | 0491h | Feedback position Axis 5         |  |
| 1170         | 0492h | Feedback position Axis 6         |  |
| 1171         | 0493h | Feedback position end-effector 1 | Indicates the command speed of each axis.<br>(1=0.001 mm/s or 1=0.001 deg/s) |
| 1172         | 0494h | Feedback position end-effector 2 |  |
| 1173         | 0495h | Command speed Axis 1             |  |
| 1174         | 0496h | Command speed Axis 2             |  |
| 1175         | 0497h | Command speed Axis 3             |  |
| 1176         | 0498h | Command speed Axis 4             |  |
| 1177         | 0499h | Command speed Axis 5             |  |
| 1178         | 049Ah | Command speed Axis 6             |  |
| 1179         | 049Bh | Command speed end-effector 1     |  |
| 1180         | 049Ch | Command speed end-effector 2     |  |



| Parameter ID |       | Name                             | Description   |
|--------------|-------|----------------------------------|---|
| Dec          | Hex   |                                  |   |
| 1189         | 04A5h | Feedback speed Axis 1            | Indicates the feedback speed of each axis.<br>(1=0.001 mm/s or 1=0.001 deg/s)   |
| 1190         | 04A6h | Feedback speed Axis 2            |   |
| 1191         | 04A7h | Feedback speed Axis 3            |   |
| 1192         | 04A8h | Feedback speed Axis 4            |   |
| 1193         | 04A9h | Feedback speed Axis 5            |   |
| 1194         | 04AAh | Feedback speed Axis 6            |   |
| 1195         | 04ABh | Feedback speed end-effector 1    |   |
| 1196         | 04ACH | Feedback speed end-effector 2    |   |
| 1197         | 04ADh | Command position Axis 1          | Indicates the command position of each axis. (step)   |
| 1198         | 04AEh | Command position Axis 2          |   |
| 1199         | 04AFh | Command position Axis 3          |   |
| 1200         | 04B0h | Command position Axis 4          |   |
| 1201         | 04B1h | Command position Axis 5          |   |
| 1202         | 04B2h | Command position Axis 6          |   |
| 1203         | 04B3h | Command position end-effector 1  |   |
| 1204         | 04B4h | Command position end-effector 2  |   |
| 1213         | 04BDh | Feedback position Axis 1         | Indicates the feedback position of each axis. (step)  |
| 1214         | 04BEh | Feedback position Axis 2         |   |
| 1215         | 04BFh | Feedback position Axis 3         |   |
| 1216         | 04C0h | Feedback position Axis 4         |   |
| 1217         | 04C1h | Feedback position Axis 5         |   |
| 1218         | 04C2h | Feedback position Axis 6         |   |
| 1219         | 04C3h | Feedback position end-effector 1 |   |
| 1220         | 04C4h | Feedback position end-effector 2 |   |
| 1221         | 04C5h | Command speed Axis 1             | Indicates the command speed of each axis. (Hz)  |
| 1222         | 04C6h | Command speed Axis 2             |   |
| 1223         | 04C7h | Command speed Axis 3             |   |
| 1224         | 04C8h | Command speed Axis 4             |   |
| 1225         | 04C9h | Command speed Axis 5             |   |
| 1226         | 04CAh | Command speed Axis 6             |   |
| 1227         | 04CBh | Command speed end-effector 1     |   |
| 1228         | 04CCh | Command speed end-effector 2     |   |
| 1237         | 04D5h | Feedback speed Axis 1            | Indicates the feedback speed of each axis. (Hz)   |
| 1238         | 04D6h | Feedback speed Axis 2            |   |
| 1239         | 04D7h | Feedback speed Axis 3            |   |
| 1240         | 04D8h | Feedback speed Axis 4            |   |
| 1241         | 04D9h | Feedback speed Axis 5            |   |
| 1242         | 04DAh | Feedback speed Axis 6            |   |
| 1243         | 04DBh | Feedback speed end-effector 1    |   |
| 1244         | 04DCh | Feedback speed end-effector 2    |   |
| 1246         | 04DEh | Feedback speed XYZ               | Indicates the feedback speed of X, Y, and Z. The feedback speed is the composite rate of X, Y, and Z. (1=0.001 mm/s)        |
| 1247         | 04DFh | Feedback speed RxRyRz            | Indicates the feedback speed of Rx, Ry, and Rz. The feedback speed is the composite rate of Rx, Ry, and Rz. (1=0.001 deg/s) |



| Parameter ID |       | Name   | Description  |
|--------------|-------|--|--|
| Dec          | Hex   |  |  |
| 1250         | 04E2h | Command speed XYZ  | Indicates the command speed of X, Y, and Z. The command speed is the composite rate of X, Y, and Z. (1=0.001 mm/s)                                     |
| 1251         | 04E3h | Command speed RxRyRz   | Indicates the command speed of Rx, Ry, and Rz. The command speed is the composite rate of Rx, Ry, and Rz. (1=0.001 deg/s)                              |
| 1254         | 04E6h | Operating current Axis 1                                     | Indicates the operating current of each axis. (1=0.1 %)  |
| 1255         | 04E7h | Operating current Axis 2                                     |  |
| 1256         | 04E8h | Operating current Axis 3                                     |  |
| 1257         | 04E9h | Operating current Axis 4                                     |  |
| 1258         | 04EAh | Operating current Axis 5                                     |  |
| 1259         | 04EBh | Operating current Axis 6                                     |  |
| 1260         | 04ECh | Operating current end-effector 1                             |  |
| 1261         | 04EDh | Operating current end-effector 2                             |  |
| 1275         | 04FBh | Alarm history details (Alarm code)                           | Indicates the description of the alarm history specified by the "Alarm history details" of the maintenance command.                                    |
| 1276         | 04FCh | Alarm history details (Sub code)                             |  |
| 1277         | 04FDh | Alarm history details (Controller temperature)               |  |
| 1278         | 04FEh | Alarm history details (Physical I/O input)                   |  |
| 1279         | 04FFh | Alarm history details (R-I/O output)                         |  |
| 1280         | 0500h | Alarm history details (Program number)                       |  |
| 1281         | 0501h | Alarm history details (Command number)                       |  |
| 1282         | 0502h | Alarm history details (Operation type)                       |  |
| 1283         | 0503h | Alarm history details (Feedback position X)                  |  |
| 1284         | 0504h | Alarm history details (Feedback position Y)                  |  |
| 1285         | 0505h | Alarm history details (Feedback position Z)                  |  |
| 1286         | 0506h | Alarm history details (Feedback position Rx)                 |  |
| 1287         | 0507h | Alarm history details (Feedback position Ry)                 |  |
| 1288         | 0508h | Alarm history details (Feedback position Rz)                 |  |
| 1289         | 0509h | Alarm history details (Feedback position end-effector 1)     |  |
| 1290         | 050Ah | Alarm history details (Feedback position end-effector 2)     |  |
| 1291         | 050Bh | Alarm history details (Elapsed time from Boot)               |  |
| 1292         | 050Ch | Alarm history details (Elapsed time from starting operation) |  |
| 1296         | 0510h | Information history 1  | Indicates the latest information history. When information is being generated, its code is also indicated on the information history 1 simultaneously. |



| Parameter ID |       | Name                         | Description   |
|--------------|-------|------------------------------|---|
| Dec          | Hex   |                              |   |
| 1297         | 0511h | Information history 2        | Indicates the information history.  |
| 1298         | 0512h | Information history 3        |   |
| 1299         | 0513h | Information history 4        |   |
| 1300         | 0514h | Information history 5        |   |
| 1301         | 0515h | Information history 6        |   |
| 1302         | 0516h | Information history 7        |   |
| 1303         | 0517h | Information history 8        |   |
| 1304         | 0518h | Information history 9        |   |
| 1305         | 0519h | Information history 10       |   |
| 1306         | 051Ah | Information history 11       |   |
| 1307         | 051Bh | Information history 12       |   |
| 1308         | 051Ch | Information history 13       |   |
| 1309         | 051Dh | Information history 14       |   |
| 1310         | 051Eh | Information history 15       |   |
| 1311         | 051Fh | Information history 16       | Indicates the oldest information history.   |
| 1312         | 0520h | Information time history 1   | Indicates the history of the time when the latest information was generated. When information is being generated, the time when the present information was generated is indicated. |
| 1313         | 0521h | Information time history 2   | Indicates the history of the time when information was generated.   |
| 1314         | 0522h | Information time history 3   |   |
| 1315         | 0523h | Information time history 4   |   |
| 1316         | 0524h | Information time history 5   |   |
| 1317         | 0525h | Information time history 6   |   |
| 1318         | 0526h | Information time history 7   |   |
| 1319         | 0527h | Information time history 8   |   |
| 1320         | 0528h | Information time history 9   |   |
| 1321         | 0529h | Information time history 10  |   |
| 1322         | 052Ah | Information time history 11  |   |
| 1323         | 052Bh | Information time history 12  |   |
| 1324         | 052Ch | Information time history 13  |   |
| 1325         | 052Dh | Information time history 14  |   |
| 1326         | 052Eh | Information time history 15  |   |
| 1327         | 052Fh | Information time history 16  | Indicates the history of the time when the oldest information was generated.  |
| 1408         | 0580h | Maximum command speed XYZ    | Indicates the maximum command speed of X, Y, and Z after the power supply is turned on. The maximum command speed is the composite rate of X, Y, and Z. (1=0.001 mm/s)              |
| 1409         | 0581h | Maximum command speed RxRyRz | Indicates the maximum command speed of Rx, Ry, and Rz after the power supply is turned on. The maximum command speed is the composite rate of Rx, Ry, and Rz. (1=0.001 deg/s)       |



| Parameter ID |       | Name                                      | Description   |
|--------------|-------|---|---|
| Dec          | Hex   |   |   |
| 1412         | 0584h | Maximum command speed Axis 1              | Indicates the maximum command speed of each axis after the power supply is turned on. (1=0.001 mm/s or 1=0.001 deg/s)   |
| 1413         | 0585h | Maximum command speed Axis 2              |   |
| 1414         | 0586h | Maximum command speed Axis 3              |   |
| 1415         | 0587h | Maximum command speed Axis 4              |   |
| 1416         | 0588h | Maximum command speed Axis 5              |   |
| 1417         | 0589h | Maximum command speed Axis 6              |   |
| 1418         | 058Ah | Maximum command speed end-effector 1      |   |
| 1419         | 058Bh | Maximum command speed end-effector 2      |   |
| 1420         | 058Ch | Maximum command speed [Hz] Axis 1         | Indicates the maximum command speed of each axis after the power supply is turned on.   |
| 1421         | 058Dh | Maximum command speed [Hz] Axis 2         |   |
| 1422         | 058Eh | Maximum command speed [Hz] Axis 3         |   |
| 1423         | 058Fh | Maximum command speed [Hz] Axis 4         |   |
| 1424         | 0590h | Maximum command speed [Hz] Axis 5         |   |
| 1425         | 0591h | Maximum command speed [Hz] Axis 6         |   |
| 1426         | 0592h | Maximum command speed [Hz] end-effector 1 |   |
| 1427         | 0593h | Maximum command speed [Hz] end-effector 2 |   |
| 1428         | 0594h | Maximum load factor Axis 1                | Indicates the maximum load factor of each axis after the power supply is turned on. (1=0.1 %)   |
| 1429         | 0595h | Maximum load factor Axis 2                |   |
| 1430         | 0596h | Maximum load factor Axis 3                |   |
| 1431         | 0597h | Maximum load factor Axis 4                |   |
| 1432         | 0598h | Maximum load factor Axis 5                |   |
| 1433         | 0599h | Maximum load factor Axis 6                |   |
| 1434         | 059Ah | Maximum load factor end-effector 1        |   |
| 1435         | 059Bh | Maximum load factor end-effector 2        |   |
| 1448         | 05A8h | Driver communication status               | Indicate the communication status of each axis in bits.<br>0000 0001: Axis 1<br>0000 0010: Axis 2<br>0000 0100: Axis 3<br>0000 1000: Axis 4<br>0001 0000: Axis 5<br>0010 0000: Axis 6<br>0100 0000: End effector 1<br>1000 0000: End effector 2 |
| 1632         | 0660h | Command history 1                         | Indicates the latest command number among the commands executed until now. During operation, the value same as the "Present command number" is also indicated in the command history 1.   |



| Parameter ID |       | Name   | Description  |
|--------------|-------|--|--|
| Dec          | Hex   |  |  |
| 1633         | 0661h | Command history 2                              | Indicates the history of command numbers executed until now.   |
| 1634         | 0662h | Command history 3                              |  |
| 1635         | 0663h | Command history 4                              |  |
| 1636         | 0664h | Command history 5                              |  |
| 1637         | 0665h | Command history 6                              |  |
| 1638         | 0666h | Command history 7                              |  |
| 1639         | 0667h | Command history 8                              |  |
| 1640         | 0668h | Command history 9                              |  |
| 1641         | 0669h | Command history 10                             |  |
| 1642         | 066Ah | Command history 11                             |  |
| 1643         | 066Bh | Command history 12                             |  |
| 1644         | 066Ch | Command history 13                             |  |
| 1645         | 066Dh | Command history 14                             |  |
| 1646         | 066Eh | Command history 15                             |  |
| 1647         | 066Fh | Command history 16                             | Indicates the oldest command number among the commands executed until now.   |
| 2688         | 0A80h | Camera coordinate transformation error         | Indicates an error that occurred when converting the "(DD) Camera coordinate" to the base coordinate system with the camera selected in the "(DD) Camera number selection."<br>0: No error<br>1: Camera 1: Not calibrated<br>2: Camera 2: Not calibrated<br>3: Coordinate transformation failed<br>4: Unsupported camera number (a camera other than camera 1 or camera 2 is selected) |
| 2689         | 0A81h | Present camera number                          | Indicates the camera number selected in the "(DD) Camera number selection."  |
| 2690         | 0A82h | Present camera calibration method              | Indicates the calibration method of the camera selected in the "(DD) Camera number selection."<br>0: Not calibrated<br>1: Fixed camera method<br>2: Hand-eye method  |
| 2697         | 0A89h | Camera coordinate base transformation value X  | Indicates the value that each coordinate value set in the "(DD) Camera coordinate" is converted to the base coordinate system using the camera selected in the "(DD) Camera number selection" of Implicit message.   |
| 2698         | 0A8Ah | Camera coordinate base transformation value Y  |  |
| 2702         | 0A8Eh | Camera coordinate base transformation value Rz |  |
| 2703         | 0A8Fh | Camera 1 calibration method                    | Indicates the calibration method of the camera 1.<br>0: Not calibrated<br>1: Fixed camera method<br>2: Hand-eye method   |
| 2705         | 0A91h | Camera 2 calibration method                    | Indicates the calibration method of the camera 2.<br>0: Not calibrated<br>1: Fixed camera method<br>2: Hand-eye method   |
| 3989         | 0F95h | Pallet number being executed                   | Indicates the pallet number selected in pallet operation being executed. It is held until the next pallet operation is executed.   |
| 3990         | 0F96h | Pallet 1 next cell position (horizontal)       | Indicates the next cell position of the pallet 1. Indicates to which cell is moved from the start position S.  |
| 3991         | 0F97h | Pallet 1 next cell position (vertical)         |  |



| Parameter ID |       | Name                                     | Description   |
|--------------|-------|--|---|
| Dec          | Hex   |  |   |
| 3992         | 0F98h | Pallet 2 next cell position (horizontal) | Indicates the next cell position of the pallet 2. Indicates to which cell is moved from the start position S. |
| 3993         | 0F99h | Pallet 2 next cell position (vertical)   |   |
| 3994         | 0F9Ah | Pallet 3 next cell position (horizontal) | Indicates the next cell position of the pallet 3. Indicates to which cell is moved from the start position S. |
| 3995         | 0F9Bh | Pallet 3 next cell position (vertical)   |   |
| 3996         | 0F9Ch | Pallet 4 next cell position (horizontal) | Indicates the next cell position of the pallet 4. Indicates to which cell is moved from the start position S. |
| 3997         | 0F9Dh | Pallet 4 next cell position (vertical)   |   |
| 3998         | 0F9Eh | Pallet 5 next cell position (horizontal) | Indicates the next cell position of the pallet 5. Indicates to which cell is moved from the start position S. |
| 3999         | 0F9Fh | Pallet 5 next cell position (vertical)   |   |
| 4000         | 0FA0h | Pallet 6 next cell position (horizontal) | Indicates the next cell position of the pallet 6. Indicates to which cell is moved from the start position S. |
| 4001         | 0FA1h | Pallet 6 next cell position (vertical)   |   |
| 4012         | 0FACH | Pallet 1 next cell number                | Indicates the next cell number of the pallet 1.   |
| 4013         | 0FADh | Pallet 2 next cell number                | Indicates the next cell number of the pallet 2.   |
| 4014         | 0FAEh | Pallet 3 next cell number                | Indicates the next cell number of the pallet 3.   |
| 4015         | 0FAFh | Pallet 4 next cell number                | Indicates the next cell number of the pallet 4.   |
| 4016         | 0FB0h | Pallet 5 next cell number                | Indicates the next cell number of the pallet 5.   |
| 4017         | 0FB1h | Pallet 6 next cell number                | Indicates the next cell number of the pallet 6.   |



## ■ Information codes

Information codes are indicated in eight hexadecimal digits. They can also be read in 32 bits.  
If multiple information items are generated, the logical sum (OR) of the information codes is indicated.

### Example: When information of “TCP positive direction operation prohibition” and “Axis positive direction operation prohibition” is generated

Information code of TCP positive direction operation prohibition: 0001 0000h

Information code of Axis positive direction operation prohibition: 0004 0000h

Logical sum (OR) of two information codes: 0005 0000h

| Information code | 32 bits indication                         | Information item                              |
|------------------|--|---|
| 00000001h        | 0000 0000 0000 0000<br>0000 0000 0000 0001 | I/O (user setting)                            |
| 00000004h        | 0000 0000 0000 0000<br>0000 0000 0000 0100 | Controller temperature                        |
| 00000080h        | 0000 0000 0000 0000<br>0000 0000 1000 0000 | TCP speed                                     |
| 00000100h        | 0000 0000 0000 0000<br>0000 0001 0000 0000 | Axis speed                                    |
| 00000200h        | 0000 0000 0000 0000<br>0000 0010 0000 0000 | Operation start error                         |
| 00000400h        | 0000 0000 0000 0000<br>0000 0100 0000 0000 | ZHOME start error                             |
| 00000800h        | 0000 0000 0000 0000<br>0000 1000 0000 0000 | Preset request                                |
| 00002000h        | 0000 0000 0000 0000<br>0010 0000 0000 0000 | Mechanism information mismatch                |
| 00008000h        | 0000 0000 0000 0000<br>1000 0000 0000 0000 | RS-485 communication error                    |
| 00010000h        | 0000 0000 0000 0001<br>0000 0000 0000 0000 | TCP positive direction operation prohibition  |
| 00020000h        | 0000 0000 0000 0010<br>0000 0000 0000 0000 | TCP negative direction operation prohibition  |
| 00040000h        | 0000 0000 0000 0100<br>0000 0000 0000 0000 | Axis positive direction operation prohibition |
| 00080000h        | 0000 0000 0000 1000<br>0000 0000 0000 0000 | Axis negative direction operation prohibition |
| 00100000h        | 0000 0000 0001 0000<br>0000 0000 0000 0000 | Approach TCP inhibition area                  |
| 00200000h        | 0000 0000 0010 0000<br>0000 0000 0000 0000 | Near singularity                              |
| 00400000h        | 0000 0000 0100 0000<br>0000 0000 0000 0000 | Robot posture error                           |
| 00800000h        | 0000 0000 1000 0000<br>0000 0000 0000 0000 | Slip mode                                     |
| 04000000h        | 0000 0100 0000 0000<br>0000 0000 0000 0000 | Driver connection setting incomplete          |
| 08000000h        | 0000 1000 0000 0000<br>0000 0000 0000 0000 | Driver information detection                  |
| 10000000h        | 0001 0000 0000 0000<br>0000 0000 0000 0000 | Operation start restricted mode               |
| 20000000h        | 0010 0000 0000 0000<br>0000 0000 0000 0000 | I/O test mode                                 |
| 40000000h        | 0100 0000 0000 0000<br>0000 0000 0000 0000 | Configuration request                         |
| 80000000h        | 1000 0000 0000 0000<br>0000 0000 0000 0000 | Reboot request                                |



## ■ Direct I/O

The arrangement of bits for direct I/O is indicated.

| Parameter ID   | Description |        |        |        |        |        |        |        |
|----------------|-------------|--------|--------|--------|--------|--------|--------|--------|
| 106<br>(006Ah) | Bit 31      | Bit 30 | Bit 29 | Bit 28 | Bit 27 | Bit 26 | Bit 25 | Bit 24 |
|                | —           | —      | —      | —      | —      | —      | —      | —      |
|                | Bit 23      | Bit 22 | Bit 21 | Bit 20 | Bit 19 | Bit 18 | Bit 17 | Bit 16 |
|                | DOUT7       | DOUT6  | DOUT5  | DOUT4  | DOUT3  | DOUT2  | DOUT1  | DOUT0  |
|                | Bit 15      | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9  | Bit 8  |
|                | —           | —      | —      | —      | —      | —      | —      | —      |
|                | Bit 7       | Bit 6  | Bit 5  | Bit 4  | Bit 3  | Bit 2  | Bit 1  | Bit 0  |
|                | DIN7        | DIN6   | DIN5   | DIN4   | DIN3   | DIN2   | DIN1   | DIN0   |

## ■ I/O status

The arrangement of bits for internal I/O is indicated.

### ● Input signals

| Parameter ID   | Description  |              |              |              |          |           |             |           |
|----------------|--------------|--------------|--------------|--------------|----------|-----------|-------------|-----------|
| 176<br>(00B0h) | Bit 31       | Bit 30       | Bit 29       | Bit 28       | Bit 27   | Bit 26    | Bit 25      | Bit 24    |
|                | —            | HMI          | INFO-CLR-DRV | INFO-CLR-CNT | INFO-CLR | —         | ETO-CLR-DRV | —         |
|                | Bit 23       | Bit 22       | Bit 21       | Bit 20       | Bit 19   | Bit 18    | Bit 17      | Bit 16    |
|                | —            | ALM-RST-DRV  | ALM-RST-CNT  | ALM-RST      | E-STOP   | —         | PAUSE       | STOP      |
|                | Bit 15       | Bit 14       | Bit 13       | Bit 12       | Bit 11   | Bit 10    | Bit 9       | Bit 8     |
|                | —            | —            | —            | —            | —        | —         | —           | —         |
|                | Bit 7        | Bit 6        | Bit 5        | Bit 4        | Bit 3    | Bit 2     | Bit 1       | Bit 0     |
| 177<br>(00B1h) | —            | —            | —            | FREE-E2      | FREE-E1  | FREE-RB   | FREE        | —         |
|                | Bit 31       | Bit 30       | Bit 29       | Bit 28       | Bit 27   | Bit 26    | Bit 25      | Bit 24    |
|                | —            | —            | —            | —            | —        | —         | —           | —         |
|                | Bit 23       | Bit 22       | Bit 21       | Bit 20       | Bit 19   | Bit 18    | Bit 17      | Bit 16    |
|                | PRG-ROUT-CLR | PRG-DOUT-CLR | P-PRESET-RB  | —            | —        | —         | —           | —         |
|                | Bit 15       | Bit 14       | Bit 13       | Bit 12       | Bit 11   | Bit 10    | Bit 9       | Bit 8     |
|                | —            | —            | —            | —            | —        | —         | —           | —         |
| 178<br>(00B2h) | Bit 7        | Bit 6        | Bit 5        | Bit 4        | Bit 3    | Bit 2     | Bit 1       | Bit 0     |
|                | —            | —            | SPD-LMT3     | SPD-LMT2     | SPD-LMT1 | CRNT-LMT3 | CRNT-LMT2   | CRNT-LMT1 |
|                | Bit 31       | Bit 30       | Bit 29       | Bit 28       | Bit 27   | Bit 26    | Bit 25      | Bit 24    |
|                | —            | —            | —            | —            | —        | —         | SSTART      | START     |
|                | Bit 23       | Bit 22       | Bit 21       | Bit 20       | Bit 19   | Bit 18    | Bit 17      | Bit 16    |
|                | D-SEL7       | D-SEL6       | D-SEL5       | D-SEL4       | D-SEL3   | D-SEL2    | D-SEL1      | D-SEL0    |
|                | Bit 15       | Bit 14       | Bit 13       | Bit 12       | Bit 11   | Bit 10    | Bit 9       | Bit 8     |
| 178<br>(00B2h) | ZHOME-E2     | ZHOME-E1     | ZHOME-RB     | ZHOME-ALL    | —        | —         | —           | —         |
|                | Bit 7        | Bit 6        | Bit 5        | Bit 4        | Bit 3    | Bit 2     | Bit 1       | Bit 0     |
|                | —            | —            | M5           | M4           | M3       | M2        | M1          | M0        |



| Parameter ID   | Description |           |           |           |           |           |           |           |
|----------------|-------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| 179<br>(00B3h) | Bit 31      | Bit 30    | Bit 29    | Bit 28    | Bit 27    | Bit 26    | Bit 25    | Bit 24    |
|                | JOG-A8–     | JOG-A8+   | JOG-A7–   | JOG-A7+   | JOG-A6–   | JOG-A6+   | JOG-A5–   | JOG-A5+   |
|                | Bit 23      | Bit 22    | Bit 21    | Bit 20    | Bit 19    | Bit 18    | Bit 17    | Bit 16    |
|                | JOG-A4–     | JOG-A4+   | JOG-A3–   | JOG-A3+   | JOG-A2–   | JOG-A2+   | JOG-A1–   | JOG-A1+   |
|                | Bit 15      | Bit 14    | Bit 13    | Bit 12    | Bit 11    | Bit 10    | Bit 9     | Bit 8     |
|                | JOG-E2–     | JOG-E2+   | JOG-E1–   | JOG-E1+   | JOG-RZ–   | JOG-RZ+   | JOG-RY–   | JOG-RY+   |
|                | Bit 7       | Bit 6     | Bit 5     | Bit 4     | Bit 3     | Bit 2     | Bit 1     | Bit 0     |
|                | JOG-RX–     | JOG-RX+   | JOG-Z–    | JOG-Z+    | JOG-Y–    | JOG-Y+    | JOG-X–    | JOG-X+    |
| 180<br>(00B4h) | Bit 31      | Bit 30    | Bit 29    | Bit 28    | Bit 27    | Bit 26    | Bit 25    | Bit 24    |
|                | JOG-P-A8–   | JOG-P-A8+ | JOG-P-A7– | JOG-P-A7+ | JOG-P-A6– | JOG-P-A6+ | JOG-P-A5– | JOG-P-A5+ |
|                | Bit 23      | Bit 22    | Bit 21    | Bit 20    | Bit 19    | Bit 18    | Bit 17    | Bit 16    |
|                | JOG-P-A4–   | JOG-P-A4+ | JOG-P-A3– | JOG-P-A3+ | JOG-P-A2– | JOG-P-A2+ | JOG-P-A1– | JOG-P-A1+ |
|                | Bit 15      | Bit 14    | Bit 13    | Bit 12    | Bit 11    | Bit 10    | Bit 9     | Bit 8     |
|                | JOG-P-E2–   | JOG-P-E2+ | JOG-P-E1– | JOG-P-E1+ | JOG-P-RZ– | JOG-P-RZ+ | JOG-P-RY– | JOG-P-RY+ |
|                | Bit 7       | Bit 6     | Bit 5     | Bit 4     | Bit 3     | Bit 2     | Bit 1     | Bit 0     |
|                | JOG-P-RX–   | JOG-P-RX+ | JOG-P-Z–  | JOG-P-Z+  | JOG-P-Y–  | JOG-P-Y+  | JOG-P-X–  | JOG-P-X+  |
| 181<br>(00B5h) | Bit 31      | Bit 30    | Bit 29    | Bit 28    | Bit 27    | Bit 26    | Bit 25    | Bit 24    |
|                | –           | –         | –         | –         | –         | –         | –         | –         |
|                | Bit 23      | Bit 22    | Bit 21    | Bit 20    | Bit 19    | Bit 18    | Bit 17    | Bit 16    |
|                | –           | –         | PLT6-CLR  | PLT5-CLR  | PLT4-CLR  | PLT3-CLR  | PLT2-CLR  | PLT1-CLR  |
|                | Bit 15      | Bit 14    | Bit 13    | Bit 12    | Bit 11    | Bit 10    | Bit 9     | Bit 8     |
|                | PRG-DIN15   | PRG-DIN14 | PRG-DIN13 | PRG-DIN12 | PRG-DIN11 | PRG-DIN10 | PRG-DIN9  | PRG-DIN8  |
|                | Bit 7       | Bit 6     | Bit 5     | Bit 4     | Bit 3     | Bit 2     | Bit 1     | Bit 0     |
|                | PRG-DIN7    | PRG-DIN6  | PRG-DIN5  | PRG-DIN4  | PRG-DIN3  | PRG-DIN2  | PRG-DIN1  | PRG-DIN0  |
| 182<br>(00B6h) | Bit 31      | Bit 30    | Bit 29    | Bit 28    | Bit 27    | Bit 26    | Bit 25    | Bit 24    |
|                | PRG-RIN31   | PRG-RIN30 | PRG-RIN29 | PRG-RIN28 | PRG-RIN27 | PRG-RIN26 | PRG-RIN25 | PRG-RIN24 |
|                | Bit 23      | Bit 22    | Bit 21    | Bit 20    | Bit 19    | Bit 18    | Bit 17    | Bit 16    |
|                | PRG-RIN23   | PRG-RIN22 | PRG-RIN21 | PRG-RIN20 | PRG-RIN19 | PRG-RIN18 | PRG-RIN17 | PRG-RIN16 |
|                | Bit 15      | Bit 14    | Bit 13    | Bit 12    | Bit 11    | Bit 10    | Bit 9     | Bit 8     |
|                | PRG-RIN15   | PRG-RIN14 | PRG-RIN13 | PRG-RIN12 | PRG-RIN11 | PRG-RIN10 | PRG-RIN9  | PRG-RIN8  |
|                | Bit 7       | Bit 6     | Bit 5     | Bit 4     | Bit 3     | Bit 2     | Bit 1     | Bit 0     |
|                | PRG-RIN7    | PRG-RIN6  | PRG-RIN5  | PRG-RIN4  | PRG-RIN3  | PRG-RIN2  | PRG-RIN1  | PRG-RIN0  |
| 183<br>(00B7h) | Bit 31      | Bit 30    | Bit 29    | Bit 28    | Bit 27    | Bit 26    | Bit 25    | Bit 24    |
|                | –           | –         | –         | –         | –         | –         | –         | –         |
|                | Bit 23      | Bit 22    | Bit 21    | Bit 20    | Bit 19    | Bit 18    | Bit 17    | Bit 16    |
|                | –           | –         | –         | –         | –         | –         | –         | –         |
|                | Bit 15      | Bit 14    | Bit 13    | Bit 12    | Bit 11    | Bit 10    | Bit 9     | Bit 8     |
|                | R15         | R14       | R13       | R12       | R11       | R10       | R9        | R8        |
|                | Bit 7       | Bit 6     | Bit 5     | Bit 4     | Bit 3     | Bit 2     | Bit 1     | Bit 0     |
|                | R7          | R6        | R5        | R4        | R3        | R2        | R1        | R0        |



## ● Output signals

| Parameter ID   | Description    |                 |                  |                |                |                |                |           |
|----------------|----------------|-----------------|------------------|----------------|----------------|----------------|----------------|-----------|
| 184<br>(00B8h) | Bit 31         | Bit 30          | Bit 29           | Bit 28         | Bit 27         | Bit 26         | Bit 25         | Bit 24    |
|                | CRNT-E2        | CRNT-E1         | CRNT-RB          | CRNT           | TLC-E2         | TLC-E1         | TLC-RB         | TLC       |
|                | Bit 23         | Bit 22          | Bit 21           | Bit 20         | Bit 19         | Bit 18         | Bit 17         | Bit 16    |
|                | —              | —               | ETO-MON-<br>DRV  | —              | SYS-BSY        | INFO-DRV       | INFO-CNT       | INFO      |
|                | Bit 15         | Bit 14          | Bit 13           | Bit 12         | Bit 11         | Bit 10         | Bit 9          | Bit 8     |
|                | MOVE-CNT       | CMD-END-<br>CNT | —                | CMD-END        | WAIT           | PRG-RUN        | MOVE           | READY     |
|                | Bit 7          | Bit 6           | Bit 5            | Bit 4          | Bit 3          | Bit 2          | Bit 1          | Bit 0     |
|                | SYS-RDY        | ALM-B-DRV       | ALM-B-CNT        | ALM-B          | ALM-A-DRV      | ALM-A-CNT      | ALM-A          | CONST-OFF |
| 185<br>(00B9h) | Bit 31         | Bit 30          | Bit 29           | Bit 28         | Bit 27         | Bit 26         | Bit 25         | Bit 24    |
|                | SLS-A4—        | SLS-A4+         | SLS-A3—          | SLS-A3+        | SLS-A2—        | SLS-A2+        | SLS-A1—        | SLS-A1+   |
|                | Bit 23         | Bit 22          | Bit 21           | Bit 20         | Bit 19         | Bit 18         | Bit 17         | Bit 16    |
|                | —              | —               | —                | —              | —              | —              | —              | —         |
|                | Bit 15         | Bit 14          | Bit 13           | Bit 12         | Bit 11         | Bit 10         | Bit 9          | Bit 8     |
|                | —              | —               | SLS-Z—           | SLS-Z+         | SLS-Y—         | SLS-Y+         | SLS-X—         | SLS-X+    |
|                | Bit 7          | Bit 6           | Bit 5            | Bit 4          | Bit 3          | Bit 2          | Bit 1          | Bit 0     |
|                | —              | —               | PRST-STLD-<br>RB | —              | —              | ABSPEN         | HOME-END       | VA        |
| 186<br>(00BAh) | Bit 31         | Bit 30          | Bit 29           | Bit 28         | Bit 27         | Bit 26         | Bit 25         | Bit 24    |
|                | —              | —               | —                | —              | —              | —              | USR-OUT1       | USR-OUT0  |
|                | Bit 23         | Bit 22          | Bit 21           | Bit 20         | Bit 19         | Bit 18         | Bit 17         | Bit 16    |
|                | —              | —               | —                | —              | —              | —              | —              | —         |
|                | Bit 15         | Bit 14          | Bit 13           | Bit 12         | Bit 11         | Bit 10         | Bit 9          | Bit 8     |
|                | AREA2-AX       | AREA1-AX        | AREA0-AX         | AREA4          | AREA3          | AREA2          | AREA1          | AREA0     |
|                | Bit 7          | Bit 6           | Bit 5            | Bit 4          | Bit 3          | Bit 2          | Bit 1          | Bit 0     |
|                | SLS-A8—        | SLS-A8+         | SLS-A7—          | SLS-A7+        | SLS-A6—        | SLS-A6+        | SLS-A5—        | SLS-A5+   |
| 187<br>(00BBh) | Bit 31         | Bit 30          | Bit 29           | Bit 28         | Bit 27         | Bit 26         | Bit 25         | Bit 24    |
|                | —              | —               | —                | —              | —              | —              | —              | —         |
|                | Bit 23         | Bit 22          | Bit 21           | Bit 20         | Bit 19         | Bit 18         | Bit 17         | Bit 16    |
|                | D-END7         | D-END6          | D-END5           | D-END4         | D-END3         | D-END2         | D-END1         | D-END0    |
|                | Bit 15         | Bit 14          | Bit 13           | Bit 12         | Bit 11         | Bit 10         | Bit 9          | Bit 8     |
|                | —              | SPD-LMTD3       | SPD-LMTD2        | SPD-LMTD1      | CRNT-<br>LMTD3 | CRNT-<br>LMTD2 | CRNT-<br>LMTD1 | PAUSE-BSY |
|                | Bit 7          | Bit 6           | Bit 5            | Bit 4          | Bit 3          | Bit 2          | Bit 1          | Bit 0     |
|                | —              | DCMD-RDY        | —                | SLIP           | PST-ERR        | SGL-LMT        | HANDSYS-<br>EN | ROBOT-EN  |
| 188<br>(00BCh) | Bit 31         | Bit 30          | Bit 29           | Bit 28         | Bit 27         | Bit 26         | Bit 25         | Bit 24    |
|                | —              | —               | —                | —              | —              | —              | —              | —         |
|                | Bit 23         | Bit 22          | Bit 21           | Bit 20         | Bit 19         | Bit 18         | Bit 17         | Bit 16    |
|                | —              | —               | —                | —              | —              | —              | —              | —         |
|                | Bit 15         | Bit 14          | Bit 13           | Bit 12         | Bit 11         | Bit 10         | Bit 9          | Bit 8     |
|                | PRG-<br>DOUT15 | PRG-<br>DOUT14  | PRG-<br>DOUT13   | PRG-<br>DOUT12 | PRG-<br>DOUT11 | PRG-<br>DOUT10 | PRG-DOUT9      | PRG-DOUT8 |
|                | Bit 7          | Bit 6           | Bit 5            | Bit 4          | Bit 3          | Bit 2          | Bit 1          | Bit 0     |
|                | PRG-DOUT7      | PRG-DOUT6       | PRG-DOUT5        | PRG-DOUT4      | PRG-DOUT3      | PRG-DOUT2      | PRG-DOUT1      | PRG-DOUT0 |



| Parameter ID   | Description |              |              |              |              |             |             |              |
|----------------|-------------|--------------|--------------|--------------|--------------|-------------|-------------|--------------|
| 189<br>(00BDh) | Bit 31      | Bit 30       | Bit 29       | Bit 28       | Bit 27       | Bit 26      | Bit 25      | Bit 24       |
|                | PRG-ROUT31  | PRG-ROUT30   | PRG-ROUT29   | PRG-ROUT28   | PRG-ROUT27   | PRG-ROUT26  | PRG-ROUT25  | PRG-ROUT24   |
|                | Bit 23      | Bit 22       | Bit 21       | Bit 20       | Bit 19       | Bit 18      | Bit 17      | Bit 16       |
|                | PRG-ROUT23  | PRG-ROUT22   | PRG-ROUT21   | PRG-ROUT20   | PRG-ROUT19   | PRG-ROUT18  | PRG-ROUT17  | PRG-ROUT16   |
|                | Bit 15      | Bit 14       | Bit 13       | Bit 12       | Bit 11       | Bit 10      | Bit 9       | Bit 8        |
|                | PRG-ROUT15  | PRG-ROUT14   | PRG-ROUT13   | PRG-ROUT12   | PRG-ROUT11   | PRG-ROUT10  | PRG-ROUT9   | PRG-ROUT8    |
|                | Bit 7       | Bit 6        | Bit 5        | Bit 4        | Bit 3        | Bit 2       | Bit 1       | Bit 0        |
|                | PRG-ROUT7   | PRG-ROUT6    | PRG-ROUT5    | PRG-ROUT4    | PRG-ROUT3    | PRG-ROUT2   | PRG-ROUT1   | PRG-ROUT0    |
| 190<br>(00BEh) | Bit 31      | Bit 30       | Bit 29       | Bit 28       | Bit 27       | Bit 26      | Bit 25      | Bit 24       |
|                | —           | —            | —            | —            | —            | —           | —           | —            |
|                | Bit 23      | Bit 22       | Bit 21       | Bit 20       | Bit 19       | Bit 18      | Bit 17      | Bit 16       |
|                | —           | —            | —            | —            | —            | —           | —           | —            |
|                | Bit 15      | Bit 14       | Bit 13       | Bit 12       | Bit 11       | Bit 10      | Bit 9       | Bit 8        |
|                | —           | —            | —            | —            | —            | —           | —           | —            |
|                | Bit 7       | Bit 6        | Bit 5        | Bit 4        | Bit 3        | Bit 2       | Bit 1       | Bit 0        |
|                | —           | —            | —            | —            | —            | —           | —           | —            |
| 191<br>(00BFh) | Bit 31      | Bit 30       | Bit 29       | Bit 28       | Bit 27       | Bit 26      | Bit 25      | Bit 24       |
|                | INFO-RBT    | INFO-CFG     | INFO-IOTEST  | INFO-DSLMTD  | INFO-DRVINFO | INFO-DRVDIS | —           | —            |
|                | Bit 23      | Bit 22       | Bit 21       | Bit 20       | Bit 19       | Bit 18      | Bit 17      | Bit 16       |
|                | INFO-SLIP   | INFO-PST-ERR | INFO-SGL-LMT | INFO-PHBAREA | INFO-OT-AX—  | INFO-OT-AX+ | INFO-OT-RB— | INFO-OT-RB+  |
|                | Bit 15      | Bit 14       | Bit 13       | Bit 12       | Bit 11       | Bit 10      | Bit 9       | Bit 8        |
|                | INFO-NET-E  | —            | INFO-MECHMIS | —            | INFO-PR-REQ  | INFO-ZHOME  | INFO-START  | INFO-AXISSPD |
|                | Bit 7       | Bit 6        | Bit 5        | Bit 4        | Bit 3        | Bit 2       | Bit 1       | Bit 0        |
|                | INFO-RBSPD  | —            | —            | —            | —            | INFO-CNTTMP | —           | INFO-USRIO   |



# 5 Parameters: Basic setting

## 5-1 Basic setting

| Parameter ID |       | Name  | Description  | Setting range  | Initial value | Update |
|--------------|-------|---|--|--|---------------|--------|
| Dec          | Hex   |   |  |  |               |        |
| 485          | 01E5h | Stop current Axis 1                                 | Sets the stop current for the axis 1.  | 1 to 1,000 (1=0.1 %)   | 500           | A      |
| 486          | 01E6h | Stop current Axis 2                                 | Sets the stop current for the axis 2.  | 1 to 1,000 (1=0.1 %)   | 500           | A      |
| 487          | 01E7h | Stop current Axis 3                                 | Sets the stop current for the axis 3.  | 1 to 1,000 (1=0.1 %)   | 500           | A      |
| 488          | 01E8h | Stop current Axis 4                                 | Sets the stop current for the axis 4.  | 1 to 1,000 (1=0.1 %)   | 500           | A      |
| 489          | 01E9h | Stop current Axis 5                                 | Sets the stop current for the axis 5.  | 1 to 1,000 (1=0.1 %)   | 500           | A      |
| 490          | 01EAh | Stop current Axis 6                                 | Sets the stop current for the axis 6.  | 1 to 1,000 (1=0.1 %)   | 500           | A      |
| 491          | 01EBh | Stop current end-effector 1                         | Sets the stop current for the end effector 1.  | 1 to 1,000 (1=0.1 %)   | 500           | A      |
| 492          | 01ECh | Stop current end-effector 2                         | Sets the stop current for the end effector 2.  | 1 to 1,000 (1=0.1 %)   | 500           | A      |
| 509          | 01FDh | Simulation mode                                     | Coordinates and the operating state of operation programs can be checked without operating a robot.                        | 0: Disable<br>1: Enable  | 0             | C      |
| 791          | 0317h | Coordinate system selection when power is turned on | Sets the coordinate system when the power supply is turned on.   | 0: Base coordinate system<br>1: User coordinate system 1<br>2: User coordinate system 2<br>3: User coordinate system 3 | 1             | D      |
| 3754         | 0EAAh | Automatic current cutback function Axis 1           | Enables the automatic current cutback function for the axis 1.   | 0: Disable<br>1: Enable  | 1             | A      |
| 3755         | 0EABh | Automatic current cutback function Axis 2           | Enables the automatic current cutback function for the axis 2.   | 0: Disable<br>1: Enable  | 1             | A      |
| 3756         | 0EACH | Automatic current cutback function Axis 3           | Enables the automatic current cutback function for the axis 3.   | 0: Disable<br>1: Enable  | 1             | A      |
| 3757         | 0EADh | Automatic current cutback function Axis 4           | Enables the automatic current cutback function for the axis 4.   | 0: Disable<br>1: Enable  | 1             | A      |
| 3758         | 0EAEh | Automatic current cutback function Axis 5           | Enables the automatic current cutback function for the axis 5.   | 0: Disable<br>1: Enable  | 1             | A      |
| 3759         | 0EAFh | Automatic current cutback function Axis 6           | Enables the automatic current cutback function for the axis 6.   | 0: Disable<br>1: Enable  | 1             | A      |
| 3760         | 0EB0h | Automatic current cutback function end-effector 1   | Enables the automatic current cutback function for the end effector 1.   | 0: Disable<br>1: Enable  | 1             | A      |
| 3761         | 0EB1h | Automatic current cutback function end-effector 2   | Enables the automatic current cutback function for the end effector 2.   | 0: Disable<br>1: Enable  | 1             | A      |
| 3762         | 0EB2h | Automatic current cutback switching time Axis 1     | Sets a time period from when the motor of the axis 1 stops until when the automatic current cutback function is activated. | 110 to 1,000 ms  | 110           | A      |
| 3763         | 0EB3h | Automatic current cutback switching time Axis 2     | Sets a time period from when the motor of the axis 2 stops until when the automatic current cutback function is activated. | 110 to 1,000 ms  | 110           | A      |



| Parameter ID |       | Name  | Description  | Setting range                           | Initial value | Update |
|--------------|-------|---|--|---|---------------|--------|
| Dec          | Hex   |   |  |   |               |        |
| 3764         | 0EB4h | Automatic current cutback switching time Axis 3         | Sets a time period from when the motor of the axis 3 stops until when the automatic current cutback function is activated. | 110 to 1,000 ms                         | 110           | A      |
| 3765         | 0EB5h | Automatic current cutback switching time Axis 4         | Sets a time period from when the motor of the axis 4 stops until when the automatic current cutback function is activated. | 110 to 1,000 ms                         | 110           | A      |
| 3766         | 0EB6h | Automatic current cutback switching time Axis 5         | Sets a time period from when the motor of the axis 5 stops until when the automatic current cutback function is activated. | 110 to 1,000 ms                         | 110           | A      |
| 3767         | 0EB7h | Automatic current cutback switching time Axis 6         | Sets a time period from when the motor of the axis 6 stops until when the automatic current cutback function is activated. | 110 to 1,000 ms                         | 110           | A      |
| 3768         | 0EB8h | Automatic current cutback switching time end-effector 1 | Sets a time period from when the end effector 1 stops until when the automatic current cutback function is activated.      | 110 to 1,000 ms                         | 110           | A      |
| 3769         | 0EB9h | Automatic current cutback switching time end-effector 2 | Sets a time period from when the end effector 2 stops until when the automatic current cutback function is activated.      | 110 to 1,000 ms                         | 110           | A      |
| 4542         | 11BEh | Stop axis current setting at operating                  | While executing operation, sets the current of the axis being stopped to the stop current or the operating current.        | 0: Stop current<br>1: Operating current | 0             | A      |



## 6 Parameters: Operation setting

### 6-1 Program/direct data operation

| Parameter ID |       | Name  | Description   | Setting range  | Initial value | Update |
|--------------|-------|---|---|--|---------------|--------|
| Dec          | Hex   |   |   |  |               |        |
| 465          | 01D1h | Operating current Axis 1                                | Sets the operating current of program operation and direct data operation for the axis 1.   | 1 to 1,000<br>(1=0.1 %)  | 1,000         | A      |
| 466          | 01D2h | Operating current Axis 2                                | Sets the operating current of program operation and direct data operation for the axis 2.   | 1 to 1,000<br>(1=0.1 %)  | 1,000         | A      |
| 467          | 01D3h | Operating current Axis 3                                | Sets the operating current of program operation and direct data operation for the axis 3.   | 1 to 1,000<br>(1=0.1 %)  | 1,000         | A      |
| 468          | 01D4h | Operating current Axis 4                                | Sets the operating current of program operation and direct data operation for the axis 4.   | 1 to 1,000<br>(1=0.1 %)  | 1,000         | A      |
| 469          | 01D5h | Operating current Axis 5                                | Sets the operating current of program operation and direct data operation for the axis 5.   | 1 to 1,000<br>(1=0.1 %)  | 1,000         | A      |
| 470          | 01D6h | Operating current Axis 6                                | Sets the operating current of program operation and direct data operation for the axis 6.   | 1 to 1,000<br>(1=0.1 %)  | 1,000         | A      |
| 471          | 01D7h | Operating current end-effector 1                        | Set the operating current when end-effector operation is executed.  | 1 to 1,000<br>(1=0.1 %)  | 1,000         | A      |
| 472          | 01D8h | Operating current end-effector 2                        |   |  |               |        |
| 473          | 01D9h | End-effector 1 push operating current                   | Sets the operating current when push-motion operation is executed in end-effector operation.  | 1 to 1,000<br>(1=0.1 %)  | 500           | A      |
| 474          | 01DAh | End-effector 2 push operating current                   |   |  |               |        |
| 475          | 01DBh | End-effector 1 push-motion operation setting            | Sets whether or not to enable push-motion operation is executed in end-effector operation. (This is exclusive for end-effector operation.)  | 1: Disable<br>2: Enable  | 2             | A      |
| 476          | 01DCh | End-effector 2 push-motion operation setting            |   |  |               |        |
| 1025         | 0401h | Circular center position radius tolerance               | When selecting "2: Center position setting" in the setting method of the circular arc of circular interpolation operation, sets the permissible value of an error between the distance from the present position to the center position and that from the target position to the center position. | 0 to 500,000<br>(1=0.001 mm)   | 5,000         | A      |
| 3852         | 0F0Ch | Return-to-origin operation target coordinates selection | Selects the target coordinates for return-to-origin operation.  | 0: XYZ RxRyRz E1E2<br>1: XYZ RxRyRz<br>2: XYZ RxRyRz E1<br>3: XYZ RxRyRz E2<br>4: XYZ E1E2<br>5: XYZ E1<br>6: XYZ E2<br>7: XYZ | 1             | B      |



| Parameter ID |       | Name   | Description  | Setting range  | Initial value | Update |
|--------------|-------|--|--|--|---------------|--------|
| Dec          | Hex   |  |  |  |               |        |
| 3853         | 0F0Dh | Return-to-origin operation operation mode                  | Selects the operation mode for return-to-origin operation. Select "1: Linear" when returning to the origin while avoiding obstacles.                                 | 0: PTP<br>1: Linear  | 1             | B      |
| 3854         | 0F0Eh | Return-to-origin operation speed                           | Sets the speed for return-to-origin operation.   | 1 to 250,000<br>(1=0.001 mm/s)*1   | 10,000        | B      |
| 3855         | 0F0Fh | Return-to-origin operation acceleration/deceleration       | Sets the acceleration/deceleration for return-to-origin operation.   | 1 to 3,000,000<br>(1=0.001 mm/s <sup>2</sup> )*2                             | 1,200,000     | B      |
| 4446         | 115Eh | Return-to-origin operation handed system selection         | Selects the handed system for return-to-origin operation. This is enabled when the operation mode is "PTP" for a SCARA robot and 6-axis articulated robot.           | 0: No change from present handed system<br>1: Right-handed<br>2: Left-handed | 0             | B      |
| 4447         | 115Fh | Return-to-origin operation 1st Link rotation angle setting | Sets the rotation angle of the 1st arm for return-to-origin operation. This is enabled when the operation mode is "PTP" in a SCARA (360-degree rotation) robot.      | -1: less than -180 deg<br>0: -180 deg to +180 deg<br>1: +180 deg or over     | 0             | B      |
| 4559         | 11CFh | Direct data operation Override                             | Sets the override function that switches to a different linear interpolation operation while the interpolation operation by direct data operation is being executed. | 0: Disable<br>1: Enable  | 0             | A      |

\*1 When the "Return-to-origin operation operation mode" parameter is set to "0: PTP," the unit is "deg/s."

\*2 When the "Return-to-origin operation operation mode" parameter is set to "0: PTP," the unit is "deg/s<sup>2</sup>."

## 6-2 Point data (for program operation)

| Parameter ID |       | Name            | Description                               | Setting range                           | Initial value | Update |
|--------------|-------|-----------------|---|---|---------------|--------|
| Dec          | Hex   |                 |   |   |               |        |
| 4190         | 105Eh | Point data 0 X  | Set each coordinate for the point data 0. | -5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 4191         | 105Fh | Point data 0 Y  |   |   |               |        |
| 4192         | 1060h | Point data 0 Z  |   |   |               |        |
| 4193         | 1061h | Point data 0 Rx |   | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4194         | 1062h | Point data 0 Ry |   | -90,000 to 90,000<br>(1=0.001 deg)      |               |        |
| 4195         | 1063h | Point data 0 Rz |   | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4198         | 1066h | Point data 1 X  | Set each coordinate for the point data 1. | -5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 4199         | 1067h | Point data 1 Y  |   |   |               |        |
| 4200         | 1068h | Point data 1 Z  |   |   |               |        |
| 4201         | 1069h | Point data 1 Rx |   | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4202         | 106Ah | Point data 1 Ry |   | -90,000 to 90,000<br>(1=0.001 deg)      |               |        |
| 4203         | 106Bh | Point data 1 Rz |   | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |



| Parameter ID |       | Name            | Description                               | Setting range                           | Initial value | Update |
|--------------|-------|-----------------|---|---|---------------|--------|
| Dec          | Hex   |                 |   |   |               |        |
| 4206         | 106Eh | Point data 2 X  | Set each coordinate for the point data 2. | -5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 4207         | 106Fh | Point data 2 Y  |   |   |               |        |
| 4208         | 1070h | Point data 2 Z  |   |   |               |        |
| 4209         | 1071h | Point data 2 Rx |   | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4210         | 1072h | Point data 2 Ry |   | -90,000 to 90,000<br>(1=0.001 deg)      |               |        |
| 4211         | 1073h | Point data 2 Rz |   | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4214         | 1076h | Point data 3 X  | Set each coordinate for the point data 3. | -5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 4215         | 1077h | Point data 3 Y  |   |   |               |        |
| 4216         | 1078h | Point data 3 Z  |   |   |               |        |
| 4217         | 1079h | Point data 3 Rx |   | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4218         | 107Ah | Point data 3 Ry |   | -90,000 to 90,000<br>(1=0.001 deg)      |               |        |
| 4219         | 107Bh | Point data 3 Rz |   | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4222         | 107Eh | Point data 4 X  | Set each coordinate for the point data 4. | -5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 4223         | 107Fh | Point data 4 Y  |   |   |               |        |
| 4224         | 1080h | Point data 4 Z  |   |   |               |        |
| 4225         | 1081h | Point data 4 Rx |   | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4226         | 1082h | Point data 4 Ry |   | -90,000 to 90,000<br>(1=0.001 deg)      |               |        |
| 4227         | 1083h | Point data 4 Rz |   | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4230         | 1086h | Point data 5 X  | Set each coordinate for the point data 5. | -5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 4231         | 1087h | Point data 5 Y  |   |   |               |        |
| 4232         | 1088h | Point data 5 Z  |   |   |               |        |
| 4233         | 1089h | Point data 5 Rx |   | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4234         | 108Ah | Point data 5 Ry |   | -90,000 to 90,000<br>(1=0.001 deg)      |               |        |
| 4235         | 108Bh | Point data 5 Rz |   | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4238         | 108Eh | Point data 6 X  | Set each coordinate for the point data 6. | -5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 4239         | 108Fh | Point data 6 Y  |   |   |               |        |
| 4240         | 1090h | Point data 6 Z  |   |   |               |        |
| 4241         | 1091h | Point data 6 Rx |   | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4242         | 1092h | Point data 6 Ry |   | -90,000 to 90,000<br>(1=0.001 deg)      |               |        |
| 4243         | 1093h | Point data 6 Rz |   | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |



| Parameter ID |       | Name             | Description                                | Setting range                           | Initial value | Update |
|--------------|-------|------------------|--|---|---------------|--------|
| Dec          | Hex   |                  |  |   |               |        |
| 4246         | 1096h | Point data 7 X   | Set each coordinate for the point data 7.  | -5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 4247         | 1097h | Point data 7 Y   |  |   |               |        |
| 4248         | 1098h | Point data 7 Z   |  |   |               |        |
| 4249         | 1099h | Point data 7 Rx  |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4250         | 109Ah | Point data 7 Ry  |  | -90,000 to 90,000<br>(1=0.001 deg)      |               |        |
| 4251         | 109Bh | Point data 7 Rz  |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4382         | 111Eh | Point data 8 X   | Set each coordinate for the point data 8.  | -5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 4383         | 111Fh | Point data 8 Y   |  |   |               |        |
| 4384         | 1120h | Point data 8 Z   |  |   |               |        |
| 4385         | 1121h | Point data 8 Rx  |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4386         | 1122h | Point data 8 Ry  |  | -90,000 to 90,000<br>(1=0.001 deg)      |               |        |
| 4387         | 1123h | Point data 8 Rz  |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4390         | 1126h | Point data 9 X   | Set each coordinate for the point data 9.  | -5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 4391         | 1127h | Point data 9 Y   |  |   |               |        |
| 4392         | 1128h | Point data 9 Z   |  |   |               |        |
| 4393         | 1129h | Point data 9 Rx  |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4394         | 112Ah | Point data 9 Ry  |  | -90,000 to 90,000<br>(1=0.001 deg)      |               |        |
| 4395         | 112Bh | Point data 9 Rz  |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4398         | 112Eh | Point data 10 X  | Set each coordinate for the point data 10. | -5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 4399         | 112Fh | Point data 10 Y  |  |   |               |        |
| 4400         | 1130h | Point data 10 Z  |  |   |               |        |
| 4401         | 1131h | Point data 10 Rx |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4402         | 1132h | Point data 10 Ry |  | -90,000 to 90,000<br>(1=0.001 deg)      |               |        |
| 4403         | 1133h | Point data 10 Rz |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4406         | 1136h | Point data 11 X  | Set each coordinate for the point data 11. | -5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 4407         | 1137h | Point data 11 Y  |  |   |               |        |
| 4408         | 1138h | Point data 11 Z  |  |   |               |        |
| 4409         | 1139h | Point data 11 Rx |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4410         | 113Ah | Point data 11 Ry |  | -90,000 to 90,000<br>(1=0.001 deg)      |               |        |
| 4411         | 113Bh | Point data 11 Rz |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |



| Parameter ID |       | Name             | Description                                | Setting range                           | Initial value | Update |
|--------------|-------|------------------|--|---|---------------|--------|
| Dec          | Hex   |                  |  |   |               |        |
| 4414         | 113Eh | Point data 12 X  | Set each coordinate for the point data 12. | -5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 4415         | 113Fh | Point data 12 Y  |  |   |               |        |
| 4416         | 1140h | Point data 12 Z  |  |   |               |        |
| 4417         | 1141h | Point data 12 Rx |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4418         | 1142h | Point data 12 Ry |  | -90,000 to 90,000<br>(1=0.001 deg)      |               |        |
| 4419         | 1143h | Point data 12 Rz |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4422         | 1146h | Point data 13 X  | Set each coordinate for the point data 13. | -5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 4423         | 1147h | Point data 13 Y  |  |   |               |        |
| 4424         | 1148h | Point data 13 Z  |  |   |               |        |
| 4425         | 1149h | Point data 13 Rx |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4426         | 114Ah | Point data 13 Ry |  | -90,000 to 90,000<br>(1=0.001 deg)      |               |        |
| 4427         | 114Bh | Point data 13 Rz |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4430         | 114Eh | Point data 14 X  | Set each coordinate for the point data 14. | -5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 4431         | 114Fh | Point data 14 Y  |  |   |               |        |
| 4432         | 1150h | Point data 14 Z  |  |   |               |        |
| 4433         | 1151h | Point data 14 Rx |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4434         | 1152h | Point data 14 Ry |  | -90,000 to 90,000<br>(1=0.001 deg)      |               |        |
| 4435         | 1153h | Point data 14 Rz |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4438         | 1156h | Point data 15 X  | Set each coordinate for the point data 15. | -5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 4439         | 1157h | Point data 15 Y  |  |   |               |        |
| 4440         | 1158h | Point data 15 Z  |  |   |               |        |
| 4441         | 1159h | Point data 15 Rx |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |
| 4442         | 115Ah | Point data 15 Ry |  | -90,000 to 90,000<br>(1=0.001 deg)      |               |        |
| 4443         | 115Bh | Point data 15 Rz |  | -270,000 to 270,000<br>(1=0.001 deg)    |               |        |

### 6-3 JOG/ZHOME operation

| Parameter ID |       | Name                                | Description  | Setting range                               | Initial value | Update |
|--------------|-------|-------------------------------------|--|---|---------------|--------|
| Dec          | Hex   |                                     |  |   |               |        |
| 3857         | 0F11h | JOG travel amount XYZ               | Sets the travel amount for inching operation on the X, Y, and Z coordinates.               | 1 to 200,000<br>(1=0.001 mm)                | 10,000        | B      |
| 3858         | 0F12h | JOG travel amount RxRyRz            | Sets the travel amount for inching operation on the Rx, Ry, and Rz coordinates.            | 1 to 100,000<br>(1=0.001 deg)               | 5,000         | B      |
| 3859         | 0F13h | JOG travel amount end-effector 1, 2 | Sets the travel amount for inching operation of the end effector 1 and the end effector 2. | 1 to 100,000<br>(1=0.001 mm or 1=0.001 deg) | 1,000         | B      |



| Parameter ID |       | Name  | Description  | Setting range  | Initial value | Update |
|--------------|-------|---|--|--|---------------|--------|
| Dec          | Hex   |   |  |  |               |        |
| 3860         | 0F14h | JOG travel amount Axis                          | Sets the travel amount for inching operation of the axis.  | 1 to 100,000<br>(1=0.001 deg)  | 5,000         | B      |
| 3861         | 0F15h | JOG operating speed XYZ TxTyTz                  | Sets the operating speed for JOG operation and inching operation on the X, Y, and Z coordinates, and that for JOG operation on the Tx, Ty, and Tz coordinates.           | 1 to 250,000<br>(1=0.001 mm/s)   | 20,000        | B      |
| 3862         | 0F16h | JOG operating speed RxRyRz                      | Sets the operating speed for JOG operation and inching operation on the Rx, Ry, and Rz coordinates.  | 1 to 250,000<br>(1=0.001 deg/s)  | 10,000        | B      |
| 3863         | 0F17h | JOG operating speed end-effector 1, 2           | Sets the operating speed for JOG operation and inching operation of the end effector 1 and the end effector 2.   | 1 to 250,000<br>(1=0.001 mm/s or 1=0.001 deg/s)                              | 1,000         | B      |
| 3864         | 0F18h | JOG operating speed Axis                        | Sets the operating speed for JOG operation and inching operation of the axis.  | 1 to 250,000<br>(1=0.001 deg/s)  | 10,000        | B      |
| 3865         | 0F19h | JOG acceleration/deceleration XYZ TxTyTz        | Sets the acceleration/deceleration for JOG operation and inching operation on the X, Y, and Z coordinates, and that for JOG operation on the Tx, Ty, and Tz coordinates. | 10 to 30,000,000<br>(1=0.001 mm/s <sup>2</sup> )                             | 1,200,000     | B      |
| 3866         | 0F1Ah | JOG acceleration/deceleration RxRyRz            | Sets the acceleration/deceleration for JOG operation and inching operation on the Rx, Ry, and Rz coordinates.  | 10 to 30,000,000<br>(1=0.001 mm/s <sup>2</sup> )                             | 1,200,000     | B      |
| 3867         | 0F1Bh | JOG acceleration/deceleration end-effector 1, 2 | Sets the acceleration/deceleration for JOG operation and inching operation of the end effector 1 and the end effector 2.   | 1 to 3,000,000<br>(1=0.001 mm/s <sup>2</sup> or 1=0.001 deg/s <sup>2</sup> ) | 1,200,000     | B      |
| 3868         | 0F1Ch | JOG acceleration/deceleration Axis              | Sets the acceleration/deceleration for JOG operation and inching operation of the axis.  | 1 to 3,000,000<br>(1=0.001 deg/s <sup>2</sup> )                              | 1,200,000     | B      |
| 3869         | 0F1Dh | JOG push-motion operation mode end-effector 1   | Sets the push-motion operation mode for JOG operation and inching operation of the end effector 1.   | 0: Disable<br>1: Enable  | 1             | B      |
| 3870         | 0F1Eh | JOG push-motion operation mode end-effector 2   | Sets the push-motion operation mode for JOG operation and inching operation of the end effector 2.   | 0: Disable<br>1: Enable  | 1             | B      |
| 3874         | 0F22h | JOG/ZHOME operating current Axis 1              | Sets the operating current for JOG operation and inching operation of the axis 1.  | 1 to 1,000 (1=0.1 %)   | 1,000         | B      |
| 3875         | 0F23h | JOG/ZHOME operating current Axis 2              | Sets the operating current for JOG operation and inching operation of the axis 2.  | 1 to 1,000 (1=0.1 %)   | 1,000         | B      |
| 3876         | 0F24h | JOG/ZHOME operating current Axis 3              | Sets the operating current for JOG operation and inching operation of the axis 3.  | 1 to 1,000 (1=0.1 %)   | 1,000         | B      |
| 3877         | 0F25h | JOG/ZHOME operating current Axis 4              | Sets the operating current for JOG operation and inching operation of the axis 4.  | 1 to 1,000 (1=0.1 %)   | 1,000         | B      |
| 3878         | 0F26h | JOG/ZHOME operating current Axis 5              | Sets the operating current for JOG operation and inching operation of the axis 5.  | 1 to 1,000 (1=0.1 %)   | 1,000         | B      |
| 3879         | 0F27h | JOG/ZHOME operating current Axis 6              | Sets the operating current for JOG operation and inching operation of the axis 6.  | 1 to 1,000 (1=0.1 %)   | 1,000         | B      |



| Parameter ID |       | Name                                       | Description  | Setting range   | Initial value | Update |
|--------------|-------|--|--|---|---------------|--------|
| Dec          | Hex   |  |  |   |               |        |
| 3880         | 0F28h | JOG/ZHOME operating current end-effector 1 | Sets the operating current for JOG operation and inching operation of the end effector 1.  | 1 to 1,000 (1=0.1 %)  | 1.000         | B      |
| 3881         | 0F29h | JOG/ZHOME operating current end-effector 2 | Sets the operating current for JOG operation and inching operation of the end effector 2.  | 1 to 1,000 (1=0.1 %)  | 1.000         | B      |
| 3882         | 0F2Ah | JOG push current end-effector 1            | Sets the push current for JOG operation and inching operation of the end effector 1.   | 1 to 1,000 (1=0.1 %)  | 500           | B      |
| 3883         | 0F2Bh | JOG push current end-effector 2            | Sets the push current for JOG operation and inching operation of the end effector 2.   | 1 to 1,000 (1=0.1 %)  | 500           | B      |
| 3888         | 0F30h | ZHOME operation mode                       | Sets the operation mode for high-speed return-to-origin operation. Select "1: Linear" when returning to the origin while avoiding obstacles.                               | 0: PTP<br>1: Linear   | 1             | B      |
| 3889         | 0F31h | ZHOME-ALL operating speed                  | Sets the operating speed for high-speed return-to-origin operation.  | 1 to 250,000<br>(1=0.001 mm/s)  | 20,000        | B      |
| 3890         | 0F32h | ZHOME-RB operating speed                   | Sets the operating speed for high-speed return-to-origin operation on the X, Y, and Z coordinates.   | 1 to 250,000<br>(1=0.001 mm/s)  | 10,000        | B      |
| 3891         | 0F33h | ZHOME-E1 operating speed                   | Sets the operating speed for high-speed return-to-origin operation of the end effector 1.  | 1 to 250,000<br>(1=0.001 mm/s or<br>1=0.001 deg/s)                                | 1,000         | B      |
| 3892         | 0F34h | ZHOME-E2 operating speed                   | Sets the operating speed for high-speed return-to-origin operation of the end effector 2.  | 1 to 250,000<br>(1=0.001 mm/s or<br>1=0.001 deg/s)                                | 1,000         | B      |
| 3893         | 0F35h | ZHOME acceleration                         | Sets the acceleration/deceleration for high-speed return-to-origin operation.  | 1 to 3,000,000<br>(1=0.001 mm/s <sup>2</sup> )                                    | 1,200,000     | B      |
| 4448         | 1160h | ZHOME handed system selection              | Selects the handed system for high-speed return-to-origin operation. This is enabled when the operation mode is "PTP" for a SCARA robot and 6-axis articulated robot.      | 0: No change from<br>resent handed<br>system<br>1: Right-handed<br>2: Left-handed | 0             | B      |
| 4449         | 1161h | ZHOME 1st Link rotation angle setting      | Sets the rotation angle of the 1st arm for high-speed return-to-origin operation. This is enabled when the operation mode is "PTP" in a SCARA (360-degree rotation) robot. | -1: less than<br>-180 deg<br>0: -180 deg to<br>+180 deg<br>1: +180 deg or over    | 0             | B      |



# 7 Parameters: Pallet setting

## 7-1 Pallets 1 to 6

| Parameter ID |       | Name   | Description  | Setting range  | Initial value | Update |
|--------------|-------|--|--|--|---------------|--------|
| Dec          | Hex   |  |  |  |               |        |
| 4042         | 0FCAh | Pallet 1 horizontal direction end X coordinate | Sets the X coordinate of the horizontal direction end of the pallet 1 in relative coordinates. | -5,000,000 to 5,000,000<br>(1=0.001 mm)  | 0             | C      |
| 4043         | 0FCBh | Pallet 1 horizontal direction end Y coordinate | Sets the Y coordinate of the horizontal direction end of the pallet 1 in relative coordinates. |  | 0             | C      |
| 4044         | 0FCh  | Pallet 1 horizontal direction end Z coordinate | Sets the Z coordinate of the horizontal direction end of the pallet 1 in relative coordinates. |  | 0             | C      |
| 4045         | 0FCDh | Pallet 1 horizontal cell count                 | Sets the number of cells in the horizontal direction of the pallet 1.                          | 0 to 256   | 0             | C      |
| 4046         | 0FCEh | Pallet 1 vertical direction end X coordinate   | Sets the X coordinate of the vertical direction end of the pallet 1 in relative coordinates.   | -5,000,000 to 5,000,000<br>(1=0.001 mm)  | 0             | C      |
| 4047         | 0FCFh | Pallet 1 vertical direction end Y coordinate   | Sets the Y coordinate of the vertical direction end of the pallet 1 in relative coordinates.   |  | 0             | C      |
| 4048         | 0FD0h | Pallet 1 vertical direction end Z coordinate   | Sets the Z coordinate of the vertical direction end of the pallet 1 in relative coordinates.   |  | 0             | C      |
| 4049         | 0FD1h | Pallet 1 vertical cell count                   | Sets the number of cells in the vertical direction of the pallet 1.                            | 0 to 256   | 0             | C      |
| 4051         | 0FD3h | Pallet 1 path                                  | Sets the path of the pallet 1.   | 0: Vertical direction (one way)<br>1: Vertical direction (back and forth)<br>2: Horizontal direction (one way)<br>3: Horizontal direction (back and forth) | 0             | C      |
| 4052         | 0FD4h | Pallet 1 number of cells                       | Sets the number of cells of the pallet 1. The maximum number of cells is applied if 0 is set.  | 0 to 65,536  | 0             | C      |
| 4066         | 0FE2h | Pallet 2 horizontal direction end X coordinate | Sets the X coordinate of the horizontal direction end of the pallet 2 in relative coordinates. | -5,000,000 to 5,000,000<br>(1=0.001 mm)  | 0             | C      |
| 4067         | 0FE3h | Pallet 2 horizontal direction end Y coordinate | Sets the Y coordinate of the horizontal direction end of the pallet 2 in relative coordinates. |  | 0             | C      |
| 4068         | 0FE4h | Pallet 2 horizontal direction end Z coordinate | Sets the Z coordinate of the horizontal direction end of the pallet 2 in relative coordinates. |  | 0             | C      |
| 4069         | 0FE5h | Pallet 2 horizontal cell count                 | Sets the number of cells in the horizontal direction of the pallet 2.                          | 0 to 256   | 0             | C      |



| Parameter ID |       | Name   | Description  | Setting range  | Initial value | Update |
|--------------|-------|--|--|--|---------------|--------|
| Dec          | Hex   |  |  |  |               |        |
| 4070         | 0FE6h | Pallet 2 vertical direction end X coordinate   | Sets the X coordinate of the vertical direction end of the pallet 2 in relative coordinates.   | -5,000,000 to 5,000,000 (1=0.001 mm)   | 0             | C      |
| 4071         | 0FE7h | Pallet 2 vertical direction end Y coordinate   | Sets the Y coordinate of the vertical direction end of the pallet 2 in relative coordinates.   |  | 0             | C      |
| 4072         | 0FE8h | Pallet 2 vertical direction end Z coordinate   | Sets the Z coordinate of the vertical direction end of the pallet 2 in relative coordinates.   |  | 0             | C      |
| 4073         | 0FE9h | Pallet 2 vertical cell count                   | Sets the number of cells in the vertical direction of the pallet 2.                            | 0 to 256   | 0             | C      |
| 4075         | 0FEBh | Pallet 2 path                                  | Sets the path of the pallet 2.   | 0: Vertical direction (one way)<br>1: Vertical direction (back and forth)<br>2: Horizontal direction (one way)<br>3: Horizontal direction (back and forth) | 0             | C      |
| 4076         | 0FEC  | Pallet 2 number of cells                       | Sets the number of cells of the pallet 2. The maximum number of cells is applied if 0 is set.  | 0 to 65,536  | 0             | C      |
| 4090         | 0FFAh | Pallet 3 horizontal direction end X coordinate | Sets the X coordinate of the horizontal direction end of the pallet 3 in relative coordinates. | -5,000,000 to 5,000,000 (1=0.001 mm)   | 0             | C      |
| 4091         | 0FFBh | Pallet 3 horizontal direction end Y coordinate | Sets the Y coordinate of the horizontal direction end of the pallet 3 in relative coordinates. |  | 0             | C      |
| 4092         | 0FFCh | Pallet 3 horizontal direction end Z coordinate | Sets the Z coordinate of the horizontal direction end of the pallet 3 in relative coordinates. |  | 0             | C      |
| 4093         | 0FFDh | Pallet 3 horizontal cell count                 | Sets the number of cells in the horizontal direction of the pallet 3.                          | 0 to 256   | 0             | C      |
| 4094         | 0FFEh | Pallet 3 vertical direction end X coordinate   | Sets the X coordinate of the vertical direction end of the pallet 3 in relative coordinates.   | -5,000,000 to 5,000,000 (1=0.001 mm)   | 0             | C      |
| 4095         | 0FFFh | Pallet 3 vertical direction end Y coordinate   | Sets the Y coordinate of the vertical direction end of the pallet 3 in relative coordinates.   |  | 0             | C      |
| 4096         | 1000h | Pallet 3 vertical direction end Z coordinate   | Sets the Z coordinate of the vertical direction end of the pallet 3 in relative coordinates.   |  | 0             | C      |
| 4097         | 1001h | Pallet 3 vertical cell count                   | Sets the number of cells in the vertical direction of the pallet 3.                            | 0 to 256   | 0             | C      |
| 4099         | 1003h | Pallet 3 path                                  | Sets the path of the pallet 3.   | 0: Vertical direction (one way)<br>1: Vertical direction (back and forth)<br>2: Horizontal direction (one way)<br>3: Horizontal direction (back and forth) | 0             | C      |
| 4100         | 1004h | Pallet 3 number of cells                       | Sets the number of cells of the pallet 3. The maximum number of cells is applied if 0 is set.  | 0 to 65,536  | 0             | C      |



| Parameter ID |       | Name   | Description  | Setting range  | Initial value | Update |
|--------------|-------|--|--|--|---------------|--------|
| Dec          | Hex   |  |  |  |               |        |
| 4114         | 1012h | Pallet 4 horizontal direction end X coordinate | Sets the X coordinate of the horizontal direction end of the pallet 4 in relative coordinates. | -5,000,000 to 5,000,000<br>(1=0.001 mm)  | 0             | C      |
| 4115         | 1013h | Pallet 4 horizontal direction end Y coordinate | Sets the Y coordinate of the horizontal direction end of the pallet 4 in relative coordinates. |  | 0             | C      |
| 4116         | 1014h | Pallet 4 horizontal direction end Z coordinate | Sets the Z coordinate of the horizontal direction end of the pallet 4 in relative coordinates. |  | 0             | C      |
| 4117         | 1015h | Pallet 4 horizontal cell count                 | Sets the number of cells in the horizontal direction of the pallet 4.                          | 0 to 256   | 0             | C      |
| 4118         | 1016h | Pallet 4 vertical direction end X coordinate   | Sets the X coordinate of the vertical direction end of the pallet 4 in relative coordinates.   | -5,000,000 to 5,000,000<br>(1=0.001 mm)  | 0             | C      |
| 4119         | 1017h | Pallet 4 vertical direction end Y coordinate   | Sets the Y coordinate of the vertical direction end of the pallet 4 in relative coordinates.   |  | 0             | C      |
| 4120         | 1018h | Pallet 4 vertical direction end Z coordinate   | Sets the Z coordinate of the vertical direction end of the pallet 4 in relative coordinates.   |  | 0             | C      |
| 4121         | 1019h | Pallet 4 vertical cell count                   | Sets the number of cells in the vertical direction of the pallet 4.                            | 0 to 256   | 0             | C      |
| 4123         | 101Bh | Pallet 4 path                                  | Sets the path of the pallet 4.   | 0: Vertical direction (one way)<br>1: Vertical direction (back and forth)<br>2: Horizontal direction (one way)<br>3: Horizontal direction (back and forth) | 0             | C      |
| 4124         | 101Ch | Pallet 4 number of cells                       | Sets the number of cells of the pallet 4. The maximum number of cells is applied if 0 is set.  | 0 to 65,536  | 0             | C      |
| 4138         | 102Ah | Pallet 5 horizontal direction end X coordinate | Sets the X coordinate of the horizontal direction end of the pallet 5 in relative coordinates. | -5,000,000 to 5,000,000<br>(1=0.001 mm)  | 0             | C      |
| 4139         | 102Bh | Pallet 5 horizontal direction end Y coordinate | Sets the Y coordinate of the horizontal direction end of the pallet 5 in relative coordinates. |  | 0             | C      |
| 4140         | 102Ch | Pallet 5 horizontal direction end Z coordinate | Sets the Z coordinate of the horizontal direction end of the pallet 5 in relative coordinates. |  | 0             | C      |
| 4141         | 102Dh | Pallet 5 horizontal cell count                 | Sets the number of cells in the horizontal direction of the pallet 5.                          | 0 to 256   | 0             | C      |
| 4142         | 102Eh | Pallet 5 vertical direction end X coordinate   | Sets the X coordinate of the vertical direction end of the pallet 5 in relative coordinates.   | -5,000,000 to 5,000,000<br>(1=0.001 mm)  | 0             | C      |
| 4143         | 102Fh | Pallet 5 vertical direction end Y coordinate   | Sets the Y coordinate of the vertical direction end of the pallet 5 in relative coordinates.   |  | 0             | C      |
| 4144         | 1030h | Pallet 5 vertical direction end Z coordinate   | Sets the Z coordinate of the vertical direction end of the pallet 5 in relative coordinates.   |  | 0             | C      |
| 4145         | 1031h | Pallet 5 vertical cell count                   | Sets the number of cells in the vertical direction of the pallet 5.                            | 0 to 256   | 0             | C      |



| Parameter ID |       | Name   | Description  | Setting range  | Initial value | Update |
|--------------|-------|--|--|--|---------------|--------|
| Dec          | Hex   |  |  |  |               |        |
| 4147         | 1033h | Pallet 5 path                                  | Sets the path of the pallet 5.   | 0: Vertical direction (one way)<br>1: Vertical direction (back and forth)<br>2: Horizontal direction (one way)<br>3: Horizontal direction (back and forth) | 0             | C      |
| 4148         | 1034h | Pallet 5 number of cells                       | Sets the number of cells of the pallet 5. The maximum number of cells is applied if 0 is set.  | 0 to 65,536  | 0             | C      |
| 4162         | 1042h | Pallet 6 horizontal direction end X coordinate | Sets the X coordinate of the horizontal direction end of the pallet 6 in relative coordinates. | -5,000,000 to 5,000,000 (1=0.001 mm)   | 0             | C      |
| 4163         | 1043h | Pallet 6 horizontal direction end Y coordinate | Sets the Y coordinate of the horizontal direction end of the pallet 6 in relative coordinates. |  | 0             | C      |
| 4164         | 1044h | Pallet 6 horizontal direction end Z coordinate | Sets the Z coordinate of the horizontal direction end of the pallet 6 in relative coordinates. |  | 0             | C      |
| 4165         | 1045h | Pallet 6 horizontal cell count                 | Sets the number of cells in the horizontal direction of the pallet 6.                          | 0 to 256   | 0             | C      |
| 4166         | 1046h | Pallet 6 vertical direction end X coordinate   | Sets the X coordinate of the vertical direction end of the pallet 6 in relative coordinates.   | -5,000,000 to 5,000,000 (1=0.001 mm)   | 0             | C      |
| 4167         | 1047h | Pallet 6 vertical direction end Y coordinate   | Sets the Y coordinate of the vertical direction end of the pallet 6 in relative coordinates.   |  | 0             | C      |
| 4168         | 1048h | Pallet 6 vertical direction end Z coordinate   | Sets the Z coordinate of the vertical direction end of the pallet 6 in relative coordinates.   |  | 0             | C      |
| 4169         | 1049h | Pallet 6 vertical cell count                   | Sets the number of cells in the vertical direction of the pallet 6.                            | 0 to 256   | 0             | C      |
| 4171         | 104Bh | Pallet 6 path                                  | Sets the path of the pallet 6.   | 0: Vertical direction (one way)<br>1: Vertical direction (back and forth)<br>2: Horizontal direction (one way)<br>3: Horizontal direction (back and forth) | 0             | C      |
| 4172         | 104Ch | Pallet 6 number of cells                       | Sets the number of cells of the pallet 6. The maximum number of cells is applied if 0 is set.  | 0 to 65,536  | 0             | C      |



7-2 Pallet next cell number

The pallet next cell number is changed using the write parameter ID and the write data in the Implicit message. It cannot be changed by other methods. Refer to p.115 for data writing.

| Parameter ID |       | Name                      | Description                                | Setting range | Initial value | Update |
|--------------|-------|---------------------------|--|---------------|---------------|--------|
| Dec          | Hex   |                           |  |               |               |        |
| 1026         | 0402h | Pallet 1 next cell number | Sets the next cell number of the pallet 1. | 1 to 65,536   | 0             | B      |
| 1027         | 0403h | Pallet 2 next cell number | Sets the next cell number of the pallet 2. |               |               |        |
| 1028         | 0404h | Pallet 3 next cell number | Sets the next cell number of the pallet 3. |               |               |        |
| 1029         | 0405h | Pallet 4 next cell number | Sets the next cell number of the pallet 4. |               |               |        |
| 1030         | 0406h | Pallet 5 next cell number | Sets the next cell number of the pallet 5. |               |               |        |
| 1031         | 0407h | Pallet 6 next cell number | Sets the next cell number of the pallet 6. |               |               |        |



## 8 Parameters: I/O setting

### 8-1 I/O operation and function

| Parameter ID |       | Name   | Description  | Setting range                             | Initial value | Update |
|--------------|-------|--|--|---|---------------|--------|
| Dec          | Hex   |  |  |   |               |        |
| 1790         | 06FEh | PAUSE input action                             | Selects how to stop the robot when the PAUSE input is turned ON.                 | 0: Immediate stop<br>1: Deceleration stop | 1             | A      |
| 1791         | 06FFh | STOP input action                              | Selects how to stop the robot when the STOP input is turned ON.                  | 0: Immediate stop<br>1: Deceleration stop | 1             | A      |
| 1802         | 070Ah | MOVE minimum ON time                           | Sets the minimum time during which the MOVE output remains ON.                   | 0 to 255 ms                               | 0             | A      |
| 1803         | 070Bh | PAUSE standby condition selection              | Selects a standby state when the PAUSE input is turned ON.                       | 0: Standstill mode<br>1: Operation mode   | 0             | A      |
| 1888         | 0760h | D-SEL0 operation number selection              | Sets a program number to be started when the D-SEL0 input is turned ON.          | 0 to 63                                   | 0             | A      |
| 1889         | 0761h | D-SEL1 operation number selection              | Sets a program number to be started when the D-SEL1 input is turned ON.          | 0 to 63                                   | 1             | A      |
| 1890         | 0762h | D-SEL2 operation number selection              | Sets a program number to be started when the D-SEL2 input is turned ON.          | 0 to 63                                   | 2             | A      |
| 1891         | 0763h | D-SEL3 operation number selection              | Sets a program number to be started when the D-SEL3 input is turned ON.          | 0 to 63                                   | 3             | A      |
| 1892         | 0764h | D-SEL4 operation number selection              | Sets a program number to be started when the D-SEL4 input is turned ON.          | 0 to 63                                   | 4             | A      |
| 1893         | 0765h | D-SEL5 operation number selection              | Sets a program number to be started when the D-SEL5 input is turned ON.          | 0 to 63                                   | 5             | A      |
| 1894         | 0766h | D-SEL6 operation number selection              | Sets a program number to be started when the D-SEL6 input is turned ON.          | 0 to 63                                   | 6             | A      |
| 1895         | 0767h | D-SEL7 operation number selection              | Sets a program number to be started when the D-SEL7 input is turned ON.          | 0 to 63                                   | 7             | A      |
| 1896         | 0768h | D-END0 operation number selection              | Sets a program number corresponding to the D-END0 output.                        | 0 to 63                                   | 0             | A      |
| 1897         | 0769h | D-END1 operation number selection              | Sets a program number corresponding to the D-END1 output.                        | 0 to 63                                   | 1             | A      |
| 1898         | 076Ah | D-END2 operation number selection              | Sets a program number corresponding to the D-END2 output.                        | 0 to 63                                   | 2             | A      |
| 1899         | 076Bh | D-END3 operation number selection              | Sets a program number corresponding to the D-END3 output.                        | 0 to 63                                   | 3             | A      |
| 1900         | 076Ch | D-END4 operation number selection              | Sets a program number corresponding to the D-END4 output.                        | 0 to 63                                   | 4             | A      |
| 1901         | 076Dh | D-END5 operation number selection              | Sets a program number corresponding to the D-END5 output.                        | 0 to 63                                   | 5             | A      |
| 1902         | 076Eh | D-END6 operation number selection              | Sets a program number corresponding to the D-END6 output.                        | 0 to 63                                   | 6             | A      |
| 1903         | 076Fh | D-END7 operation number selection              | Sets a program number corresponding to the D-END7 output.                        | 0 to 63                                   | 7             | A      |
| 3778         | 0EC2h | CRNT-LMT1 operating current limit value Axis 1 | Sets the operating current of the axis 1 that is limited by the CRNT-LMT1 input. | 1 to 1,000<br>(1=0.1 %)                   | 500           | A      |
| 3779         | 0EC3h | CRNT-LMT1 operating current limit value Axis 2 | Sets the operating current of the axis 2 that is limited by the CRNT-LMT1 input. | 1 to 1,000<br>(1=0.1 %)                   | 500           | A      |



| Parameter ID |       | Name   | Description  | Setting range        | Initial value | Update |
|--------------|-------|--|--|----------------------|---------------|--------|
| Dec          | Hex   |  |  |                      |               |        |
| 3780         | 0EC4h | CRNT-LMT1 operating current limit value Axis 3         | Sets the operating current of the axis 3 that is limited by the CRNT-LMT1 input.         | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3781         | 0EC5h | CRNT-LMT1 operating current limit value Axis 4         | Sets the operating current of the axis 4 that is limited by the CRNT-LMT1 input.         | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3782         | 0EC6h | CRNT-LMT1 operating current limit value Axis 5         | Sets the operating current of the axis 5 that is limited by the CRNT-LMT1 input.         | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3783         | 0EC7h | CRNT-LMT1 operating current limit value Axis 6         | Sets the operating current of the axis 6 that is limited by the CRNT-LMT1 input.         | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3784         | 0EC8h | CRNT-LMT1 operating current limit value end-effector 1 | Sets the operating current of the end effector 1 that is limited by the CRNT-LMT1 input. | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3785         | 0EC9h | CRNT-LMT1 operating current limit value end-effector 2 | Sets the operating current of the end effector 2 that is limited by the CRNT-LMT1 input. | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3786         | 0ECAh | CRNT-LMT2 operating current limit value Axis 1         | Sets the operating current of the axis 1 that is limited by the CRNT-LMT2 input.         | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3787         | 0ECBh | CRNT-LMT2 operating current limit value Axis 2         | Sets the operating current of the axis 2 that is limited by the CRNT-LMT2 input.         | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3788         | 0ECCh | CRNT-LMT2 operating current limit value Axis 3         | Sets the operating current of the axis 3 that is limited by the CRNT-LMT2 input.         | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3789         | 0ECDh | CRNT-LMT2 operating current limit value Axis 4         | Sets the operating current of the axis 4 that is limited by the CRNT-LMT2 input.         | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3790         | 0ECEh | CRNT-LMT2 operating current limit value Axis 5         | Sets the operating current of the axis 5 that is limited by the CRNT-LMT2 input.         | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3791         | 0ECFh | CRNT-LMT2 operating current limit value Axis 6         | Sets the operating current of the axis 6 that is limited by the CRNT-LMT2 input.         | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3792         | 0ED0h | CRNT-LMT2 operating current limit value end-effector 1 | Sets the operating current of the end effector 1 that is limited by the CRNT-LMT2 input. | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3793         | 0ED1h | CRNT-LMT2 operating current limit value end-effector 2 | Sets the operating current of the end effector 2 that is limited by the CRNT-LMT2 input. | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3794         | 0ED2h | CRNT-LMT3 operating current limit value Axis 1         | Sets the operating current of the axis 1 that is limited by the CRNT-LMT3 input.         | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3795         | 0ED3h | CRNT-LMT3 operating current limit value Axis 2         | Sets the operating current of the axis 2 that is limited by the CRNT-LMT3 input.         | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3796         | 0ED4h | CRNT-LMT3 operating current limit value Axis 3         | Sets the operating current of the axis 3 that is limited by the CRNT-LMT3 input.         | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3797         | 0ED5h | CRNT-LMT3 operating current limit value Axis 4         | Sets the operating current of the axis 4 that is limited by the CRNT-LMT3 input.         | 1 to 1,000 (1=0.1 %) | 500           | A      |
| 3798         | 0ED6h | CRNT-LMT3 operating current limit value Axis 5         | Sets the operating current of the axis 5 that is limited by the CRNT-LMT3 input.         | 1 to 1,000 (1=0.1 %) | 500           | A      |



| Parameter ID |       | Name   | Description  | Setting range                    | Initial value | Update |
|--------------|-------|--|--|----------------------------------|---------------|--------|
| Dec          | Hex   |  |  |                                  |               |        |
| 3799         | 0ED7h | CRNT-LMT3 operating current limit value Axis 6         | Sets the operating current of the axis 6 that is limited by the CRNT-LMT3 input.   | 1 to 1,000<br>(1=0.1 %)          | 500           | A      |
| 3800         | 0ED8h | CRNT-LMT3 operating current limit value end-effector 1 | Sets the operating current of the end effector 1 that is limited by the CRNT-LMT3 input.   | 1 to 1,000<br>(1=0.1 %)          | 500           | A      |
| 3801         | 0ED9h | CRNT-LMT3 operating current limit value end-effector 2 | Sets the operating current of the end effector 2 that is limited by the CRNT-LMT3 input.   | 1 to 1,000<br>(1=0.1 %)          | 500           | A      |
| 3802         | 0EDAh | SPD-LMT1 speed limit type selection                    | Selects the setting method of the speed limit value that is limited by the SPD-LMT1 input.   | 0: Ratio<br>1: Value             | 0             | A      |
| 3803         | 0EDBh | SPD-LMT2 speed limit type selection                    | Selects the setting method of the speed limit value that is limited by the SPD-LMT2 input.   | 0: Ratio<br>1: Value             | 0             | A      |
| 3804         | 0EDCh | SPD-LMT3 speed limit type selection                    | Selects the setting method of the speed limit value that is limited by the SPD-LMT3 input.   | 0: Ratio<br>1: Value             | 0             | A      |
| 3805         | 0EDDh | SPD-LMT1 speed limit ratio                             | Sets the percentage of the speed limit based on the "Speed" of the command being 100 %. This is enabled when the "SPD-LMT1 speed limit type selection" parameter is set to "0: Ratio." | 1 to 100 %                       | 50            | A      |
| 3806         | 0EDEh | SPD-LMT2 speed limit ratio                             | Sets the percentage of the speed limit based on the "Speed" of the command being 100 %. This is enabled when the "SPD-LMT2 speed limit type selection" parameter is set to "0: Ratio." | 1 to 100 %                       | 50            | A      |
| 3807         | 0EDFh | SPD-LMT3 speed limit ratio                             | Sets the percentage of the speed limit based on the "Speed" of the command being 100 %. This is enabled when the "SPD-LMT3 speed limit type selection" parameter is set to "0: Ratio." | 1 to 100 %                       | 50            | A      |
| 3808         | 0EE0h | SPD-LMT1 speed limit value                             | Sets the upper limit value of the speed. This is enabled when the "SPD-LMT1 speed limit type selection" parameter is set to "1: Value."  | 1 to 2,000,000<br>(1=0.001 mm/s) | 10,000        | A      |
| 3809         | 0EE1h | SPD-LMT2 speed limit value                             | Sets the upper limit value of the speed. This is enabled when the "SPD-LMT2 speed limit type selection" parameter is set to "1: Value."  | 1 to 2,000,000<br>(1=0.001 mm/s) | 10,000        | A      |
| 3810         | 0EE2h | SPD-LMT3 speed limit value                             | Sets the upper limit value of the speed. This is enabled when the "SPD-LMT3 speed limit type selection" parameter is set to "1: Value."  | 1 to 2,000,000<br>(1=0.001 mm/s) | 10,000        | A      |



## 8-2 Direct-IN (DIN)

| Parameter ID |       | Name                     | Description                                     | Setting range                 | Initial value   | Update |
|--------------|-------|--------------------------|---|-------------------------------|-----------------|--------|
| Dec          | Hex   |                          |   |                               |                 |        |
| 2112         | 0840h | DIN0 input function      | Selects an input signal to be assigned to DIN0. | Input signals list<br>⇒ p.201 | 16: STOP        | C      |
| 2113         | 0841h | DIN1 input function      | Selects an input signal to be assigned to DIN1. |                               | 2: FREE-RB      | C      |
| 2114         | 0842h | DIN2 input function      | Selects an input signal to be assigned to DIN2. |                               | 25: ETO-CLR-DRV | C      |
| 2115         | 0843h | DIN3 input function      | Selects an input signal to be assigned to DIN3. |                               | 20: ALM-RST     | C      |
| 2116         | 0844h | DIN4 input function      | Selects an input signal to be assigned to DIN4. |                               | 17: PAUSE       | C      |
| 2117         | 0845h | DIN5 input function      | Selects an input signal to be assigned to DIN5. |                               | 0: Not used     | C      |
| 2118         | 0846h | DIN6 input function      | Selects an input signal to be assigned to DIN6. |                               | 160: PRG-IN0    | C      |
| 2119         | 0847h | DIN7 input function      | Selects an input signal to be assigned to DIN7. |                               | 161: PRG-IN1    | C      |
| 2128         | 0850h | DIN0 inverting mode      | Changes the ON-OFF status of DIN0.              | 0: Not invert<br>1: Invert    | 0               | C      |
| 2129         | 0851h | DIN1 inverting mode      | Changes the ON-OFF status of DIN1.              | 0: Not invert<br>1: Invert    | 0               | C      |
| 2130         | 0852h | DIN2 inverting mode      | Changes the ON-OFF status of DIN2.              | 0: Not invert<br>1: Invert    | 0               | C      |
| 2131         | 0853h | DIN3 inverting mode      | Changes the ON-OFF status of DIN3.              | 0: Not invert<br>1: Invert    | 0               | C      |
| 2132         | 0854h | DIN4 inverting mode      | Changes the ON-OFF status of DIN4.              | 0: Not invert<br>1: Invert    | 0               | C      |
| 2133         | 0855h | DIN5 inverting mode      | Changes the ON-OFF status of DIN5.              | 0: Not invert<br>1: Invert    | 0               | C      |
| 2134         | 0856h | DIN6 inverting mode      | Changes the ON-OFF status of DIN6.              | 0: Not invert<br>1: Invert    | 0               | C      |
| 2135         | 0857h | DIN7 inverting mode      | Changes the ON-OFF status of DIN7.              | 0: Not invert<br>1: Invert    | 0               | C      |
| 2240         | 08C0h | DIN0 ON signal dead-time | Sets the ON signal dead-time of DIN0.           | 0 to 250 ms                   | 0               | C      |
| 2241         | 08C1h | DIN1 ON signal dead-time | Sets the ON signal dead-time of DIN1.           | 0 to 250 ms                   | 0               | C      |
| 2242         | 08C2h | DIN2 ON signal dead-time | Sets the ON signal dead-time of DIN2.           | 0 to 250 ms                   | 0               | C      |
| 2243         | 08C3h | DIN3 ON signal dead-time | Sets the ON signal dead-time of DIN3.           | 0 to 250 ms                   | 0               | C      |
| 2244         | 08C4h | DIN4 ON signal dead-time | Sets the ON signal dead-time of DIN4.           | 0 to 250 ms                   | 0               | C      |
| 2245         | 08C5h | DIN5 ON signal dead-time | Sets the ON signal dead-time of DIN5.           | 0 to 250 ms                   | 0               | C      |
| 2246         | 08C6h | DIN6 ON signal dead-time | Sets the ON signal dead-time of DIN6.           | 0 to 250 ms                   | 0               | C      |
| 2247         | 08C7h | DIN7 ON signal dead-time | Sets the ON signal dead-time of DIN7.           | 0 to 250 ms                   | 0               | C      |
| 2256         | 08D0h | DIN0 1-shot signal       | Sets the 1-shot signal function of DIN0.        | 0: Disable<br>1: Enable       | 0               | C      |



| Parameter ID |       | Name                          | Description   | Setting range                 | Initial value | Update |
|--------------|-------|-------------------------------|---|-------------------------------|---------------|--------|
| Dec          | Hex   |                               |   |                               |               |        |
| 2257         | 08D1h | DIN1 1-shot signal            | Sets the 1-shot signal function of DIN1.  | 0: Disable<br>1: Enable       | 0             | C      |
| 2258         | 08D2h | DIN2 1-shot signal            | Sets the 1-shot signal function of DIN2.  | 0: Disable<br>1: Enable       | 0             | C      |
| 2259         | 08D3h | DIN3 1-shot signal            | Sets the 1-shot signal function of DIN3.  | 0: Disable<br>1: Enable       | 0             | C      |
| 2260         | 08D4h | DIN4 1-shot signal            | Sets the 1-shot signal function of DIN4.  | 0: Disable<br>1: Enable       | 0             | C      |
| 2261         | 08D5h | DIN5 1-shot signal            | Sets the 1-shot signal function of DIN5.  | 0: Disable<br>1: Enable       | 0             | C      |
| 2262         | 08D6h | DIN6 1-shot signal            | Sets the 1-shot signal function of DIN6.  | 0: Disable<br>1: Enable       | 0             | C      |
| 2263         | 08D7h | DIN7 1-shot signal            | Sets the 1-shot signal function of DIN7.  | 0: Disable<br>1: Enable       | 0             | C      |
| 2176         | 0880h | DIN0 composite input function | Selects an input signal to be assigned to DIN0 as the composite input function. | Input signals list<br>⇒ p.201 | 0: Not used   | C      |
| 2177         | 0881h | DIN1 composite input function | Selects an input signal to be assigned to DIN1 as the composite input function. |                               | 0: Not used   | C      |
| 2178         | 0882h | DIN2 composite input function | Selects an input signal to be assigned to DIN2 as the composite input function. |                               | 0: Not used   | C      |
| 2179         | 0883h | DIN3 composite input function | Selects an input signal to be assigned to DIN3 as the composite input function. |                               | 0: Not used   | C      |
| 2180         | 0884h | DIN4 composite input function | Selects an input signal to be assigned to DIN4 as the composite input function. |                               | 0: Not used   | C      |
| 2181         | 0885h | DIN5 composite input function | Selects an input signal to be assigned to DIN5 as the composite input function. |                               | 0: Not used   | C      |
| 2182         | 0886h | DIN6 composite input function | Selects an input signal to be assigned to DIN6 as the composite input function. |                               | 0: Not used   | C      |
| 2183         | 0887h | DIN7 composite input function | Selects an input signal to be assigned to DIN7 as the composite input function. |                               | 0: Not used   | C      |



## 8-3 Direct-OUT (DOUT)

| Parameter ID |       | Name                                | Description                                       | Setting range               | Initial value    | Update |
|--------------|-------|-------------------------------------|---|-----------------------------|------------------|--------|
| Dec          | Hex   |                                     |   |                             |                  |        |
| 2144         | 0860h | DOUT0 (Normal) Output function      | Selects an output signal to be assigned to DOUT0. | Output signals list ⇨ p.205 | 264: READY       | C      |
| 2145         | 0861h | DOUT1 (Normal) Output function      | Selects an output signal to be assigned to DOUT1. |                             | 265: MOVE        | C      |
| 2146         | 0862h | DOUT2 (Normal) Output function      | Selects an output signal to be assigned to DOUT2. |                             | 277: ETO-MON-DRV | C      |
| 2147         | 0863h | DOUT3 (Normal) Output function      | Selects an output signal to be assigned to DOUT3. |                             | 260: ALM-B       | C      |
| 2148         | 0864h | DOUT4 (Normal) Output function      | Selects an output signal to be assigned to DOUT4. |                             | 360: PAUSE-BSY   | C      |
| 2149         | 0865h | DOUT5 (Normal) Output function      | Selects an output signal to be assigned to DOUT5. |                             | 266: PRG-RUN     | C      |
| 2150         | 0866h | DOUT6 (Normal) Output function      | Selects an output signal to be assigned to DOUT6. |                             | 384: PRG-OUT0    | C      |
| 2151         | 0867h | DOUT7 (Normal) Output function      | Selects an output signal to be assigned to DOUT7. |                             | 385: PRG-OUT1    | C      |
| 2160         | 0870h | DOUT0 inverting mode                | Changes the ON-OFF status of DOUT0.               | 0: Not invert<br>1: Invert  | 0                | C      |
| 2161         | 0871h | DOUT1 inverting mode                | Changes the ON-OFF status of DOUT1.               | 0: Not invert<br>1: Invert  | 0                | C      |
| 2162         | 0872h | DOUT2 inverting mode                | Changes the ON-OFF status of DOUT2.               | 0: Not invert<br>1: Invert  | 0                | C      |
| 2163         | 0873h | DOUT3 inverting mode                | Changes the ON-OFF status of DOUT3.               | 0: Not invert<br>1: Invert  | 0                | C      |
| 2164         | 0874h | DOUT4 inverting mode                | Changes the ON-OFF status of DOUT4.               | 0: Not invert<br>1: Invert  | 0                | C      |
| 2165         | 0875h | DOUT5 inverting mode                | Changes the ON-OFF status of DOUT5.               | 0: Not invert<br>1: Invert  | 0                | C      |
| 2166         | 0876h | DOUT6 inverting mode                | Changes the ON-OFF status of DOUT6.               | 0: Not invert<br>1: Invert  | 0                | C      |
| 2167         | 0877h | DOUT7 inverting mode                | Changes the ON-OFF status of DOUT7.               | 0: Not invert<br>1: Invert  | 0                | C      |
| 2272         | 08E0h | DOUT0 OFF delay time                | Sets the OFF delay time of DOUT0.                 | 0 to 250 ms                 | 0                | C      |
| 2273         | 08E1h | DOUT1 OFF delay time                | Sets the OFF delay time of DOUT1.                 | 0 to 250 ms                 | 0                | C      |
| 2274         | 08E2h | DOUT2 OFF delay time                | Sets the OFF delay time of DOUT2.                 | 0 to 250 ms                 | 0                | C      |
| 2275         | 08E3h | DOUT3 OFF delay time                | Sets the OFF delay time of DOUT3.                 | 0 to 250 ms                 | 0                | C      |
| 2276         | 08E4h | DOUT4 OFF delay time                | Sets the OFF delay time of DOUT4.                 | 0 to 250 ms                 | 0                | C      |
| 2277         | 08E5h | DOUT5 OFF delay time                | Sets the OFF delay time of DOUT5.                 | 0 to 250 ms                 | 0                | C      |
| 2278         | 08E6h | DOUT6 OFF delay time                | Sets the OFF delay time of DOUT6.                 | 0 to 250 ms                 | 0                | C      |
| 2279         | 08E7h | DOUT7 OFF delay time                | Sets the OFF delay time of DOUT7.                 | 0 to 250 ms                 | 0                | C      |
| 2224         | 08B0h | DOUT0 composite logical combination | Sets the composite logical combination of DOUT0.  | 0: AND<br>1: OR             | 1                | C      |
| 2225         | 08B1h | DOUT1 composite logical combination | Sets the composite logical combination of DOUT1.  | 0: AND<br>1: OR             | 1                | C      |
| 2226         | 08B2h | DOUT2 composite logical combination | Sets the composite logical combination of DOUT2.  | 0: AND<br>1: OR             | 1                | C      |
| 2227         | 08B3h | DOUT3 composite logical combination | Sets the composite logical combination of DOUT3.  | 0: AND<br>1: OR             | 1                | C      |
| 2228         | 08B4h | DOUT4 composite logical combination | Sets the composite logical combination of DOUT4.  | 0: AND<br>1: OR             | 1                | C      |



| Parameter ID |       | Name                                | Description  | Setting range               | Initial value  | Update |
|--------------|-------|-------------------------------------|--|-----------------------------|----------------|--------|
| Dec          | Hex   |                                     |  |                             |                |        |
| 2229         | 08B5h | DOUT5 composite logical combination | Sets the composite logical combination of DOUT5.                         | 0: AND<br>1: OR             | 1              | C      |
| 2230         | 08B6h | DOUT6 composite logical combination | Sets the composite logical combination of DOUT6.                         | 0: AND<br>1: OR             | 1              | C      |
| 2231         | 08B7h | DOUT7 composite logical combination | Sets the composite logical combination of DOUT7.                         | 0: AND<br>1: OR             | 1              | C      |
| 2192         | 0890h | DOUT0 composite output function     | Selects an output signal for logical operation with the signal of DOUT0. | Output signals list ⇨ p.205 | 256: CONST-OFF | C      |
| 2193         | 0891h | DOUT1 composite output function     | Selects an output signal for logical operation with the signal of DOUT1. |                             | 256: CONST-OFF | C      |
| 2194         | 0892h | DOUT2 composite output function     | Selects an output signal for logical operation with the signal of DOUT2. |                             | 256: CONST-OFF | C      |
| 2195         | 0893h | DOUT3 composite output function     | Selects an output signal for logical operation with the signal of DOUT3. |                             | 256: CONST-OFF | C      |
| 2196         | 0894h | DOUT4 composite output function     | Selects an output signal for logical operation with the signal of DOUT4. |                             | 256: CONST-OFF | C      |
| 2197         | 0895h | DOUT5 composite output function     | Selects an output signal for logical operation with the signal of DOUT5. |                             | 256: CONST-OFF | C      |
| 2198         | 0896h | DOUT6 composite output function     | Selects an output signal for logical operation with the signal of DOUT6. |                             | 256: CONST-OFF | C      |
| 2199         | 0897h | DOUT7 composite output function     | Selects an output signal for logical operation with the signal of DOUT7. |                             | 256: CONST-OFF | C      |
| 2208         | 08A0h | DOUT0 composite inverting mode      | Changes the ON-OFF status of the composite output function of DOUT0.     | 0: Not invert<br>1: Invert  | 0              | C      |
| 2209         | 08A1h | DOUT1 composite inverting mode      | Changes the ON-OFF status of the composite output function of DOUT1.     | 0: Not invert<br>1: Invert  | 0              | C      |
| 2210         | 08A2h | DOUT2 composite inverting mode      | Changes the ON-OFF status of the composite output function of DOUT2.     | 0: Not invert<br>1: Invert  | 0              | C      |
| 2211         | 08A3h | DOUT3 composite inverting mode      | Changes the ON-OFF status of the composite output function of DOUT3.     | 0: Not invert<br>1: Invert  | 0              | C      |
| 2212         | 08A4h | DOUT4 composite inverting mode      | Changes the ON-OFF status of the composite output function of DOUT4.     | 0: Not invert<br>1: Invert  | 0              | C      |
| 2213         | 08A5h | DOUT5 composite inverting mode      | Changes the ON-OFF status of the composite output function of DOUT5.     | 0: Not invert<br>1: Invert  | 0              | C      |
| 2214         | 08A6h | DOUT6 composite inverting mode      | Changes the ON-OFF status of the composite output function of DOUT6.     | 0: Not invert<br>1: Invert  | 0              | C      |
| 2215         | 08A7h | DOUT7 composite inverting mode      | Changes the ON-OFF status of the composite output function of DOUT7.     | 0: Not invert<br>1: Invert  | 0              | C      |



## 8-4 Remote-I/O (R-I/O)

| Parameter ID |       | Name                   | Description  | Setting range                  | Initial value  | Update |
|--------------|-------|------------------------|--|--------------------------------|----------------|--------|
| Dec          | Hex   |                        |  |                                |                |        |
| 2304         | 0900h | R-IN0 input function   | Selects an input signal to be assigned to R-IN0.   | Input signals list<br>⇒ p.201  | 192: PRG-RIN0  | C      |
| 2305         | 0901h | R-IN1 input function   | Selects an input signal to be assigned to R-IN1.   |                                | 193: PRG-RIN1  | C      |
| 2306         | 0902h | R-IN2 input function   | Selects an input signal to be assigned to R-IN2.   |                                | 194: PRG-RIN2  | C      |
| 2307         | 0903h | R-IN3 input function   | Selects an input signal to be assigned to R-IN3.   |                                | 195: PRG-RIN3  | C      |
| 2308         | 0904h | R-IN4 input function   | Selects an input signal to be assigned to R-IN4.   |                                | 196: PRG-RIN4  | C      |
| 2309         | 0905h | R-IN5 input function   | Selects an input signal to be assigned to R-IN5.   |                                | 197: PRG-RIN5  | C      |
| 2310         | 0906h | R-IN6 input function   | Selects an input signal to be assigned to R-IN6.   |                                | 198: PRG-RIN6  | C      |
| 2311         | 0907h | R-IN7 input function   | Selects an input signal to be assigned to R-IN7.   |                                | 199: PRG-RIN7  | C      |
| 2312         | 0908h | R-IN8 input function   | Selects an input signal to be assigned to R-IN8.   |                                | 200: PRG-RIN8  | C      |
| 2313         | 0909h | R-IN9 input function   | Selects an input signal to be assigned to R-IN9.   |                                | 201: PRG-RIN9  | C      |
| 2314         | 090Ah | R-IN10 input function  | Selects an input signal to be assigned to R-IN10.  |                                | 202: PRG-RIN10 | C      |
| 2315         | 090Bh | R-IN11 input function  | Selects an input signal to be assigned to R-IN11.  |                                | 203: PRG-RIN11 | C      |
| 2316         | 090Ch | R-IN12 input function  | Selects an input signal to be assigned to R-IN12.  |                                | 204: PRG-RIN12 | C      |
| 2317         | 090Dh | R-IN13 input function  | Selects an input signal to be assigned to R-IN13.  |                                | 205: PRG-RIN13 | C      |
| 2318         | 090Eh | R-IN14 input function  | Selects an input signal to be assigned to R-IN14.  |                                | 206: PRG-RIN14 | C      |
| 2319         | 090Fh | R-IN15 input function  | Selects an input signal to be assigned to R-IN15.  |                                | 207: PRG-RIN15 | C      |
| 2320         | 0910h | R-OUT0 output function | Selects an output signal to be assigned to R-OUT0. | Output signals list<br>⇒ p.205 | 416: PRG-ROUT0 | C      |
| 2321         | 0911h | R-OUT1 output function | Selects an output signal to be assigned to R-OUT1. |                                | 417: PRG-ROUT1 | C      |
| 2322         | 0912h | R-OUT2 output function | Selects an output signal to be assigned to R-OUT2. |                                | 418: PRG-ROUT2 | C      |
| 2323         | 0913h | R-OUT3 output function | Selects an output signal to be assigned to R-OUT3. |                                | 419: PRG-ROUT3 | C      |
| 2324         | 0914h | R-OUT4 output function | Selects an output signal to be assigned to R-OUT4. |                                | 420: PRG-ROUT4 | C      |
| 2325         | 0915h | R-OUT5 output function | Selects an output signal to be assigned to R-OUT5. |                                | 421: PRG-ROUT5 | C      |
| 2326         | 0916h | R-OUT6 output function | Selects an output signal to be assigned to R-OUT6. |                                | 422: PRG-ROUT6 | C      |
| 2327         | 0917h | R-OUT7 output function | Selects an output signal to be assigned to R-OUT7. |                                | 423: PRG-ROUT7 | C      |
| 2328         | 0918h | R-OUT8 output function | Selects an output signal to be assigned to R-OUT8. |                                | 424: PRG-ROUT8 | C      |



| Parameter ID |       | Name                    | Description   | Setting range               | Initial value   | Update |
|--------------|-------|-------------------------|---|-----------------------------|-----------------|--------|
| Dec          | Hex   |                         |   |                             |                 |        |
| 2329         | 0919h | R-OUT9 output function  | Selects an output signal to be assigned to R-OUT9.  | Output signals list ⇨ p.205 | 425: PRG-ROUT9  | C      |
| 2330         | 091Ah | R-OUT10 output function | Selects an output signal to be assigned to R-OUT10. |                             | 426: PRG-ROUT10 | C      |
| 2331         | 091Bh | R-OUT11 output function | Selects an output signal to be assigned to R-OUT11. |                             | 427: PRG-ROUT11 | C      |
| 2332         | 091Ch | R-OUT12 output function | Selects an output signal to be assigned to R-OUT12. |                             | 428: PRG-ROUT12 | C      |
| 2333         | 091Dh | R-OUT13 output function | Selects an output signal to be assigned to R-OUT13. |                             | 429: PRG-ROUT13 | C      |
| 2334         | 091Eh | R-OUT14 output function | Selects an output signal to be assigned to R-OUT14. |                             | 430: PRG-ROUT14 | C      |
| 2335         | 091Fh | R-OUT15 output function | Selects an output signal to be assigned to R-OUT15. |                             | 431: PRG-ROUT15 | C      |
| 2352         | 0930h | R-OUT0 OFF delay time   | Sets the OFF delay time of R-OUT0.                  | 0 to 250 ms                 | 0               | C      |
| 2353         | 0931h | R-OUT1 OFF delay time   | Sets the OFF delay time of R-OUT1.                  | 0 to 250 ms                 | 0               | C      |
| 2354         | 0932h | R-OUT2 OFF delay time   | Sets the OFF delay time of R-OUT2.                  | 0 to 250 ms                 | 0               | C      |
| 2355         | 0933h | R-OUT3 OFF delay time   | Sets the OFF delay time of R-OUT3.                  | 0 to 250 ms                 | 0               | C      |
| 2356         | 0934h | R-OUT4 OFF delay time   | Sets the OFF delay time of R-OUT4.                  | 0 to 250 ms                 | 0               | C      |
| 2357         | 0935h | R-OUT5 OFF delay time   | Sets the OFF delay time of R-OUT5.                  | 0 to 250 ms                 | 0               | C      |
| 2358         | 0936h | R-OUT6 OFF delay time   | Sets the OFF delay time of R-OUT6.                  | 0 to 250 ms                 | 0               | C      |
| 2359         | 0937h | R-OUT7 OFF delay time   | Sets the OFF delay time of R-OUT7.                  | 0 to 250 ms                 | 0               | C      |
| 2360         | 0938h | R-OUT8 OFF delay time   | Sets the OFF delay time of R-OUT8.                  | 0 to 250 ms                 | 0               | C      |
| 2361         | 0939h | R-OUT9 OFF delay time   | Sets the OFF delay time of R-OUT9.                  | 0 to 250 ms                 | 0               | C      |
| 2362         | 093Ah | R-OUT10 OFF delay time  | Sets the OFF delay time of R-OUT10.                 | 0 to 250 ms                 | 0               | C      |
| 2363         | 093Bh | R-OUT11 OFF delay time  | Sets the OFF delay time of R-OUT11.                 | 0 to 250 ms                 | 0               | C      |
| 2364         | 093Ch | R-OUT12 OFF delay time  | Sets the OFF delay time of R-OUT12.                 | 0 to 250 ms                 | 0               | C      |
| 2365         | 093Dh | R-OUT13 OFF delay time  | Sets the OFF delay time of R-OUT13.                 | 0 to 250 ms                 | 0               | C      |
| 2366         | 093Eh | R-OUT14 OFF delay time  | Sets the OFF delay time of R-OUT14.                 | 0 to 250 ms                 | 0               | C      |
| 2367         | 093Fh | R-OUT15 OFF delay time  | Sets the OFF delay time of R-OUT15.                 | 0 to 250 ms                 | 0               | C      |



## 8-5 Virtual input parameters

| Parameter ID |       | Name  | Description   | Setting range                  | Initial value  | Update |
|--------------|-------|---|---|--------------------------------|----------------|--------|
| Dec          | Hex   |   |   |                                |                |        |
| 2368         | 0940h | Virtual input (VIR-IN0) function            | Selects the input signal to be assigned to VIR-IN0.     | Input signals list<br>⇒ p.201  | 0: Not used    | C      |
| 2369         | 0941h | Virtual input (VIR-IN1) function            | Selects the input signal to be assigned to VIR-IN1.     |                                | 0: Not used    | C      |
| 2370         | 0942h | Virtual input (VIR-IN2) function            | Selects the input signal to be assigned to VIR-IN2.     |                                | 0: Not used    | C      |
| 2371         | 0943h | Virtual input (VIR-IN3) function            | Selects the input signal to be assigned to VIR-IN3.     |                                | 0: Not used    | C      |
| 2372         | 0944h | Virtual input (VIR-IN0) source selection    | Selects the output signal to be the trigger of VIR-IN0. | Output signals list<br>⇒ p.205 | 256: CONST-OFF | C      |
| 2373         | 0945h | Virtual input (VIR-IN1) source selection    | Selects the output signal to be the trigger of VIR-IN1. |                                | 256: CONST-OFF | C      |
| 2374         | 0946h | Virtual input (VIR-IN2) source selection    | Selects the output signal to be the trigger of VIR-IN2. |                                | 256: CONST-OFF | C      |
| 2375         | 0947h | Virtual input (VIR-IN3) source selection    | Selects the output signal to be the trigger of VIR-IN3. |                                | 256: CONST-OFF | C      |
| 2376         | 0948h | Virtual input (VIR-IN0) inverting mode      | Changes ON/OFF setting of VIR-IN0.                      | 0: Not invert<br>1: Invert     | 0              | C      |
| 2377         | 0949h | Virtual input (VIR-IN1) inverting mode      | Changes ON/OFF setting of VIR-IN1.                      |                                | 0              | C      |
| 2378         | 094Ah | Virtual input (VIR-IN2) inverting mode      | Changes ON/OFF setting of VIR-IN2.                      |                                | 0              | C      |
| 2379         | 094Bh | Virtual input (VIR-IN3) inverting mode      | Changes ON/OFF setting of VIR-IN3.                      |                                | 0              | C      |
| 2380         | 094Ch | Virtual input (VIR-IN0) ON signal dead time | Sets the ON signal dead time of VIR-IN0.                | 0 to 250 ms                    | 0              | C      |
| 2381         | 094Dh | Virtual input (VIR-IN1) ON signal dead time | Sets the ON signal dead time of VIR-IN1.                |                                | 0              | C      |
| 2382         | 094Eh | Virtual input (VIR-IN2) ON signal dead time | Sets the ON signal dead time of VIR-IN2.                |                                | 0              | C      |
| 2383         | 094Fh | Virtual input (VIR-IN3) ON signal dead time | Sets the ON signal dead time of VIR-IN3.                |                                | 0              | C      |
| 2384         | 0950h | Virtual input (VIR-IN0) 1 shot signal mode  | Enables the 1 shot signal function of VIR-IN0.          | 0: Disable<br>1: Enable        | 0              | C      |
| 2385         | 0951h | Virtual input (VIR-IN1) 1 shot signal mode  | Enables the 1 shot signal function of VIR-IN1.          |                                | 0              | C      |
| 2386         | 0952h | Virtual input (VIR-IN2) 1 shot signal mode  | Enables the 1 shot signal function of VIR-IN2.          |                                | 0              | C      |
| 2387         | 0953h | Virtual input (VIR-IN3) 1 shot signal mode  | Enables the 1 shot signal function of VIR-IN3.          |                                | 0              | C      |



## 8-6 User output setting parameters

| Parameter ID |       | Name   | Description  | Setting range               | Initial value  | Update |
|--------------|-------|--|--|-----------------------------|----------------|--------|
| Dec          | Hex   |  |  |                             |                |        |
| 2400         | 0960h | User output (USR-OUT0) source A function       | Sets the output source A of USR-OUT0.  | Output signals list ⇨ p.205 | 256: CONST-OFF | C      |
| 2401         | 0961h | User output (USR-OUT1) source A function       | Sets the output source A of USR-OUT1.  |                             | 256: CONST-OFF | C      |
| 2402         | 0962h | User output (USR-OUT0) source A inverting mode | Changes ON/OFF of the output source A of USR-OUT0.                           | 0: Not invert<br>1: Invert  | 0              | C      |
| 2403         | 0963h | User output (USR-OUT1) source A inverting mode | Changes ON/OFF of the output source A of USR-OUT1.                           |                             | 0              | C      |
| 2404         | 0964h | User output (USR-OUT0) source B function       | Sets the output source B of USR-OUT0.  | Output signals list ⇨ p.205 | 256: CONST-OFF | C      |
| 2405         | 0965h | User output (USR-OUT1) source B function       | Sets the output source B of USR-OUT1.  |                             | 256: CONST-OFF | C      |
| 2406         | 0966h | User output (USR-OUT0) source B inverting mode | Changes ON/OFF of the output source B of USR-OUT0.                           | 0: Not invert<br>1: Invert  | 0              | C      |
| 2407         | 0967h | User output (USR-OUT1) source B inverting mode | Changes ON/OFF of the output source B of USR-OUT1.                           |                             | 0              | C      |
| 2408         | 0968h | User output (USR-OUT0) logical operation       | Sets the logical combination of the user output sources A and B of USR-OUT0. | 0: AND<br>1: OR             | 1              | C      |
| 2409         | 0969h | User output (USR-OUT1) logical operation       | Sets the logical combination of the user output sources A and B of USR-OUT1. |                             | 1              | C      |



# 9 Parameters: Protective function setting

## 9-1 Alarm/Information

| Parameter ID |       | Name  | Description   | Setting range   | Initial value | Update |
|--------------|-------|---|---|---|---------------|--------|
| Dec          | Hex   |   |   |   |               |        |
| 386          | 0182h | Driver alarm detection                                    | Sets whether or not to generate an alarm of "Driver alarm detection" in the controller when an alarm was generated in the driver. | 0: Disable<br>1: Enable   | 0             | A      |
| 390          | 0186h | Axis speed information (INFO-AXISSPD) Axis 1              | Sets the condition in which the axis speed information (INFO-AXISSPD) of the axis 1 is generated.                                 | 0: Disable<br>1 to 2,000,000<br>(1=0.001 mm/s or 1=0.001 deg/s) | 0             | A      |
| 391          | 0187h | Axis speed information (INFO-AXISSPD) Axis 2              | Sets the condition in which the axis speed information (INFO-AXISSPD) of the axis 2 is generated.                                 | 0: Disable<br>1 to 2,000,000<br>(1=0.001 mm/s or 1=0.001 deg/s) | 0             | A      |
| 392          | 0188h | Axis speed information (INFO-AXISSPD) Axis 3              | Sets the condition in which the axis speed information (INFO-AXISSPD) of the axis 3 is generated.                                 | 0: Disable<br>1 to 2,000,000<br>(1=0.001 mm/s or 1=0.001 deg/s) | 0             | A      |
| 393          | 0189h | Axis speed information (INFO-AXISSPD) Axis 4              | Sets the condition in which the axis speed information (INFO-AXISSPD) of the axis 4 is generated.                                 | 0: Disable<br>1 to 2,000,000<br>(1=0.001 mm/s or 1=0.001 deg/s) | 0             | A      |
| 394          | 018Ah | Axis speed information (INFO-AXISSPD) Axis 5              | Sets the condition in which the axis speed information (INFO-AXISSPD) of the axis 5 is generated.                                 | 0: Disable<br>1 to 2,000,000<br>(1=0.001 mm/s or 1=0.001 deg/s) | 0             | A      |
| 395          | 018Bh | Axis speed information (INFO-AXISSPD) Axis 6              | Sets the condition in which the axis speed information (INFO-AXISSPD) of the axis 6 is generated.                                 | 0: Disable<br>1 to 2,000,000<br>(1=0.001 mm/s or 1=0.001 deg/s) | 0             | A      |
| 396          | 018Ch | Axial speed information (INFO-AXISSPD) end-effector 1     | Sets the condition in which the axis speed information (INFO-AXISSPD) of the end effector 1 is generated.                         | 0: Disable<br>1 to 2,000,000<br>(1=0.001 mm/s or 1=0.001 deg/s) | 0             | A      |
| 397          | 018Dh | Axial speed information (INFO-AXISSPD) end-effector 2     | Sets the condition in which the axis speed information (INFO-AXISSPD) of the end effector 2 is generated.                         | 0: Disable<br>1 to 2,000,000<br>(1=0.001 mm/s or 1=0.001 deg/s) | 0             | A      |
| 416          | 01A0h | Controller temperature information (INFO-CNTTMP)          | Sets the condition in which the controller temperature information (INFO-CNTTMP) is generated.                                    | 40 to 85 °C   | 85            | A      |
| 418          | 01A2h | TCP speed information (INFO-RBSPD)                        | Sets the condition in which the TCP speed information (INFO-RBSPD) is generated.  | 0: Disable<br>1 to 2,000,000<br>(1=0.001 mm/s)                  | 0             | A      |
| 422          | 01A6h | Mechanism information mismatch information (INFO-MECHMIS) | Sets the Mechanism information mismatch information (INFO-MECHMIS).   | 0: Disable<br>1: Enable   | 1             | A      |



| Parameter ID |       | Name   | Description   | Setting range                                | Initial value     | Update |
|--------------|-------|--|---|--|-------------------|--------|
| Dec          | Hex   |  |   |  |                   |        |
| 423          | 01A7h | Driver information detection (INFO-DRVINFO)    | Sets whether or not to generate the Driver information detection (INFO-DRVINFO) in the controller when information was generated in the driver. | 0: Disable<br>1: Enable                      | 0                 | A      |
| 441          | 01B9h | Robot posture error information (INFO-PST-ERR) | Sets the Robot posture error information (INFO-PST-ERR).  | 0: Disable<br>1: Enable                      | 1                 | A      |
| 442          | 01BAh | Slip information (INFO-SLIP)                   | Sets the Slip information (INFO-SLIP).  | 0: Disable<br>1: Enable                      | 1                 | A      |
| 444          | 01BCh | INFO-USRIO output selection                    | Selects the I/O status to be checked in the INFO-USRIO output.  | Output signals list<br>⇒ p.205               | 256:<br>CONST-OFF | A      |
| 445          | 01BDh | INFO-USRIO output inversion                    | Sets the output logic of the INFO-USRIO output.   | 0: Not invert<br>1: Invert                   | 0                 | A      |
| 446          | 01BEh | Information LED condition                      | Sets whether or not to blink the LED when information was generated.  | 0: Disable<br>1: Enable                      | 1                 | A      |
| 447          | 01BFh | Information auto clear                         | When the cause of information is eliminated, the INFO output and the bit output of the corresponding information are turned OFF automatically.  | 0: Disable<br>1: Enable                      | 1                 | A      |
| 3901         | 0F3Dh | Near singularity alarm setting                 | Sets an alarm of Near singularity.  | 0: Alarm not generated<br>1: Alarm generated | 1                 | A      |
| 4450         | 1162h | End effector command near singularity          | Sets whether to generate an alarm when a command of end effector operation near singularity is executed.  | 0: Alarm generated<br>1: Alarm not generated | 0                 | A      |
| 4545         | 11C1h | Rotation error at power on alarm setting       | Sets an alarm of Rotation error at power on.  | 0: Alarm not generated<br>1: Alarm generated | 0                 | A      |

## 9-2 Position limit

| Parameter ID |       | Name                                  | Description   | Setting range                                      | Initial value | Update |
|--------------|-------|---------------------------------------|---|--|---------------|--------|
| Dec          | Hex   |                                       |   |  |               |        |
| 816          | 0330h | TCP position limit operation setting  | Sets how the robot operates when the TCP position limit is detected.  | –1: Limit disable<br>0: Stop<br>1: Stop with alarm | 1             | A      |
| 817          | 0331h | TCP position limit X+                 | Sets the position limit in the X-axis positive direction of TCP.      | –5,000,000 to 5,000,000<br>(1=0.001 mm)            | 1,000,000     | A      |
| 818          | 0332h | TCP position limit Y+                 | Sets the position limit in the Y-axis positive direction of TCP.      | –5,000,000 to 5,000,000<br>(1=0.001 mm)            | 1,000,000     | A      |
| 819          | 0333h | TCP position limit Z+                 | Sets the position limit in the Z-axis positive direction of TCP.      | –5,000,000 to 5,000,000<br>(1=0.001 mm)            | 1,000,000     | A      |
| 825          | 0339h | TCP position limit X–                 | Sets the position limit in the X-axis negative direction of TCP.      | –5,000,000 to 5,000,000<br>(1=0.001 mm)            | –1,000,000    | A      |
| 826          | 033Ah | TCP position limit Y–                 | Sets the position limit in the Y-axis negative direction of TCP.      | –5,000,000 to 5,000,000<br>(1=0.001 mm)            | –1,000,000    | A      |
| 827          | 033Bh | TCP position limit Z–                 | Sets the position limit in the Z-axis negative direction of TCP.      | –5,000,000 to 5,000,000<br>(1=0.001 mm)            | –1,000,000    | A      |
| 897          | 0381h | Axis position limit operation setting | Sets how the robot operates when the axis position limit is detected. | –1: Limit disable<br>0: Stop<br>1: Stop with alarm | 1             | A      |



| Parameter ID |       | Name  | Description   | Setting range   | Initial value | Update |
|--------------|-------|---|---|---|---------------|--------|
| Dec          | Hex   |   |   |   |               |        |
| 898          | 0382h | Axis position limit Axis 1+                           | Sets the position limit in the positive direction of the axis 1.  | −5,000,000 to 5,000,000<br>(1=0.001 mm or<br>1=0.001 deg) | 1,000,000     | A      |
| 899          | 0383h | Axis position limit Axis 2+                           | Sets the position limit in the positive direction of the axis 2.  | −5,000,000 to 5,000,000<br>(1=0.001 mm or<br>1=0.001 deg) | 1,000,000     | A      |
| 900          | 0384h | Axis position limit Axis 3+                           | Sets the position limit in the positive direction of the axis 3.  | −5,000,000 to 5,000,000<br>(1=0.001 mm or<br>1=0.001 deg) | 1,000,000     | A      |
| 901          | 0385h | Axis position limit Axis 4+                           | Sets the position limit in the positive direction of the axis 4.  | −5,000,000 to 5,000,000<br>(1=0.001 mm or<br>1=0.001 deg) | 1,000,000     | A      |
| 902          | 0386h | Axis position limit Axis 5+                           | Sets the position limit in the positive direction of the axis 5.  | −5,000,000 to 5,000,000<br>(1=0.001 mm or<br>1=0.001 deg) | 1,000,000     | A      |
| 903          | 0387h | Axis position limit Axis 6+                           | Sets the position limit in the positive direction of the axis 6.  | −5,000,000 to 5,000,000<br>(1=0.001 mm or<br>1=0.001 deg) | 1,000,000     | A      |
| 904          | 0388h | Axis position limit end-effector 1+                   | Sets the position limit in the positive direction of the end effector 1.  | −5,000,000 to 5,000,000<br>(1=0.001 mm or<br>1=0.001 deg) | 1,000,000     | A      |
| 905          | 0389h | Axis position limit end-effector 2+                   | Sets the position limit in the positive direction of the end effector 2.  | −5,000,000 to 5,000,000<br>(1=0.001 mm or<br>1=0.001 deg) | 1,000,000     | A      |
| 906          | 038Ah | Axis position limit Axis 1−                           | Sets the position limit in the negative direction of the axis 1.  | −5,000,000 to 5,000,000<br>(1=0.001 mm or<br>1=0.001 deg) | −1,000,000    | A      |
| 907          | 038Bh | Axis position limit Axis 2−                           | Sets the position limit in the negative direction of the axis 2.  | −5,000,000 to 5,000,000<br>(1=0.001 mm or<br>1=0.001 deg) | −1,000,000    | A      |
| 908          | 038Ch | Axis position limit Axis 3−                           | Sets the position limit in the negative direction of the axis 3.  | −5,000,000 to 5,000,000<br>(1=0.001 mm or<br>1=0.001 deg) | −1,000,000    | A      |
| 909          | 038Dh | Axis position limit Axis 4−                           | Sets the position limit in the negative direction of the axis 4.  | −5,000,000 to 5,000,000<br>(1=0.001 mm or<br>1=0.001 deg) | −1,000,000    | A      |
| 910          | 038Eh | Axis position limit Axis 5−                           | Sets the position limit in the negative direction of the axis 5.  | −5,000,000 to 5,000,000<br>(1=0.001 mm or<br>1=0.001 deg) | −1,000,000    | A      |
| 911          | 038Fh | Axis position limit Axis 6−                           | Sets the position limit in the negative direction of the axis 6.  | −5,000,000 to 5,000,000<br>(1=0.001 mm or<br>1=0.001 deg) | −1,000,000    | A      |
| 912          | 0390h | Axis position limit end-effector 1−                   | Sets the position limit in the negative direction of the end effector 1.  | −5,000,000 to 5,000,000<br>(1=0.001 mm or<br>1=0.001 deg) | −1,000,000    | A      |
| 913          | 0391h | Axis position limit end-effector 2−                   | Sets the position limit in the negative direction of the end effector 2.  | −5,000,000 to 5,000,000<br>(1=0.001 mm or<br>1=0.001 deg) | −1,000,000    | A      |
| 4546         | 11C2h | TCP position limit target coordinate system selection | Sets the coordinate system for the TCP position limit. If the coordinate system is changed, the position of the limit is also changed. When the coordinate system is changed, set the TCP position limit again. | 0: User coordinate system<br>1: Base coordinate system    | 0             | A      |



### 9-3 AREA signal output / no entry area

| Parameter ID |       | Name                                   | Description   | Setting range  | Initial value | Update |
|--------------|-------|--|---|--|---------------|--------|
| Dec          | Hex   |  |   |  |               |        |
| 833          | 0341h | User-defined area 0 operation setting  | Sets how the controller operates when the command position of the TCP enters the user-defined area. Setting to "0" will continue the operation even in the user-defined area. If it is set to "1" or "2," the user-defined area will be a no-entry area. Operation will be stopped when the the command position of the TCP enters the no-entry area. | 0: AREA0 output<br>1: AREA0 output, no entry<br>2: AREA0 output, no entry with alarm | 0             | A      |
| 834          | 0342h | User-defined area 1 operation setting  |   | 0: AREA1 output<br>1: AREA1 output, no entry<br>2: AREA1 output, no entry with alarm | 0             | A      |
| 835          | 0343h | User-defined area 2 operation setting  |   | 0: AREA2 output<br>1: AREA2 output, no entry<br>2: AREA2 output, no entry with alarm | 0             | A      |
| 836          | 0344h | User-defined area 3 operation setting  |   | 0: AREA3 output<br>1: AREA3 output, no entry<br>2: AREA3 output, no entry with alarm | 0             | A      |
| 837          | 0345h | User-defined area 4 operation setting  |   | 0: AREA4 output<br>1: AREA4 output, no entry<br>2: AREA4 output, no entry with alarm | 0             | A      |
| 841          | 0349h | User-defined area 0 target coordinates | Selects the coordinates corresponding to the AREA0 output.  | 1: X<br>2: Y<br>3: XY<br>4: Z<br>5: XZ<br>6: YZ<br>7: XYZ                            | 7             | A      |
| 842          | 034Ah | User-defined area 1 target coordinates | Selects the coordinates corresponding to the AREA1 output.  | 1: X<br>2: Y<br>3: XY<br>4: Z<br>5: XZ<br>6: YZ<br>7: XYZ                            | 7             | A      |
| 843          | 034Bh | User-defined area 2 target coordinates | Selects the coordinates corresponding to the AREA2 output.  | 1: X<br>2: Y<br>3: XY<br>4: Z<br>5: XZ<br>6: YZ<br>7: XYZ                            | 7             | A      |
| 844          | 034Ch | User-defined area 3 target coordinates | Selects the coordinates corresponding to the AREA3 output.  | 1: X<br>2: Y<br>3: XY<br>4: Z<br>5: XZ<br>6: YZ<br>7: XYZ                            | 7             | A      |
| 845          | 034Dh | User-defined area 4 target coordinates | Selects the coordinates corresponding to the AREA4 output.  | 1: X<br>2: Y<br>3: XY<br>4: Z<br>5: XZ<br>6: YZ<br>7: XYZ                            | 7             | A      |



| Parameter ID |       | Name                   | Description                                   | Setting range                           | Initial value | Update |
|--------------|-------|------------------------|---|---|---------------|--------|
| Dec          | Hex   |                        |   |   |               |        |
| 849          | 0351h | User-defined area 0 X+ | Sets the position of the user-defined area 0. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 850          | 0352h | User-defined area 1 X+ | Sets the position of the user-defined area 1. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 851          | 0353h | User-defined area 2 X+ | Sets the position of the user-defined area 2. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 852          | 0354h | User-defined area 3 X+ | Sets the position of the user-defined area 3. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 853          | 0355h | User-defined area 4 X+ | Sets the position of the user-defined area 4. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 857          | 0359h | User-defined area 0 X− | Sets the position of the user-defined area 0. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 858          | 035Ah | User-defined area 1 X− | Sets the position of the user-defined area 1. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 859          | 035Bh | User-defined area 2 X− | Sets the position of the user-defined area 2. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 860          | 035Ch | User-defined area 3 X− | Sets the position of the user-defined area 3. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 861          | 035Dh | User-defined area 4 X− | Sets the position of the user-defined area 4. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 865          | 0361h | User-defined area 0 Y+ | Sets the position of the user-defined area 0. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 866          | 0362h | User-defined area 1 Y+ | Sets the position of the user-defined area 1. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 867          | 0363h | User-defined area 2 Y+ | Sets the position of the user-defined area 2. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 868          | 0364h | User-defined area 3 Y+ | Sets the position of the user-defined area 3. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 869          | 0365h | User-defined area 4 Y+ | Sets the position of the user-defined area 4. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 873          | 0369h | User-defined area 0 Y− | Sets the position of the user-defined area 0. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 874          | 036Ah | User-defined area 1 Y− | Sets the position of the user-defined area 1. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 875          | 036Bh | User-defined area 2 Y− | Sets the position of the user-defined area 2. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 876          | 036Ch | User-defined area 3 Y− | Sets the position of the user-defined area 3. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 877          | 036Dh | User-defined area 4 Y− | Sets the position of the user-defined area 4. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 881          | 0371h | User-defined area 0 Z+ | Sets the position of the user-defined area 0. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 882          | 0372h | User-defined area 1 Z+ | Sets the position of the user-defined area 1. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 883          | 0373h | User-defined area 2 Z+ | Sets the position of the user-defined area 2. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 884          | 0374h | User-defined area 3 Z+ | Sets the position of the user-defined area 3. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 885          | 0375h | User-defined area 4 Z+ | Sets the position of the user-defined area 4. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 889          | 0379h | User-defined area 0 Z− | Sets the position of the user-defined area 0. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |
| 890          | 037Ah | User-defined area 1 Z− | Sets the position of the user-defined area 1. | −5,000,000 to 5,000,000<br>(1=0.001 mm) | 0             | A      |



| Parameter ID |       | Name  | Description  | Setting range   | Initial value | Update |
|--------------|-------|---|--|---|---------------|--------|
| Dec          | Hex   |   |  |   |               |        |
| 891          | 037Bh | User-defined area 2 Z–                      | Sets the position of the user-defined area 2.  | –5,000,000 to 5,000,000<br>(1=0.001 mm)                       | 0             | A      |
| 892          | 037Ch | User-defined area 3 Z–                      | Sets the position of the user-defined area 3.  | –5,000,000 to 5,000,000<br>(1=0.001 mm)                       | 0             | A      |
| 893          | 037Dh | User-defined area 4 Z–                      | Sets the position of the user-defined area 4.  | –5,000,000 to 5,000,000<br>(1=0.001 mm)                       | 0             | A      |
| 4547         | 11C3h | User-defined area0 target coordinate system | Sets the coordinate system for the AREA0 output. If the coordinate system is changed, the position of the user-defined area is also changed. When the coordinate system is changed, set the user-defined area again. | 0: User coordinate system<br>1: Base coordinate system        | 0             | A      |
| 4548         | 11C4h | User-defined area1 target coordinate system | Sets the coordinate system for the AREA1 output. If the coordinate system is changed, the position of the user-defined area is also changed. When the coordinate system is changed, set the user-defined area again. | 0: User coordinate system<br>1: Base coordinate system        | 0             | A      |
| 4549         | 11C5h | User-defined area2 target coordinate system | Sets the coordinate system for the AREA2 output. If the coordinate system is changed, the position of the user-defined area is also changed. When the coordinate system is changed, set the user-defined area again. | 0: User coordinate system<br>1: Base coordinate system        | 0             | A      |
| 4550         | 11C6h | User-defined area3 target coordinate system | Sets the coordinate system for the AREA3 output. If the coordinate system is changed, the position of the user-defined area is also changed. When the coordinate system is changed, set the user-defined area again. | 0: User coordinate system<br>1: Base coordinate system        | 0             | A      |
| 4551         | 11C7h | User-defined area4 target coordinate system | Sets the coordinate system for the AREA4 output. If the coordinate system is changed, the position of the user-defined area is also changed. When the coordinate system is changed, set the user-defined area again. | 0: User coordinate system<br>1: Base coordinate system        | 0             | A      |
| 4530         | 11B2h | AREA0-AX target axis selection              | Sets the axis ID for the AREA0-AX output.  | 0: Disable<br>1 to 8: Axis ID                                 | 0             | A      |
| 4531         | 11B3h | AREA0-AX positioning standard               | Sets the judgment criterion of the position for the AREA0-AX output.   | 0: Based on feedback position<br>1: Based on command position | 0             | A      |
| 4532         | 11B4h | AREA0-AX positive direction position        | Sets the positive direction position of the AREA0-AX output.   | –5,000,000 to 5,000,000<br>(1=0.001 mm or 1=0.001 deg)        | 0             | A      |
| 4533         | 11B5h | AREA0-AX negative direction position        | Sets the negative direction position of the AREA0-AX output.   | –5,000,000 to 5,000,000<br>(1=0.001 mm or 1=0.001 deg)        | 0             | A      |
| 4534         | 11B6h | AREA1-AX target axis selection              | Sets the axis ID for the AREA1-AX output.  | 0: Disable<br>1 to 8: Axis ID                                 | 0             | A      |



| Parameter ID |       | Name                                 | Description  | Setting range   | Initial value | Update |
|--------------|-------|--------------------------------------|--|---|---------------|--------|
| Dec          | Hex   |                                      |  |   |               |        |
| 4535         | 11B7h | AREA1-AX positioning standard        | Sets the judgment criterion of the position for the AREA1-AX output. | 0: Based on feedback position<br>1: Based on command position | 0             | A      |
| 4536         | 11B8h | AREA1-AX positive direction position | Sets the positive direction position of the AREA1-AX output.         | −5,000,000 to 5,000,000<br>(1=0.001 mm or 1=0.001 deg)        | 0             | A      |
| 4537         | 11B9h | AREA1-AX negative direction position | Sets the negative direction position of the AREA1-AX output.         | −5,000,000 to 5,000,000<br>(1=0.001 mm or 1=0.001 deg)        | 0             | A      |
| 4538         | 11BAh | AREA2-AX target axis selection       | Sets the axis ID for the AREA2-AX output.                            | 0: Disable<br>1 to 8: Axis ID                                 | 0             | A      |
| 4539         | 11BBh | AREA2-AX positioning standard        | Sets the judgment criterion of the position for the AREA2-AX output. | 0: Based on feedback position<br>1: Based on command position | 0             | A      |
| 4540         | 11BCh | AREA2-AX positive direction position | Sets the positive direction position of the AREA2-AX output.         | −5,000,000 to 5,000,000<br>(1=0.001 mm or 1=0.001 deg)        | 0             | A      |
| 4541         | 11BDh | AREA2-AX negative direction position | Sets the negative direction position of the AREA2-AX output.         | −5,000,000 to 5,000,000<br>(1=0.001 mm or 1=0.001 deg)        | 0             | A      |

## 9-4 Speed limit

| Parameter ID |       | Name                     | Description  | Setting range  | Initial value | Update |
|--------------|-------|--------------------------|--|--|---------------|--------|
| Dec          | Hex   |                          |  |  |               |        |
| 954          | 03BAh | TCP speed limit setting  | Sets how the robot operates when the maximum speed of the TCP is detected.   | −1: Limit disable<br>(operation is not stopped)<br>0: Stop<br>1: Stop with alarm | 1             | B      |
| 955          | 03BBh | Maximum TCP speed        | Sets the maximum speed of the TCP.   | 10 to 2,000,000<br>(1=0.001 mm/s)  | 500,000       | B      |
| 963          | 03C3h | Axis speed limit setting | Sets how the robot operates when the maximum speed of each axis is detected. | −1: Limit disable<br>(operation is not stopped)<br>0: Stop<br>1: Stop with alarm | 1             | B      |
| 964          | 03C4h | Maximum speed Axis 1     | Sets the maximum speed of the axis 1.  | 10 to 2,000,000<br>(1=0.001 mm/s or 1=0.001 deg/s)                               | 500,000       | B      |
| 965          | 03C5h | Maximum speed Axis 2     | Sets the maximum speed of the axis 2.  | 10 to 2,000,000<br>(1=0.001 mm/s or 1=0.001 deg/s)                               | 500,000       | B      |
| 966          | 03C6h | Maximum speed Axis 3     | Sets the maximum speed of the axis 3.  | 10 to 2,000,000<br>(1=0.001 mm/s or 1=0.001 deg/s)                               | 500,000       | B      |
| 967          | 03C7h | Maximum speed Axis 4     | Sets the maximum speed of the axis 4.  | 10 to 2,000,000<br>(1=0.001 mm/s or 1=0.001 deg/s)                               | 500,000       | B      |
| 968          | 03C8h | Maximum speed Axis 5     | Sets the maximum speed of the axis 5.  | 10 to 2,000,000<br>(1=0.001 mm/s or 1=0.001 deg/s)                               | 500,000       | B      |
| 969          | 03C9h | Maximum speed Axis 6     | Sets the maximum speed of the axis 6.  | 10 to 2,000,000<br>(1=0.001 mm/s or 1=0.001 deg/s)                               | 500,000       | B      |



| Parameter ID |       | Name  | Description  | Setting range   | Initial value | Update |
|--------------|-------|---|--|---|---------------|--------|
| Dec          | Hex   |   |  |   |               |        |
| 970          | 03CAh | Maximum speed end-effector 1                                  | Sets the maximum speed of the end effector 1.  | 10 to 2,000,000<br>(1=0.001 mm/s or 1=0.001 deg/s)  | 500,000       | B      |
| 971          | 03CBh | Maximum speed end-effector 2                                  | Sets the maximum speed of the end effector 2.  | 10 to 2,000,000<br>(1=0.001 mm/s or 1=0.001 deg/s)  | 500,000       | B      |
| 4520         | 11A8h | Rotation axis limit setting                                   | Sets the limit for the speed and acceleration/deceleration according to the distance between the base rotation axis and the TCP. Refer to p.245 for details on the limit function. | 0: Limit disable<br>1: Speed limit enable<br>2: Acceleration/deceleration limit enable<br>3: Speed and acceleration/deceleration limit enable | 0             | A      |
| 4521         | 11A9h | Rotation axis limit inside distance                           | Sets the position of the inside of the rotation axis limit with the TCP distance (radius) from the rotation axis.  | 10 to 2,000,000<br>(1=0.001 mm)   | 0             | A      |
| 4522         | 11AAh | Rotation axis limit inside maximum speed                      | Sets the maximum speed at the inside of the rotation axis limit.   | 0 to 2,000,000<br>(1=0.001 deg/s)   | 0             | A      |
| 4523         | 11ABh | Rotation axis limit inside maximum acceleration/deceleration  | Sets the maximum acceleration/deceleration at the inside of the rotation axis limit.   | 0 to 30,000,000<br>(1=0.001 deg/s <sup>2</sup> )  | 0             | A      |
| 4524         | 11ACh | Rotation axis limit middle distance                           | Sets a desired position between the rotation axis limits with the TCP distance (radius) from the rotation axis.  | 10 to 2,000,000<br>(1=0.001 mm)   | 0             | A      |
| 4525         | 11ADh | Rotation axis limit middle maximum speed                      | Sets the maximum speed at a desired position between the rotation axis limits.   | 0 to 2,000,000<br>(1=0.001 deg/s)   | 0             | A      |
| 4526         | 11AEh | Rotation axis limit middle maximum acceleration/deceleration  | Sets the maximum acceleration/deceleration at a desired position between the rotation axis limits.   | 0 to 30,000,000<br>(1=0.001 deg/s <sup>2</sup> )  | 0             | A      |
| 4527         | 11AFh | Rotation axis limit outside distance                          | Sets the position of the outside of the rotation axis limit with the TCP distance (radius) from the rotation axis.   | 10 to 2,000,000<br>(1=0.001 mm)   | 0             | A      |
| 4528         | 11B0h | Rotation axis limit outside maximum speed                     | Sets the maximum speed at the outside of the rotation axis limit.  | 0 to 2,000,000<br>(1=0.001 deg/s)   | 0             | A      |
| 4529         | 11B1h | Rotation axis limit outside maximum acceleration/deceleration | Sets the maximum acceleration/deceleration at the outside of the rotation axis limit.  | 0 to 30,000,000<br>(1=0.001 deg/s <sup>2</sup> )  | 0             | A      |



## 9-5 Protection operation

| Parameter ID |       | Name                                       | Description  | Setting range   | Initial value | Update |
|--------------|-------|--|--|---|---------------|--------|
| Dec          | Hex   |  |  |   |               |        |
| 3904         | 0F40h | Slip function setting                      | Sets the "slip mode" that makes the motor slip when a load on the robot axis is increased while the robot is stopped. In the slip mode, the feedback position is the same value as the command position. Also, in the slip mode, if the robot axis is moved by an external force, it does not return to its former position. | 0: Disable<br>1: Enable   | 0             | A      |
| 3905         | 0F41h | Slip mode decision load factor             | Sets the load factor for deciding to switch to the slip mode.  | 1 to 1,000 (1=0.1 %)  | 1,000         | A      |
| 3906         | 0F42h | Slip mode decision time                    | Sets the time for deciding to switch to the slip mode.   | 0 to 50 (1=0.1 s)   | 1             | A      |
| 3908         | 0F44h | Current in slip mode Axis 1                | Sets the current in the slip mode. Sets the percentage of the current in the slip mode based on a value in the "Stop current" parameter being 100 %. (Example: If the "Stop current" parameter is set to 50 % and the "Current in slip mode" parameter is set to 50 %, the current in the slip mode will be 25 %).           | 1 to 1,000 (1=0.1 %)  | 1,000         | A      |
| 3909         | 0F45h | Current in slip mode Axis 2                |  | 1 to 1,000 (1=0.1 %)  | 1,000         | A      |
| 3910         | 0F46h | Current in slip mode Axis 3                |  | 1 to 1,000 (1=0.1 %)  | 1,000         | A      |
| 3911         | 0F47h | Current in slip mode Axis 4                |  | 1 to 1,000 (1=0.1 %)  | 1,000         | A      |
| 3912         | 0F48h | Current in slip mode Axis 5                |  | 1 to 1,000 (1=0.1 %)  | 1,000         | A      |
| 3913         | 0F49h | Current in slip mode Axis 6                |  | 1 to 1,000 (1=0.1 %)  | 1,000         | A      |
| 3916         | 0F4Ch | Slip mode release time                     | Sets the time for deciding to release the slip mode.   | 5 to 50 (1=0.1 s)   | 10            | A      |
| 3920         | 0F50h | Overload stop setting                      | Sets the "Overload stop function" to stop the operation when a load on the robot axis is increased during operation.   | 0: Disable<br>1: Enable (alarm of Axis error during operation is generated) | 1             | A      |
| 3921         | 0F51h | Overload stop setting decision load factor | Sets the load factor for deciding to activate the overload stop function.  | 1 to 1,000 (1=0.1 %)  | 1,000         | A      |
| 3922         | 0F52h | Overload stop setting decision time        | Sets the time for deciding to activate the overload stop function.   | 0 to 50 (1=0.1 s)   | 1             | A      |
| 3923         | 0F53h | Overload stop setting stop mode            | Sets how to stop when the overload stop function is activated.   | 0: Immediate stop<br>1: Deceleration stop                                   | 0             | A      |



# 10 Parameters: Communication and I/F setting

## 10-1 EtherNet/IP

### ● IP address setting parameters

These items can be set with the **MRC Studio** software only. There is no parameter ID.

| Name  | Description                              | Setting range                  | Initial value | Update |
|---|--|--------------------------------|---------------|--------|
| Implicit communication format size (Input)  | Sets the format size of the Input data.  | 2 to 228 bytes                 | 172           | D      |
| Implicit communication format size (Output) | Sets the format size of the Output data. | 2 to 228 bytes                 | 172           | D      |
| Configuration Control (attr.3)              | Selects how to obtain the IP address.    | 0: Parameter<br>1: DHCP server | 2             | D      |
| IP Address 1                                | Sets the IP address.                     | 0 to 255                       | 192           | D      |
| IP Address 2                                |  | 0 to 255                       | 168           | D      |
| IP Address 3                                |  | 0 to 255                       | 1             | D      |
| IP Address 4                                |  | 0 to 255                       | 1             | D      |
| Network Mask 1                              | Sets the subnet mask.                    | 0 to 255                       | 255           | D      |
| Network Mask 2                              |  | 0 to 255                       | 255           | D      |
| Network Mask 3                              |  | 0 to 255                       | 255           | D      |
| Network Mask 4                              |  | 0 to 255                       | 0             | D      |
| Gateway Address 1                           | Sets the default gateway.                | 0 to 255                       | 0             | D      |
| Gateway Address 2                           |  | 0 to 255                       | 0             | D      |
| Gateway Address 3                           |  | 0 to 255                       | 0             | D      |
| Gateway Address 4                           |  | 0 to 255                       | 0             | D      |

### ● Assignable monitor setting parameters

| Parameter ID |       | Name                                    | Description  | Setting range                                | Initial value                     | Update |
|--------------|-------|---|--|--|-----------------------------------|--------|
| Dec          | Hex   |   |  |  |                                   |        |
| 3746         | 0EA2h | Driver assignable monitor address 0     | Sets the parameter ID of the item to be monitored. | Driver assignable monitor address<br>⇒ p.189 | 107: Torque monitor               | A      |
| 3747         | 0EA3h | Driver assignable monitor address 1     |  |  | 124: Driver temperature           | A      |
| 3748         | 0EA4h | Driver assignable monitor address 2     |  |  | 125: Motor temperature            | A      |
| 25600        | 6400h | Controller assignable monitor address 0 | Sets the parameter ID of the item to be monitored. | Monitor command<br>⇒ p.140                   | 1448: Driver communication status | A      |
| 25601        | 6401h | Controller assignable monitor address 1 |  |  | 1247: Feedback speed RxRyRz       | A      |
| 25602        | 6402h | Controller assignable monitor address 2 |  |  | 653: Enabled coordinates          | A      |
| 25603        | 6403h | Controller assignable monitor address 3 |  |  | 124: Controller temperature       | A      |



| Parameter ID |       | Name  | Description  | Setting range  | Initial value                         | Update |
|--------------|-------|---|--|--|---------------------------------------|--------|
| Dec          | Hex   |   |  |  |                                       |        |
| 4558         | 11CEh | Implicit communication Position / Speed monitor selection | Sets the type of position and speed to be monitored by the Input data of Implicit communication. | 0: Feedback position / Feedback speed<br>1: Command position / Command speed | 0: Feedback position / Feedback speed | D      |

#### Driver assignable monitor address

Refer to the **AZ** Series OPERATING MANUAL Function Edition for details about monitor items. When checking the **AZ** Series OPERATING MANUAL Function Edition, refer to the parameter name instead of the parameter ID.

| Parameter ID |       | Name                    | Parameter ID |       | Name                       |
|--------------|-------|-------------------------|--------------|-------|----------------------------|
| Dex          | Hex   |                         | Dex          | Hex   |                            |
| 99           | 0063h | Command position        | 160          | 00A0h | Main power supply count    |
| 100          | 0064h | Command speed (r/min)   | 161          | 00A1h | Main power supply time     |
| 101          | 0065h | Command speed (Hz)      | 162          | 00A2h | Control power supply count |
| 102          | 0066h | Feedback position       | 163          | 00A3h | Inverter voltage           |
| 103          | 0067h | Feedback speed (r/min)  | 164          | 00A4h | Main power supply voltage  |
| 104          | 0068h | Feedback speed (Hz)     | 169          | 00A9h | Elapsed time from BOOT     |
| 106          | 006Ah | Direct I/O              | 184          | 00B8h | I/O status 1               |
| 107          | 006Bh | Torque monitor          | 185          | 00B9h | I/O status 2               |
| 109          | 006Dh | Cumulative load monitor | 186          | 00BAh | I/O status 3               |
| 124          | 007Ch | Driver temperature      | 187          | 00BBh | I/O status 4               |
| 125          | 007Dh | Motor temperature       | 188          | 00BCh | I/O status 5               |
| 126          | 007Eh | Odometer                | 189          | 00BDh | I/O status 6               |
| 127          | 007Fh | Tripmeter               | 190          | 00BEh | I/O status 7               |
| 146          | 0092h | CST operating current   | 191          | 00BFh | I/O status 8               |

## 10-2 USB communication

These items can be set with the **MRC Studio** software only. There is no parameter ID.

| Name          | Description   | Setting range   | Initial value | Update |
|---------------|---|---|---------------|--------|
| USB-ID enable | The COM port can be fixed.  | <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul> | Enable        | D      |
| USB-ID        | Sets the ID to the COM port. This can be set when the "USB-ID enable" parameter is set to "Enable." | 0 to 999,999,999  | 0             | D      |
| USB-PID       | Sets the product ID to be displayed in the COM port.  | 0 to 31   | 0             | D      |

## 10-3 Driver internal communication

| Parameter ID |       | Name  | Description  | Setting range                                      | Initial value | Update |
|--------------|-------|---|--|--|---------------|--------|
| Dec          | Hex   |   |  |  |               |        |
| 4543         | 11BFh | Reconnection setting at communication timeout | Sets how to recover from the timeout if RS-485 communication between the controller and the driver is timed out due to poor connection of the RS-485 communication cable or a power shutoff of the driver. | 0: Automatic return<br>1: Return by INFO-CLR input | 0             | A      |



# 11 Parameters: Robot setting

## 11-1 End effector / Tool offsets

| Parameter ID |       | Name  | Description   | Setting range  | Initial value | Update |
|--------------|-------|---|---|--|---------------|--------|
| Dec          | Hex   |   |   |  |               |        |
| 601          | 0259h | Tool offset 1 Tx [mm]                             | Sets the offset value of the Tx direction of the tool offset 1.   | 0 to 100,000<br>(1=0.01 mm)                          | 0             | C      |
| 602          | 025Ah | Tool offset 1 Ty [mm]                             | Sets the offset value of the Ty direction of the tool offset 1.   | 0 to 100,000<br>(1=0.01 mm)                          | 0             | C      |
| 603          | 025Bh | Tool offset 1 Tz [mm]                             | Sets the offset value of the Tz direction of the tool offset 1.   | 0 to 100,000<br>(1=0.01 mm)                          | 0             | C      |
| 624          | 0270h | (For cartesian robots only)<br>Tool offset action | Sets whether to enable or disable the tool offsets when using a Cartesian robot.  | 0: Disable<br>1: Enable                              | 1             | C      |
| 2819         | 0B03h | Number of end-effector axes                       | Sets the number of end effectors used.  | 0 to 2   | 0             | C      |
| 2820         | 0B04h | End-effector 1 type                               | Sets the mechanism of the end effector 1.   | 2: Linear motion / gripper [mm]<br>3: Rotation [deg] | 2             | C      |
| 2821         | 0B05h | End-effector 2 type                               | Sets the mechanism of the end effector 2.   | 2: Linear motion / gripper [mm]<br>3: Rotation [deg] | 2             | C      |
| 2822         | 0B06h | End-effector 1 Lead [mm]                          | Sets the lead of the end effector 1. This is enabled when the "End-effector 1 type" parameter is set to "2: Linear-motion / gripper."   | 1 to 2,147,483,647<br>(1=0.001 mm)                   | 1,000         | C      |
| 2823         | 0B07h | End-effector 2 Lead [mm]                          | Sets the lead of the end effector 2. This is enabled when the "End-effector 2 type" parameter is set to "2: Linear-motion / gripper."   | 1 to 2,147,483,647<br>(1=0.001 mm)                   | 1,000         | C      |
| 2824         | 0B08h | End-effector 1 Stroke [mm]                        | Sets the stroke of the end effector 1. This is enabled when the "End-effector 1 type" parameter is set to "2: Linear-motion / gripper." | 1 to 2,147,483,647<br>(1=0.001 mm)                   | 1,000         | C      |
| 2825         | 0B09h | End-effector 2 Stroke [mm]                        | Sets the stroke of the end effector 2. This is enabled when the "End-effector 2 type" parameter is set to "2: Linear-motion / gripper." | 1 to 2,147,483,647<br>(1=0.001 mm)                   | 1,000         | C      |
| 2828         | 0B0Ch | End-effector 1 Gear ratio                         | Sets the gear ratio of the end effector 1. This is enabled when the "End-effector 1 type" parameter is set to "3: Rotation."            | 1 to 32,767 (1=0.01)                                 | 100           | C      |
| 2829         | 0B0Dh | End-effector 2 Gear ratio                         | Sets the gear ratio of the end effector 2. This is enabled when the "End-effector 2 type" parameter is set to "3: Rotation."            | 1 to 32,767 (1=0.01)                                 | 100           | C      |
| 2830         | 0B0Eh | End-effector 1 Motor rotation direction           | Sets the rotation direction of the end effector 1.  | -1: Invert<br>1: Not invert                          | 1             | C      |
| 2831         | 0B0Fh | End-effector 2 Motor rotation direction           | Sets the rotation direction of the end effector 2.  | -1: Invert<br>1: Not invert                          | 1             | C      |



| Parameter ID |       | Name  | Description   | Setting range                          | Initial value | Update |
|--------------|-------|---|---|--|---------------|--------|
| Dec          | Hex   |   |   |  |               |        |
| 4294         | 10C6h | Tool offset2 Tx [mm]                          | Sets the offset value of the Tx direction of the tool offset 2. | 0 to 100,000<br>(1=0.01 mm)            | 0             | C      |
| 4295         | 10C7h | Tool offset2 Ty [mm]                          | Sets the offset value of the Ty direction of the tool offset 2. | 0 to 100,000<br>(1=0.01 mm)            | 0             | C      |
| 4296         | 10C8h | Tool offset2 Tz [mm]                          | Sets the offset value of the Tz direction of the tool offset 2. | 0 to 100,000<br>(1=0.01 mm)            | 0             | C      |
| 4556         | 11CCh | Tool offset selection when power is turned on | Sets the tool offsets used when the power is turned on.         | 0: Tool offsets 1<br>1: Tool offsets 2 | 0             | C      |







# 6 I/O signals

---

This part explains input signals and output signals.

## ◆Table of contents

|          |   |            |
|----------|---|------------|
| <b>1</b> | <b>Overview of I/O signals .....</b>                          | <b>194</b> |
| 1-1      | Overview of input signals.....                                | 194        |
| 1-2      | Overview of output signals.....                               | 195        |
| 1-3      | Setting contents of input signals and<br>output signals ..... | 196        |
| <b>2</b> | <b>Signals list .....</b>                                     | <b>201</b> |
| 2-1      | Input signals list .....                                      | 201        |
| 2-2      | Output signals list.....                                      | 205        |
| <b>3</b> | <b>Signal type .....</b>                                      | <b>213</b> |
| 3-1      | Direct I/O.....   | 213        |
| 3-2      | Remote I/O .....  | 214        |
| <b>4</b> | <b>Input signals .....</b>                                    | <b>215</b> |
| 4-1      | Operation control.....  | 215        |
| 4-2      | Coordinates management .....                                  | 220        |
| 4-3      | Controller management.....                                    | 220        |
| <b>5</b> | <b>Output signals.....</b>                                    | <b>221</b> |
| 5-1      | Controller management.....                                    | 221        |
| 5-2      | Management of operation.....                                  | 222        |
| 5-3      | Response outputs.....   | 226        |
| <b>6</b> | <b>Control by direct I/O .....</b>                            | <b>228</b> |
| <b>7</b> | <b>Timing chart .....</b>                                     | <b>232</b> |



# 1 Overview of I/O signals

## 1-1 Overview of input signals

### ■ Direct input

Direct input (DIN) is a method that the I/O signal cable is connected to the CN4 connector to directly input signals. If the composite input function is used, a single input can turn two signals ON simultaneously, achieving saving of wiring.

| Parameter name           | Description  |
|--------------------------|--|
| Input function           | Selects an input signal to be assigned to DIN.   |
| Inverting mode           | The ON-OFF status of the signal can be changed.  |
| ON signal dead-time      | The input signal is turned ON when the time having set is exceeded. This can be used for taking measures to eliminate noise or for adjusting the timing between devices. |
| 1-shot signal            | The input signal having been turned ON is <u>automatically turned OFF</u> after 250 $\mu$ s.   |
| Composite input function | When DIN is turned ON, <u>the signal selected here is also turned ON</u> .   |

Setting example of MRC Studio software:

If operation of the program No. 1 is performed when the START input is turned ON

It can be executed if "START" is assigned to the input function and "M0" is assigned to the composite input function.

| Direct-IN (DIN) |                |                |                          |               |                          |
|-----------------|----------------|----------------|--------------------------|---------------|--------------------------|
|                 | Input function | Inverting mode | ON signal dead-time [ms] | 1 shot signal | Composite input function |
| DIN0            | START          | Not invert     | 0                        | Disable       | M0                       |

### ■ Virtual input

Virtual input (VIR-IN) is a method in which a signal set in virtual input is input by using output of a signal set in the virtual input source.

Since it is an input method using internal I/O, it does not require wiring and can be used with direct I/O. Up to four virtual inputs can be set.

| Parameter name                    | Description  |
|-----------------------------------|--|
| Virtual input function            | Selects the signal to be assigned to VIR-IN. When a signal of the virtual input source is output, VIR-IN is also turned ON.                                |
| Virtual input source selection    | Selects the output signal to be a trigger of VIR-IN.   |
| Virtual input inverting mode      | ON/OFF of the input signal can be changed.   |
| Virtual input ON signal dead time | When the set time is exceeded, the input signal is turned ON. You can use this value for prevention of noise and adjustment of the timing between devices. |
| Virtual input 1 shot signal mode  | The input signal that has been turned ON is <u>automatically turned OFF</u> after 250 $\mu$ s.   |

Setting example of MRC Studio software:

When the TLC output is turned ON, stop the robot operation by turning the STOP input ON

|   |   |            |
|---|---|------------|
| 1 | Virtual input (VIR-IN0) function                | STOP       |
| 2 | Virtual input (VIR-IN0) source selection        | TLC        |
| 3 | Virtual input (VIR-IN0) inverting mode          | Not invert |
| 4 | Virtual input (VIR-IN0) ON signal dead time[ms] | 0          |
| 5 | Virtual input (VIR-IN0) 1 shot signal mode      | Disable    |



## 1-2 Overview of output signals

### ■ Direct output

Direct output (DOUT) is a method that the I/O signal cable is connected to the CN4 connector to directly output signals.

If the composite output function is used, the logical combination result of two output signals can be output in a single signal.

| Parameter name                | Description  |
|-------------------------------|--|
| (Normal) Output function      | Selects an output signal to be assigned to DOUT.   |
| Inverting mode                | The ON-OFF status of the signal can be changed.  |
| OFF delay time                | The output signal is turned OFF when the time having set is exceeded. This can be used for taking measures to eliminate noise or for adjusting the timing between devices. |
| Composite logical combination | Sets the logical combination [AND (logical product) or OR (logical sum)] of the composite output function.   |
| Composite output function     | Selects an output signal for logical operation with the signal of DOUT. When logical combination of the two signals has been established, DOUT is turned ON.               |
| Composite inverting mode      | Changes the ON-OFF status of the signal selected in the composite output function.   |

#### Setting example of MRC Studio software:

If the AREA0 output (DOUT0) is turned ON when the TLC output is turned ON within the range of AREA0

If "AREA0" is set to the "(Normal) Output function," "AND" is set to the "Composite logical combination," and "TLC" is set to the "Composite output function," you can check that the TLC output has been turned ON within the AREA0 by a single signal (DOUT0).

| Direct-OUT (DOUT) |                          |                |                     |                               |                           |                          |
|-------------------|--------------------------|----------------|---------------------|-------------------------------|---------------------------|--------------------------|
|                   | (Normal) Output function | Inverting mode | OFF delay time [ms] | Composite logical combination | Composite output function | Composite inverting mode |
| DOUT0             | AREA0                    | Not invert     | 0                   | AND                           | TLC                       | Not invert               |

### ■ User output

User output (USR-OUT) is a method in which a signal is output by using the internal I/O.

Two types of signals (A and B) are assigned to one user output. When logical combination of A and B has been established, USR-OUT is output.

This method does not require wiring and can be used with direct I/O. Up to two user outputs can be set.

| Parameter name                      | Description  |
|-------------------------------------|--|
| User output source A function       | Selects output function A.   |
| User output source A inverting mode | Changes ON/OFF of output function A.   |
| User output source B function       | Selects output function B.   |
| User output source B inverting mode | Changes ON/OFF of output function B.   |
| User output logical operation       | Sets the logical combination [AND (logical product) or OR (logical sum)] of output function sources A and B. |

#### Setting example of MRC Studio software:

When the CMD-END output and the READY output have been turned ON, USR-OUT is output

|    |  |            |
|----|--|------------|
| 21 | User output (USR-OUT0) source A function       | CMD-END    |
| 22 | User output (USR-OUT0) source A inverting mode | Not invert |
| 23 | User output (USR-OUT0) source B function       | READY      |
| 24 | User output (USR-OUT0) source B inverting mode | Not invert |
| 25 | User output (USR-OUT0) logical operation       | AND        |



## 1-3 Setting contents of input signals and output signals

### ■ Direct input

#### ● Input function


| MRC Studio<br>Parameter group | Name                | Description  | Initial value |
|-------------------------------|---------------------|--|---------------|
| Direct-IN (DIN)               | DIN0 input function | Selects the input signals to be assigned to DIN0 to DIN7.<br>[Setting range]<br>Input signals list ⇨ p.201 | STOP          |
|                               | DIN1 input function |  | FREE-RB       |
|                               | DIN2 input function |  | ETO-CLR-DRV   |
|                               | DIN3 input function |  | ALM-RST       |
|                               | DIN4 input function |  | PAUSE         |
|                               | DIN5 input function |  | Not used      |
|                               | DIN6 input function |  | PRG-DIN0      |
|                               | DIN7 input function |  | PRG-DIN1      |

#### ● Change of ON-OFF setting of input signals

| MRC Studio<br>Parameter group | Name           | Description   | Initial value |
|-------------------------------|----------------|---|---------------|
| Direct-IN (DIN)               | Inverting mode | Changes the ON-OFF status of DIN0 to DIN7.<br>[Setting range]<br>• Not invert<br>• Invert | Not invert    |

#### ● ON signal dead-time

| MRC Studio<br>Parameter group | Name                | Description  | Initial value |
|-------------------------------|---------------------|--|---------------|
| Direct-IN (DIN)               | ON signal dead-time | Sets the ON signal dead-time for DIN0 to DIN7.<br>[Setting range]<br>0 to 250 ms | 0             |

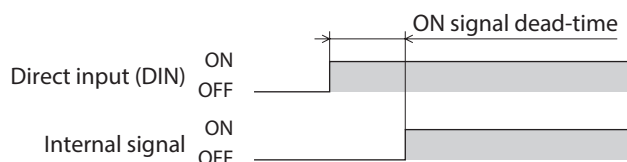

#### ● 1-shot signal

| MRC Studio<br>Parameter group | Name          | Description  | Initial value |
|-------------------------------|---------------|--|---------------|
| Direct-IN (DIN)               | 1-shot signal | The signal having input to DIN0 to DIN7 is automatically turned OFF (or ON) 250 $\mu$ s after input.<br>[Setting range]<br>• Disable<br>• Enable | Disable       |

**Note** The HMI input is a signal that is recommended to use as normally closed (always ON). When the HMI input is assigned to DIN, do not set "1-shot signal" to "Enable."



### ● Composite input function

| MRC Studio<br>Parameter group | Name                     | Description  | Initial value |
|-------------------------------|--------------------------|--|---------------|
| Direct-IN (DIN)               | Composite input function | Selects the input signals to be assigned to DIN0 to DIN7 as the composite input function.<br>[Setting range]<br>Input signals list ⇨ p.201 | Not used      |

## ■ Virtual input

### ● Virtual input function

| MRC Studio<br>Parameter group         | Name                   | Description  | Initial value |
|---------------------------------------|------------------------|--|---------------|
| VIR-IN & USR-OUT<br>function (Extend) | Virtual input function | Selects the input signals to be assigned to VIR-IN0 to VIR-IN3.<br>[Setting range]<br>Input signals list ⇨ p.201 | Not used      |

### ● Virtual input source selection

| MRC Studio<br>Parameter group         | Name                           | Description   | Initial value |
|---------------------------------------|--------------------------------|---|---------------|
| VIR-IN & USR-OUT<br>function (Extend) | Virtual input source selection | Selects the output signals to be trigger of VIR-IN0 to VIR-IN3.<br>[Setting range]<br>Output signals list ⇨ p.205 | CONST-OFF     |

### ● Virtual input inverting mode

| MRC Studio<br>Parameter group         | Name                         | Description  | Initial value |
|---------------------------------------|------------------------------|--|---------------|
| VIR-IN & USR-OUT<br>function (Extend) | Virtual input inverting mode | Changes ON/OFF setting of VIR-IN0 to VIR-IN3.<br>[Setting range]<br><ul style="list-style-type: none"> <li>• Not invert</li> <li>• Invert</li> </ul> | Not invert    |

### ● Virtual input ON signal dead time

| MRC Studio<br>Parameter group         | Name                              | Description   | Initial value |
|---------------------------------------|-----------------------------------|---|---------------|
| VIR-IN & USR-OUT<br>function (Extend) | Virtual input ON signal dead time | Sets the ON signal dead time of VIR-IN0 to VIR-IN3.<br>[Setting range]<br>0 to 250 ms | 0             |

### ● Virtual input 1 shot signal mode

| MRC Studio<br>Parameter group         | Name                             | Description   | Initial value |
|---------------------------------------|----------------------------------|---|---------------|
| VIR-IN & USR-OUT<br>function (Extend) | Virtual input 1 shot signal mode | Enables the 1 shot signal function of VIR-IN0 to VIR-IN3.<br>[Setting range]<br><ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul> | Disable       |



## ■ Direct output

### ● (Normal) Output function


| MRC Studio<br>Parameter group | Name                           | Description  | Initial value |
|-------------------------------|--------------------------------|--|---------------|
| Direct-OUT (DOUT)             | DOUT0 (Normal) Output function | Selects the output signals to be assigned to DOUT0 to DOUT7.<br>[Setting range]<br>Output signals list ⇨ p.205 | READY         |
|                               | DOUT1 (Normal) Output function |  | MOVE          |
|                               | DOUT2 (Normal) Output function |  | ETO-MON-DRV   |
|                               | DOUT3 (Normal) Output function |  | ALM-B         |
|                               | DOUT4 (Normal) Output function |  | PAUSE-BSY     |
|                               | DOUT5 (Normal) Output function |  | PRG-RUN       |
|                               | DOUT6 (Normal) Output function |  | PRG-DOUT0     |
|                               | DOUT7 (Normal) Output function |  | PRG-DOUT1     |

### ● Inverting mode

| MRC Studio<br>Parameter group | Name           | Description   | Initial value |
|-------------------------------|----------------|---|---------------|
| Direct-OUT (DOUT)             | Inverting mode | Changes the ON-OFF status of DOUT0 to DOUT7.<br>[Setting range]<br>● Not invert<br>● Invert | Not invert    |

### ● OFF delay time

| MRC Studio<br>Parameter group | Name           | Description   | Initial value |
|-------------------------------|----------------|---|---------------|
| Direct-OUT (DOUT)             | OFF delay time | Sets the OFF delay time for DOUT0 to DOUT7.<br>[Setting range]<br>0 to 250 ms | 0             |

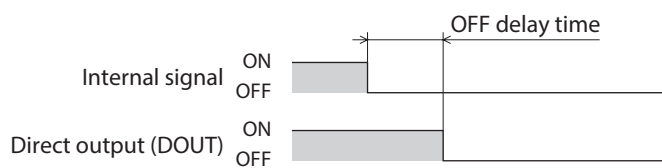

### ● Composite logical combination

| MRC Studio<br>Parameter group | Name                          | Description   | Initial value |
|-------------------------------|-------------------------------|---|---------------|
| Direct-OUT (DOUT)             | Composite logical combination | Sets the composite logical combination of DOUT0 to DOUT7.<br>[Setting range]<br>● AND<br>● OR | OR            |



### ● Composite output function

| MRC Studio<br>Parameter group | Name                      | Description   | Initial value |
|-------------------------------|---------------------------|---|---------------|
| Direct-OUT (DOUT)             | Composite output function | Selects the output signals for logical operation with the signals of DOUT0 to DOUT7.<br><b>[Setting range]</b><br>Output signals list ➡ p.205 | CONST-OFF     |

### ● Composite inverting mode

| MRC Studio<br>Parameter group | Name                     | Description   | Initial value |
|-------------------------------|--------------------------|---|---------------|
| Direct-OUT (DOUT)             | Composite inverting mode | Changes the ON-OFF status of the composite output function.<br><b>[Setting range]</b><br><ul style="list-style-type: none"> <li>• Not invert</li> <li>• Invert</li> </ul> | Not invert    |

## ■ User output

### ● User output source A function

| MRC Studio<br>Parameter group     | Name                          | Description   | Initial value |
|-----------------------------------|-------------------------------|---|---------------|
| VIR-IN & USR-OUT function(Extend) | User output source A function | Sets output source A of USR-OUT0 and USR-OUT1.<br><b>[Setting range]</b><br>Output signals list ➡ p.205 | CONST-OFF     |

### ● User output source A inverting mode

| MRC Studio<br>Parameter group     | Name                                | Description   | Initial value |
|-----------------------------------|-------------------------------------|---|---------------|
| VIR-IN & USR-OUT function(Extend) | User output source A inverting mode | Changes ON/OFF of user output source A.<br><b>[Setting range]</b><br><ul style="list-style-type: none"> <li>• Not invert</li> <li>• Invert</li> </ul> | Not invert    |

### ● User output source B function

| MRC Studio<br>Parameter group     | Name                          | Description   | Initial value |
|-----------------------------------|-------------------------------|---|---------------|
| VIR-IN & USR-OUT function(Extend) | User output source B function | Sets output source B of USR-OUT0 and USR-OUT1.<br><b>[Setting range]</b><br>Output signals list ➡ p.205 | CONST-OFF     |

### ● User output source B inverting mode

| MRC Studio<br>Parameter group     | Name                                | Description   | Initial value |
|-----------------------------------|-------------------------------------|---|---------------|
| VIR-IN & USR-OUT function(Extend) | User output source B inverting mode | Changes ON/OFF of user output source B.<br><b>[Setting range]</b><br><ul style="list-style-type: none"> <li>• Not invert</li> <li>• Invert</li> </ul> | Not invert    |



## ● User output logical operation

| MRC Studio<br>Parameter group        | Name                             | Description  | Initial value |
|--------------------------------------|----------------------------------|--|---------------|
| VIR-IN & USR-OUT<br>function(Extend) | User output logical<br>operation | Sets the logical combination of user output sources A<br>and B.<br><b>[Setting range]</b> <ul style="list-style-type: none"><li>• AND</li><li>• OR</li></ul> | OR            |



## 2 Signals list

### 2-1 Input signals list

Use "Signal name" when assigning signals using the **MRC Studio** software.

To assign signals via EtherNet/IP, use "Assignment number."

Refer to "4 Input signals" on p.215 for details about each signal.

| Assignment number | Signal name  | Functions   |
|-------------------|--------------|---|
| 0                 | Not used     | Set when the input terminal is not used.  |
| 1                 | FREE         | These are used to shut off the motor current to put the motor into a non-excitation state.<br>In the case of an electromagnetic brake motor, the electromagnetic brake is released. |
| 2                 | FREE-RB      |   |
| 3                 | FREE-E1      |   |
| 4                 | FREE-E2      |   |
| 16                | STOP         | This is used to stop the operation.   |
| 17                | PAUSE        | This is used to stop the operation temporarily.   |
| 19                | E-STOP       | This is used to stop the command and the operation program that are being executed. (Normally closed)   |
| 20                | ALM-RST      | These are used to reset the alarm generated presently.  |
| 21                | ALM-RST-CNT  |   |
| 22                | ALM-RST-DRV  |   |
| 25                | ETO-CLR-DRV  | This is used to turn the ETO-CLR input ON for all drivers except <b>AZD-KR2D</b> .  |
| 27                | INFO-CLR     | These are used to clear the information status.   |
| 28                | INFO-CLR-CNT |   |
| 29                | INFO-CLR-DRV |   |
| 30                | HMI          | This is used to release a state of limiting the functions of the <b>MRC Studio</b> software.  |
| 32                | CRNT-LMT1    | These are used to limit the current.  |
| 33                | CRNT-LMT2    |   |
| 34                | CRNT-LMT3    |   |
| 35                | SPD-LMT1     | These are used to limit the speed.  |
| 36                | SPD-LMT2     |   |
| 37                | SPD-LMT3     |   |
| 53                | P-PRESET-RB  | This is used to rewrite the origin of the user coordinate system to the present TCP.  |
| 62                | PRG-DOUT-CLR | This is used to turn the output status OFF for all of PRG-DOUT1 to PRG-DOUT15.  |
| 63                | PRG-ROUT-CLR | This is used to turn the output status OFF for all of PRG-ROUT1 to PRG-ROUT31.  |
| 64                | M0           | A program number is selected using these six bits.  |
| 65                | M1           |   |
| 66                | M2           |   |
| 67                | M3           |   |
| 68                | M4           |   |
| 69                | M5           |   |
| 76                | ZHOME-ALL    | These are used to execute high-speed return-to-origin operation.  |
| 77                | ZHOME-RB     |   |
| 78                | ZHOME-E1     |   |
| 79                | ZHOME-E2     |   |



| Assignment number | Signal name | Functions   |
|-------------------|-------------|---|
| 80                | D-SEL0      | These are used to execute the operation of the program number having set.         |
| 81                | D-SEL1      |   |
| 82                | D-SEL2      |   |
| 83                | D-SEL3      |   |
| 84                | D-SEL4      |   |
| 85                | D-SEL5      |   |
| 86                | D-SEL6      |   |
| 87                | D-SEL7      |   |
| 88                | START       | This is used to execute program operation.  |
| 89                | SSTART      | This is used to execute program operation by one command only.                    |
| 90                | JOG-TX+     | These are used to execute JOG operation in the tool coordinate system.            |
| 91                | JOG-TX–     |   |
| 92                | JOG-TY+     |   |
| 93                | JOG-TY–     |   |
| 94                | JOG-TZ+     |   |
| 95                | JOG-TZ–     |   |
| 96                | JOG-X+      | These are used to execute JOG operation of X, Y, and Z.                           |
| 97                | JOG-X–      |   |
| 98                | JOG-Y+      |   |
| 99                | JOG-Y–      |   |
| 100               | JOG-Z+      |   |
| 101               | JOG-Z–      |   |
| 102               | JOG-RX+     | These are used to execute JOG operation of Rx, Ry, and Rz.                        |
| 103               | JOG-RX–     |   |
| 104               | JOG-RY+     |   |
| 105               | JOG-RY–     |   |
| 106               | JOG-RZ+     |   |
| 107               | JOG-RZ–     |   |
| 108               | JOG-E1+     | These are used to execute JOG operation of the end effector 1 and end effector 2. |
| 109               | JOG-E1–     |   |
| 110               | JOG-E2+     |   |
| 111               | JOG-E2–     |   |
| 112               | JOG-A1+     | These are used to execute JOG operation for each axis.                            |
| 113               | JOG-A1–     |   |
| 114               | JOG-A2+     |   |
| 115               | JOG-A2–     |   |
| 116               | JOG-A3+     |   |
| 117               | JOG-A3–     |   |
| 118               | JOG-A4+     |   |
| 119               | JOG-A4–     |   |
| 120               | JOG-A5+     |   |
| 121               | JOG-A5–     |   |
| 122               | JOG-A6+     |   |
| 123               | JOG-A6–     |   |
| 124               | JOG-A7+     |   |
| 125               | JOG-A7–     |   |



| Assignment number | Signal name | Functions  |
|-------------------|-------------|--|
| 126               | JOG-A8+     | These are used to execute JOG operation for each axis.   |
| 127               | JOG-A8–     |  |
| 128               | JOG-P-X+    | These are used to execute inching operation of X, Y, and Z.  |
| 129               | JOG-P-X–    |  |
| 130               | JOG-P-Y+    |  |
| 131               | JOG-P-Y–    |  |
| 132               | JOG-P-Z+    |  |
| 133               | JOG-P-Z–    |  |
| 134               | JOG-P-RX+   | These are used to execute inching operation of Rx, Ry, and Rz.   |
| 135               | JOG-P-RX–   |  |
| 136               | JOG-P-RY+   |  |
| 137               | JOG-P-RY–   |  |
| 138               | JOG-P-RZ+   |  |
| 139               | JOG-P-RZ–   |  |
| 140               | JOG-P-E1+   | These are used to execute inching operation of the end effector 1 and end effector 2.  |
| 141               | JOG-P-E1–   |  |
| 142               | JOG-P-E2+   |  |
| 143               | JOG-P-E2–   |  |
| 144               | JOG-P-A1+   | These are used to execute inching operation for each axis.   |
| 145               | JOG-P-A1–   |  |
| 146               | JOG-P-A2+   |  |
| 147               | JOG-P-A2–   |  |
| 148               | JOG-P-A3+   |  |
| 149               | JOG-P-A3–   |  |
| 150               | JOG-P-A4+   |  |
| 151               | JOG-P-A4–   |  |
| 152               | JOG-P-A5+   |  |
| 153               | JOG-P-A5–   |  |
| 154               | JOG-P-A6+   |  |
| 155               | JOG-P-A6–   |  |
| 156               | JOG-P-A7+   |  |
| 157               | JOG-P-A7–   |  |
| 158               | JOG-P-A8+   |  |
| 159               | JOG-P-A8–   |  |
| 160               | PRG-DIN0    | These are general-purpose input signals exclusively for direct input that can be set to “Wait (signal)” of the control command of program operation. |
| 161               | PRG-DIN1    |  |
| 162               | PRG-DIN2    |  |
| 163               | PRG-DIN3    |  |
| 164               | PRG-DIN4    |  |
| 165               | PRG-DIN5    |  |
| 166               | PRG-DIN6    |  |
| 167               | PRG-DIN7    |  |
| 168               | PRG-DIN8    |  |
| 169               | PRG-DIN9    |  |
| 170               | PRG-DIN10   |  |
| 171               | PRG-DIN11   |  |
| 172               | PRG-DIN12   |  |



| Assignment number | Signal name | Functions   |
|-------------------|-------------|---|
| 173               | PRG-DIN13   | These are general-purpose input signals exclusively for direct input that can be set to "Wait (signal)" of the control command of program operation.  |
| 174               | PRG-DIN14   |   |
| 175               | PRG-DIN15   |   |
| 176               | PLT1-CLR    | These are used to clear the counter of the pallet.  |
| 177               | PLT2-CLR    |   |
| 178               | PLT3-CLR    |   |
| 179               | PLT4-CLR    |   |
| 180               | PLT5-CLR    |   |
| 181               | PLT6-CLR    |   |
| 192               | PRG-RIN0    | These are general-purpose input signals exclusively for remote input that can be set to "Wait (signal)" of the control command for program operation. |
| 193               | PRG-RIN1    |   |
| 194               | PRG-RIN2    |   |
| 195               | PRG-RIN3    |   |
| 196               | PRG-RIN4    |   |
| 197               | PRG-RIN5    |   |
| 198               | PRG-RIN6    |   |
| 199               | PRG-RIN7    |   |
| 200               | PRG-RIN8    |   |
| 201               | PRG-RIN9    |   |
| 202               | PRG-RIN10   |   |
| 203               | PRG-RIN11   |   |
| 204               | PRG-RIN12   |   |
| 205               | PRG-RIN13   |   |
| 206               | PRG-RIN14   |   |
| 207               | PRG-RIN15   |   |
| 208               | PRG-RIN16   |   |
| 209               | PRG-RIN17   |   |
| 210               | PRG-RIN18   |   |
| 211               | PRG-RIN19   |   |
| 212               | PRG-RIN20   |   |
| 213               | PRG-RIN21   |   |
| 214               | PRG-RIN22   |   |
| 215               | PRG-RIN23   |   |
| 216               | PRG-RIN24   |   |
| 217               | PRG-RIN25   |   |
| 218               | PRG-RIN26   |   |
| 219               | PRG-RIN27   |   |
| 220               | PRG-RIN28   |   |
| 221               | PRG-RIN29   |   |
| 222               | PRG-RIN30   |   |
| 223               | PRG-RIN31   |   |
| 224               | R0          | These are general signals.  |
| 225               | R1          |   |
| 226               | R2          |   |
| 227               | R3          |   |
| 228               | R4          |   |
| 229               | R5          |   |



| Assignment number | Signal name | Functions                  |
|-------------------|-------------|----------------------------|
| 230               | R6          | These are general signals. |
| 231               | R7          |                            |
| 232               | R8          |                            |
| 233               | R9          |                            |
| 234               | R10         |                            |
| 235               | R11         |                            |
| 236               | R12         |                            |
| 237               | R13         |                            |
| 238               | R14         |                            |
| 239               | R15         |                            |

## 2-2 Output signals list

Use "Signal name" when assigning signals using the **MRC Studio** software.

To assign signals via EtherNet/IP, use "Assignment number."

Refer to "5 Output signals" on p.221 for details about each signal.

| Assignment number | Signal name    | Functions                                 |
|-------------------|----------------|---|
| 0                 | Not used       | Set when the output terminal is not used. |
| 1                 | FREE_R         | Output in response to an input signal.    |
| 2                 | FREE-RB_R      |   |
| 3                 | FREE-E1_R      |   |
| 4                 | FREE-E2_R      |   |
| 16                | STOP_R         |   |
| 17                | PAUSE_R        |   |
| 19                | E-STOP_R       |   |
| 20                | ALM-RST_R      |   |
| 21                | ALM-RST-CNT_R  |   |
| 22                | ALM-RST-DRV_R  |   |
| 25                | ETO-CLR-DRV_R  |   |
| 27                | INFO-CLR_R     |   |
| 28                | INFO-CLR-CNT_R |   |
| 29                | INFO-CLR-DRV_R |   |
| 30                | HMI_R          |   |
| 32                | CRNT-LMT1_R    |   |
| 33                | CRNT-LMT2_R    |   |
| 34                | CRNT-LMT3_R    |   |
| 35                | SPD-LMT1_R     |   |
| 36                | SPD-LMT2_R     |   |
| 37                | SPD-LMT3_R     |   |
| 53                | P-PRESET-RB_R  |   |
| 62                | PRG-DOUT-CLR_R |   |
| 63                | PRG-ROUT-CLR_R |   |
| 64                | M0_R           |   |
| 65                | M1_R           |   |
| 66                | M2_R           |   |
| 67                | M3_R           |   |
| 68                | M4_R           |   |



| Assignment number | Signal name | Functions                              |
|-------------------|-------------|--|
| 69                | M5_R        | Output in response to an input signal. |
| 76                | ZHOME-ALL_R |  |
| 77                | ZHOME-RB_R  |  |
| 78                | ZHOME-E1_R  |  |
| 79                | ZHOME-E2_R  |  |
| 80                | D-SEL0_R    |  |
| 81                | D-SEL1_R    |  |
| 82                | D-SEL2_R    |  |
| 83                | D-SEL3_R    |  |
| 84                | D-SEL4_R    |  |
| 85                | D-SEL5_R    |  |
| 86                | D-SEL6_R    |  |
| 87                | D-SEL7_R    |  |
| 88                | START_R     |  |
| 89                | SSTART_R    |  |
| 90                | JOG-TX+_R   |  |
| 91                | JOG-TX-_R   |  |
| 92                | JOG-TY+_R   |  |
| 93                | JOG-TY-_R   |  |
| 94                | JOG-TZ+_R   |  |
| 95                | JOG-TZ-_R   |  |
| 96                | JOG-X+_R    |  |
| 97                | JOG-X-_R    |  |
| 98                | JOG-Y+_R    |  |
| 99                | JOG-Y-_R    |  |
| 100               | JOG-Z+_R    |  |
| 101               | JOG-Z-_R    |  |
| 102               | JOG-RX+_R   |  |
| 103               | JOG-RX-_R   |  |
| 104               | JOG-RY+_R   |  |
| 105               | JOG-RY-_R   |  |
| 106               | JOG-RZ+_R   |  |
| 107               | JOG-RZ-_R   |  |
| 108               | JOG-E1+_R   |  |
| 109               | JOG-E1-_R   |  |
| 110               | JOG-E2+_R   |  |
| 111               | JOG-E2-_R   |  |
| 112               | JOG-A1+_R   |  |
| 113               | JOG-A1-_R   |  |
| 114               | JOG-A2+_R   |  |
| 115               | JOG-A2-_R   |  |
| 116               | JOG-A3+_R   |  |
| 117               | JOG-A3-_R   |  |
| 118               | JOG-A4+_R   |  |
| 119               | JOG-A4-_R   |  |
| 120               | JOG-A5+_R   |  |
| 121               | JOG-A5-_R   |  |



| Assignment number | Signal name | Functions                              |
|-------------------|-------------|--|
| 122               | JOG-A6+_R   | Output in response to an input signal. |
| 123               | JOG-A6-_R   |  |
| 124               | JOG-A7+_R   |  |
| 125               | JOG-A7-_R   |  |
| 126               | JOG-A8+_R   |  |
| 127               | JOG-A8-_R   |  |
| 128               | JOG-P-X+_R  |  |
| 129               | JOG-P-X-_R  |  |
| 130               | JOG-P-Y+_R  |  |
| 131               | JOG-P-Y-_R  |  |
| 132               | JOG-P-Z+_R  |  |
| 133               | JOG-P-Z-_R  |  |
| 134               | JOG-P-RX+_R |  |
| 135               | JOG-P-RX-_R |  |
| 136               | JOG-P-RY+_R |  |
| 137               | JOG-P-RY-_R |  |
| 138               | JOG-P-RZ+_R |  |
| 139               | JOG-P-RZ-_R |  |
| 140               | JOG-P-E1+_R |  |
| 141               | JOG-P-E1-_R |  |
| 142               | JOG-P-E2+_R |  |
| 143               | JOG-P-E2-_R |  |
| 144               | JOG-P-A1+_R |  |
| 145               | JOG-P-A1-_R |  |
| 146               | JOG-P-A2+_R |  |
| 147               | JOG-P-A2-_R |  |
| 148               | JOG-P-A3+_R |  |
| 149               | JOG-P-A3-_R |  |
| 150               | JOG-P-A4+_R |  |
| 151               | JOG-P-A4-_R |  |
| 152               | JOG-P-A5+_R |  |
| 153               | JOG-P-A5-_R |  |
| 154               | JOG-P-A6+_R |  |
| 155               | JOG-P-A6-_R |  |
| 156               | JOG-P-A7+_R |  |
| 157               | JOG-P-A7-_R |  |
| 158               | JOG-P-A8+_R |  |
| 159               | JOG-P-A8-_R |  |
| 160               | PRG-DIN0_R  |  |
| 161               | PRG-DIN1_R  |  |
| 162               | PRG-DIN2_R  |  |
| 163               | PRG-DIN3_R  |  |
| 164               | PRG-DIN4_R  |  |
| 165               | PRG-DIN5_R  |  |
| 166               | PRG-DIN6_R  |  |
| 167               | PRG-DIN7_R  |  |
| 168               | PRG-DIN8_R  |  |



| Assignment number | Signal name | Functions                              |
|-------------------|-------------|--|
| 169               | PRG-DIN9_R  | Output in response to an input signal. |
| 170               | PRG-DIN10_R |  |
| 171               | PRG-DIN11_R |  |
| 172               | PRG-DIN12_R |  |
| 173               | PRG-DIN13_R |  |
| 174               | PRG-DIN14_R |  |
| 175               | PRG-DIN15_R |  |
| 176               | PLT1-CLR_R  |  |
| 177               | PLT2-CLR_R  |  |
| 178               | PLT3-CLR_R  |  |
| 179               | PLT4-CLR_R  |  |
| 180               | PLT5-CLR_R  |  |
| 181               | PLT6-CLR_R  |  |
| 192               | PRG-RIN0_R  |  |
| 193               | PRG-RIN1_R  |  |
| 194               | PRG-RIN2_R  |  |
| 195               | PRG-RIN3_R  |  |
| 196               | PRG-RIN4_R  |  |
| 197               | PRG-RIN5_R  |  |
| 198               | PRG-RIN6_R  |  |
| 199               | PRG-RIN7_R  |  |
| 200               | PRG-RIN8_R  |  |
| 201               | PRG-RIN9_R  |  |
| 202               | PRG-RIN10_R |  |
| 203               | PRG-RIN11_R |  |
| 204               | PRG-RIN12_R |  |
| 205               | PRG-RIN13_R |  |
| 206               | PRG-RIN14_R |  |
| 207               | PRG-RIN15_R |  |
| 208               | PRG-RIN16_R |  |
| 209               | PRG-RIN17_R |  |
| 210               | PRG-RIN18_R |  |
| 211               | PRG-RIN19_R |  |
| 212               | PRG-RIN20_R |  |
| 213               | PRG-RIN21_R |  |
| 214               | PRG-RIN22_R |  |
| 215               | PRG-RIN23_R |  |
| 216               | PRG-RIN24_R |  |
| 217               | PRG-RIN25_R |  |
| 218               | PRG-RIN26_R |  |
| 219               | PRG-RIN27_R |  |
| 220               | PRG-RIN28_R |  |
| 221               | PRG-RIN29_R |  |
| 222               | PRG-RIN30_R |  |
| 223               | PRG-RIN31_R |  |
| 224               | RO_R        |  |
| 225               | R1_R        |  |



| Assignment number | Signal name  | Functions   |
|-------------------|--------------|---|
| 226               | R2_R         | Output in response to an input signal.  |
| 227               | R3_R         |   |
| 228               | R4_R         |   |
| 229               | R5_R         |   |
| 230               | R6_R         |   |
| 231               | R7_R         |   |
| 232               | R8_R         |   |
| 233               | R9_R         |   |
| 234               | R10_R        |   |
| 235               | R11_R        |   |
| 236               | R12_R        |   |
| 237               | R13_R        |   |
| 238               | R14_R        |   |
| 239               | R15_R        |   |
| 256               | CONST-OFF    | Output an OFF state all the time.   |
| 257               | ALM-A        | Output the alarm status. (Normally open)  |
| 258               | ALM-A-CNT    |   |
| 259               | ALM-A-DRV    |   |
| 260               | ALM-B        | Output the alarm status. (Normally closed)  |
| 261               | ALM-B-CNT    |   |
| 262               | ALM-B-DRV    |   |
| 263               | SYS-RDY      | Output when the power supply of the controller is turned on.  |
| 264               | READY        | Output when the robot is ready to operate.  |
| 265               | MOVE         | Output while the robot operates.  |
| 266               | PRG-RUN      | Output while program operation is executed.   |
| 267               | WAIT         | Output when a command is in a standby state.  |
| 268               | CMD-END      | Output when program operation or direct data operation is completed.  |
| 270               | CMD-END-CNT  |   |
| 271               | MOVE-CNT     | Output while the robot operates.  |
| 272               | INFO         | Output the Information status.  |
| 273               | INFO-CNT     |   |
| 274               | INFO-DRV     |   |
| 275               | SYS-BSY      | Output when the controller is in an internal processing state.  |
| 277               | ETO-MON-DRV  | Output when the driver is in the power removal status.  |
| 280               | TLC          | Output when the output torque reaches the upper limit value.  |
| 281               | TLC-RB       |   |
| 282               | TLC-E1       |   |
| 283               | TLC-E2       |   |
| 284               | CRNT         | Output when the motor is in an excitation state.  |
| 285               | CRNT-RB      |   |
| 286               | CRNT-E1      |   |
| 287               | CRNT-E2      |   |
| 288               | VA           | Output when the command speed reaches the target speed.   |
| 289               | HOME-END     | Output when high-speed return-to-origin operation is completed or when the origin of the user coordinate system is rewritten to the present TCP by turning the P-PRESET input ON. |
| 290               | ABSPEN       | Output when coordinates have been set.  |
| 293               | PRST-STLD-RB | Output when the origin of the user coordinate system has been set.  |



| Assignment number | Signal name | Functions   |
|-------------------|-------------|---|
| 296               | SLS-X+      | Output when the TCP position limit of X, Y, and Z is reached.                             |
| 297               | SLS-X–      |   |
| 298               | SLS-Y+      |   |
| 299               | SLS-Y–      |   |
| 300               | SLS-Z+      |   |
| 301               | SLS-Z–      |   |
| 312               | SLS-A1+     | Output when the axis position limit of each axis is reached.                              |
| 313               | SLS-A1–     |   |
| 314               | SLS-A2+     |   |
| 315               | SLS-A2–     |   |
| 316               | SLS-A3+     |   |
| 317               | SLS-A3–     |   |
| 318               | SLS-A4+     |   |
| 319               | SLS-A4–     |   |
| 320               | SLS-A5+     |   |
| 321               | SLS-A5–     |   |
| 322               | SLS-A6+     |   |
| 323               | SLS-A6–     |   |
| 324               | SLS-A7+     |   |
| 325               | SLS-A7–     |   |
| 326               | SLS-A8+     |   |
| 327               | SLS-A8–     |   |
| 328               | AREA0       | Output when the command position of the TCP is within the range of the user-defined area. |
| 329               | AREA1       |   |
| 330               | AREA2       |   |
| 331               | AREA3       |   |
| 332               | AREA4       |   |
| 333               | AREA0-AX    | Output when the axis position is within the range set in the parameter.                   |
| 334               | AREA1-AX    |   |
| 335               | AREA2-AX    |   |
| 344               | USR-OUT1    | Output a logical product (AND) or a logical sum (OR) for two types of output signals.     |
| 345               | USR-OUT2    |   |
| 352               | ROBOT-EN    | Output while the setup of the robot is properly completed.                                |
| 353               | HANDSYS-EN  | Output when the robot type corresponds to the handed system selection.                    |
| 354               | SGL-LMT     | Output when the robot is near the singularity.  |
| 355               | PST-ERR     | Output when the posture of the robot is in an abnormal state.                             |
| 356               | SLIP        | Output during the slip mode.  |
| 358               | DCMD-RDY    | Output when linear interpolation operation by direct data operation is ready to start.    |
| 360               | PAUSE-BSY   | Output during a pause state.  |
| 361               | CRNT-LMTD1  | Output while the controller limits the operating current for all motors.                  |
| 362               | CRNT-LMTD2  |   |
| 363               | CRNT-LMTD3  |   |
| 364               | SPD-LMTD1   | Output while the controller limits the operating speed for all motors.                    |
| 365               | SPD-LMTD2   |   |
| 366               | SPD-LMTD3   |   |



| Assignment number | Signal name | Functions  |
|-------------------|-------------|--|
| 368               | D-END0      | Output when the operation of the specified program number is completed.  |
| 369               | D-END1      |  |
| 370               | D-END2      |  |
| 371               | D-END3      |  |
| 372               | D-END4      |  |
| 373               | D-END5      |  |
| 374               | D-END6      |  |
| 375               | D-END7      |  |
| 384               | PRG-DOUT0   | These are general-purpose output signals exclusively for direct output that can be set to "Signal output" of the control command of program operation. |
| 385               | PRG-DOUT1   |  |
| 386               | PRG-DOUT2   |  |
| 387               | PRG-DOUT3   |  |
| 388               | PRG-DOUT4   |  |
| 389               | PRG-DOUT5   |  |
| 390               | PRG-DOUT6   |  |
| 391               | PRG-DOUT7   |  |
| 392               | PRG-DOUT8   |  |
| 393               | PRG-DOUT9   |  |
| 394               | PRG-DOUT10  |  |
| 395               | PRG-DOUT11  |  |
| 396               | PRG-DOUT12  |  |
| 397               | PRG-DOUT13  |  |
| 398               | PRG-DOUT14  |  |
| 399               | PRG-DOUT15  |  |
| 416               | PRG-ROUT0   | These are general-purpose output signals exclusively for remote output that can be set to "Signal output" of the control command of program operation. |
| 417               | PRG-ROUT1   |  |
| 418               | PRG-ROUT2   |  |
| 419               | PRG-ROUT3   |  |
| 420               | PRG-ROUT4   |  |
| 421               | PRG-ROUT5   |  |
| 422               | PRG-ROUT6   |  |
| 423               | PRG-ROUT7   |  |
| 424               | PRG-ROUT8   |  |
| 425               | PRG-ROUT9   |  |
| 426               | PRG-ROUT10  |  |
| 427               | PRG-ROUT11  |  |
| 428               | PRG-ROUT12  |  |
| 429               | PRG-ROUT13  |  |
| 430               | PRG-ROUT14  |  |
| 431               | PRG-ROUT15  |  |
| 432               | PRG-ROUT16  |  |
| 433               | PRG-ROUT17  |  |
| 434               | PRG-ROUT18  |  |
| 435               | PRG-ROUT19  |  |
| 436               | PRG-ROUT20  |  |
| 437               | PRG-ROUT21  |  |
| 438               | PRG-ROUT22  |  |



| Assignment number | Signal name  | Functions  |
|-------------------|--------------|--|
| 439               | PRG-ROUT23   | These are general-purpose output signals exclusively for remote output that can be set to "Signal output" of the control command of program operation. |
| 440               | PRG-ROUT24   |  |
| 441               | PRG-ROUT25   |  |
| 442               | PRG-ROUT26   |  |
| 443               | PRG-ROUT27   |  |
| 444               | PRG-ROUT28   |  |
| 445               | PRG-ROUT29   |  |
| 446               | PRG-ROUT30   |  |
| 447               | PRG-ROUT31   |  |
| 480               | INFO-USRIO   | Output when the corresponding information is generated.  |
| 482               | INFO-CNTTMP  |  |
| 487               | INFO-RBSPD   |  |
| 488               | INFO-AXISSPD |  |
| 489               | INFO-START   |  |
| 490               | INFO-ZHOME   |  |
| 491               | INFO-PR-REQ  |  |
| 493               | INFO-MECHMIS |  |
| 495               | INFO-NET-E   |  |
| 496               | INFO-OT-RB+  |  |
| 497               | INFO-OT-RB-  |  |
| 498               | INFO-OT-AX+  |  |
| 499               | INFO-OT-AX-  |  |
| 500               | INFO-PHBAREA |  |
| 501               | INFO-SGL-LMT |  |
| 502               | INFO-PST-ERR |  |
| 503               | INFO-SLIP    |  |
| 506               | INFO-DRVDIS  |  |
| 507               | INFO-DRVINFO |  |
| 508               | INFO-DSLMTD  |  |
| 509               | INFO-IOTEST  |  |
| 510               | INFO-CFG     |  |
| 511               | INFO-RBT     |  |




## 3 Signal type

### 3-1 Direct I/O

Direct I/O is I/O to be accessed via the I/O signal connector. Use parameters to assign the signals to the I/O terminals of the I/O signal connector. Refer to “2 Signals list” on p.201 for signals that can be assigned.

| Pin No. | Signal name | Initial value |
|---------|-------------|---------------|
| 2       | DIN0        | STOP          |
| 3       | DIN2        | ETO-CLR-DRV   |
| 4       | DIN4        | PAUSE         |
| 5       | DIN6        | PRG-DIN0      |
| 7       | DOUT0       | READY         |
| 8       | DOUT2       | ETO-MON-DRV   |
| 9       | DOUT4       | PAUSE-BSY     |
| 10      | DOUT6       | PRG-DOUT0     |

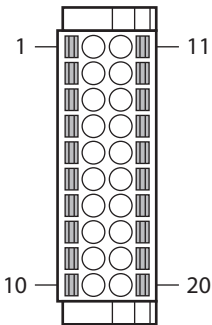

| Pin No. | Signal name | Initial value |
|---------|-------------|---------------|
| 12      | DIN1        | FREE-RB       |
| 13      | DIN3        | ALM-RST       |
| 14      | DIN5        | Not used      |
| 15      | DIN7        | PRG-DIN1      |
| 17      | DOUT1       | MOVE          |
| 18      | DOUT3       | ALM-B         |
| 19      | DOUT5       | PRG-RUN       |
| 20      | DOUT7       | PRG-DOUT1     |

#### Related parameter

| MRC Studio<br>Parameter group | Signal name | Input function |
|-------------------------------|-------------|----------------|
| Direct-IN (DIN)               | DIN0        | STOP           |
|                               | DIN1        | FREE-RB        |
|                               | DIN2        | ETO-CLR-DRV    |
|                               | DIN3        | ALM-RST        |
|                               | DIN4        | PAUSE          |
|                               | DIN5        | Not used       |
|                               | DIN6        | PRG-DIN0       |
|                               | DIN7        | PRG-DIN1       |

| MRC Studio<br>Parameter group | Signal name | Output function |
|-------------------------------|-------------|-----------------|
| Direct-OUT (DOUT)             | DOUT0       | READY           |
|                               | DOUT1       | MOVE            |
|                               | DOUT2       | ETO-MON-DRV     |
|                               | DOUT3       | ALM-B           |
|                               | DOUT4       | PAUSE-BSY       |
|                               | DOUT5       | PRG-RUN         |
|                               | DOUT6       | PRG-DOUT0       |
|                               | DOUT7       | PRG-DOUT1       |

#### Note

- When the same input signal is assigned to multiple input terminals, the function will be executed if any of the terminals becomes active.
- The E-STOP input and the HMI input are always in an ON state if they are not assigned to input terminals. If these inputs are assigned to both direct I/O and remote I/O, the function will be executed only when both I/Os are turned ON.



3-2 Remote I/O

Remote I/O is I/O to be accessed via EtherNet/IP.

■ Assignment to input signals

Use parameters to assign the input signals to R-IN0 to R-IN15 of remote I/O.  
Refer to “2-1 Input signals list” on p.201 for input signals that can be assigned.

Related parameter

| MRC Studio<br>Parameter group | Signal<br>name | Initial value | MRC Studio<br>Parameter group | Signal<br>name | Initial value |
|-------------------------------|----------------|---------------|-------------------------------|----------------|---------------|
| Remote-I/O (R-I/O)            | R-IN0          | PRG-RIN0      | Remote-I/O (R-I/O)            | R-IN8          | PRG-RIN8      |
|                               | R-IN1          | PRG-RIN1      |                               | R-IN9          | PRG-RIN9      |
|                               | R-IN2          | PRG-RIN2      |                               | R-IN10         | PRG-RIN10     |
|                               | R-IN3          | PRG-RIN3      |                               | R-IN11         | PRG-RIN11     |
|                               | R-IN4          | PRG-RIN4      |                               | R-IN12         | PRG-RIN12     |
|                               | R-IN5          | PRG-RIN5      |                               | R-IN13         | PRG-RIN13     |
|                               | R-IN6          | PRG-RIN6      |                               | R-IN14         | PRG-RIN14     |
|                               | R-IN7          | PRG-RIN7      |                               | R-IN15         | PRG-RIN15     |

- Note
- When the same input signal is assigned to multiple input terminals, the function will be executed if any of the terminals becomes active.
  - The E-STOP input and the HMI input are always in an ON state if they are not assigned to input terminals. If these inputs are assigned to both direct I/O and remote I/O, the function will be executed only when both I/Os are turned ON.

■ Assignment to output signals

Use parameters to assign the output signals to R-OUT0 to R-OUT15 of remote I/O.  
Refer to “2-2 Output signals list” on p.205 for the output signals that can be assigned.

Related parameter

| MRC Studio<br>Parameter group | Signal<br>name | Initial value | MRC Studio<br>Parameter group | Signal<br>name | Initial value |
|-------------------------------|----------------|---------------|-------------------------------|----------------|---------------|
| Remote-I/O (R-I/O)            | R-OUT0         | PRG-ROUT0     | Remote-I/O (R-I/O)            | R-OUT8         | PRG-ROUT8     |
|                               | R-OUT1         | PRG-ROUT1     |                               | R-OUT9         | PRG-ROUT9     |
|                               | R-OUT2         | PRG-ROUT2     |                               | R-OUT10        | PRG-ROUT10    |
|                               | R-OUT3         | PRG-ROUT3     |                               | R-OUT11        | PRG-ROUT11    |
|                               | R-OUT4         | PRG-ROUT4     |                               | R-OUT12        | PRG-ROUT12    |
|                               | R-OUT5         | PRG-ROUT5     |                               | R-OUT13        | PRG-ROUT13    |
|                               | R-OUT6         | PRG-ROUT6     |                               | R-OUT14        | PRG-ROUT14    |
|                               | R-OUT7         | PRG-ROUT7     |                               | R-OUT15        | PRG-ROUT15    |



# 4 Input signals

## 4-1 Operation control

### ■ Excitation switching signals

#### ● FREE input, FREE-RB input, FREE-E1 input, FREE-E2 input

These signals are used to switch the motor excitation state between excitation and non-excitation. In the case of an electromagnetic brake motor, turning these signals ON make the electromagnetic brake be in a state of releasing the motor shaft.

The state of the robot when each signal is turned ON is as follows.

- FREE input: The current flowing to all motors is shut off to put the motors into a non-excitation state.
- FREE-RB input: The current flowing to all motion axes (motors driving the robot) is shut off to put the motors into a non-excitation state.
- FREE-E1 input: The current flowing to the end-effector axis 1 (a motor driving the end effector 1) is shut off to put the motor into a non-excitation state.
- FREE-E2 input: The current flowing to the end-effector axis 2 (a motor driving the end effector 2) is shut off to put the motor into a non-excitation state.



When these input signals are turned ON, the robot may lose its posture or a load may fall since motors lose the holding force.



This is not a power removal function that can apply to protection measures.

### ■ Operation stop signals

These signals are used to stop the operation of the robot.

The CMD-END output is not turned ON even if the operation stop signal is turned ON.

#### ● STOP input

When the STOP input is turned ON, the command and operation program being executed is stopped. (All motors will stop.)

#### ● E-STOP input

The E-STOP input is a signal that is normally closed.

When the E-STOP input is turned OFF, the command and operation program being executed is stopped. (All motors will stop.)

When it is turned ON, the controller is come into a state that can be operated.

The E-STOP input can be assigned only to direct input. When it is not assigned, it will always be set to ON.

#### ● PAUSE input

When the PAUSE input is turned ON, the command and operation program being executed is stopped temporarily. (All motors will stop temporarily.)

When the PAUSE input is turned OFF, the command and operation program having paused is resumed.



This is not a stop function that can apply to protection measures.

### ■ Signals used for program operation

#### ● START input

When the START input is turned ON, operation of the program number having selected is executed.

After starting operation, all the commands having set are automatically executed.

#### ● SSTART input

When the SSTART input is turned ON, operation of the program number having selected is executed.

After starting operation, the commands having set are executed one by one. If the SSTART input is turned from OFF to ON each time when a command is completed, the next command is executed.



### ● D-SEL0 to D-SEL7 inputs

When one of the D-SEL0 to D-SEL7 inputs is turned ON, operation of the program number having set is executed. Since operation can be performed by only turning a single signal ON, the steps of selecting the program number can be saved.

### ● PRG-DOUT-CLR input, PRG-ROUT-CLR input

These signals are used to turn OFF all of the general-purpose output signals that are used for the control commands of program operation.

- PRG-DOUT-CLR input: This is used to turn the output status OFF for all of PRG-DOUT0 to PRG-DOUT15.
- PRG-ROUT-CLR input: This is used to turn the output status OFF for all of PRG-ROUT0 to PRG-ROUT31.

### ● M0 to M5 inputs

Select a desired program number to be executed by combining the ON-OFF status of the M0 to M5 inputs.

| Program number | M5  | M4  | M3  | M2  | M1  | M0  |
|----------------|-----|-----|-----|-----|-----|-----|
| 0              | OFF | OFF | OFF | OFF | OFF | OFF |
| 1              | OFF | OFF | OFF | OFF | OFF | ON  |
| ⋮              | ⋮   | ⋮   | ⋮   | ⋮   | ⋮   | ⋮   |
| ⋮              | ⋮   | ⋮   | ⋮   | ⋮   | ⋮   | ⋮   |
| ⋮              | ⋮   | ⋮   | ⋮   | ⋮   | ⋮   | ⋮   |
| 63             | ON  | ON  | ON  | ON  | ON  | ON  |

### ● ZHOME-ALL input, ZHOME-RB input, ZHOME-E1 input, ZHOME-E2 input

These signals are used to execute high-speed return-to-origin operation. The state of the robot when each signal is turned ON is as follows.

- ZHOME-ALL input: All coordinates (X, Y, Z, Rx, Ry, Rz, E1, E2), including the end effector, are returned to the origin.
- ZHOME-RB input: All coordinates (X, Y, Z, Rx, Ry, Rz) except the end effector are returned to the origin.
- ZHOME-E1 input: Coordinates of the end effector 1 are returned to the origin.
- ZHOME-E2 input: Coordinates of the end effector 2 are returned to the origin.



In the case of a robot other than a Cartesian robot, high-speed return-to-origin operation cannot be executed without setting the origin of the user coordinate system.

## ■ General purpose inputs for control commands

### ● PRG-DIN0 input to PRG-DIN15 input

These are general-purpose input signals exclusive for direct input that can be set to "Wait (signal)" of the control command.



They cannot be assigned to the R-IN input function.

### ● PRG-RIN0 input to PRG-RIN31 input

These are general-purpose input signals exclusive for remote input that can be set to "Wait (signal)" of the control command.



They cannot be assigned to the DIN input function.

### ● R0 input to R15 input

The R0 to R15 inputs are general-purpose signals. Using the R0 to R15 inputs, I/O signals from the host controller to the external equipment can be controlled by the **MRC01** controller. Direct I/O of the **MRC01** controller can be used as an I/O module.

#### Example of use: When signals are output from the host controller to the external equipment

Assign the R0 input to R-IN0 and the R0\_R output to DOUT0.

DOUT0 is turned ON when R-IN0 is set to 1 by the host controller, and DOUT0 is turned OFF when R-IN0 is set to 0.

#### Example of use: When signals output from the external equipment are input to the host controller

Assign the R1 input to DIN1 and the R1\_R output to R-OUT1.

R-OUT1 is set to 1 when DIN1 is turned ON by the external equipment, and R-OUT1 is set to 0 when DIN1 is turned OFF. The ON-OFF status of DIN1 can be set using the "DIN1 inverting mode" parameter.



## ■ Signals used for operation limitation

### ● HMI input

When the HMI input is turned ON, a state of limiting the functions of the **MRC Studio** software is released. When it is turned OFF, the functions are limited.

The functions to be limited are shown below.

- Setup
- Teaching operation
- Writing data and restoring parameters to the factory setting

#### Note

- When the HMI input is not assigned to direct I/O or remote I/O, this input will always be set to ON. Also, when this input is assigned to both direct I/O and remote I/O, the function will be executed only when both of them are turned ON.
- When the HMI input is assigned to the DIN input function, do not set the "1-shot signal" parameter to "Enable."

#### memo

A state of limiting the functions can also be released using the "HMI release key" parameter.

### ● CRNT-LMT1 to CRNT-LMT3 inputs

If the CRNT-LMT input is turned ON, the operating current for all motors is limited.

The limited value can be set using the "CRNT-LMT operating current limit value" parameter.

### ● SPD-LMT1 to SPD-LMT3 inputs

If the SPD-LMT input is turned ON, the operating speed for all motors is limited.

The limited value can be set using the "SPD-LMT speed limit type selection," "SPD-LMT speed limit ratio," and "SPD-LMT speed limit value" parameters.

#### memo

This is not a function for limitation that can apply to protection measures.

## ■ Signals used for macro operation

### ● Signals related to inching operation

The state of the robot when each signal related to inching operation is turned ON is as follows.

| Input signals                                 | Description  |
|---|--|
| JOG-P-X+ (–) input                            | Inching operation is performed in the positive direction or negative direction of X axis.                                    |
| JOG-P-Y+ (–) input                            | Inching operation is performed in the positive direction or negative direction of Y axis.                                    |
| JOG-P-Z+ (–) input                            | Inching operation is performed in the positive direction or negative direction of Z axis.                                    |
| JOG-P-E1+ (–) input                           | Inching operation is performed in the positive direction or negative direction of the end effector 1.                        |
| JOG-P-E2+ (–) input                           | Inching operation is performed in the positive direction or negative direction of the end effector 2.                        |
| JOG-P-RX+ (–) input                           | Inching operation is performed in the positive direction or negative direction of Rx axis.                                   |
| JOG-P-RY+ (–) input                           | Inching operation is performed in the positive direction or negative direction of Ry axis.                                   |
| JOG-P-RZ+ (–) input                           | Inching operation is performed in the positive direction or negative direction of Rz axis.                                   |
| JOG-P-A1+ (–) input to<br>JOG-P-A8+ (–) input | Inching operation is performed in the positive direction or negative direction of an axis corresponding to the input signal. |



### ● Signals related to JOG operation

The state of the robot when each signal related to JOG operation is turned ON is as follows.

| Input signals                             | Description  |
|---|--|
| JOG-X+ (–) input                          | JOG operation is performed in the positive direction or negative direction of X axis.                                    |
| JOG-Y+ (–) input                          | JOG operation is performed in the positive direction or negative direction of Y axis.                                    |
| JOG-Z+ (–) input                          | JOG operation is performed in the positive direction or negative direction of Z axis.                                    |
| JOG-E1+ (–) input                         | JOG operation is performed in the positive direction or negative direction of the end effector 1.                        |
| JOG-E2+ (–) input                         | JOG operation is performed in the positive direction or negative direction of the end effector 2.                        |
| JOG-RX+ (–) input                         | JOG operation is performed in the positive direction or negative direction of Rx axis.                                   |
| JOG-RY+ (–) input                         | JOG operation is performed in the positive direction or negative direction of Ry axis.                                   |
| JOG-RZ+ (–) input                         | JOG operation is performed in the positive direction or negative direction of Rz axis.                                   |
| JOG-A1+ (–) input to<br>JOG-A8+ (–) input | JOG operation is performed in the positive direction or negative direction of an axis corresponding to the input signal. |
| JOG-TX+ (–) input *                       | JOG operation is performed in the positive direction or negative direction of Tx axis.                                   |
| JOG-TY+ (–) input *                       | JOG operation is performed in the positive direction or negative direction of Ty axis.                                   |
| JOG-TZ+ (–) input *                       | JOG operation is performed in the positive direction or negative direction of Tz axis.                                   |

\* The corresponding JOG-TX, JOG-TY, or JOG-TZ varies depending on the robot type.

| Robot type                  |  | JOG-TX | JOG-TY | JOG-TZ |
|-----------------------------|--|--------|--------|--------|
| SCARA                       | 2-link tip up-down                         | –      | –      | ○      |
|                             | 2-link base up-down                        | –      | –      | ○      |
|                             | 2-link tip up-down + Rz                    | ○      | ○      | ○      |
|                             | 2-link base up-down + Rz                   | ○      | ○      | ○      |
|                             | 2-link + Rz without up-down                | ○      | ○      | –      |
|                             | 2-link without up-down                     | –      | –      | –      |
|                             | 2-link base linear motion tip up-down      | ○      | ○      | ○      |
|                             | 2-link base linear motion base up-down     | ○      | ○      | ○      |
|                             | 2-link base linear motion without up-down  | ○      | ○      | –      |
|                             | 3-link tip up-down                         | ○      | ○      | ○      |
|                             | 3-link base up-down                        | ○      | ○      | ○      |
|                             | 3-link without up-down                     | ○      | ○      | –      |
| SCARA (360-degree rotation) | 360-degree rotation 3-link base up-down    | ○      | ○      | ○      |
|                             | 360-degree rotation 3-link without up-down | ○      | ○      | –      |
| Vertically articulated      | 3-link base rotation                       | –      | ○      | ○      |
|                             | 3-link base linear motion                  | ○      | ○      | ○      |
|                             | 3-link base rotation + Rz                  | ○      | ○      | ○      |
|                             | 3-link base linear motion + Rz             | ○      | ○      | ○      |
|                             | 3-link without base axis                   | –      | ○      | ○      |
|                             | 6-axis vertically articulated Model 1      | ○      | ○      | ○      |
|                             | 6-axis vertically articulated Model 2      | ○      | ○      | ○      |



| Robot type                          |  | JOG-TX | JOG-TY | JOG-TZ |
|-------------------------------------|--|--------|--------|--------|
| Vertically articulated (Palletizer) | 1 parallel-linkage base rotation           | –      | ○      | ○      |
|                                     | 1 parallel-linkage base linear motion      | ○      | ○      | ○      |
|                                     | 1 parallel-linkage base rotation + Rz      | ○      | ○      | ○      |
|                                     | 1 parallel-linkage base linear motion + Rz | ○      | ○      | ○      |
|                                     | 1 parallel-linkage without base axis       | –      | ○      | ○      |
|                                     | 2 parallel-linkage base rotation           | –      | ○      | ○      |
|                                     | 2 parallel-linkage base linear motion      | ○      | ○      | ○      |
|                                     | 2 parallel-linkage base rotation + Rz      | ○      | ○      | ○      |
|                                     | 2 parallel-linkage base linear motion + Rz | ○      | ○      | ○      |
|                                     | 2 parallel-linkage without base axis       | –      | ○      | ○      |
| Delta robot                         | Delta robot                                | ○      | ○      | ○      |
|                                     | Delta robot + Rz                           | ○      | ○      | ○      |
| Polar/Cylindrical robot             | Polar                                      | –      | ○      | –      |
|                                     | Polar + Rz                                 | ○      | ○      | –      |
|                                     | Cylindrical                                | –      | ○      | ○      |
|                                     | Cylindrical + Rz                           | ○      | ○      | ○      |
| Cartesian                           | 2-axis (XY)                                | ○      | ○      | –      |
|                                     | 2-axis (XZ)                                | ○      | –      | ○      |
|                                     | 2-axis (YZ)                                | –      | ○      | ○      |
|                                     | X Y + Rz                                   | ○      | ○      | –      |
|                                     | X Z + Rz                                   | ○      | –      | ○      |
|                                     | Y Z + Rz                                   | –      | ○      | ○      |
|                                     | 3-axis (XYZ)                               | ○      | ○      | ○      |
|                                     | X Y Z + Rz                                 | ○      | ○      | ○      |
| Cartesian (Planar surface gantry)   | Planar surface gantry 2-axis (XY)          | ○      | ○      | –      |
|                                     | Planar surface gantry 2-axis (XZ)          | ○      | –      | ○      |
|                                     | Planar surface gantry 2-axis (YZ)          | –      | ○      | ○      |
|                                     | Planar surface gantry 2-axis (XY) + Rz     | ○      | ○      | –      |
|                                     | Planar surface gantry 2-axis (XZ) + Rz     | ○      | –      | ○      |
|                                     | Planar surface gantry 2-axis (YZ) + Rz     | –      | ○      | ○      |
|                                     | Planar surface gantry 3-axis (XYZ)         | ○      | ○      | ○      |
|                                     | Planar surface gantry 3-axis (XYZ) + Rz    | ○      | ○      | ○      |
| Small Robots <b>OVR</b>             | 4-axis vertically articulated              | ○      | ○      | ○      |
|                                     | 5-axis vertically articulated              | ○      | ○      | ○      |
|                                     | 6-axis vertically articulated              | ○      | ○      | ○      |
|                                     | 3-axis SCARA                               | ○      | ○      | –      |
|                                     | 3-axis Cartesian                           | ○      | ○      | ○      |
| Motion System Master                | <b>MSE3039K1-V</b>                         | –      | ○      | ○      |
|                                     | <b>MSE3039K1-V</b> + Rz                    | ○      | ○      | ○      |



## 4-2 Coordinates management

### ● P-PRESET-RB input

When the P-PRESET-RB input is turned ON, the origin of the user coordinate system is rewritten to the present TCP. At the same time, the value of the rewritten origin is written to the non-volatile memory.



The P-PRESET-RB input cannot be turned ON while the robot is operated or is temporarily stopped by the PAUSE input.

### ● PLT1-CLR to PLT6-CLR inputs

When the PLT1-CLR to PLT6-CLR inputs are turned ON, the next cell number of the corresponding pallet is set to 1.

## 4-3 Controller management

### ■ Status releasing signals

These signals are used to release the signal or status that is not released automatically.

### ● ALM-RST input, ALM-RST-CNT input, ALM-RST-DRV input

These signals are used to reset an alarm.

If an alarm is generated, the robot will stop. Be sure to remove the cause of the alarm and ensure safety before resetting the alarm. Note that some alarms cannot be reset with these signals. Refer to “2-3 Alarm list” on p.250 for alarms.

The state of the robot when each signal is turned from OFF to ON is as follows (they are enabled at the ON edge).

- ALM-RST input: Alarms generated in the controller and all drivers are reset.
- ALM-RST-CNT input: Alarms generated in the controller are reset.
- ALM-RST-DRV input: Alarms generated in all driver are reset.

### ● ETO-CLR-DRV input

When the ETO-CLR-DRV input is turned ON, the ETO-CLR input for all drivers except **AZD-KR2D** is turned ON. Refer to the **AZ Series OPERATING MANUAL Function Edition** for the ETO-CLR input.



The ETO-CLR-DRV input is not a safety-related part of a control system.

### ● INFO-CLR input, INFO-CLR-CNT input, INFO-CLR-DRV input

These signals are used to clear the information status. The state of the robot when each signal is turned ON is as follows.

- INFO-CLR input: The information status for the controller and all drivers is cleared.
- INFO-CLR-CNT input: The information status for the controller is cleared.
- INFO-CLR-DRV input: The information status for all drivers is cleared.



# 5 Output signals

## 5-1 Controller management

### ■ Status indication of controller

#### ● ALM-A output, ALM-A-CNT output, ALM-A-DRV output ALM-B output, ALM-B-CNT output, ALM-B-DRV output

These signals are output when an alarm is generated. The "ALM-A- output" is normally open and the "ALM-B- output" is normally closed.

The state of signals when an alarm is generated is as follows. If an alarm is generated, the POWER/ALARM LED of the controller will blink in red to stop the robot.

| Product that an alarm is generated | ALM-A | ALM-B | ALM-A-CNT | ALM-B-CNT | ALM-A-DRV | ALM-B-DRV |
|------------------------------------|-------|-------|-----------|-----------|-----------|-----------|
| Controller and driver              | ON    | OFF   | ON        | OFF       | ON        | OFF       |
| Controller                         | ON    | OFF   | ON        | OFF       | OFF       | ON        |
| Driver                             | ON    | OFF   | OFF       | ON        | ON        | OFF       |

#### ● SYS-RDY output

After the power supply is turned on, when output signals are ready to operate ON-OFF and signals are enabled to input, the SYS-RDY output is turned ON.

#### ● SYS-BSY output

The SYS-BSY output is turned ON while the controller performs the following internal processing.

- Teaching is being executed using the **MRC Studio** software.
- Data writing is being executed using the **MRC Studio** software.
- "Restoring parameters to the factory setting" is being executed using the **MRC Studio** software.
- The maintenance command is being executed.

#### ● INFO output, INFO-CNT output, INFO-DRV output

These signals are output when information is generated.

The state of signals when information is generated is as follows.

| Product that information is generated | INFO | INFO-CNT | INFO-DRV |
|---------------------------------------|------|----------|----------|
| Controller and driver                 | ON   | ON       | ON       |
| Controller                            | ON   | ON       | OFF      |
| Driver                                | ON   | OFF      | ON       |

#### ● Output of signals for information

If corresponding information is generated, each output signal is turned ON.

#### ● SLIP output

This signal is output in the slip mode. The slip mode is a function to slip the motor when a load on the robot axis is increased while the robot stops. In the slip mode, the feedback position is the same value as the command position. If the robot axis is moved by an external force during the slip mode, it will not return to its former position. The slip mode is canceled after the time period set in the "Slip mode release time" parameter is elapsed.

The SLIP output is turned ON when all of the following conditions are satisfied to move to the slip mode.

- While the robot stops.
- The "Slip function setting" parameter is set to "1: Enable."
- Among the motion axes (motors driving the robot), there is an axis that the time period set in the "Slip mode decision time" parameter has elapsed while the load factor of the "Slip mode decision load factor" parameter is exceeded.



## ■ Status indication of motor

### ● CRNT output, CRNT-RB output, CRNT-E1 output, CRNT-E2 output

These signals are output when the motor is in an excitation state.

- CRNT output: The CRNT output is turned ON when all motors are in an excitation state.
- CRNT-RB output: The CRNT-RB output is turned ON when all motion axes (motors driving the robot) is in an excitation state.
- CRNT-E1 output: The CRNT-EE output is turned ON when the end-effector axis 1 (a motor driving the end effector 1) is in an excitation state.
- CRNT-E2 output: The CRNT-EE output is turned ON when the end-effector axis 2 (a motor driving the end effector 2) is in an excitation state.

## 5-2 Management of operation

## ■ Status indication of operation

### ● READY output

The READY output is turned ON when the controller and all drivers are ready to operate. Input the operation start command to the controller after the READY output is turned ON.

The READY output is turned ON when all of the following conditions are satisfied.

- The READY output is in an ON state for all drivers.
- The SYS-BSY output is in an OFF state.
- Not during initialization.
- Not during operation.
- The STOP input is in an OFF state.
- The CRNT output is in an ON state.
- The TLC-RB output is in an OFF state.
- Not in an alarm status.
- Communication with the driver is normal.
- Not in the slip mode.

### ● DCMD-RDY output

When interpolation operation by direct data operation is ready to start, the DCMD-RDY output is turned ON. Input the command of interpolation operation to the controller after the DCMD-RDY output is turned ON.

The DCMD-RDY output is turned ON when all of the following conditions are met.

- The READY output is in an ON state for all drivers.
- The SYS-BSY output is in an OFF state.
- Not during initialization.
- Not during operation.\*
- The STOP input is in an OFF state.
- The CRNT output is in an ON state.
- The TLC-RB output is in an OFF state.
- Not in an alarm status.
- Communication with the driver is normal.
- Not in the slip mode.

\* When the "Direct data operation Override" parameter is set to "1: Enable," the DCMD-RDY output is turned ON even while interpolation operation by direct data operation is being performed.

### ● MOVE output, MOVE-CNT output

- MOVE output: The MOVE output is turned ON while the robot operates. When the command from the controller to the driver is stopped and all motors stop the operation, this signal is turned OFF.
- MOVE-CNT output: The MOVE-CNT output is turned ON while the robot operates. When the command from the controller to the driver is stopped, this signal is turned OFF. (It will be turned OFF even if there is a motor in operation.)



### ● **CMD-END output, CMD-END-CNT output**

These signals are output when program operation or direct data operation is completed.

- **CMD-END output:** The CMD-END output is turned ON when all motors stop after program operation or direct data operation is completed.
- **CMD-END-CNT output:** The CMD-END-CNT output is turned ON when program operation or direct data operation is completed.



When operation is interrupted by the STOP input or other operation stop signals, the CMD-END output and the CMD-END-CNT output are not turned ON.

### ● **PRG-RUN output**

The PRG-RUN output is turned ON while program operation is executed.

### ● **WAIT output**

The WAIT output is turned ON while "Wait (time)" or "Wait (signal)" of the control command is being executed.

### ● **TLC output, TLC-RB output, TLC-E1 output, TLC-E2 output**

These signals are output when the motor output torque reached the upper limit value.

- **TLC output:** The TLC output is turned ON when the output torque of any of the motors reaches the upper limit value.
- **TLC-RB output:** The TLC-RB output is turned ON when the output torque of any of the motion axes (motors driving the robot) reaches the upper limit value.
- **TLC-E1 output:** The TLC-E1 output is turned ON when the output torque of the end-effector axis 1 (a motor driving the end effector 1) reaches the upper limit value.
- **TLC-E2 output:** The TLC-E2 output is turned ON when the output torque of the end-effector axis 2 (a motor driving the end effector 2) reaches the upper limit value.

### ● **VA output**

The VA output is turned ON when the command speed reaches the target speed.

### ● **CRNT-LMTD1 to CRNT-LMTD3 outputs**

These signals are enabled when the current limit is performed by the current limit input. If the operating current increases equal to or higher than the value set in the "CRNT-LMT operating current limit value" parameter, the operating speed is limited to turn the CRNT-LMTD1 to CRNT-LMTD3 outputs ON.

### ● **SPD-LMTD1 to SPD-LMTD3 outputs**

These signals are enabled when the speed limit is performed by the speed limit input. If the operating speed increases equal to or higher than the value set in the "SPD-LMT speed limit ratio" parameter or the "SPD-LMT speed limit value" parameter, the operating speed is limited to turn the SPD-LMTD1 to SPD-LMTD3 outputs ON.

### ● **HOME-END output**

When high-speed return-to-origin operation is completed or when the P-PRESET-RB input is turned ON to rewrite the origin of the user coordinate system to the present TCP, the HOME-END output is turned ON.

### ● **D-END0 to D-END7 outputs**

These signals are enabled in program operation.

They are turned OFF when operation of the specified program number is executed, and ON when it is completed.

### ● **PAUSE-BSY output**

If the PAUSE input is turned ON while a command or operation program is being executed, the operation is temporarily stopped and the PAUSE-BSY output is turned ON.

## ■ **Power removal function**

### ● **ETO-MON-DRV output**

The ETO-MON-DRV output is turned ON when there is a driver in the power removal status.



The ETO-MON-DRV output is not a safety-related part of a control system.



## ■ Position indication of robot and axes

These signals are output according to the motor position.

### ● AREA0 to AREA4 outputs

The AREA output is turned ON when the command position of the TCP is within the range set in the "User-defined area" parameter.

It is turned ON when the command position of the TCP is within the range of the user-defined area even while the robot stops.

### ● AREA0-AX to AREA2-AX outputs

When the axis position selected with the "AREA-AX target axis selection" parameter is within the range set with the "AREA-AX positive direction position" parameter or "AREA-AX negative direction position" parameter, the output signal of the corresponding axis is turned ON. It is turned ON even if operation is stopped.

### ● SLS-X+ output, SLS-Y+ output, SLS-Z+ output

If the command position of the TCP exceeds the position set in the "TCP position limit X+" parameter, "TCP position limit Y+" parameter, or "TCP position limit Z+" parameter, the output signal of the corresponding axis is turned ON.

### ● SLS-X– output, SLS-Y– output, SLS-Z– output

If the command position of the TCP falls below the position set in the "TCP position limit X–" parameter, "TCP position limit Y–" parameter, or "TCP position limit Z–" parameter, the output signal of the corresponding axis is turned ON.

### ● SLS-A1+ to SLS-A8+ outputs

If a motion axis (a motor driving the robot) exceeds the position set in the corresponding parameter among the "Axis position limit Axis 1+" to "Axis position limit Axis 6+" parameters, the corresponding output among the SLS-A1+ to SLS-A6+ outputs is turned ON.

If the end effector 1 exceeds the position set in the "Axis position limit end-effector 1+" parameter, the SLS-A7+ output is turned ON.

If the end effector 2 exceeds the position set in the "Axis position limit end-effector 2+" parameter, the SLS-A8+ output is turned ON.

### ● SLS-A1– to SLS-A8– outputs

If a motion axis (a motor driving the robot) falls below the position set in the corresponding parameter among the "Axis position limit Axis 1–" to "Axis position limit Axis 6–" parameters, the corresponding output among the SLS-A1– to SLS-A6– outputs is turned ON.

If the end effector 1 falls below the position set in the "Axis position limit end-effector 1–" parameter, the SLS-A7– output is turned ON.

If the end effector 2 falls below the position set in the "Axis position limit end-effector 2–" parameter, the SLS-A8– output is turned ON.

### ● SGL-LMT output

The SGL-LMT output is turned ON while the robot is in near the singularity. If the SGL-LMT output is turned ON, operation is stopped. While this signal is output, linear interpolation operation, circular interpolation operation, and arch interpolation operation cannot be executed.

### ● PST-ERR output

#### ● Vertically articulated robot

The PST-ERR output is turned ON when the elbow joint (\*) is at a negative angle. While this signal is output, interpolation operation cannot be executed.

\* With base axis: Axis 3, without base axis: Axis 2

#### ● Delta robot

The PST-ERR output is turned ON when the TCP position is in an abnormal posture that cannot be calculated. While this signal is output, operation cannot be executed.



## ■ General purpose outputs for control commands

### ● PRG-DOUT0 to PRG-DOUT15 outputs

These are general-purpose output signals exclusive for direct output that can be set to "Signal output" of the control command.



They cannot be assigned to the R-OUT output function.

### ● PRG-ROUT0 to PRG-ROUT31 outputs

These are general-purpose output signals exclusive for remote output that can be set to "Signal output" of the control command.



They cannot be assigned to the DOUT output function.

## ■ Coordinate status indication

### ● ABSPEN output

The ABSPEN output is turned ON while the home is set for all axes.

### ● PRST-STLD-RB output

The PRST-STLD-RB output is turned ON while the origin of the user coordinate system is set.

### ● ROBOT-EN output

The ROBOT-EN output is turned ON while the setup of the robot using the **MRC Studio** software is properly completed.

### ● HANDSYS-EN output

The HANDSYS-EN output is turned ON when the robot type is a SCARA robot or a 6-axis vertically articulated robot.



## 5-3 Response outputs

The response output is a signal to output the ON-OFF status of the corresponding input signal.  
The table below shows the correspondences between input signals and output signals.

| Input signal | Output signal  | Input signal | Output signal | Input signal | Output signal |
|--------------|----------------|--------------|---------------|--------------|---------------|
| FREE         | FREE_R         | JOG-TX+      | JOG-TX+_R     | JOG-P-Z-     | JOG-P-Z-_R    |
| FREE-RB      | FREE-RB_R      | JOG-TX-      | JOG-TX-_R     | JOG-P-RX+    | JOG-P-RX+_R   |
| FREE-E1      | FREE-E1_R      | JOG-TY+      | JOG-TY+_R     | JOG-P-RX-    | JOG-P-RX-_R   |
| FREE-E2      | FREE-E2_R      | JOG-TY-      | JOG-TY-_R     | JOG-P-RY+    | JOG-P-RY+_R   |
| STOP         | STOP_R         | JOG-TZ+      | JOG-TZ+_R     | JOG-P-RY-    | JOG-P-RY-_R   |
| PAUSE        | PAUSE_R        | JOG-TZ-      | JOG-TZ-_R     | JOG-P-RZ+    | JOG-P-RZ+_R   |
| E-STOP       | E-STOP_R       | JOG-X+       | JOG-X+_R      | JOG-P-RZ-    | JOG-P-RZ-_R   |
| ALM-RST      | ALM-RST_R      | JOG-X-       | JOG-X-_R      | JOG-P-E1+    | JOG-P-E1+_R   |
| ALM-RST-CNT  | ALM-RST-CNT_R  | JOG-Y+       | JOG-Y+_R      | JOG-P-E1-    | JOG-P-E1-_R   |
| ALM-RST-DRV  | ALM-RST-DRV_R  | JOG-Y-       | JOG-Y-_R      | JOG-P-E2+    | JOG-P-E2+_R   |
| INFO-CLR     | INFO-CLR_R     | JOG-Z+       | JOG-Z+_R      | JOG-P-E2-    | JOG-P-E2-_R   |
| INFO-CLR-CNT | INFO-CLR-CNT_R | JOG-Z-       | JOG-Z-_R      | JOG-P-A1+    | JOG-P-A1+_R   |
| INFO-CLR-DRV | INFO-CLR-DRV_R | JOG-RX+      | JOG-RX+_R     | JOG-P-A1-    | JOG-P-A1-_R   |
| HMI          | HMI_R          | JOG-RX-      | JOG-RX-_R     | JOG-P-A2+    | JOG-P-A2+_R   |
| CRNT-LMT1    | CRNT-LMT1_R    | JOG-RY+      | JOG-RY+_R     | JOG-P-A2-    | JOG-P-A2-_R   |
| CRNT-LMT2    | CRNT-LMT2_R    | JOG-RY-      | JOG-RY-_R     | JOG-P-A3+    | JOG-P-A3+_R   |
| CRNT-LMT3    | CRNT-LMT3_R    | JOG-RZ+      | JOG-RZ+_R     | JOG-P-A3-    | JOG-P-A3-_R   |
| SPD-LMT1     | SPD-LMT1_R     | JOG-RZ-      | JOG-RZ-_R     | JOG-P-A4+    | JOG-P-A4+_R   |
| SPD-LMT2     | SPD-LMT2_R     | JOG-E1+      | JOG-E1+_R     | JOG-P-A4-    | JOG-P-A4-_R   |
| SPD-LMT3     | SPD-LMT3_R     | JOG-E1-      | JOG-E1-_R     | JOG-P-A5+    | JOG-P-A5+_R   |
| P-PRESET-RB  | P-PRESET-RB_R  | JOG-E2+      | JOG-E2+_R     | JOG-P-A5-    | JOG-P-A5-_R   |
| PRG-DOUT-CLR | PRG-DOUT-CLR_R | JOG-E2-      | JOG-E2-_R     | JOG-P-A6+    | JOG-P-A6+_R   |
| PRG-ROUT-CLR | PRG-DOUT-CLR_R | JOG-A1+      | JOG-A1+_R     | JOG-P-A6-    | JOG-P-A6-_R   |
| M0           | M0_R           | JOG-A1-      | JOG-A1-_R     | JOG-P-A7+    | JOG-P-A7+_R   |
| M1           | M1_R           | JOG-A2+      | JOG-A2+_R     | JOG-P-A7-    | JOG-P-A7-_R   |
| M2           | M2_R           | JOG-A2-      | JOG-A2-_R     | JOG-P-A8+    | JOG-P-A8+_R   |
| M3           | M3_R           | JOG-A3+      | JOG-A3+_R     | JOG-P-A8-    | JOG-P-A8-_R   |
| M4           | M4_R           | JOG-A3-      | JOG-A3-_R     | PRG-DIN0     | PRG-DIN0_R    |
| M5           | M5_R           | JOG-A4+      | JOG-A4+_R     | PRG-DIN1     | PRG-DIN1_R    |
| ZHOME-ALL    | ZHOME-ALL_R    | JOG-A4-      | JOG-A4-_R     | PRG-DIN2     | PRG-DIN2_R    |
| ZHOME-RB     | ZHOME-RB_R     | JOG-A5+      | JOG-A5+_R     | PRG-DIN3     | PRG-DIN3_R    |
| ZHOME-E1     | ZHOME-E1_R     | JOG-A5-      | JOG-A5-_R     | PRG-DIN4     | PRG-DIN4_R    |
| ZHOME-E2     | ZHOME-E2_R     | JOG-A6+      | JOG-A6+_R     | PRG-DIN5     | PRG-DIN5_R    |
| D-SEL0       | D-SEL0_R       | JOG-A6-      | JOG-A6-_R     | PRG-DIN6     | PRG-DIN6_R    |
| D-SEL1       | D-SEL1_R       | JOG-A7+      | JOG-A7+_R     | PRG-DIN7     | PRG-DIN7_R    |
| D-SEL2       | D-SEL2_R       | JOG-A7-      | JOG-A7-_R     | PRG-DIN8     | PRG-DIN8_R    |
| D-SEL3       | D-SEL3_R       | JOG-A8+      | JOG-A8+_R     | PRG-DIN9     | PRG-DIN9_R    |
| D-SEL4       | D-SEL4_R       | JOG-A8-      | JOG-A8-_R     | PRG-DIN10    | PRG-DIN10_R   |
| D-SEL5       | D-SEL5_R       | JOG-P-X+     | JOG-P-X+_R    | PRG-DIN11    | PRG-DIN11_R   |
| D-SEL6       | D-SEL6_R       | JOG-P-X-     | JOG-P-X-_R    | PRG-DIN12    | PRG-DIN12_R   |
| D-SEL7       | D-SEL7_R       | JOG-P-Y+     | JOG-P-Y+_R    | PRG-DIN13    | PRG-DIN13_R   |
| START        | START_R        | JOG-P-Y-     | JOG-P-Y-_R    | PRG-DIN14    | PRG-DIN14_R   |
| SSTART       | SSTART_R       | JOG-P-Z+     | JOG-P-Z+_R    | PRG-DIN15    | PRG-DIN15_R   |




| Input signal | Output signal |
|--------------|---------------|
| PLT1-CLR     | PLT1-CLR_R    |
| PLT2-CLR     | PLT2-CLR_R    |
| PLT3-CLR     | PLT3-CLR_R    |
| PLT4-CLR     | PLT4-CLR_R    |
| PLT5-CLR     | PLT5-CLR_R    |
| PLT6-CLR     | PLT6-CLR_R    |
| PRG-RIN0     | PRG-RIN0_R    |
| PRG-RIN1     | PRG-RIN1_R    |
| PRG-RIN2     | PRG-RIN2_R    |
| PRG-RIN3     | PRG-RIN3_R    |
| PRG-RIN4     | PRG-RIN4_R    |
| PRG-RIN5     | PRG-RIN5_R    |
| PRG-RIN6     | PRG-RIN6_R    |
| PRG-RIN7     | PRG-RIN7_R    |
| PRG-RIN8     | PRG-RIN8_R    |
| PRG-RIN9     | PRG-RIN9_R    |
| PRG-RIN10    | PRG-RIN10_R   |
| PRG-RIN11    | PRG-RIN11_R   |
| PRG-RIN12    | PRG-RIN12_R   |
| PRG-RIN13    | PRG-RIN13_R   |
| PRG-RIN14    | PRG-RIN14_R   |
| PRG-RIN15    | PRG-RIN15_R   |
| PRG-RIN16    | PRG-RIN16_R   |
| PRG-RIN17    | PRG-RIN17_R   |
| PRG-RIN18    | PRG-RIN18_R   |
| PRG-RIN19    | PRG-RIN19_R   |
| PRG-RIN20    | PRG-RIN20_R   |
| PRG-RIN21    | PRG-RIN21_R   |
| PRG-RIN22    | PRG-RIN22_R   |
| PRG-RIN23    | PRG-RIN23_R   |
| PRG-RIN24    | PRG-RIN24_R   |
| PRG-RIN25    | PRG-RIN25_R   |
| PRG-RIN26    | PRG-RIN26_R   |
| PRG-RIN27    | PRG-RIN27_R   |
| PRG-RIN28    | PRG-RIN28_R   |
| PRG-RIN29    | PRG-RIN29_R   |
| PRG-RIN30    | PRG-RIN30_R   |
| PRG-RIN31    | PRG-RIN31_R   |

| Input signal | Output signal |
|--------------|---------------|
| R0           | R0_R          |
| R1           | R1_R          |
| R2           | R2_R          |
| R3           | R3_R          |
| R4           | R4_R          |
| R5           | R5_R          |
| R6           | R6_R          |
| R7           | R7_R          |
| R8           | R8_R          |
| R9           | R9_R          |
| R10          | R10_R         |
| R11          | R11_R         |
| R12          | R12_R         |
| R13          | R13_R         |
| R14          | R14_R         |
| R15          | R15_R         |



# 6 Control by direct I/O

If you are new to this product, read this chapter to understand the operating methods along with the operation flow. This example is a method that operation programs and parameters are set using the **MRC Studio** software to operate a robot via direct I/O.

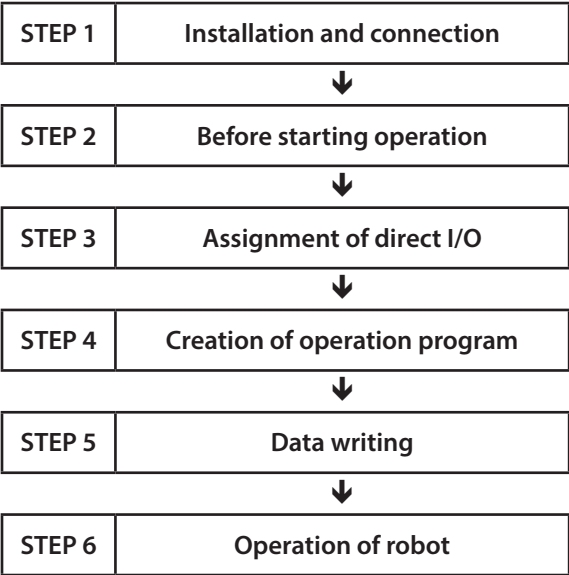

● **Operating conditions**


This operation is performed under the following conditions.

- Setting of robot
  - Robot type : SCARA robot 2-link base up-down
  - End effector: Not used
- Setting of driver
  - Driver connected: **AZD-KD** 3 units
  - Address number setting: Set in order of communication ID=1, 2, and 3 from near the robot.
  - Transmission rate: 230,400 bps
  - Termination resistor: Set only for driver of communication ID=3.

**Note** Before operating a robot, check the condition of the surrounding area to ensure safety.



## STEP 1 Check the installation and the connection.

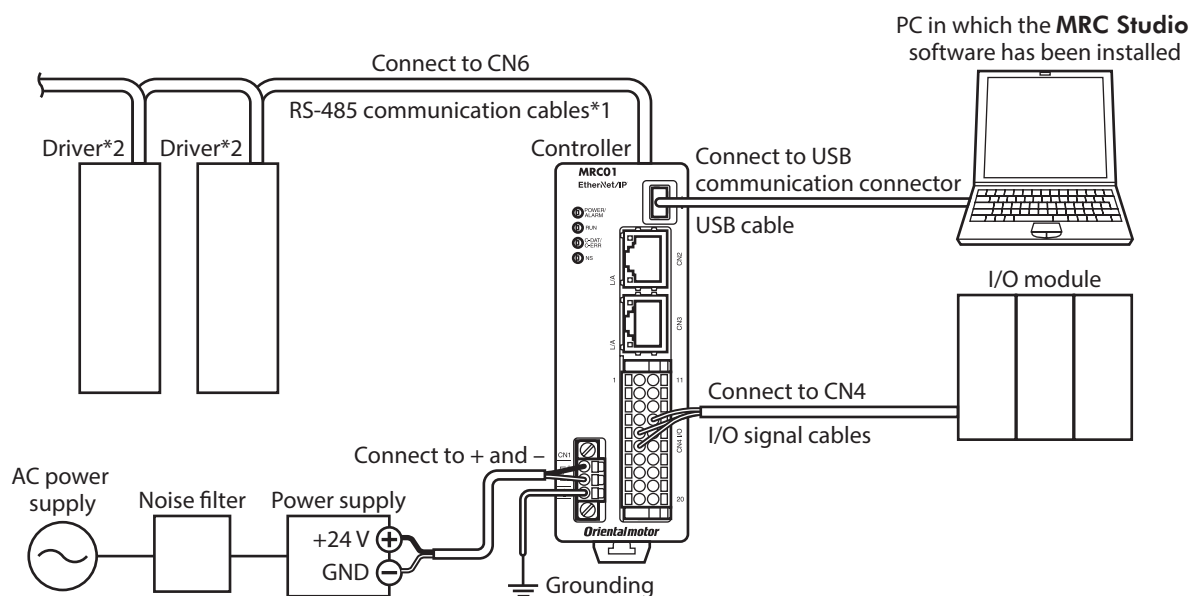

\*1 These cables are provided in Oriental Motor products.

\*2 Connect a power supply to each driver.



For details on connecting the driver power supply and the motor, refer to the operating manuals for products used and connect them correctly according to the connection diagram.

## STEP 2 Make preparations for operation.

Refer to "2 Before starting operation" on p.40.

## STEP 3 Assign direct I/O.

In this example, direct I/O is assigned using the **MRC Studio** software.

1. Click [Parameter setting] on the menu.
2. Click [I/O setting] > [Direct-IN (DIN)] on the parameter group.
3. Set the "DIN5 input function" parameter to "START" and the "DIN6 input function" parameter to "M0."



## STEP 4 Create an operation program.


As an example, this section explains how to execute the following operation.

### ● Setting example


- Program number: 1
- Setting method of target position: Relative
- Travel amount: +5 mm in Z direction

### ● Flow of operation

1. Click [Operation program] on the menu.
2. Click [New] of No. 1.  
The operation program edit screen appears.

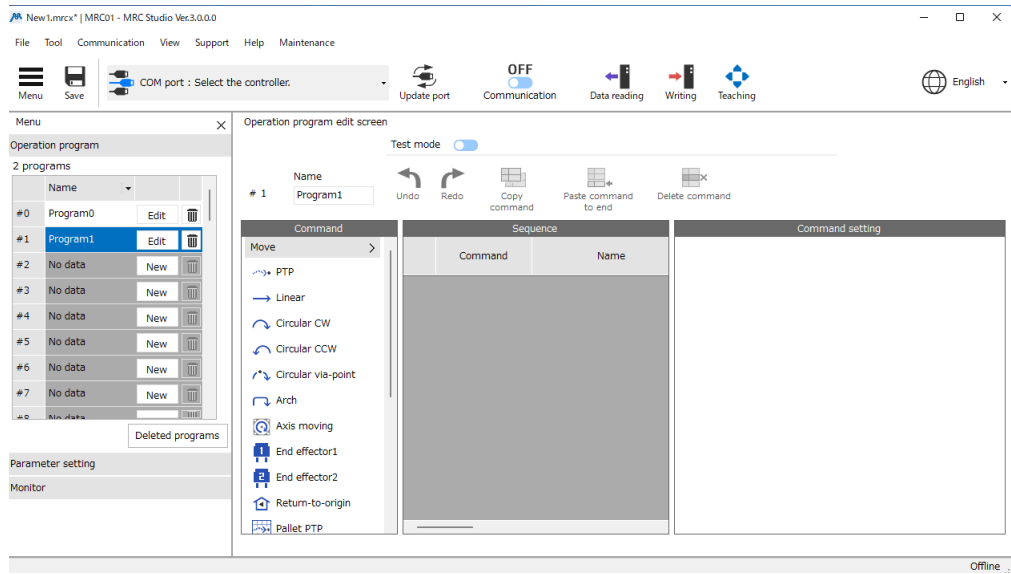

3. Click [PTP] of the move command.  
The PTP command is added to the sequence.
4. Edit the target position on the command setting.
  - 1) Click [Relative] on the target position.
  - 2) Uncheck the X and Y axes.
  - 3) Set the Z axis to 5.000 mm.

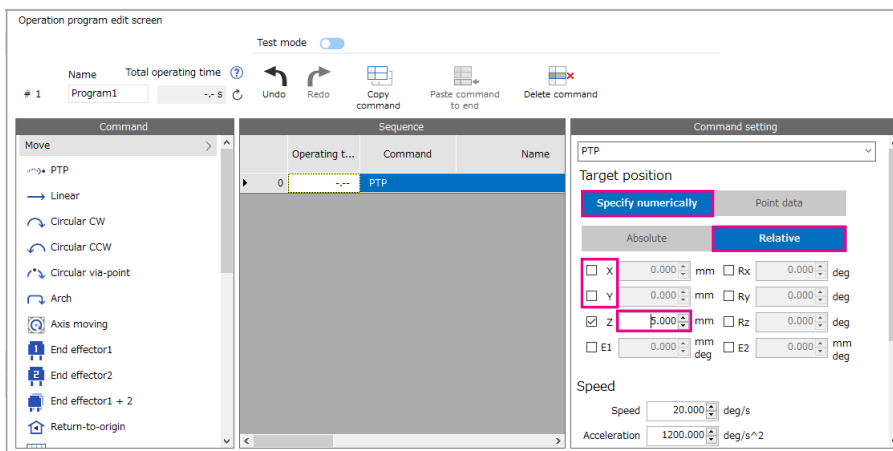



## STEP 5 Write the data and turn on the power supply again.

Write the setting of I/O and the operation program to the controller.

1. Click the [Writing] icon.
2. Click [OK].
3. Turn on the power supply of the controller again.

## STEP 6 Execute operation of the robot.

1. Check the READY output has been turned ON.
2. Turn DIN6 having assigned the M0 input ON.
3. Turn DIN5 having assigned the START input ON.  
The robot operates 5 mm in the Z direction.
4. Check the READY output has been turned OFF, and turn DIN5 OFF.



The travel amount of the robot can be checked on the status monitor of the **MRC Studio** software.

## STEP 7 Were you able to operate?


How did it go? Were you able to operate properly? If the robot does not operate properly, check the following points.

- Is the POWER/ALARM LED blinking in red?  
An alarm is being generated. Refer to "2 Alarms" on p.249 for details.
- Is the C-DAT/C-ERR LED unlit?  
– Information of the robot has not been written to the controller.  
– The power supply of the controller is not turned on.
- Was the setup wizard of the **MRC Studio** software completed successfully?  
If the ROBOT-EN output is in an OFF state, the setting of the robot has not been completed successfully. Set from STEP 2 again.
- Are the power supply, the motor, the driver, and the RS-485 communication cable connected securely?
- Is the C-DAT/C-ERR LED lit in red?  
A communication error of RS-485 communication is being detected. Refer to p.250 for details.



# 7 Timing chart


## ■ When the power supply is turned on

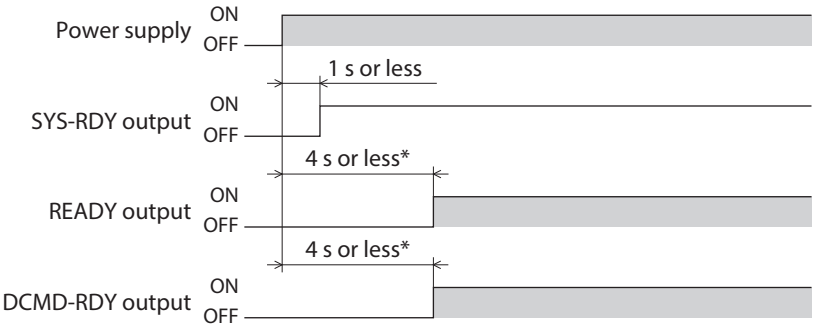

\* It is the time when the setup of the robot is completed and the power supplies for all drivers are turned on.

## ■ STOP input (When the stop mode of the robot is deceleration stop)

1. If the STOP input is turned ON during operation, the robot will start the stop operation.
2. When the command from the controller to the driver is stopped, the MOVE-CNT output is turned OFF.
3. When the robot stops, the MOVE output is turned OFF.
4. When the STOP input is turned OFF, the READY output is turned ON.

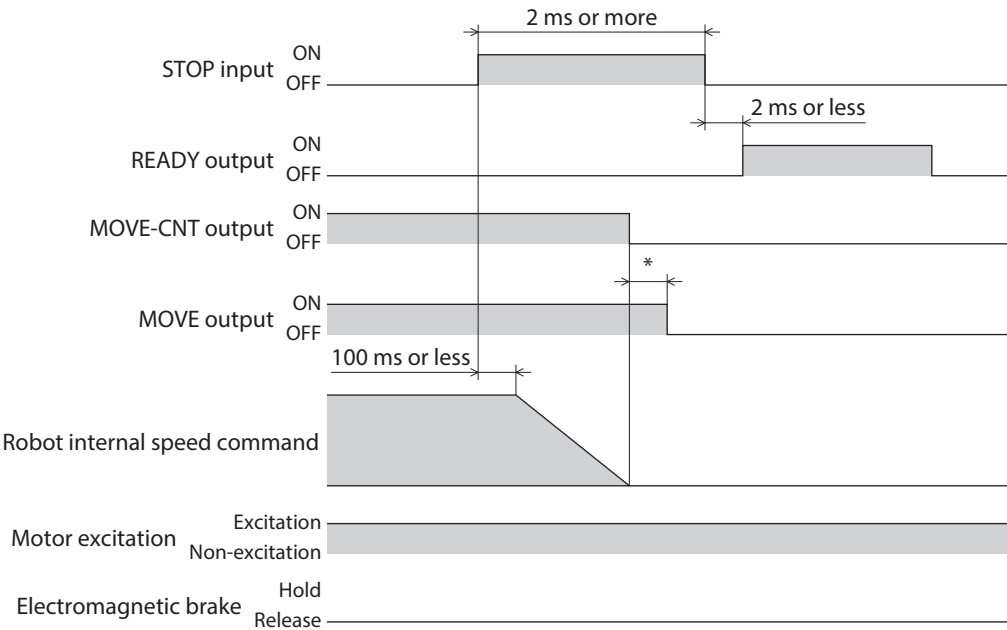


\* It varies depending on the operating condition of the robot.



## ■ PAUSE input

1. If the PAUSE input is turned ON during operation, the robot will pause and the PAUSE-BSY output will be turned ON.
2. When the command from the controller to the driver is stopped, the MOVE-CNT output is turned OFF.
3. When the robot stops, the MOVE output is turned OFF.
4. When the PAUSE input is turned OFF, the PAUSE-BSY output is turned OFF, the MOVE-CNT and MOVE outputs are turned ON, and the operation is resumed.

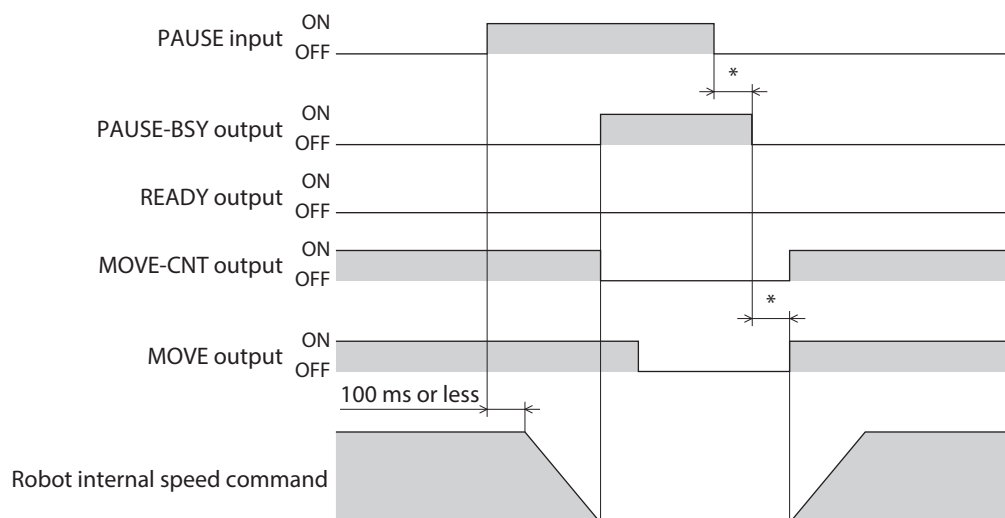


\* It varies depending on the operating condition of the robot.



■ Program operation

- 1. Check that the READY output has been turned ON.  
When checking that the robot has stopped, also check that the MOVE output is in an OFF state.
- 2. Select the program number using the M0 and M5 inputs.
- 3. Turn the START input ON.  
The READY output is turned OFF, the PRG-RUN, MOVE-CNT, and MOVE outputs are turned ON, and the robot starts operation.
- 4. Check that the READY output has been turned OFF and turn the START input OFF.
- 5. When the operation is completed, the READY output is turned ON and the MOVE-CNT output is turned OFF.  
At this time, if the positioning operation has been completed normally, the CMD-END-CNT output will be turned ON.
- 6. When the robot stops, the MOVE output is turned OFF.

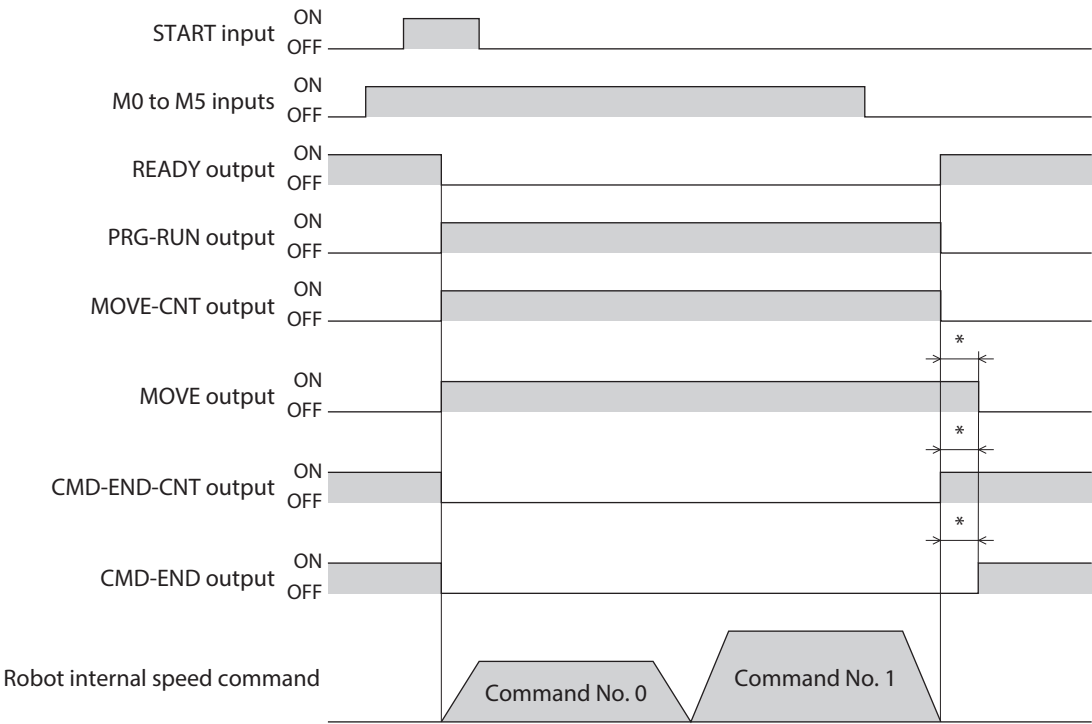




## ■ Direct data operation (When the override function is used)

1. Check that the DCMD-RDY output is in an ON state.  
When checking that the robot has stopped, also check that the MOVE output is in an OFF state.
2. Execute direct data operation.  
The READY output is turned OFF, the MOVE-CNT and MOVE outputs are turned ON, and the robot starts operation.



If the operation fails to execute, the EXE-ERR output is turned ON.

3. During operation, check that the DCMD-RDY output is in an ON state again, then execute a new direct data operation.  
The operation will switch to the new one while maintaining the speed.
4. When the operation is completed, the READY output is turned ON and the MOVE-CNT output is turned OFF.  
At this time, if the positioning operation has been completed normally, the CMD-END-CNT output will be turned ON.
5. When the robot stops, the MOVE output is turned OFF.

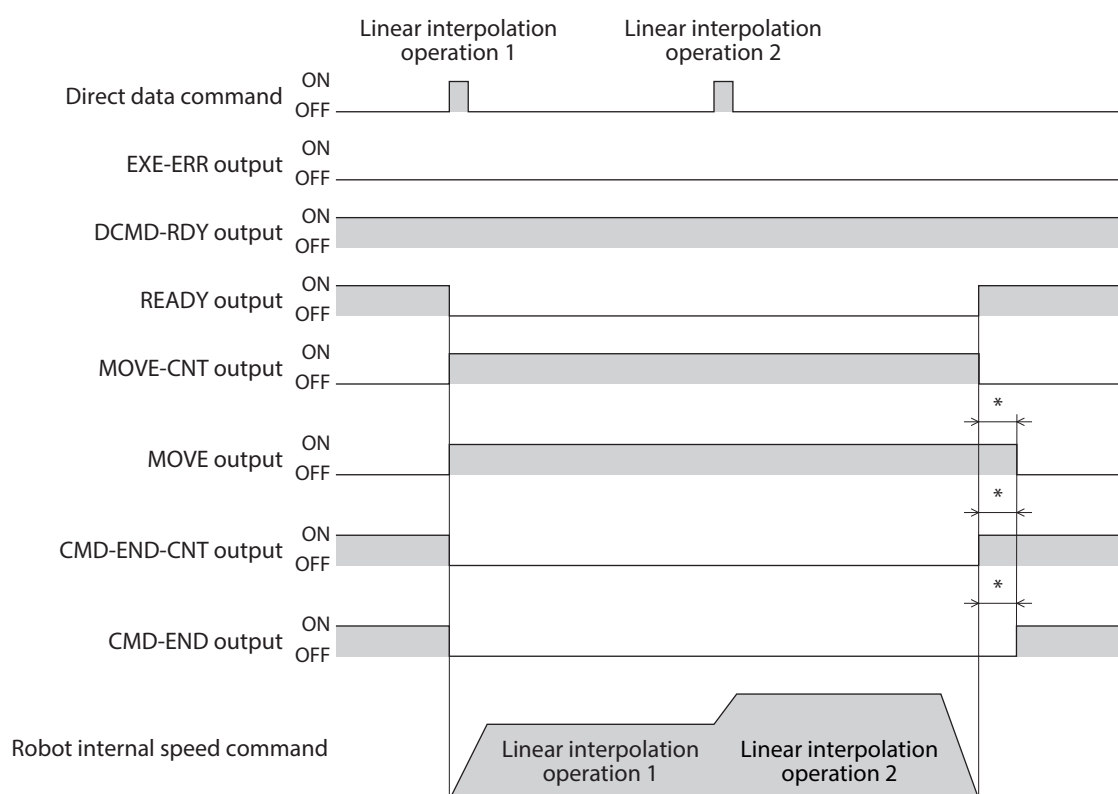

\* It varies depending on the operating condition of the robot.







# 7 Other functions

---

## ◆Table of contents

|          |  |            |
|----------|--|------------|
| <b>1</b> | <b>To monitor using the MRC Studio software .....</b>                        | <b>238</b> |
| 1-1      | Monitor types and examples of use.....                                       | 238        |
| <b>2</b> | <b>To utilize the waveform monitor .....</b>                                 | <b>239</b> |
| 2-1      | How to read the screen .....   | 239        |
| 2-2      | Enlarged view of waveform .....  | 241        |
| <b>3</b> | <b>To simulate the operation of the controller.....</b>                      | <b>243</b> |
| 3-1      | Operating procedure.....   | 243        |
| 3-2      | Coordinates.....   | 244        |
| 3-3      | Monitor.....   | 244        |
| 3-4      | Operation .....  | 244        |
| 3-5      | I/O signals.....   | 244        |
| <b>4</b> | <b>Setting the advanced speed limit (Polar/Cylindrical robot only) .....</b> | <b>245</b> |



# 1 To monitor using the MRC Studio software

## 1-1 Monitor types and examples of use

This chapter explains monitor types and examples of use using the **MRC Studio** software.

| Name                           | Example of use   |
|--------------------------------|--|
| Status monitor                 | <ul style="list-style-type: none"> <li>• To check the feedback position and the feedback speed for the robot or each axis.</li> <li>• To check the program number being executed.</li> <li>• To check the load factor of each axis.</li> </ul> |
| Pallet monitor                 | To check the status of the pallet command.   |
| Information monitor            | To check the details of the information.   |
| Alarm monitor                  | <ul style="list-style-type: none"> <li>• To check the details of the alarm.</li> <li>• To reset an alarm.</li> </ul>   |
| Axis information monitor       | To check the setting of each axis.   |
| Graphic monitor                | To check the trajectory of the robot.  |
| Internal I/O monitor           | To check the status of I/O signals.  |
| D-I/O, R-I/O monitor           | To check the status of signals assigned to direct I/O or remote I/O.   |
| EtherNet/IP monitor            | To check the communication setting of EtherNet/IP.   |
| EtherNet/IP Implicit monitor   | To check the contents of Implicit communication.   |
| Controller information monitor | To check the version of the controller.  |
| Robot information monitor      | To check the offset amount from the origin of the base coordinate system to that of the user coordinate system   |
| Waveform monitor               | To check the speed of the TCP and the status of I/O signals as waveforms. Refer to p.239 for how to use the waveform monitor.  |




## 2 To utilize the waveform monitor

The waveform monitor is a function that can output the speed of the TCP and the status of I/O signals as a waveform. Output signals such as READY and MOVE can be monitored at the same time according to the operating state of the robot.

This chapter explains how to use the waveform monitor screen.

### 2-1 How to read the screen

Click [Waveform monitor] under the monitor.

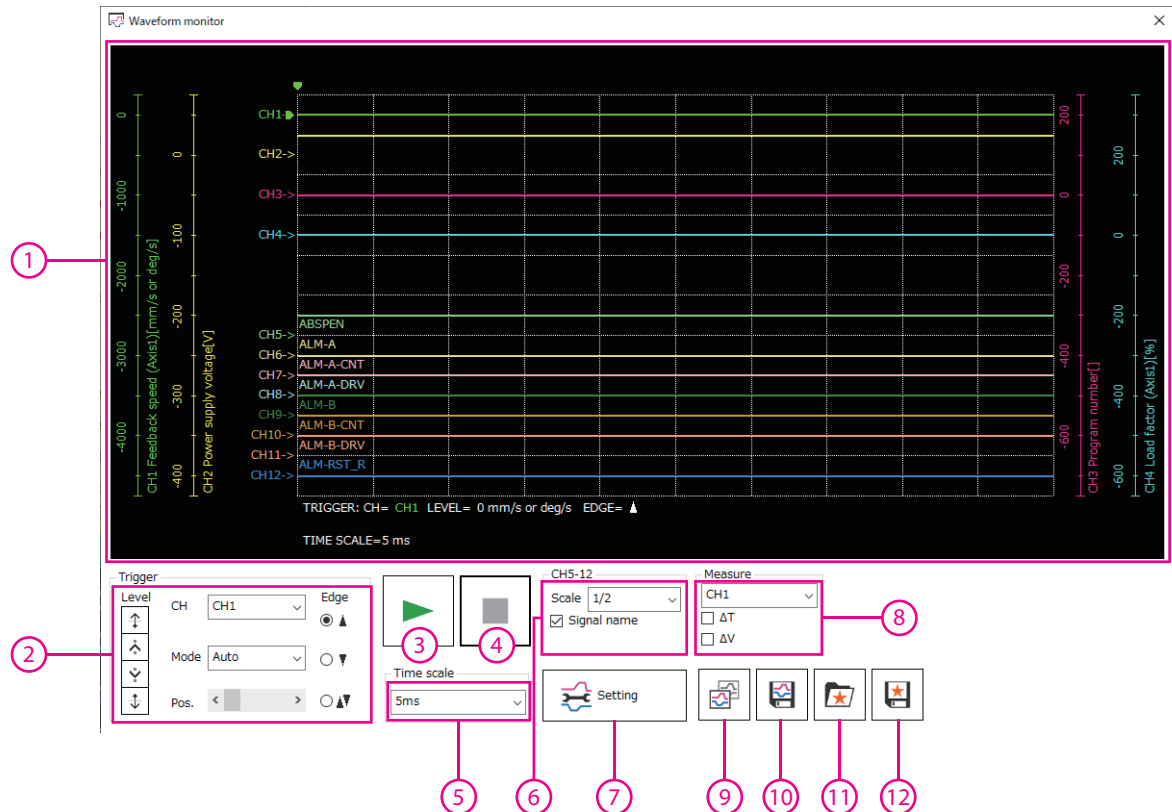

|   |  |
|---|--|
| 1 | Measurement results are drawn in this area.<br>CH1 to CH4: Used to measure the state of the target product<br>CH5 to CH12: Used to measure I/O signals |
| 2 | Sets the trigger.  |
| 3 | Starts measurement.  |
| 4 | Stop the measurement.  |
| 5 | Sets the measurement time range (width).   |
| 6 | Sets the display method for CH5 to CH12.<br>• Scale: Display size<br>• Signal name: Shows or hides the signal name.                                    |


|    |  |
|----|--|
| 7  | Sets the measurement conditions for each CH.                                       |
| 8  | Switches to show or hide the measurement line.<br>Also, selects CH to be measured. |
| 9  | Copies the presently displayed waveform to the clipboard.                          |
| 10 | Saves the presently displayed waveform to an external file. *                      |
| 11 | Reads the stored setting from "Favorites."   |
| 12 | The setting for measurement can be saved as "Favorites."                           |

\* When saving the data, turn the [Communication] icon OFF to stop measurement.



■ Setting of measurement conditions


The measurement condition for each CH can be set on the screen appeared by clicking

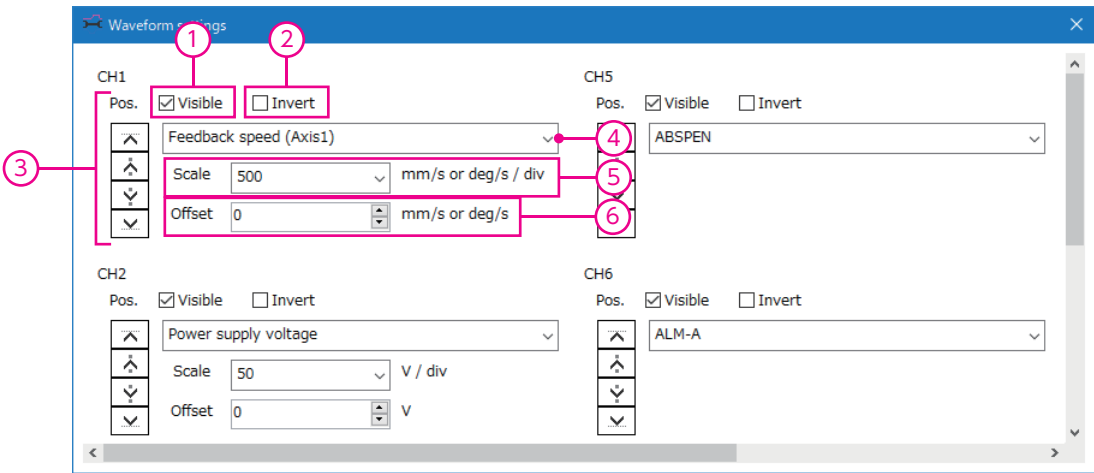

|   |  |
|---|--|
| 1 | Shows or hides each CH.  |
| 2 | Inversely displays the waveform of the signal having measured.   |
| 3 | Moves the display position of the waveform up and down.  |
| 4 | Selects the item to be measured.   |
| 5 | Selects a display scale of CH1 to CH4. The display size can be enlarged in combination with ⑥ .                                |
| 6 | Sets the offset value to be added to the display scale of CH1 to CH4. The display size can be enlarged in combination with ⑤ . |

■ Setting of trigger

Setting a trigger to CH can check a waveform when a certain condition such as the motor speed or the ON-OFF status of a signal is satisfied.

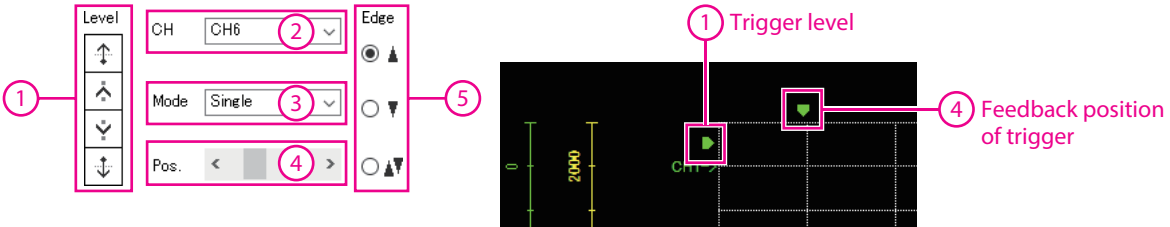

|   |   |
|---|---|
| 1 | Trigger level of CH1 to CH4<br>The condition to detect a trigger can be set in combination with ⑤ .   |
| 2 | CH to set a trigger (this is available for only CH being displayed.)  |
| 3 | Trigger types<br>Refer to "Trigger types" on p.241 for details.   |
| 4 | Feedback position of trigger  |
| 5 | Detection conditions of trigger <ul style="list-style-type: none"><li>▲: CH1 to CH4 are used as a trigger - when the measurement value changes from a value less than Level to that equal to or more than Level.<br/>CH5 to CH12 are used as a trigger - when the signal changes from OFF to ON.</li><li>▼: CH1 to CH4 are used as a trigger - when the measurement value changes from a value equal to or more than LEVEL to that less than Level.<br/>CH5 to CH12 are used as a trigger - when the signal changes from ON to OFF.</li><li>▲▼: Both ▲ and ▼ are used as a condition.</li></ul> |



## Trigger types

|              |   |
|--------------|---|
| Auto         | Updates the waveform until the measurement is stopped.  |
| Normal       | Updates the waveform each time a trigger is detected. The trigger can be detected immediately after the waveform measurement is started.  |
| Single       | Updates the waveform when a trigger is first detected, and then stops the measurement. The trigger can be detected immediately after the waveform measurement is started.   |
| Normal (Pre) | Updates the waveform each time a trigger is detected. The waveform before the trigger is detected (the left side of the trigger feedback position) can also be checked. However, the trigger is not detected until a certain period of time (*) has elapsed after the measurement was started.                                  |
| Single (Pre) | Updates the waveform when a trigger is first detected, and then stops the measurement. The waveform before the trigger is detected (the left side of the trigger feedback position) can also be checked. However, the trigger is not detected until a certain period of time (*) has elapsed after the measurement was started. |

\* Time set in Timescale  $\times 10$




- Select Normal (Pre) or Single (Pre) when checking the waveforms before and after the trigger is detected.
  - Select Normal or Single when checking only the waveform after the trigger is detected.
- Although the waveform before the trigger is detected is displayed even in Normal or Single, the old waveform before the measurement is started may be mixed if the time period from when the measurement is started until when the trigger is detected is less than a certain period of time (\*).
- \* Time set in Timescale  $\times$  Number of scales to the trigger feedback position

## 2-2 Enlarged view of waveform

A portion of the measured waveform data can be enlarged to display.

As an example, this section introduces how to enlarge and display near the peak value when the feedback speed (Axis 1) is measured by CH1.

1. Select [CH1] with "Measure" and check  $\Delta V$ .  
Two lines (blue and red) are displayed to measure  $\Delta V$ .
2. Align the red measurement line with the display position of CH1.

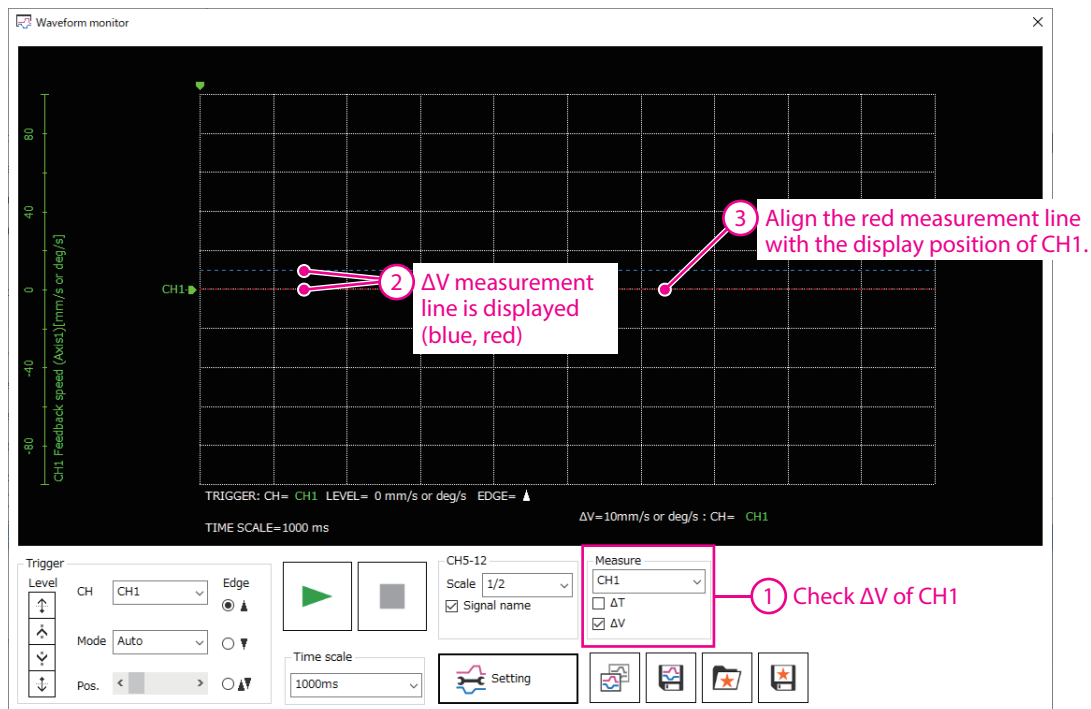


3. Click to start measurement.




To utilize the waveform monitor

- Align the blue measurement line with the peak value of CH1 and read the value of  $\Delta V$ .  
As a result of the measurement, it was found that the peak value of CH1 was around 10 mm/s or deg/s.

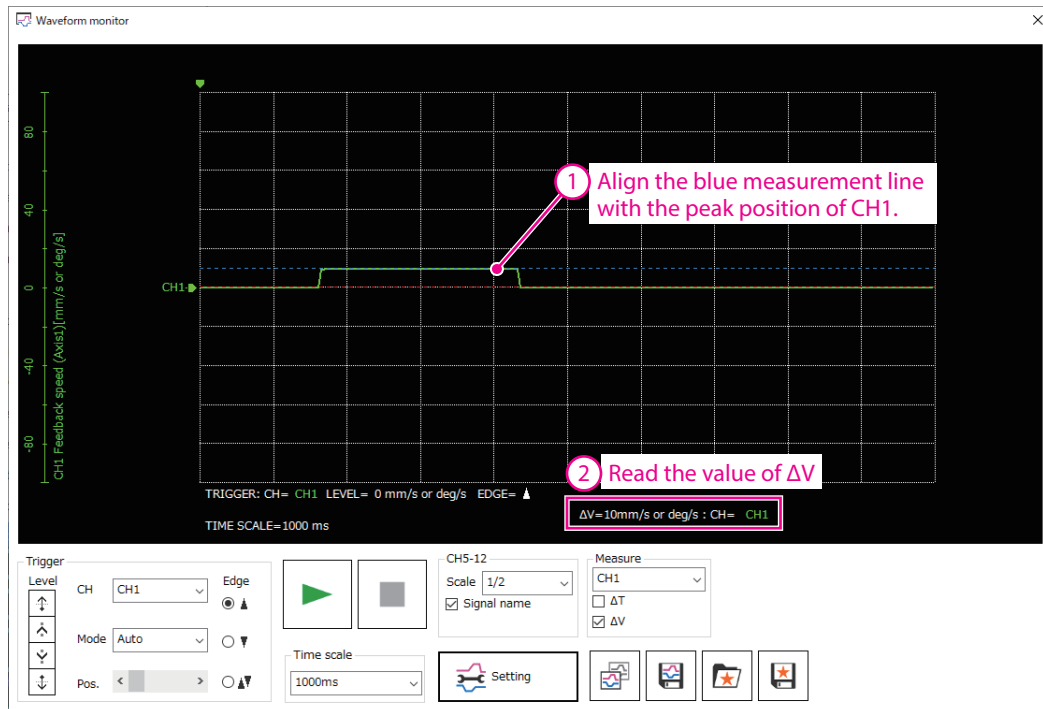

- Click



- Input the center value of the position to be enlarged to "Offset" of CH1.  
To enlarge near the peak value, input 10 (mm/s or deg/s) that is the measurement result of the Step 4.

- Set the speed per one scale in the vertical axis with "Scale" of CH1.

As an example, input 5 (mm/s or deg/s/div) this time.


The waveform is enlarged to display as the center on the value having input to the offset value.

Pos. ☒ Visible ☐ Invert

Feedback speed (Axis1) ▼

Scale 5 mm/s or deg/s / div

Offset 10 mm/s or deg/s

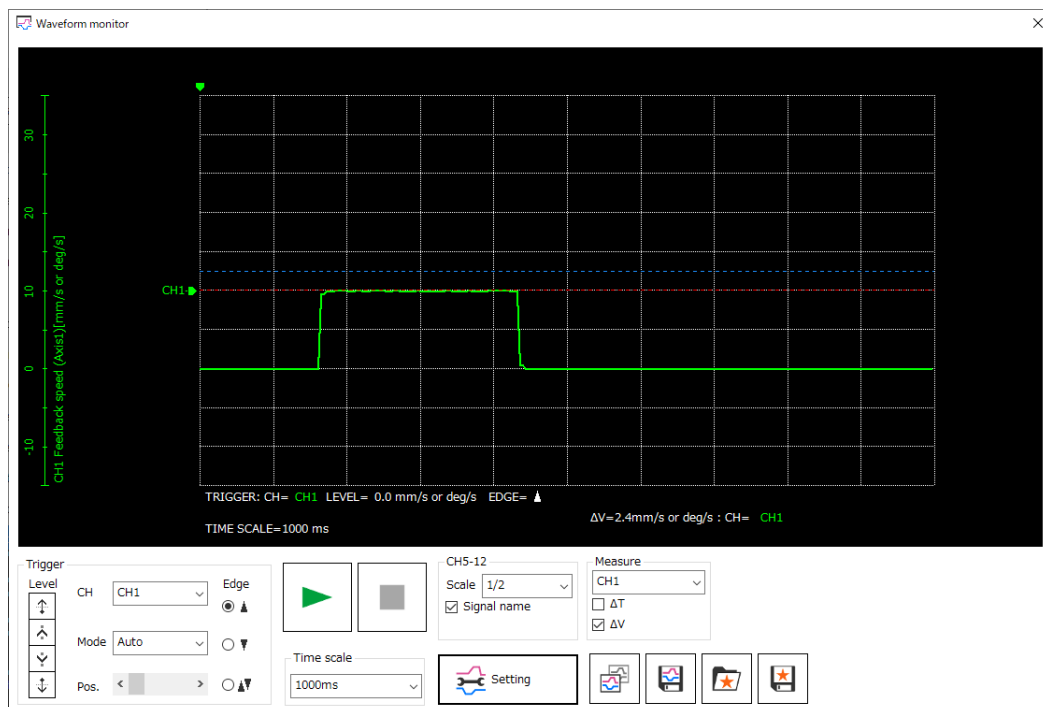



# 3 To simulate the operation of the controller

The **MRC Studio** software has the simulation mode that can check the status of coordinates and I/O signals without operating a robot.

All drivers and motors must be connected when simulating.



- Motors are excited even in the simulation mode.
- In the simulation mode, functions and I/O signals of the controller may differ from those in the normal state.

## Related parameter

| Parameter ID |       | Parameter name  | Description   | Setting range           | Initial value | Update |
|--------------|-------|-----------------|---|-------------------------|---------------|--------|
| Dec          | Hex   |                 |   |                         |               |        |
| 509          | 01FDh | Simulation mode | Coordinates and the operating state of operation programs can be checked without operating a robot. | 0: Disable<br>1: Enable | 0             | C      |

## ■ Use this function for the following.

- To check the coordinates.
- To check the wiring.
- To check how the program operates.
- To check the status of I/O signals
- To check the trajectory of a robot.
- To check if the robot operates safely.
- To verify the program since an error occurs in the system.

## 3-1 Operating procedure

This assumes that preparation for operation and setting of operation programs are completed.

1. Click [Parameter setting] on the menu.
2. Click [Basic setting] on the parameter group.
3. Set the "Simulation mode" parameter to "1: Enable."
4. Click the [Writing] icon.
5. Click [OK].
6. Execute Configuration or turn the power supply of the controller off and on again.
7. Check if the "Simulation mode" parameter is applied.  
Check that the POWER/ALARM LED on the controller repeats as follows: Green light → Red light → Green and red are lit at the same time → No light
8. Operate the robot using either of the following methods.
  - Click the [Teaching] icon to perform JOG operation or inching operation.
  - Execute the operation program in the test mode.



Using the monitor can check the status of the position, speed, and I/O signals.

- Status monitor: The position and the speed can be checked.
- Monitors related to I/O: The status of I/O signals can be checked.
- Graphic Monitor: The operation or the trajectory of a robot can be checked.

9. End the simulation mode.  
Refer to the Steps 1 through 5 and set the "Simulation mode" parameter to "0: Disable."
10. Execute Configuration or turn off the power supply of the controller.



## 3-2 Coordinates

### ■ Origin

The origin of the user coordinate system cannot be set in the simulation mode.  
If the origin of the user coordinate system is used, set it before the simulation mode is performed.

### ■ Initial coordinates

The initial coordinates of the robot are calculated from the angle of the motor connected when the power supply is turned on.

## 3-3 Monitor

The following describes the items displayed during simulation that are different from those at the normal time.

| Name            | Item               | Simulation mode   |
|-----------------|--------------------|---|
| Status monitor  | TCP feedback speed | Follows the commands regardless of the status of the robot. |
|                 | Feedback position  |   |
| Graphic monitor | Position           |   |

## 3-4 Operation

All operations can be performed during simulation.  
The protective function is also enabled.

## 3-5 I/O signals

The following describes I/O signals which specifications and operations in the simulation mode are different from those at the normal time.

### ■ Input signal

| Signal name | Simulation mode | Normal time  |
|-------------|-----------------|--|
| P-PRESET-RB | Disable         | Rewrite the origin of the user coordinate system to the present TCP. |

### ■ Output signals

| Signal name | Simulation mode  | Normal time  |
|-------------|--|--|
| MOVE        | This signal is turned OFF at the same time as the MOVE-CNT output.   | When all motors are stopped after the MOVE-CNT output is turned OFF, this signal is turned OFF.  |
| CMD-END     | This signal is turned ON at the same time as the CMD-END-CNT output. | When all motors are stopped after the CMD-END-CNT output is turned ON, this signal is turned ON. |



## 4 Setting the advanced speed limit (Polar/Cylindrical robot only)

The speed and acceleration/deceleration of the rotation axis can be limited according to the distance between the TCP and the base rotation axis (Z axis of the base coordinate system) of the polar/cylindrical robot. If the maximum values of the speed or acceleration/deceleration of the rotation axis are different depending on the arm extension distance, use the rotation axis limit function instead of the normal axis speed limit function.


### Related parameters

| Parameter ID |       | Name  | Description  | Setting range   | Initial value |
|--------------|-------|---|--|---|---------------|
| Dec          | Hex   |   |  |   |               |
| 4520         | 11A8h | Rotation axis limit setting                                   | Sets the limit for the speed and acceleration/deceleration according to the distance between the base rotation axis and the TCP. Refer to p.246 for details on the limit function. | 0: Limit disable<br>1: Speed limit enable<br>2: Acceleration/deceleration limit enable<br>3: Speed and acceleration/deceleration limit enable | 0             |
| 4521         | 11A9h | Rotation axis limit inside distance                           | Sets the position of the inside of the rotation axis limit with the TCP distance (radius) from the rotation axis.  | 10 to 2,000,000<br>(1=0.001 mm)   | 0             |
| 4522         | 11AAh | Rotation axis limit inside maximum speed                      | Sets the maximum speed at the inside of the rotation axis limit.   | 0 to 2,000,000<br>(1=0.001 deg/s)   | 0             |
| 4523         | 11ABh | Rotation axis limit inside maximum acceleration/deceleration  | Sets the maximum acceleration/deceleration at the inside of the rotation axis limit.   | 0 to 30,000,000<br>(1=0.001 deg/s <sup>2</sup> )  | 0             |
| 4524         | 11ACh | Rotation axis limit middle distance                           | Sets a desired position between the rotation axis limits with the TCP distance (radius) from the rotation axis.  | 10 to 2,000,000<br>(1=0.001 mm)   | 0             |
| 4525         | 11ADh | Rotation axis limit middle maximum speed                      | Sets the maximum speed at a desired position between the rotation axis limits.   | 0 to 2,000,000<br>(1=0.001 deg/s)   | 0             |
| 4526         | 11AEh | Rotation axis limit middle maximum acceleration/deceleration  | Sets the maximum acceleration/deceleration at a desired position between the rotation axis limits.   | 0 to 30,000,000<br>(1=0.001 deg/s <sup>2</sup> )  | 0             |
| 4527         | 11AFh | Rotation axis limit outside distance                          | Sets the position of the outside of the rotation axis limit with the TCP distance (radius) from the rotation axis.   | 10 to 2,000,000<br>(1=0.001 mm)   | 0             |
| 4528         | 11B0h | Rotation axis limit outside maximum speed                     | Sets the maximum speed at the outside of the rotation axis limit.  | 0 to 2,000,000<br>(1=0.001 deg/s)   | 0             |
| 4529         | 11B1h | Rotation axis limit outside maximum acceleration/deceleration | Sets the maximum acceleration/deceleration at the outside of the rotation axis limit.  | 0 to 30,000,000<br>(1=0.001 deg/s <sup>2</sup> )  | 0             |



## ■ To set the “inside” and “outside” parameters of the rotation axis limit and apply the speed limit at two points


Set the inside distance and the outside distance when applying the speed limit in the distance from the base rotation axis (Z coordinate of the base coordinate system) to the TCP. The maximum speed limit value is determined by interpolating the values set in the maximum speeds of the inside and outside with a straight line. When the base rotation axis exceeds this limit, the operation stops and an alarm of Axis overspeed is generated.

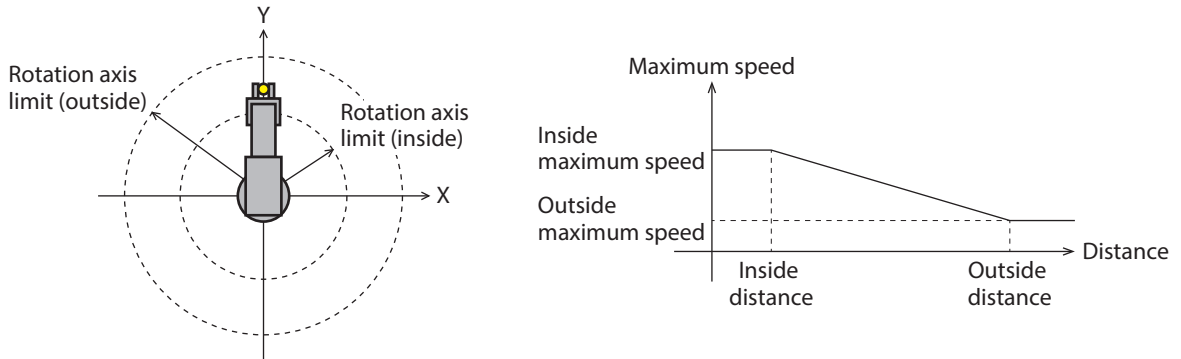

- Set a value greater than the “Rotation axis limit inside distance” parameter to the “Rotation axis limit outside distance” parameter. If the value set in the “Rotation axis limit inside distance” parameter is greater, the limit function is disabled.
- For an inner side than the value set in the “Rotation axis limit inside distance” parameter, the value set in the “Rotation axis limit inside maximum speed” parameter will be the limit value. Similarly, for an outer side than the value set in the “Rotation axis limit outside distance” parameter, the value set in the “Rotation axis limit outside maximum speed” parameter will be the limit value.

## ■ When setting the “middle” parameters of the rotation axis limit to apply the speed limit at three points

Using the “middle” parameters of the rotation axis limit allows the speed limit to be applied at three points. When the slope of the speed limits is desired to change between the inside and the outside, set the “middle” parameters of the rotation axis limit. The speed limit between the inside and middle positions of the rotation axis limit is determined by interpolating the setting values for each maximum speed with a straight line. Similarly, the speed limit between the middle and outside positions are determined by interpolating the setting values for each maximum speed with a straight line.

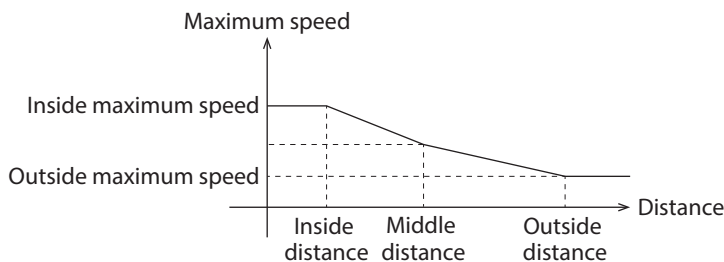

When applying the speed limit at three points using the “middle” parameters of the rotation axis limit, set the parameters so that the following two conditions are satisfied. If the conditions are not satisfied, the speed limit is determined by two points of the inside and outside of the rotation axis limit.

- The value set in the “Rotation axis limit middle distance” is greater than the value set in the “Rotation axis limit inside distance” parameter.
- The value set in the “Rotation axis limit outside distance” parameter is greater than the value set in the “Rotation axis limit middle distance” parameter.



# 8 Troubleshooting

---

This part explains alarm and information functions.

## ◆Table of contents

|          |   |            |
|----------|---|------------|
| <b>1</b> | <b>Detection of communication errors.....</b> | <b>248</b> |
| 1-1      | Communication timeout .....                   | 248        |
| 1-2      | IP address conflict.....                      | 248        |
| <b>2</b> | <b>Alarms.....</b>                            | <b>249</b> |
| 2-1      | Alarm reset.....                              | 249        |
| 2-2      | Alarm history.....                            | 249        |
| 2-3      | Alarm list.....                               | 250        |
| 2-4      | Timing chart .....                            | 257        |
| <b>3</b> | <b>Information.....</b>                       | <b>259</b> |
| 3-1      | Clearing information .....                    | 261        |
| 3-2      | Information history.....                      | 261        |
| 3-3      | Information list .....                        | 262        |





# 1 Detection of communication errors

---

This chapter explains a function to detect that an error occurred in EtherNet/IP.

## 1-1 Communication timeout

If Implicit communication is interrupted due to disconnection of the EtherNet/IP cable or other reasons, the communication timeout is detected.

When the communication timeout is detected, the NS LED on the controller blinks in red.

When connection with the scanner is established again, the communication timeout is automatically cleared, and the NS LED on the controller returns to be lit in green.

If the communication timeout is detected, check the following points.

- Is the EtherNet/IP cable disconnected?
- Is the power supply for the scanner is turned on?

## 1-2 IP address conflict

If an IP address of the EtherNet/IP compatible products is duplicated in the same system, the IP address conflict is detected.

When the IP address conflict is detected, the NS LED on the controller is lit in red.

If the IP address conflict is detected, change the setting so that an IP address of the EtherNet/IP compatible products is not duplicated.

Check the IP address is not duplicated, and then turn on the control power supply again.



## 2 Alarms

This controller has the alarm function to protect from temperature rise, poor connection, error in operation, and the like.

If an alarm is generated, the ALM-A output is turned ON and the ALM-B output is turned OFF to stop the robot. The POWER/ALARM LED blinks in red simultaneously. At this time, the motors remain in an excitation state.

Details of the alarm being generated can be checked by counting the number of times the POWER/ALARM LED blinks, or using EtherNet/IP or the **MRC Studio** software.

### 2-1 Alarm reset

Before resetting an alarm, be sure to remove the cause of the alarm and ensure safety, and perform one of the reset operations specified below.

- Turn the ALM-RST input from OFF to ON. (It is enabled at the ON edge of the input.)
- Execute the alarm reset with the maintenance command via EtherNet/IP.
- Execute the alarm reset using the **MRC Studio** software.
- Turn off the power supply and on it again.



Some alarms cannot be reset by other methods than turning on the power supply again. Refer to “2-3 Alarm list” on p.250.

### 2-2 Alarm history

Up to 10 generated alarm items are stored in the non-volatile memory in order of the latest to the oldest. The alarm history stored in the non-volatile memory can be read or cleared if one of the following reset operations is performed.

- Read the alarm history by the monitor command via EtherNet/IP.
- Clear the alarm history by the maintenance command via EtherNet/IP.
- Read or clear the alarm history using the **MRC Studio** software.



## 2-3 Alarm list

| Alarm code | Number of POWER/ALARM LED blinks | Alarm type                 | Cause  | Remedial action  | How to reset                   |
|------------|----------------------------------|----------------------------|--|--|--------------------------------|
| 21h        | 2                                | Main circuit overheat      | The internal temperature of the controller reached the upper limit of the specification value [85 °C (185 °F)].  | Reconsider the ventilation condition in the enclosure.   | Any of reset operations        |
| 32h        | 2                                | Out of position range      | <ul style="list-style-type: none"> <li>• The maximum operating range of the robot was exceeded during interpolation operation.</li> <li>• PTP operation was executed in a state where the target position is set to outside the maximum operating range of the robot.</li> </ul>   | <ul style="list-style-type: none"> <li>• Reconsider the setting of the trajectory.</li> <li>• Reconsider the target position.</li> </ul>   | Any of reset operations        |
| 33h        | 7                                | Absolute position error    | The origin information of the user coordinate system of the robot was damaged.   | Execute "Reset to origin of base coordinate system" on the teaching screen of the <b>MRC Studio</b> software, and turn on the power supply again. After that, set the origin of the user coordinate system again.  | Turn on the power supply again |
| 41h        | 9                                | EEPROM error               | The data stored in the controller was damaged.   | Execute [Restoring parameters to the factory settings (except for robot information)] under the [Communication] menu of the <b>MRC Studio</b> software.  | Turn on the power supply again |
| 43h        | 8                                | Rotation error at power on | <p>When the "Rotation error at power on alarm setting" parameter was set to "1: Alarm generated," the joint angle when the power supply was turned on fell outside the range of <math>-170^{\circ}</math> to <math>170^{\circ}</math> (*). (The communication ID of the target driver is indicated in the sub code.)</p> <p>* <math>-360^{\circ}</math> to <math>360^{\circ}</math> for the base rotation axis or wrist drive axis of a SCARA (360-degree rotation) robot.</p> | <p>Reset the alarm, and then use the axis moving command or JOG operation (axis) to set the joint angle to the range of <math>-170^{\circ}</math> to <math>170^{\circ}</math> (*).</p> <p>* <math>-360^{\circ}</math> to <math>360^{\circ}</math> for the base rotation axis or wrist drive axis of a SCARA (360-degree rotation) robot.</p>   | Any of reset operations        |
| 4Ah        | 7                                | Return-to-home incomplete  | Operation was executed in a state where there was an axis which home was not set.  | <p>Check the "Motor home setting" for all axes on the axis information monitor of the <b>MRC Studio</b> software. After that, perform the following.</p> <ul style="list-style-type: none"> <li>• If the home of the end effector has not set: Execute [Home setting of end effector] under the [Maintenance] menu of the <b>MRC Studio</b> software.</li> <li>• If the home other than the end effector has not set: Use [Re-setup] under the [Maintenance] menu of the <b>MRC Studio</b> software to perform "Axis home setting."</li> </ul> | Turn on the power supply again |



| Alarm code | Number of POWER/ALARM LED blinks | Alarm type           | Cause   | Remedial action   | How to reset                   |
|------------|----------------------------------|----------------------|---|---|--------------------------------|
| 70h        | 7                                | Operation data error | Operation was executed in a state where the setting of the radius or the center coordinate / via-point coordinate of circular interpolation operation was wrong. (Sub code: 0)                                      | Reconsider the setting.   | Any of reset operations        |
|            |                                  |                      | Operation was executed in a state where the setting of the ascending height, the maximum height, the descending start height, or the target position of arch interpolation operation was wrong. (Sub code: 1)       | Reconsider the setting.   |                                |
|            |                                  |                      | Operation using the imaging position of the camera was executed in a state where calibration was not performed. (Sub code: 2)   | Calibrate the camera number to be used with the <b>MRC Studio</b> software.   |                                |
|            |                                  |                      | The imaging position of the camera was failed to transform to the base coordinate system of the robot. (Sub code: 3)  | Reconsider the load position.   |                                |
|            |                                  |                      | The damaged operation program was executed. (Sub code: F0)  | Write the data again.   |                                |
|            |                                  |                      | An unsupported command was executed. (Sub code: F1)   | Execute [Updating controller firmware] under the [Support] menu of the <b>MRC Studio</b> software.  |                                |
|            |                                  |                      | When an alarm of operation data error is generated in the driver, operation was executed at the operating speed or operating current exceeding the value set in the "Mechanism protection" parameter of the driver. | Use the axis information monitor of the <b>MRC Studio</b> software and check whether the operation exceeding the value set in the "Mechanism protection" parameter is performed in the driver that generates the alarm. |                                |
| 72h        | 7                                | Wrap setting error   | The power supply of the controller was turned on in a state where the wrap setting range of the driver was invalid. (The communication ID of the target driver is indicated in the sub code.)                       | Use [Re-setup] under the [Maintenance] menu of the <b>MRC Studio</b> software to perform "Driver connection setting."   | Turn on the power supply again |
| 81h        | 7                                | Network bus error    | Implicit communication of Exclusive Owner connection was cut off during operation.  | Check the connection with the scanner and the condition of the power supply of the scanner.   | Any of reset operations        |
| 82h        | 7                                | Network module error | An error was detected in the network module.  | Turn on the power again.  | Turn on the power supply again |



| Alarm code | Number of POWER/ALARM LED blinks | Alarm type                 | Cause   | Remedial action  | How to reset                   |
|------------|----------------------------------|----------------------------|---|--|--------------------------------|
| 84h        | 7                                | RS-485 communication error | <ul style="list-style-type: none"> <li>• An error was detected in communication with the driver.</li> <li>• The driver was operated or set using the <b>MEXE02</b> software in a state where the controller and the driver were connected.</li> </ul> <p>The communication ID of the target driver is indicated in the sub code.</p>  | <ul style="list-style-type: none"> <li>• Check the connection with the driver.</li> <li>• Check the settings of the driver such as the transmission rate of RS-485 communication, the address number, and the transmission delay time.</li> <li>• Finish the setting and operation of the driver having performed with the <b>MEXE02</b> software, and turn off the power supplies of the driver and controller and on again.</li> <li>• When writing the data to the driver or restoring to the factory setting with the <b>MEXE02</b> software, use [Re-setup] under the [Maintenance] menu of the <b>MRC Studio</b> software to perform "Driver connection setting."</li> </ul> | Any of reset operations        |
| 86h        | 7                                | Network product mismatch   | <ul style="list-style-type: none"> <li>• A driver other than possible combinations was connected.</li> <li>• A driver of an unsupported version of the <b>AZ</b> Series was connected.</li> </ul> <p>The following information is indicated in the sub code.</p> <ul style="list-style-type: none"> <li>• Lower 4 bits<br/>Communication ID of the target driver</li> <li>• Upper 4 bits<br/>0: Driver other than <b>AZ</b> Series<br/>1: Unsupported version of <b>AZ</b> Series driver</li> </ul> | <ul style="list-style-type: none"> <li>• Connect a driver that can be combined. (⇒ p.15)</li> <li>• Update the driver firmware with the <b>MEXE02</b> software.</li> </ul>   | Turn on the power supply again |
| C3h        | 3                                | TCP software overtravel    | When the "TCP position limit operation setting" parameter was set to "1: Stop with alarm," the command position of the TCP exceeded the position limit. The target coordinates (1: X, 2: Y, 3: Z) are indicated in the sub code.  | Reconsider the target position.  | Any of reset operations        |



| Alarm code | Number of POWER/ALARM LED blinks | Alarm type                   | Cause   | Remedial action   | How to reset            |
|------------|----------------------------------|------------------------------|---|---|-------------------------|
| C4h        | 4                                | Approach TCP inhibition area | When the "User-defined area operation setting" parameter was set to "2: AREA output, no entry area with alarm," the command position of the TCP tried to enter the no entry area (user-defined area). (The target user-defined area number (0 to 4) is indicated in the sub code.)                            | Reconsider the operation program so that the TCP command position does not enter the no entry area (user-defined area).   | Any of reset operations |
|            |                                  |                              | When the "User-defined area operation setting" parameter is set to "2: AREA output, no entry area with alarm," the command position of the TCP has entered the no entry area (user-defined area) at the time of operation start. (The target user-defined area number (0 to 4) is indicated in the sub code.) | Perform one of the following to escape from the no entry area. Then, return the changed parameter to the setting before the change. <ul style="list-style-type: none"> <li>• Change the X, Y, and Z coordinate settings of the "User-defined area" parameter so that the TCP command position is outside the no entry area (user-defined area).</li> <li>• Change the "User-defined area operation setting" parameter to "0: AREA output."</li> </ul> |                         |
| C5h        | 5                                | TCP overspeed                | <ul style="list-style-type: none"> <li>• When the "TCP speed limit setting" parameter was set to "1: Stop with alarm," the maximum TCP speed was exceeded.</li> <li>• The TCP speed exceeded 250 mm/s while teaching operation was being performed using the <b>MRC Studio</b> software.</li> </ul>           | Decrease the operating speed.   | Any of reset operations |
| C6h        | 6                                | Axis software overtravel     | When the "Axis position limit operation setting" parameter was set to "1: Stop with alarm," there was an axis having exceeded the position limit. (The communication ID of the target driver is indicated in the sub code.)   | Reconsider the target position.   | Any of reset operations |



| Alarm code | Number of POWER/ALARM LED blinks | Alarm type             | Cause  | Remedial action  | How to reset            |
|------------|----------------------------------|------------------------|--|--|-------------------------|
| C7h        | 7                                | Axis overspeed         | <ul style="list-style-type: none"> <li>When the "Axis speed limit setting" parameter was set to "1: Stop with alarm," there was an axis having exceeded the maximum speed.</li> <li>There was an axis which speed exceeded 250 mm/s or 250 deg/s while teaching operation was being performed using the <b>MRC Studio</b> software.</li> <li>The speed or acceleration/ deceleration of the rotation axis exceeded the maximum value of the rotation axis limit.</li> </ul> <p>The communication ID of the target driver is indicated in the sub code.</p> | Decrease the operating speed.  | Any of reset operations |
| C9h        | 5                                | Driver alarm detection | When the "Driver alarm detection" parameter was set to "1: Enable," there was an axis that an alarm was generated. (The communication ID of the target driver is indicated in the sub code.)   | Check an alarm of the driver, and remove the cause before resetting the alarm.   | Any of reset operations |
| CAh        | 8                                | Near singularity       | <ul style="list-style-type: none"> <li>When the "Near singularity alarm setting" parameter was set to "1: Alarm generated," the robot approached the singularity during interpolation operation.</li> <li>When the "Near singularity alarm setting" parameter was set to "1: Alarm generated," interpolation operation was executed from near singularity.</li> </ul>  | <ul style="list-style-type: none"> <li>Reconsider the target position.</li> <li>Move away from near singularity using the axis move command, JOG operation (axis), or PTP operation.</li> </ul>  | Any of reset operations |
| CCh        | 4                                | Robot posture error    | <ul style="list-style-type: none"> <li>Interpolation operation was executed in a state where the angle of the elbow joint (*) of the vertical articulated robot was negative.</li> </ul> <p>* With base axis: Axis 3<br/>Without base axis: Axis 2</p> <ul style="list-style-type: none"> <li>With a Delta robot, operation was executed from an abnormal posture where the TCP coordinates could not be calculated.</li> </ul>  | <ul style="list-style-type: none"> <li>Reset the alarm, and then use operation other than interpolation operation to set the angle of the elbow joint to a positive posture.</li> <li>Reset the alarm, and then return to a normal posture (posture where PST-ERR is turned OFF).</li> </ul> | Any of reset operations |



| Alarm code | Number of POWER/ALARM LED blinks | Alarm type                    | Cause   | Remedial action  | How to reset                   |
|------------|----------------------------------|-------------------------------|---|--|--------------------------------|
| CDh        | 2                                | Joint angle range error       | <ul style="list-style-type: none"> <li>The joint angle fell outside the range of <math>-170^{\circ}</math> to <math>170^{\circ}</math> (*).</li> <li>* <math>-360^{\circ}</math> to <math>360^{\circ}</math> for the base rotation axis or wrist drive axis of a SCARA (360-degree rotation) robot.</li> <li>With a SCARA robot or a vertically articulated robot that the base axis rotates, operation that causes the TCP position or the wrist joint to move beyond the negative side of the Y-axis of the base coordinate system (directly behind the robot) was executed.</li> <li>Operation exceeding the wrap range of the driver was executed.</li> </ul> <p>The following information is indicated in the sub code.</p> <ul style="list-style-type: none"> <li>Lower 4 bits<br/>Communication ID of the target driver</li> <li>Upper 4 bits<br/>0: The joint angle was outside the range of <math>-170^{\circ}</math> and <math>170^{\circ}</math><br/>1: The wrap range of the driver was exceeded</li> </ul> | <ul style="list-style-type: none"> <li>Reset the alarm, and then use the axis moving command or JOG operation (axis) to set the joint angle to the range of <math>-170^{\circ}</math> to <math>170^{\circ}</math> (*).</li> <li>* <math>-360^{\circ}</math> to <math>360^{\circ}</math> for the base rotation axis or wrist drive axis of a SCARA (360-degree rotation) robot.</li> <li>Reconsider the joint angle.</li> <li>With a SCARA robot or a vertically articulated robot that the base axis rotates, operate it so that the TCP position or the wrist joint does not move beyond the negative side of the Y-axis of the base coordinate system (directly behind the robot).</li> <li>Reconsider the target position.</li> </ul> | Any of reset operations        |
| CEh        | 7                                | Robot mechanism setting error | The power supply was turned on in a state where the mechanism information of the robot was invalid.   | <p>Set so that the total value of the following is larger than 0. After that, turn on the power again.</p> <ul style="list-style-type: none"> <li>Link 2 length and "Tool offset 1 Ty" parameter</li> <li>Link 2 length and "Tool offset 2 Ty" parameter</li> </ul> <p>The Link 2 length can be checked on the robot information monitor of the <b>MRC Studio</b> software.</p>  | Turn on the power supply again |





| Alarm code | Number of POWER/ALARM LED blinks | Alarm type                  | Cause   | Remedial action  | How to reset                   |
|------------|----------------------------------|-----------------------------|---|--|--------------------------------|
| CFh        | 4                                | Axis error during operation | <p>The following error was detected during operation.</p> <ul style="list-style-type: none"> <li>• An error was detected in communication between the controller and the driver.</li> <li>• The motor was put into a non-excitation state.</li> <li>• An alarm was generated in the driver.</li> <li>• An overload of the motor was detected. (If the "Overload stop setting" parameter is set to "1: Enable")</li> </ul> <p>The following information is indicated in the sub code.</p> <ul style="list-style-type: none"> <li>• Lower 4 bits<br/>Communication ID of the target driver</li> <li>• Upper 4 bits<br/>The error content is indicated.<br/>0: Communication error between controller and driver<br/>1: The motor is in a non-excitation state<br/>2: An alarm is generated in the driver<br/>3: An overload of the motor is detected</li> </ul> | <ul style="list-style-type: none"> <li>• Check the connection between the controller and the driver.</li> <li>• Check the status of the driver and the motor.</li> <li>• When an alarm of Operation data error is generated in the driver, use the axis information monitor of the <b>MRC Studio</b> software and check whether the operation exceeding the value set in the "Mechanism protection" parameter is performed in the driver that generates the alarm.</li> <li>• Reconsider the operating condition.</li> </ul> | Any of reset operations        |
| F0h        | Light                            | CPU error                   | CPU malfunctioned.  | Turn on the power again.   | Turn on the power supply again |



## 2-4 Timing chart

### ■ When an alarm is generated in the controller



1. If an error occurs, the ALM-B output, the ALM-B-CNT output, and the MOVE output are turned OFF. At the same time, all motors stop instantaneously.
2. Remove the cause of the alarm before turning the ALM-RST input ON. The alarm is reset, and the ALM-B output, the ALM-B-CNT output, and the READY output are turned ON.
3. Check the ALM-B output and the ALM-B-CNT output have been turned ON before turning the ALM-RST input OFF.

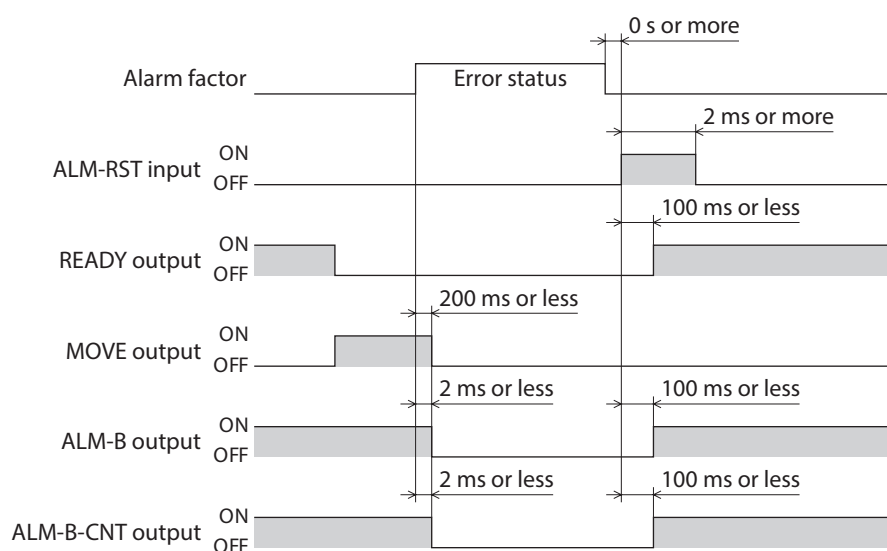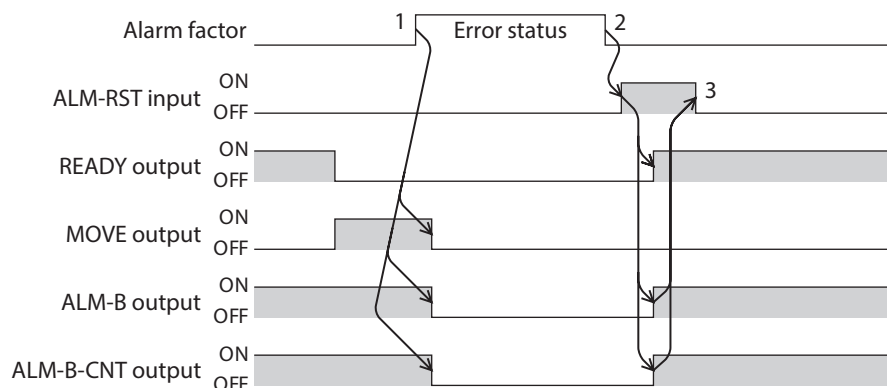



## ■ When an alarm is generated in the driver

1. If an error occurs, the ALM-B output, the ALM-B-DRV output, and the MOVE output are turned OFF. At the same time, all motors stop instantaneously.
2. Remove the cause of the alarm before turning the ALM-RST input ON. The alarm is reset, and the ALM-B output, the ALM-B-DRV output, and the READY output are turned ON.
3. Check the ALM-B output and the ALM-B-DRV output have been turned ON before turning the ALM-RST input OFF.

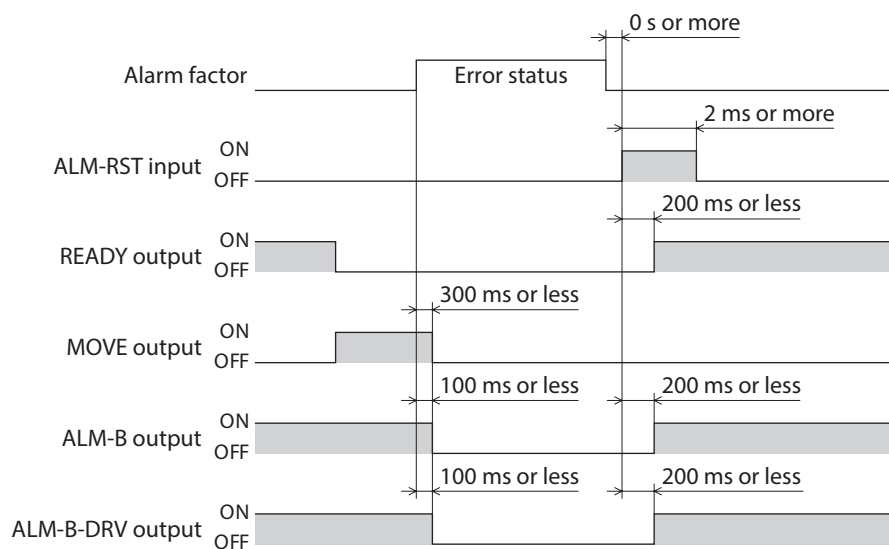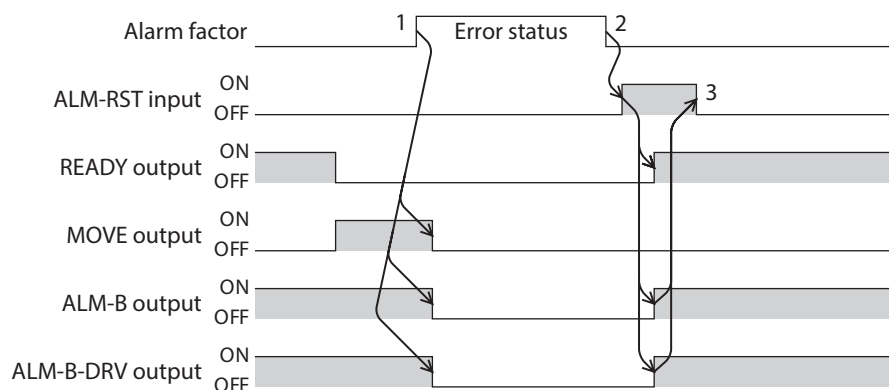



## 3 Information

The controller is equipped with a function to generate information output before an alarm is generated. This function can be utilized for periodic maintenance of equipment by setting a suitable value in the parameter of each information.

### ■ Status when information is generated

#### ● Information bit output

If information is generated, a bit output of the corresponding information is turned ON. (Details of bit output ⇨ p.262)

A desired output signal can be assigned to the INFO-USRIO output among bit outputs and used. If the assigned output signal is turned ON, the INFO-USRIO output is also turned ON.

#### ● INFO output

If information is generated, the INFO output is turned ON.

#### ● LED indicator

If information is generated, the POWER/ALARM LED will simultaneously blink in green and red twice. (Green and red colors may overlap and it may be visible to orange.)

#### ● Operation of robot

The robot continues operating even while information is generated unlike in the case of an alarm. However, in some information, the robot may stop operating when information is generated.

#### ● Related parameters

| Parameter ID |       | Name   | Description  | Initial value |
|--------------|-------|--|--|---------------|
| Dec          | Hex   |  |  |               |
| 390          | 0186h | Axis speed information (INFO-AXISSPD) Axis 1 | Sets the condition in which the axis speed information (INFO-AXISSPD) of the axis 1 is generated.<br>[Setting range]<br>0: Disable<br>1 to 2,000,000 (1=0.001 mm/s or 1=0.001 deg/s) | 0             |
| 391          | 0187h | Axis speed information (INFO-AXISSPD) Axis 2 | Sets the condition in which the axis speed information (INFO-AXISSPD) of the axis 2 is generated.<br>[Setting range]<br>0: Disable<br>1 to 2,000,000 (1=0.001 mm/s or 1=0.001 deg/s) | 0             |
| 392          | 0188h | Axis speed information (INFO-AXISSPD) Axis 3 | Sets the condition in which the axis speed information (INFO-AXISSPD) of the axis 3 is generated.<br>[Setting range]<br>0: Disable<br>1 to 2,000,000 (1=0.001 mm/s or 1=0.001 deg/s) | 0             |
| 393          | 0189h | Axis speed information (INFO-AXISSPD) Axis 4 | Sets the condition in which the axis speed information (INFO-AXISSPD) of the axis 4 is generated.<br>[Setting range]<br>0: Disable<br>1 to 2,000,000 (1=0.001 mm/s or 1=0.001 deg/s) | 0             |
| 394          | 018Ah | Axis speed information (INFO-AXISSPD) Axis 5 | Sets the condition in which the axis speed information (INFO-AXISSPD) of the axis 5 is generated.<br>[Setting range]<br>0: Disable<br>1 to 2,000,000 (1=0.001 mm/s or 1=0.001 deg/s) | 0             |



| Parameter ID |       | Name  | Description   | Initial value     |
|--------------|-------|---|---|-------------------|
| Dec          | Hex   |   |   |                   |
| 395          | 018Bh | Axis speed information (INFO-AXISSPD) Axis 6              | Sets the condition in which the axis speed information (INFO-AXISSPD) of the axis 6 is generated.<br><b>[Setting range]</b><br>0: Disable<br>1 to 2,000,000 (1=0.001 mm/s or 1=0.001 deg/s)         | 0                 |
| 396          | 018Ch | Axial speed information (INFO-AXISSPD) end-effector 1     | Sets the condition in which the axis speed information (INFO-AXISSPD) of the end effector 1 is generated.<br><b>[Setting range]</b><br>0: Disable<br>1 to 2,000,000 (1=0.001 mm/s or 1=0.001 deg/s) | 0                 |
| 397          | 018Dh | Axial speed information (INFO-AXISSPD) end-effector 2     | Sets the condition in which the axis speed information (INFO-AXISSPD) of the end effector 2 is generated.<br><b>[Setting range]</b><br>0: Disable<br>1 to 2,000,000 (1=0.001 mm/s or 1=0.001 deg/s) | 0                 |
| 416          | 01A0h | Controller temperature information (INFO-CNTTMP)          | Sets the condition in which the controller temperature information (INFO-CNTTMP) is generated.<br><b>[Setting range]</b><br>40 to 85 °C   | 85                |
| 418          | 01A2h | TCP speed information (INFO-RBSPD)                        | Sets the condition in which the TCP speed information (INFO-RBSPD) is generated.<br><b>[Setting range]</b><br>0: Disable<br>1 to 2,000,000 (1=0.001 mm/s)   | 0                 |
| 422          | 01A6h | Mechanism information mismatch information (INFO-MECHMIS) | Sets the Mechanism information mismatch information (INFO-MECHMIS).<br><b>[Setting range]</b><br>0: Disable<br>1: Enable  | 1                 |
| 423          | 01A7h | Driver information detection (INFO-DRVINFO)               | Sets whether or not to generate the Driver information detection in the controller when information was generated in the driver.<br><b>[Setting range]</b><br>0: Disable<br>1: Enable               | 0                 |
| 441          | 01B9h | Robot posture error information (INFO-PST-ERR)            | Sets the Robot posture error information (INFO-PST-ERR).<br><b>[Setting range]</b><br>0: Disable<br>1: Enable   | 1                 |
| 442          | 01BAh | Slip information (INFO-SLIP)                              | Sets the Slip information (INFO-SLIP).<br><b>[Setting range]</b><br>0: Disable<br>1: Enable   | 1                 |
| 444          | 01BCh | INFO-USRIO output selection                               | Selects the I/O status to be checked in the INFO-USRIO output.<br><b>[Setting range]</b><br>Output signal → p.205   | 256:<br>CONST-OFF |
| 445          | 01BDh | INFO-USRIO output inversion                               | Sets the output logic of the INFO-USRIO output.<br><b>[Setting range]</b><br>0: Not invert<br>1: Invert   | 0                 |



| Parameter ID |       | Name                      | Description  | Initial value |
|--------------|-------|---------------------------|--|---------------|
| Dec          | Hex   |                           |  |               |
| 446          | 01BEh | Information LED condition | Sets whether or not to blink the LED when information was generated.<br>[Setting range]<br>0: Disable<br>1: Enable   | 1             |
| 447          | 01BFh | Information auto clear    | When the cause of information is eliminated, the INFO output and the bit output of the corresponding information are turned OFF automatically.<br>[Setting range]<br>0: Disable<br>1: Enable | 1             |

### 3-1 Clearing information

How to clear the information can be set with the "Information auto clear" parameter.

- **When the "Information auto clear" parameter is set to "1: Enable" (initial value)**

The generated information will automatically be cleared if the condition to clear information is satisfied.

- **When the "Information auto clear" parameter is set to "0: Disable"**

Even if the condition to clear information is satisfied, the information is kept generated. The information can be cleared if one of the following methods is performed in a state where the condition to clear information is satisfied.

- Execute the Clear information with the maintenance command via EtherNet/IP.
- Execute the Clear information on the information monitor of the **MRC Studio** software.
- Turn the INFO-CLR input ON.
- Turn off the power supply and on it again.

### 3-2 Information history

Up to 16 generated information items are stored in the RAM in order of the latest to the oldest. Information items stored as the information history are the information code, generation time, and information item. The information history can be read or cleared when one of the following methods is performed.

- Read the information history by the monitor command via EtherNet/IP.
- Clear the information history by the maintenance command via EtherNet/IP.
- Read or clear the information history using the **MRC Studio** software.



Information history is cleared when the power supply of the controller is turned off since it is stored in the RAM.



### 3-3 Information list

| Information item                              | Information bit output signal | Cause  | Condition to clear  |
|---|-------------------------------|--|---|
| I/O (user setting)                            | INFO-USRIO                    | The output signal set in the "INFO-USRIO output selection" parameter was turned ON.  | The output signal set in the "INFO-USRIO output selection" parameter was turned OFF.  |
| Controller temperature                        | INFO-CNTTMP                   | The internal temperature of the controller exceeded the value set in the "Controller temperature information" parameter.   | The internal temperature of the controller fell below the value set in the "Controller temperature information" parameter.  |
| TCP speed                                     | INFO-RBSPD                    | The feedback speed of the TCP exceeded the value set in the "TCP speed information" parameter.   | The feedback speed of the TCP fell below the value set in the "TCP speed information" parameter.  |
| Axis speed                                    | INFO-AXISSPD                  | The feedback speed exceeded the value set in the "Axis speed information" parameter.   | The feedback speeds of all axes fell below the value set in the "Axis speed information" parameter.   |
| Operation start error                         | INFO-START                    | <ul style="list-style-type: none"> <li>• The operation start signal in the direction having been stopped by the position limit was turned ON.</li> <li>• When operation could not be executed (e.g., the READY output was OFF), the operation start signal was turned ON.</li> </ul>   | Operation was started properly.   |
| ZHOME start error                             | INFO-ZHOME                    | When the coordinates of the user coordinate system was not set (the PRST-STLD-RB output was OFF), the ZHOME-ALL input or the ZHOME-RB input was turned ON.   | Operation was started properly.   |
| Preset request                                | INFO-PR-REQ                   | Turn the P-PRESET-RB input ON.   | The origin of the user coordinate system have been rewritten to the present TCP.  |
| Mechanism information mismatch                | INFO-MECHMIS                  | <p>When the "Mechanism information mismatch information" parameter is set to "1: Enable," either of the following conditions is satisfied.</p> <ul style="list-style-type: none"> <li>• The mechanism type of the axis does not match the setting of the controller.</li> <li>• The lead and gear ratio of the actuator product do not match the setting of the controller.</li> </ul> | <ul style="list-style-type: none"> <li>• The mechanism type matched the setting of the controller.</li> <li>• The lead and gear ratio of the actuator product matched the setting of the controller.</li> </ul> |
| RS-485 communication error                    | INFO-NET-E                    | An RS-485 communication error was detected.  | RS-485 communication was performed properly.  |
| TCP positive direction operation prohibition  | INFO-OT-RB+                   | One of the X, Y, or Z coordinate of the TCP exceeded the position limit in the positive direction.   | All of the X, Y, and Z coordinates of the TCP fell within the range of the position limit in the positive direction.  |
| TCP negative direction operation prohibition  | INFO-OT-RB-                   | One of the X, Y, or Z coordinate of the TCP exceeded the position limit in the negative direction.   | All of the X, Y, and Z coordinates of the TCP fell within the range of the position limit in the negative direction.  |
| Axis positive direction operation prohibition | INFO-OT-AX+                   | There was an axis that exceeded the position limit in the positive direction.  | Positions of all axes fell within the range of the position limit in the positive direction.  |
| Axis negative direction operation prohibition | INFO-OT-AX-                   | There was an axis that exceeded the position limit in the negative direction.  | Positions of all axes fell within the range of the position limit in the negative direction.  |



| Information item                     | Information bit output signal | Cause   | Condition to clear   |
|--------------------------------------|-------------------------------|---|--|
| Approach TCP inhibition area         | INFO-PHBAREA                  | When the "User-defined area operation setting" parameter was set to "1: AREA output, no entry area," the command position of the TCP entered the no entry area (user-defined area).   | The command position of the TCP was out of the range of the no entry area (user-defined area).   |
| Near singularity                     | INFO-SGL-LMT                  | The robot approached the singularity.   | The robot moved away from the singularity.   |
| Robot posture error                  | INFO-PST-ERR                  | When the "Robot posture error information" parameter is set to "1 : Enable," the angle of the elbow joint (*) of the vertical articulated robot became negative.<br>* With base axis: Axis 3<br>Without base axis: Axis 2   | The angle of the elbow joint of the robot became positive.   |
| Slip mode                            | INFO-SLIP                     | When the "Slip information" parameter is set to "1: Enable," the robot switched to the slip mode.   | The slip mode was released.  |
| Driver connection setting incomplete | INFO-DRVDIS                   | There was an axis (or some axes) that the connection setting of the driver was not completed in the setup of the <b>MRC Studio</b> software.  | The setup wizard of the <b>MRC Studio</b> software was completed.  |
| Driver information detection         | INFO-DRVINFO                  | When the "Driver information detection" parameter is set to "1: Enable," information was generated in the driver.   | The information status for all drivers was cleared.  |
| Operation start restricted mode      | INFO-DSLMTD                   | <ul style="list-style-type: none"> <li>• "Teaching operation" was executed using the <b>MRC Studio</b> software.</li> <li>• Configuration was executed.</li> <li>• Data was written to the controller from the <b>MRC Studio</b> software.</li> <li>• "Restoring parameters to the factory settings" was executed with the <b>MRC Studio</b> software.</li> </ul> | <ul style="list-style-type: none"> <li>• Teaching operation was canceled.</li> <li>• Configuration was completed.</li> <li>• Writing data was completed.</li> <li>• Data was restored to the factory setting.</li> </ul> |
| I/O test mode                        | INFO-IOTEST                   | Configuration was executed.   | Configuration was completed.   |
| Configuration request                | INFO-CFG                      | The parameter that required executing the configuration was changed.  | Configuration was executed.  |
| Reboot request                       | INFO-RBT                      | The parameter that required rebooting the controller was changed.   | The controller was rebooted.   |



If the "Preset request" information was generated for 100 ms or more in a state where the "Information auto clear" parameter was set to "0: Disable," the origin of the user coordinate system may have been failed to rewritten.



- Unauthorized reproduction or copying of all or part of this manual is prohibited.  
If a new copy is required to replace an original manual that has been damaged or lost, please contact your nearest Oriental Motor sales office.
- Oriental Motor shall not be liable whatsoever for any problems relating to industrial property rights arising from use of any information, circuit, equipment or device provided or referenced in this manual.
- Characteristics, specifications and dimensions are subject to change without notice.
- While we make every effort to offer accurate information in the manual, we welcome your input. Should you find unclear descriptions, errors or omissions, please contact the nearest office.
- ***Oriental motor*** is a registered trademark or trademark of Oriental Motor Co., Ltd., in Japan and other countries.  
EtherNet/IP™ is a trademark of ODVA (Open DeviceNet Vendor Association).  
Other product names and company names mentioned in this manual may be registered trademarks or trademarks of their respective companies and are hereby acknowledged. The third-party products mentioned in this manual are recommended products, and references to their names shall not be construed as any form of performance guarantee. Oriental Motor is not liable whatsoever for the performance of these third-party products.

© Copyright ORIENTAL MOTOR CO., LTD. 2022

Published in August 2025

- Please contact your nearest Oriental Motor office for further information.

ORIENTAL MOTOR U.S.A. CORP.  
Technical Support Tel:800-468-3982  
8:30am EST to 5:00pm PST (M-F)

ORIENTAL MOTOR (EUROPA) GmbH  
Schiessstraße 44, 40549 Düsseldorf, Germany  
Technical Support Tel:00 800/22 55 66 22

ORIENTAL MOTOR (UK) LTD.  
Blythe Valley Business Park,  
Central Blvd Blythe Valley Park,  
Solihull B90 8AG, United Kingdom  
Tel:+44-1926-671220

ORIENTAL MOTOR (FRANCE) SARL  
Tel:+33-1 47 86 97 50

ORIENTAL MOTOR ITALIA s.r.l.  
Tel:+39-02-93906347

ORIENTAL MOTOR ASIA PACIFIC PTE. LTD.  
Singapore  
Tel:1800-842-0280

ORIENTAL MOTOR (MALAYSIA) SDN. BHD.  
Tel:1800-806-161

ORIENTAL MOTOR (THAILAND) CO., LTD.  
Tel:1800-888-881

ORIENTAL MOTOR (INDIA) PVT. LTD.  
Tel:1800-120-1995 (For English)  
1800-121-4149 (For Hindi)

TAIWAN ORIENTAL MOTOR CO., LTD.  
Tel:0800-060708

SHANGHAI ORIENTAL MOTOR CO., LTD.  
Tel:400-820-6516

INA ORIENTAL MOTOR CO., LTD.  
Korea  
Tel:080-777-2042

ORIENTAL MOTOR CO., LTD.  
4-8-1 Higashiueno, Taito-ku, Tokyo  
110-8536 Japan  
Tel:+81-3-6744-0361  
[www.orientalmotor.co.jp/ja](http://www.orientalmotor.co.jp/ja)